

HP Notes

2 October 2000

This file contains up-to-date information for your HP notebook PC on these topics:

- > infrared mode
- > Fn hot keys on an external keyboard
- > hibernate mode
- > using enhanced video and dual monitors
- > enabling zoomed video
- > running Winstone 99 tests
- > updated display/graphic specifications
- > warranty statement

You can find additional current information about your computer on the HP notebook Web site, www.hp.com/notebooks.

Infrared mode

Default infrared mode

In the BIOS Setup utility, infrared (IR) communication is by default disabled. When you enable IR communication, the IR mode selected by default is SIR (Slow Infrared).

To Enable FIR:

1. Run the BIOS Setup utility (Refer to the HP User's Guide for details).
2. In the Advanced menu, highlight the "IrDA port" value and enable it using the F6 key.
3. Highlight the "Mode" value and change it to "FIR".
4. Highlight the "Base I/O address" and change it to "2F8 IRQ3".
5. Highlight the "DMA channel" value and change it to DMA 3.
6. Exit the BIOS Setup utility, selecting "Exit Saving Changes" in the Exit menu.
7. When Windows restarts, your IrDA device will be set up. A reboot may be required.
8. Right-click the "My Network Places" icon on the desktop, and click "Properties".
9. Highlight "IrDA Fast Infrared Port", and click the Properties button.
10. Click the Advanced tab.
11. Highlight "Infrared Transceiver A".
12. Select "HP HSDL-2300/3600" from the dropdown menu.
13. Click the OK button. A reboot may be required.
14. Follow the instructions in Microsoft Help and Support, "To establish an infrared link".

Fn hot keys on an external keyboard

When using combination hot keys (shortcut key sequences) on an external keyboard— which is equivalent to using the Fn key on the HP notebook keyboard--use the Ctrl and Alt keys on the left side of the external keyboard.

Hibernate mode

Hibernate mode occurs automatically when battery power reaches a critically low level. It is possible to change the battery power settings, however, HP does not recommend that you change the defaults. Changing the default values could cause your unit to not suspend properly and could result in loss of data.

Using Enhanced Video and Dual Monitors

Standard video drivers are installed on your Notebook for various settings of screen area and colors, as well as for screen zoom capabilities.

To use two monitors in dual mode

You can use two monitors with your Notebook, either in dual mode, effectively expanding your screen real estate, or in simultaneous mode, displaying the same screen twice.

The LCD monitor that is part of the Notebook is the primary display (Monitor 1), and a second CRT monitor attached to the rear video port is the secondary display (Monitor 2). You can also switch from one monitor to the other (using only one at a time) by pressing Fn+F12.

To enable the dual monitor for a 14 inch display.

1. Click Start, Settings, Control Panel.
2. Double-click Display.
3. Select the Settings tab.
4. Position the second monitor to the right or left of your Notebook display to match your monitor location.
5. Select each monitor and set the colors and screen area to the desired values. The following settings support dual display mode:
6. Click the Start Button and select Shut down.
7. Connect the monitor cable from the monitor to the VGA port on the rear of the Notebook or on the port replicator.
8. Connect the monitor to a power source and turn it on.

9. Press the blue power button to turn on the Notebook. Windows will detect the second monitor and attempt to load the proper display driver. Follow the onscreen instructions.
10. Click Start, Settings, Control Panel, Display, Settings Tab. Position the second monitor to the right or left of your Notebook display to match your monitor location.
11. Make sure that the option "Extend my Windows desktop onto this monitor" is checked.

Here are some other limitations to be aware of as you choose your monitor settings:

- The sum of the video memory used by both monitors must be less than the total video memory size. Your Notebook comes with 4-MB memory installed.
- Monitor 1 has to be in the same resolution as the panel size. For example, if the panel is 800? 600, the resolution selected for the Monitor1 must be exactly 800? 600 in order to enable dual display mode.
- Monitor 1 can be set to 256 colors or High Color (16 Bit), not True Color (24 bit), since Virtual Refresh can be supported only in 256 color and High Color (16 Bit) modes. Monitor 2 can be set to 256 colors or High Color (16 Bit) only.
- Monitor 1 and Monitor 2 cannot both be in 256-color mode.
- Settings cannot be changed on Monitor 2 if DirectDraw is enabled– for example, if video is playing– since the display driver cannot reallocate the display memory for dual display support.
- Under dual display mode, only the software cursor can be used. There is no hardware cursor available under Virtual Refresh mode.
- Dual display mode is not available if you are currently in a special mode from the LynxEM video control panel settings, such as Rotation or Stretch.

Games that use the DirectDraw API cannot run in dual display mode. You will be prompted to disable Monitor 2 before running the game.

Enabling Zoomed Video

By default, the zoomed video function is disabled in the BIOS. If you want to use a zoom video PC card or an MPEG-2 hardware decompression card, you may need to enable the zoomed video function.

To enable zoomed video

1. Close all applications, then shut down Windows and restart the computer.
2. When you see the HP logo, press F2 to enter the BIOS Setup utility.

3. In the Main menu, go to the ZV Port option.
4. Press F6 until the option says Enabled.
5. Press F10 or use the Exit menu to exit the BIOS Setup utility.

Running Winstone 99 Tests

If you would like to run Winstone 99 hardware tests on your computer, check to see that QuickLink MessageCenter III fax software is *not* installed as the default printer. (QuickLink will not allow Winstone to clean up and close properly.)

To change the default printer before you run Winstone 99

1. Click Start, Settings, Printers. The default printer has a checkmark next to it; if the QuickLink icon is checked, you need to choose one of the options in step 2.
2. To choose a different default printer, right-click the desired printer icon and choose Set as Default. (If you don't have any other printer icons, use the Add Printer icon to install a new printer driver.)

–or–

Delete the QuickLink icon in the Printers folder.

If you delete QuickLink, you can reinstall it by opening the c:\hp\programs\quiklink folder and running the **setup** file. Do not install QuickLink as the default printer when prompted.

Updated Display/Graphic Specifications

12.1-inch SVGA HPA display (800-600-64K colors)
14.1-inch XGA active-matrix (TFT) display (1024×768×64K colors).
SMI Lynx EM4 AGP graphics controller with 4-MB SGRAM.
Zoomed Video support for lower PC Card slot.
Dual-monitor support.

Warranty Statement

Warranty for the HP Pavilion Notebook PC is limited to the United States and Canada.