


Ceiling Mount User's Guide

- 1 Drill four holes into the structural ceiling member. Attach the ceiling rod to the ceiling with the four cylinder screws.

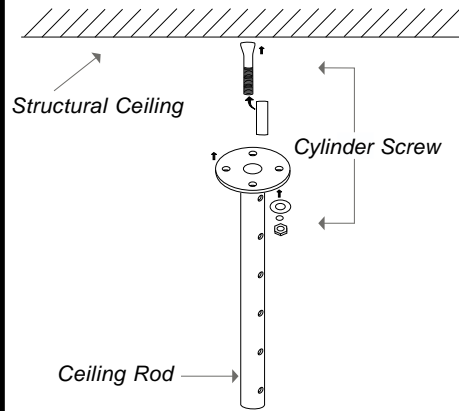


- ⚠ Be sure to install the projector into a solid, structural ceiling member:

► Ceiling Mounting Procedure:

Before installation, refer to the “**Adjusting the Projected Image**” section of the Projector User's Guide for the projection distance based upon the desired image size. Use this projection distance to locate the ceiling mount.


- ⚠ HP recommends that a competent carpenter or electrician install this ceiling mount.

- 2 Mount the projector to the ceiling mount bracket with the three bracket screws.

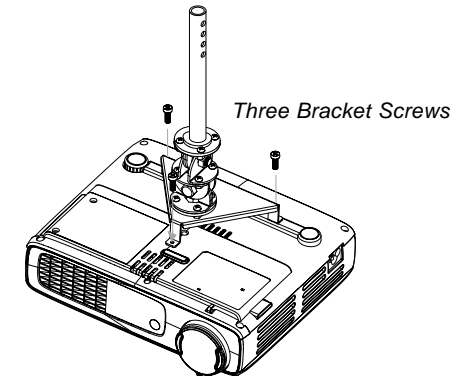


- 3 Attach the ceiling bracket to the ceiling rod with the round thumbscrew. Height adjustments can be made by using different holes on the ceiling rod and ceiling bracket.

❖ The total adjustment range is 15.75 to 25.6 inches (40–65cm). Adjustments can be made in one inch (2.5cm) increments.

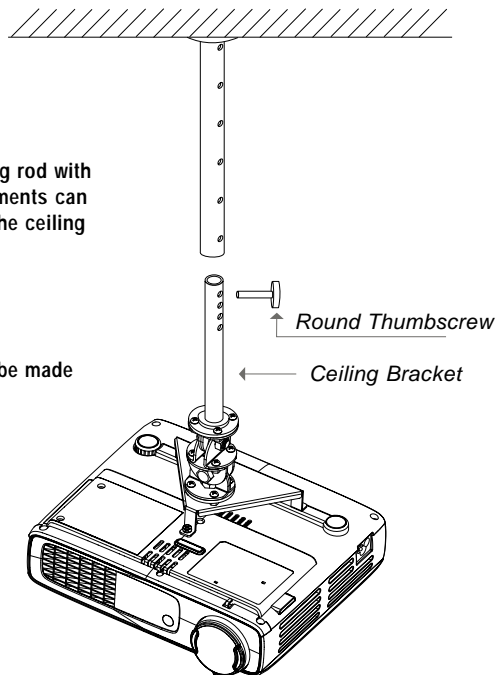


- 4 Make necessary roll and yaw adjustments to the projector.

(YAW ADJUSTMENT)

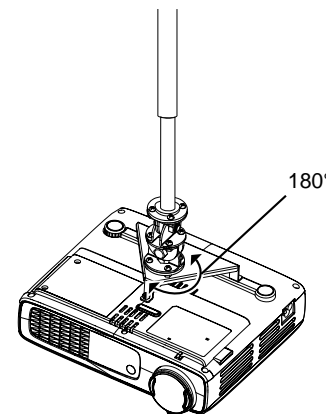

(ROLL ADJUSTMENT)

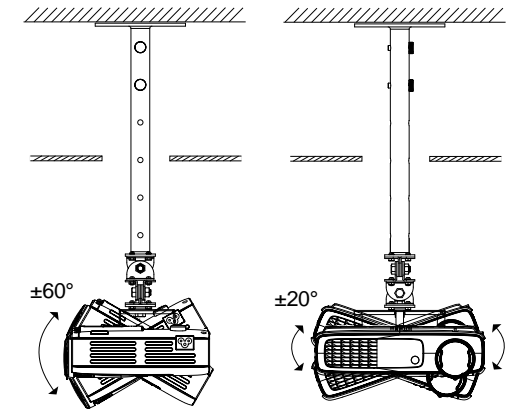

❖ Adjust the appropriate ceiling projection image mode from the “Management” menu tab in the on screen display.