

HP OfficeJet G55 Quick Setup Poster

Macintosh



 
Side 1 of 2

1 Unpack your HP OfficeJet


Note:
The instructions for this poster
ONLY apply to Macintosh
operating systems.

A high-speed USB cable (12
Mbps) no longer than five
meters must be purchased
separately.


- a** Remove the tray
from the carton.

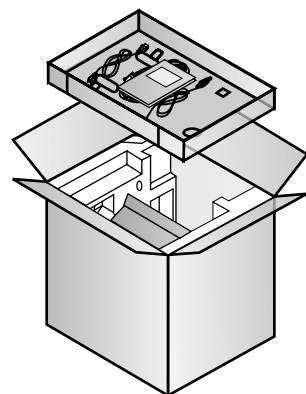

 
- b** Remove the print
cartridges from the
sides of the HP
OfficeJet.

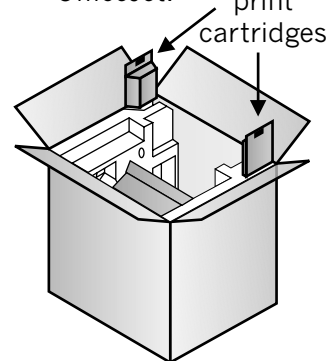

 - c** Rest the box on its
side and pull out
your HP OfficeJet.
Remove any
packaging or tape
from the HP
OfficeJet.

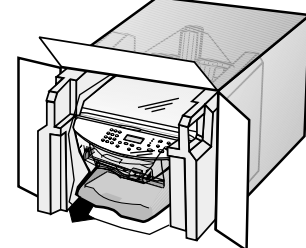


 - d** Verify that you have
these additional key

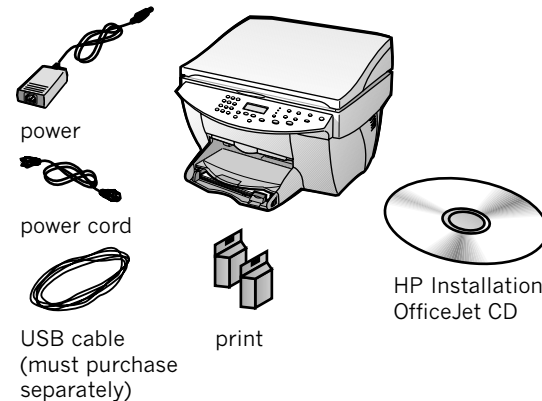


2 Load paper

 
a

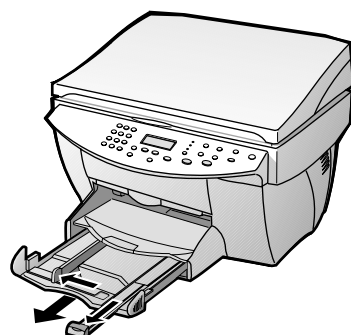

b

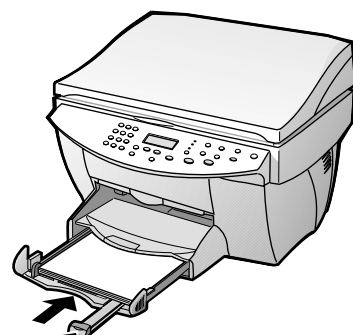 


c

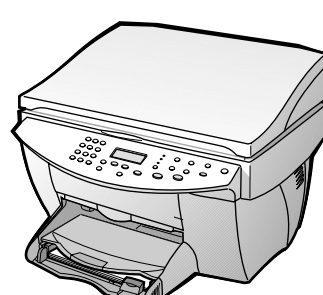 


3 Connect and secure cables and cords

 
- a** Connect the USB cable from
your HP OfficeJet to your
Macintosh.

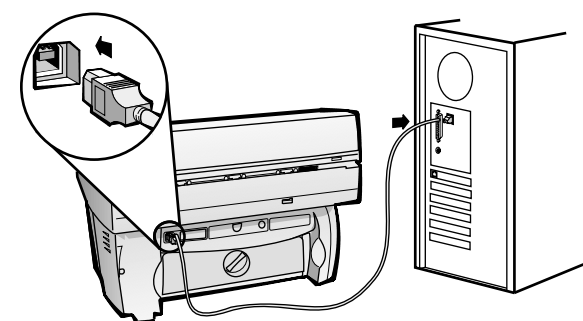

 - b** Connect the power
supply and the adapter.

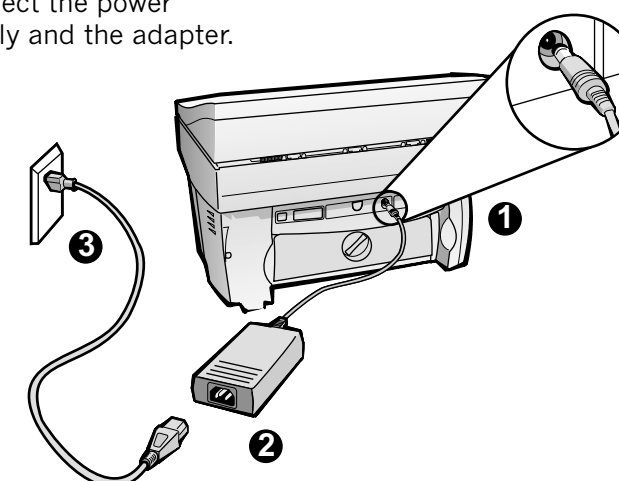


4 Turn on your HP OfficeJet

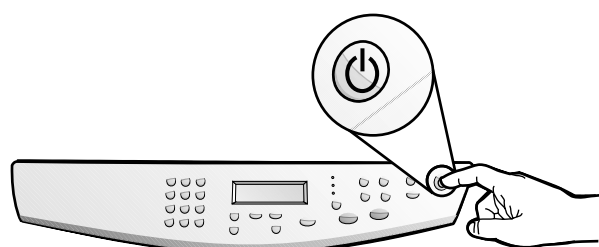 


5 Insert black print cartridge

 - a** Open the door and raise it up until it
clicks into place. The print-cartridge
carriage will move to the middle of
the access area.

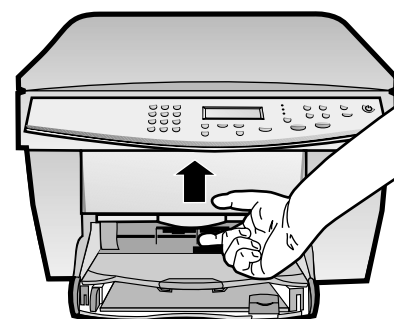


 - b** Raise both latches on
the print carriage.

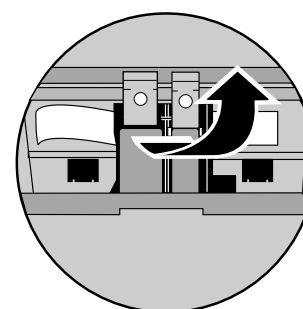


- c** Remove the black print cartridge (thinner
one) from its packaging and, being careful to
touch only the black plastic, gently remove
both the green pull tab and the blue tape
covering the nozzles.

 
CAUTION:
Do not touch
or remove
the gold-
colored
contacts.

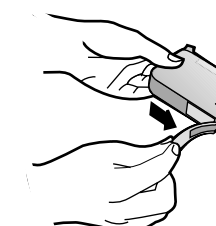

 - d** Push the black print cartridge
firmly down into the slot on the
right. As you insert the cartridge,
make sure the label is facing you.

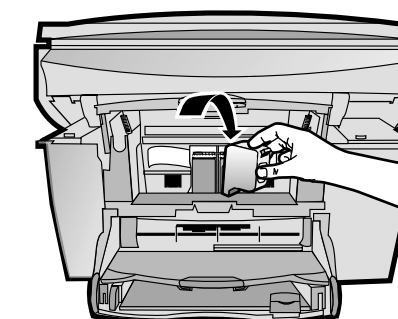

 - e** Lower the right print-cartridge
latch down onto the top of
the cartridge, and push down
until the latch locks firmly
into place.

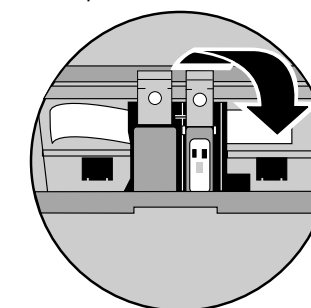


6 Insert color print cartridge


- a** Remove the color print cartridge (wider
one) from its packaging and, being
careful to touch only the black plastic,
gently remove both the green pull tab
and the blue tape covering the nozzles.

CAUTION:
Do not touch
or remove
the gold-
colored
contacts.

 - b** Push the color print cartridge firmly down
the slot on the left. Lower the left print-
cartridge latch down onto the top of the
cartridge, and push down until the latch

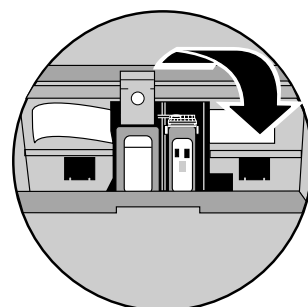

 - c** Pull the handle down to close
the door.

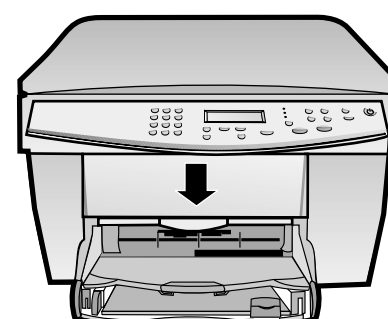


Turn
over to
continue.



7

Select your language

 Look at your display for the language list. Enter the code for your language, and then confirm your selection.

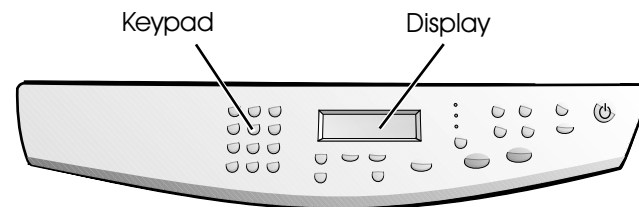


8

Print an alignment page

Make sure paper is loaded in your HP OfficeJet.

The message "Press **ENTER** to Align Cartridges" appears in the display. Press the **ENTER** key to enable the HP OfficeJet to perform the alignment. After a page prints, the alignment is complete.

 
Look at the alignment page for green check marks, and then recycle or discard the page.

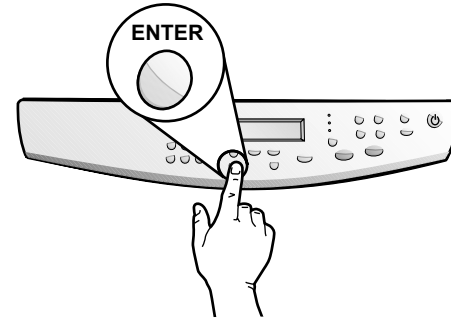

9

Get to know the front panel

 
Here are some features of your new HP OfficeJet:

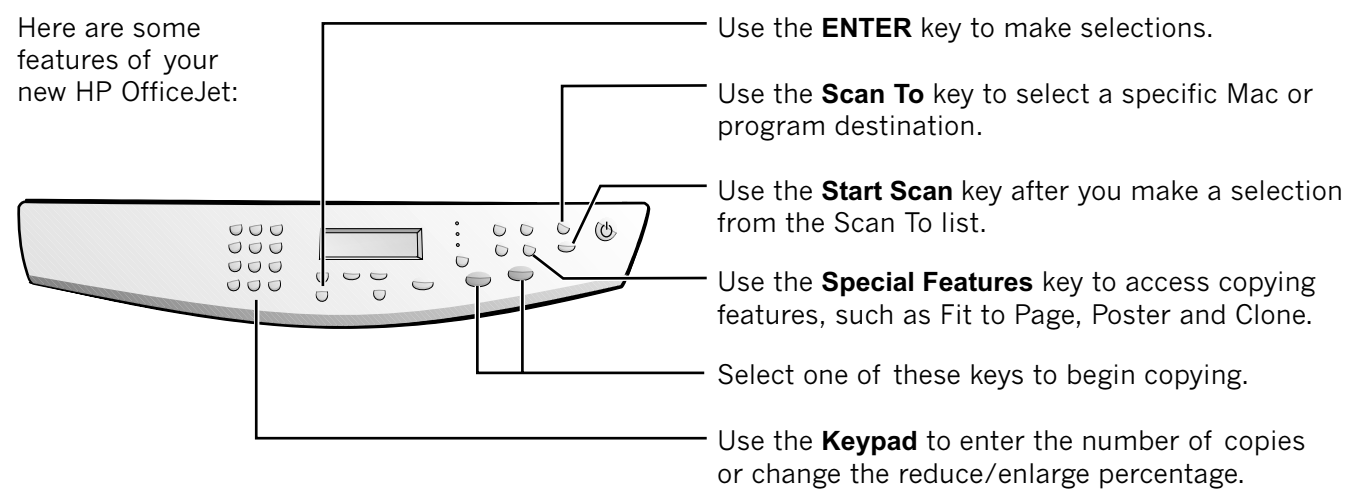

10

Install the software

 - Turn your computer and wait for your computer to finish rebooting. Insert the HP OfficeJet installation CD.
- The installer will automatically run after you insert the CD. If it does not, you should double-click the **HP All-In-One Installer** icon on your desktop.
- Select a language from the drop-down list and click **Install**. Click Accept to accept the Software License Agreement.
- Click **Install** to do an easy install. Then, click **Continue** to proceed with the installation.
- When prompted, restart your computer. The **Setup Assistant** will run after re-starting. Follow the instructions to complete the software installation.

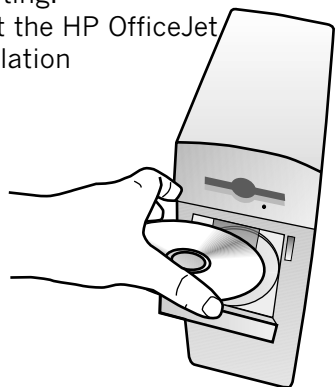

Note:
See the **Additional Setup Information in the Basic Guide** for details on how to set up a network installation.

11

Congratulations!

Congratulations!
You can now print, copy, and scan with your new HP OfficeJet.