poster, setup Windows


Windows Users START HERE Windows 使用者從此處開始




This side of the poster is for Windows users. Make sure you are using the CD and side of the poster that matches your operating system.



本面海報是供 Windows 使用 者使用。請確定您使用符合作業 系統的 CD 和正確的海報頁面。

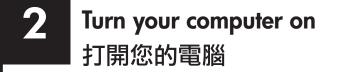

a Turn on your computer and wait for the Windows desktop to appear.

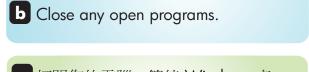

a 打開您的電腦,等待 Windows 桌

b 關閉任何開啟的程式。



in the second se



a Insert the HP PSC Windows CD.

b Follow the onscreen instructions.

a 插入 HP PSC Windows CD。

b 依照螢幕上的指示進行。



If the software does not appear on your computer screen after inserting the CD, see the Troubleshooting Information chapter in the Reference

如果插入 CD 後,電腦螢幕上沒有 出現軟體,請參閱《參考指南》的 「疑難排解資訊」一章。

c Do not connect the USB cable yet. When you see the **Setup your Device Now** dialog box, continue to step 4.


c 請還不要連接 USB 纜線。當您 看到「立即設定裝置」對話方 塊時,請繼續進行步驟 4。



Attach front panel cover 安裝面板蓋

- a Remove any packaging material.
- R Place the front panel cover over the buttons. Firmly press on the sides to snap the cover in place. Make sure all the buttons are visible.
- c Lift the display

- **a** 移除所有的包裝材料。
- b 將面板蓋放在按鈕上。穩固地壓下每一 邊,將面板蓋卡在正確位置。確認可以 看見所有的按鈕
- c 抬起顯示器。

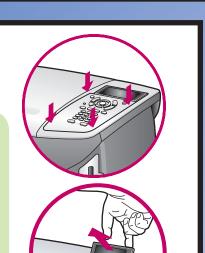

Load paper 載入紙張

a

Use plain white paper to prepare for print alignment.

使用一般白紙準備列印校正




d

連接電源線

Connect power cords

Connect phone cord 連接電話線


- a You must connect the supplied phone cord to the phone jack on the left (1-LINE).
- To connect an answering machine or use your own phone cord, see the Fax Setup chapter in the Reference Guide.
- **α** 您必須將提供的電話線連接到電話左 邊的插孔 (1-LINE)。(請不要使用其他 產品的電話線。)
- **活** 若要連接答錄機或使用您自己的電話 線,請參閱《參考指南》的「傳真設 定」一章。

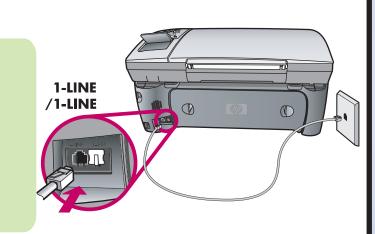

Connect USB cable 連接 USB 纜線

Make sure that you see the screen in step 3 before plugging in your USB cable. Do not connect the USB cable to a keyboard.

在插入 USB 纜線之前,請先確 認您在螢幕上看到步驟 3。請勿 將 USB 纜線連至鍵盤。

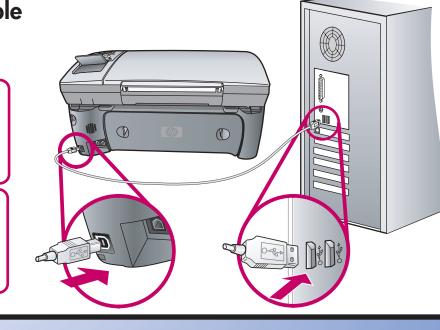


Turn HP device on 開啟 HP 裝置

- a Turn power on.
- **b** Select your language, and then press **OK**. Select your country/region (if not listed, select Singapore), then press **OK**.
- 開啓電源
- b 選擇您的語言,然後按 OK。選擇您 的國家/地區,然後按 OK




Insert and align print cartridges 插入並校正列印墨匣

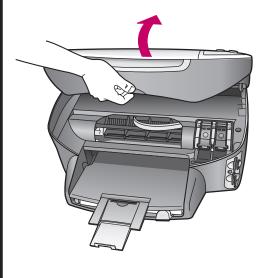


a Make sure the power is on. Lift the print carriage door up until it catches. Wait for the print carriage to move to the right. Lift the blue and gray latches.

a 請確認已開啟電源。抬起列印 托架門,直到卡住爲止。等候 列印托架移到右方。抬起藍色 和灰色門閂

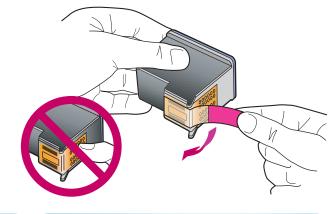


b Remove the bright pink tape from both print cartridges. Do not touch the gold-colored contacts or retape the cartridges.

移除兩個列印墨匣的粉紅色膠 帶。請勿接觸金色的接觸點, 或將膠紙再貼回墨匣上。

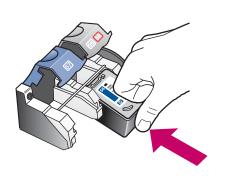

Hold the black print cartridge with the HP label on top. Slide the cartridge into the right (gray latch) side of the print carriage.

c 拿著黑色的列印墨匣,讓 HP 標誌朝 上。將墨匣滑入右邊 (灰色門閂) 的列 印托架。

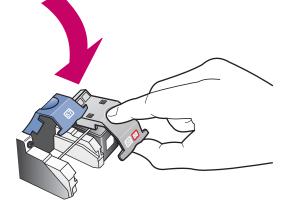

d Press down on the gray latch until it locks into place. Insert the color cartridge on the left side, and lock into place.

d壓下灰色門閂直到鎖定在位 置上爲止。在左邊插入彩色 墨匣,並鎖定在位置上。



e Make sure both latches are locked into position. Close the door.

e 請確認兩個門閂都鎖定在 位置上。將門關上。




Press **OK** on the front panel to begin alignment. After a page prints, alignment is complete. Discard or recycle this page.

f 按一下面板上的 OK 開 始校正。列印頁面後,即 完成校正。丟棄或回收該

Finish software installation 完成軟體安裝




- a Hardware setup is complete. Return to your computer. On the dialog box with the green checkmark, click **Next**. Depending on your system, it may take 20 minutes or more to finish installing the software.
- After you restart your computer, the Fax Setup Wizard appears. Follow the onscreen instructions. When you see the **Congratulations!** dialog box, you are ready to use your HP PSC. If you encounter any problems during setup, see the Reference Guide.
- 硬體設定已經完成。返回您的電腦。在有綠色核取記號 的對話方塊,按一下「下一步」。根據不同的系統,完 成軟體安裝可能需要花 20 分鐘或以上。
- 在您重新啓動電腦後,會出現「傳真設定精靈」。 青隨著螢幕上的指示進行。當您看到「恭喜!」對話 方塊時,就可以使用 HP PSC 了。如果您在安裝時遇 到任何問題,請參閱《參考指南》。

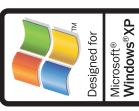











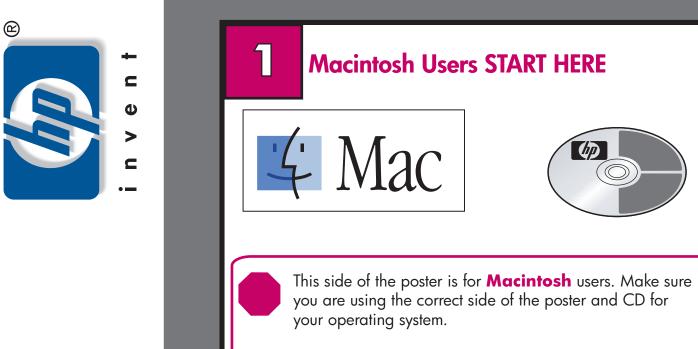


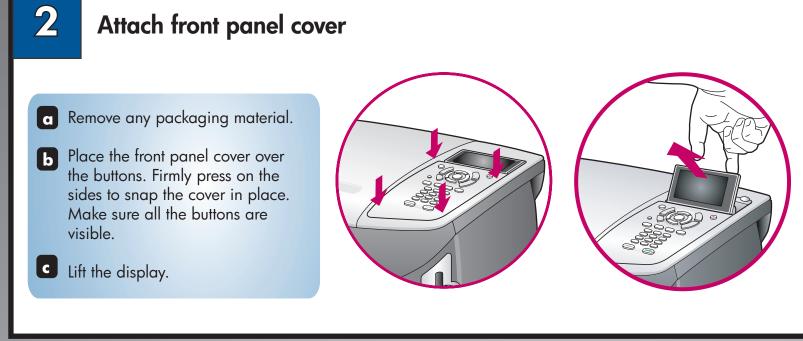


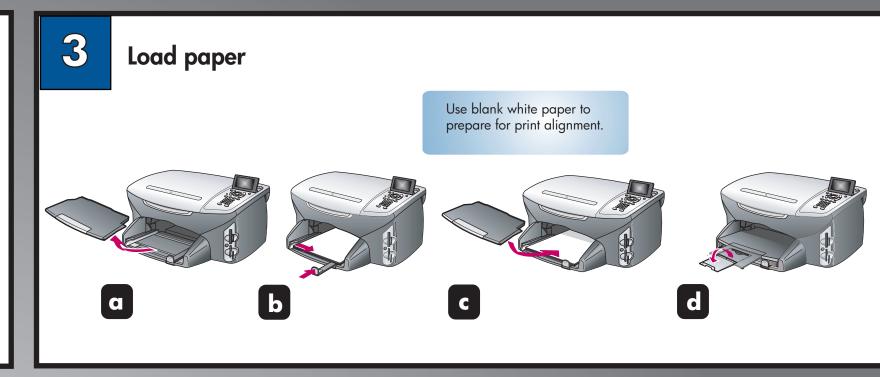


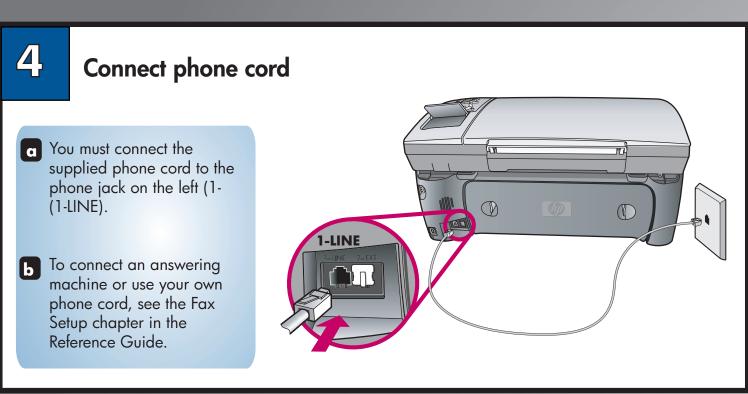


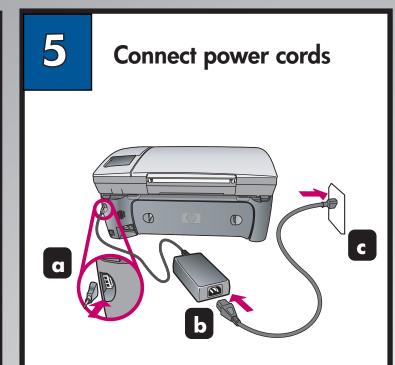

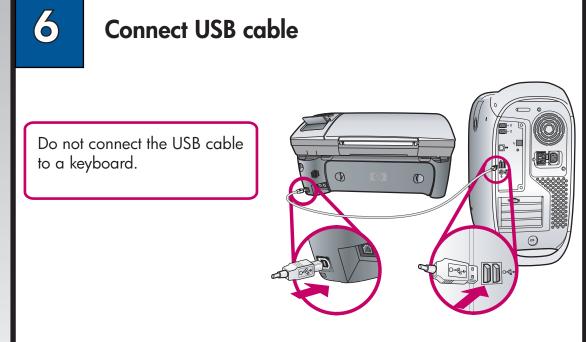

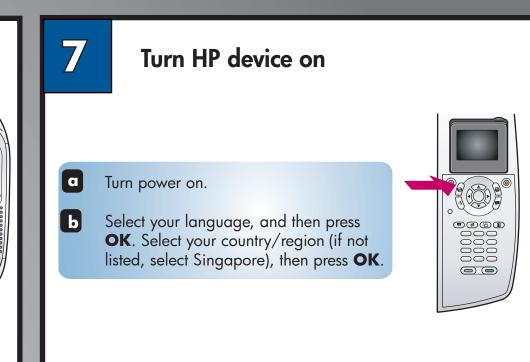


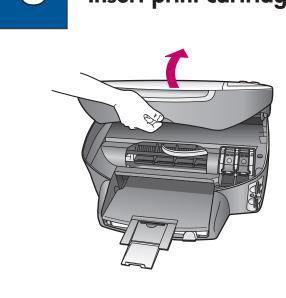

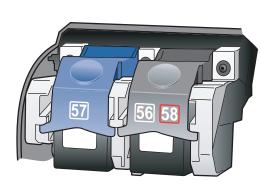


e Make sure both latches are locked into position. Close the door.

Insert print cartridges a Lift the print carriage door up Remove the bright pink tape from both print cartridges. Do C Hold the black print cartridge with the d Press down on the gray latch until it catches. Wait for the HP logo on top. Slide the cartridge until it locks into place. Insert into the right (gray latch) side of the the color cartridge on the left side, and lock into place. not touch the gold-colored print carriage to move to the right. Lift the blue and gray contacts or retape the print carriage. cartridges.

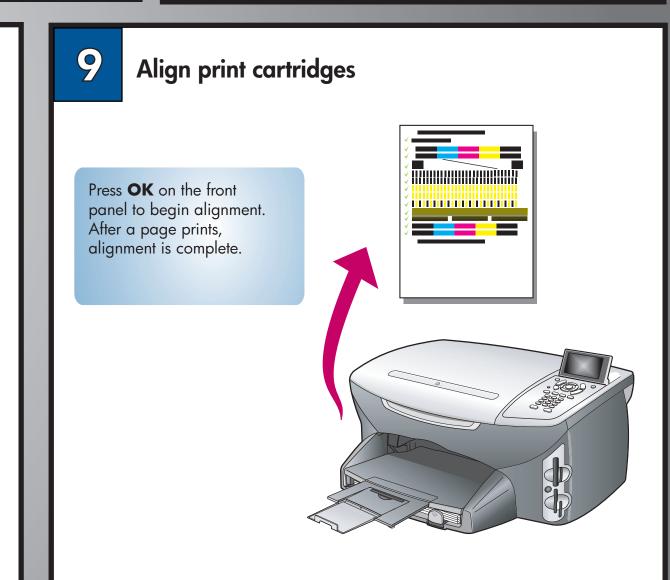



a Turn on your Macintosh wait for it to finish starting up. Insert the HP PSC Macintosh CD.

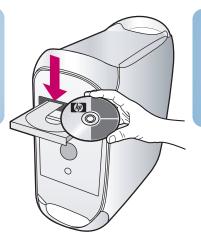

b Double-click the **HP All-**In-One Installer icon on your desktop.



Follow the onscreen instruction. Make sure you complete the Setup Assistant.





You are ready to begin using your HP device. See the Reference Guide to get

