

Chapter 1 - Introduction

This guide complements the Basics guide that you received with your HP PhotoSmart C500 Digital Camera. It describes the camera's advanced features, using a step-by-step approach.

The guide is divided into the following sections:

Chapter	Title	Description
1	Introduction	How to use this guide.
2	Getting Started	How to set up your camera, including installing the batteries, using an AC power adapter, installing the memory card, setting the date and time, changing the language, turning the camera on and off, and using the camera modes, color LCD and menus.
3	Taking Photos	How to take Still, Burst and Timelapse photos, check the camera status, and adjust the camera settings.
4	Viewing Photos	How to view photos using Review mode, Play mode, or your television, and how to mark, categorize, group, protect, and delete photos.
5	Sharing and Printing Photos	How to send photos to another camera or a printer, or print photos from a PC or Macintosh computer.

6	Troubleshooting and Maintenance	Solutions to problems, where to find help using the Internet, the software Help, or HP Customer Care, and how to clean the camera.
A	Safety, Regulatory, and Warranty Information	Battery and AC power adapter safety, how the camera complies with U.S. and Canadian regulations, and the extent of the Limited Warranty.
B	Reference	Color LCD menu structures for Record, Review and Play modes, icons used on the color and status LCDs, error messages displayed on the color and status LCDs, and camera specifications.
	Glossary	Glossary of camera parts and terminology.