

# Appendix B - Reference

---

## Menu Structure

This section lists the available menus and their options. The menu options are explained in detail throughout this User's Guide. If you want to access a particular menu option, use this table to locate the option quickly.

### Record (Rec) Mode

<b>Menu</b>	<b>Option</b>	<b>Setting</b>	<b>Choices</b>	<b>Default</b>
Media Settings	Still	Resolution	High, Medium, Low	High
		Compression	High, Medium, Low	Medium
		Color	Full, B&W (Black and White)	Full
	Burst	Resolution	High, Medium, Low	High
		Compression	High, Medium, Low	Medium
		Color	Full, Black and White	Full
		Burst Rate	1-3 FPS (Frames per second)	2 FPS

Menu	Option	Setting	Choices	Default
Media Settings (cont.)	Timelapse	Resolution	High, Medium, Low	High
		Compression	High, Medium, Low	Medium
		Color	Full, Black and White	Full
		Interval	1, 2, 3, 4, 5, 10, 20, 30, 50 min, 1, 2, 3, 4, 8, 12, 24 hr	1 min
		# Images	2-1000	10
Photo Assist	Exposure	EV	-1.5 - +1.5 (0.3 increments)	0
		AE Method	Matrix, Spot	Matrix
	White Balance	Auto		Auto
		Daylight		
		Fluorescent		
		Tungsten		
		Flash		

Menu	Option	Setting	Choices	Default
Preferences	LCD Brightness	Set Brightness	1-7	4
	Capture	Eye Start	On, Off	On
		Instant Review	On, Off	Off
		Flash	Auto, On, Off, Red-Eye	Auto
		Self Timer	3, 5, 10, 20, 30 (seconds)	10
		Hand Held	On, Off	On
		Counter Reset	On, Off	Off
	Meter	Continuous AE		Continuous AE
		Auto Exposure Lock		
	Date & Time	Set Date & Time		
		Format		Depends on language
	Camera Name	Enter Camera Name		HP C500
	General	Beep	On, Off	On
		Auto Shutoff	On, Off	On

## Review (Rev) Mode








Menu	Option	Setting	Choices	Default
Edit	Delete			
	Group	Create/Add	Groups that you have created	
	Protect			
JetSend	Current/Marked			
	All			
DPOF	Add current/marked	Add to DPOF	1-50	
	Add all	Add to DPOF	1-50	
	Delete form			
Transmit	Camera to Camera	Send		
		Receive		
Find	By Date	Select Date		Current date
	By Category	Select Category	Landscape, Vacation, Friends, Family, Pets, Work, Triangle, Square, Circle	
Preferences	Language	Select Language	English, Français, Italiano, Español, Deutsch	Depends on where you bought the camera










## Play Mode











Menu	Option	Setting	Choices	Default
Play Settings	Slideshow	Content	All, Category	All
		Duration	30, 45, 60 sec	30 sec
		Loop	On, Off	On
	Playback Rate	Timelapse	30, 45, 60 sec	30 sec
		Burst	30, 45, 60 sec	30 sec
		Group	30, 45, 60 sec	30 sec
	Video	Video Out	PAL, NTSC	Depends on where you bought the camera

# Icons

## Color LCD










Mode	Icon	Meaning	Location
Rec (Record)		Still	These media settings icons appear on the left of the lower overlay bar. Only one of the three icons appears at a time, depending on whether you are taking a Still, Burst, or Timelapse photo.
		Burst	
		Timelapse	
		Self-timer	The Self-timer and Macro mode icons appear in the center of the lower overlay bar. If the icons appear in color, the setting is active. If they appear in gray, the setting is inactive.
		Macro mode	
		Digital Zoom	This icon appears on the right of the upper overlay bar. The icon only appears if you have activated digital zoom.
		Memory Card Status	This icon appears on the left of the upper overlay bar and indicates how much space is available on the memory card.

Mode	Icon	Meaning	Location
Rec (cont.)		Memory Card Inserted	These icons appear at the top of the Status menu. With the camera in Rec mode, press the Status button (right soft key) to see the Status menu.
		Coin Battery	
		Media Settings menu	These icons appear when you press the Menu button. They indicate the menus that are available.
		Photo Assist menu	
		Preferences menu	
Rev (Review)		Still	These media settings icons appear in the photo information. Only one of the icons appears at a time, depending on whether the photo you are viewing is a Still, Burst, or Timelapse photo, or a photo representing a group of photos.
		Grouped Images	
		Burst	
		Timelapse	














Mode	Icon	Meaning	Location
Rev (cont.)		Find	The Find icon appears in the photo information to indicate that the photo you are viewing is the result of a search by date and time, or by category.
		Protected	The Protected icon appears in the photo information to indicate that the photo you are viewing is protected.
		DPOF	The DPOF icon appears in the photo information to indicate that there is a DPOF file on the memory card.
		Edit menu	These icons appear when you press the Menu button. They indicate the menus that are available.
		JetSend menu	
		DPOF menu	
		Transmit menu	
		Find menu	
	Preferences menu		
	Play Settings menu	This icon appears when you press the Menu button. It indicates the menu that is available.	



## Categories

Icon	Meaning	Location
	Landscape	These icons appear in the photo information to indicate that the photo you are viewing is part of a category.
	Vacation	
	Friends	
	Family	
	Pets	
	Work	
	Triangle	
	Square	
	Circle	

## Status LCD

Icon	Meaning
	NiMH batteries empty
	NiMH batteries fully charged
	NiMH batteries partially charged
	Automatic flash
	No flash
	Flash
	Automatic flash with red-eye reduction
	E-mail photo quality
	Basic photo quality
	Fine photo quality
	Super-fine photo quality
	Memory card installed
	No memory card installed

# Error Messages

## Color LCD

Message	What you should do
Not Ready	Wait until the message disappears.
No Flash Card	Insert a memory card.
No Space On Card	Insert a new memory card or delete photos from the current memory card.
Processing Pictures	Wait until the message disappears.
Slow Shutter	Increase light on the subject or turn on the flash, or turn Hand Held off. Or use a tripod with the camera, or hold the camera steady.
No Focus	Zoom out, move the camera farther away from the subject, or increase the amount of light on the subject.

## Status LCD

Camera error messages numbered Ec0-9, Eca, and Ed0-6 appear on the status LCD. If the camera doesn't turn off:

1. Try turning the camera off and then on again.
2. Try unplugging the AC power adapter or removing the NiMH batteries, and then reinstalling them.
3. If the error persists, contact HP Customer Care.

## Camera Specifications

<b>Resolution</b>	2 megapixels (1600x1200 pixels)
<b>Exposure</b>	ISO 80
<b>Memory card</b>	16 MB CompactFlash
<b>Lens system</b>	Wide: F2.8/F6.3 Tele: F4.6/F9.0 6.9mm to 20.7mm focal length (equivalent to 38mm to 115mm format)
<b>Features</b>	Color 2-in LCD; 3x optical zoom, 2x digital zoom; fast autofocus; burst mode; accepts 37mm lens filters and lenses
<b>Interface</b>	HP JetSend, USB, Serial
<b>Power supply</b>	3 AA NiMH rechargeable batteries and battery recharger, or AC adapter (optional); coin battery included in camera
<b>Dimensions</b>	6 x 3.4 x 2.7 in (153 x 85 x 64 mm)
<b>Weight</b>	0.82 lb (370 gm) without batteries