

# Quick Success




hp photosmart 315

 See these pages of the User's Guide for more information


## 1 Set up your camera




### Install the batteries

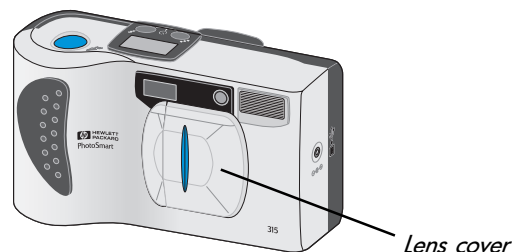

1. Make sure the lens cover is closed.
2. Insert the batteries.

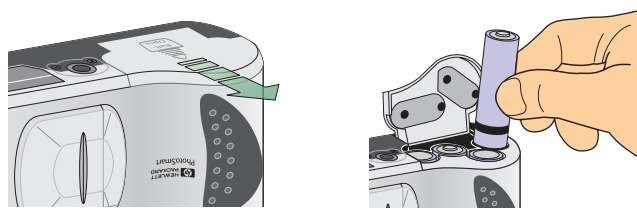

### Choose the language

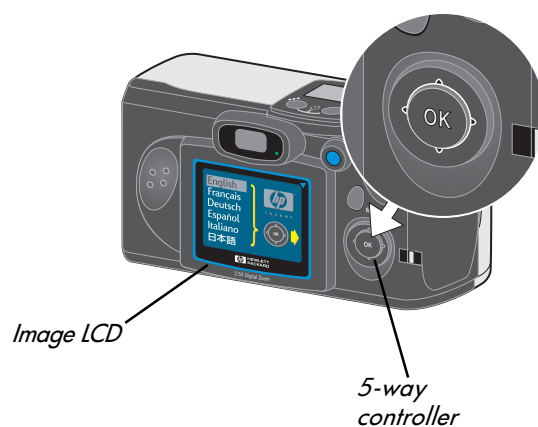

1. Slide the lens cover open to turn the camera on.
2. Press the down side of the 5-way controller until the language you want to use is highlighted on the image LCD.
3. Press **OK** (push the center of the 5-way controller straight in).


### Set the date and time

1. Use the up or down side of the 5-way controller to select the date and time format you want to use, then press **OK**.
2. Use the right or left side of the 5-way controller to select the day (date) of the month, then press the down side of the 5-way controller to move to the next item in the list.
3. Select the month, year, hour, minutes, and AM or PM in the same manner, then press **OK**.
4. To confirm the date and time, press **OK**.


## 2 Take some photos



1. Slide the lens cover open to turn the camera on.
2. Look through the viewfinder and frame your subject.

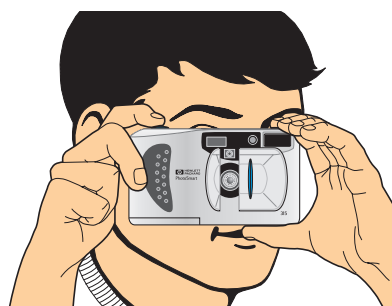

3. Press and hold the **shutter** button 1/2 way down.
4. When the green light appears next to the viewfinder, press the **shutter** button all the way down.
5. Wait for the beeps, then release the **shutter** button.

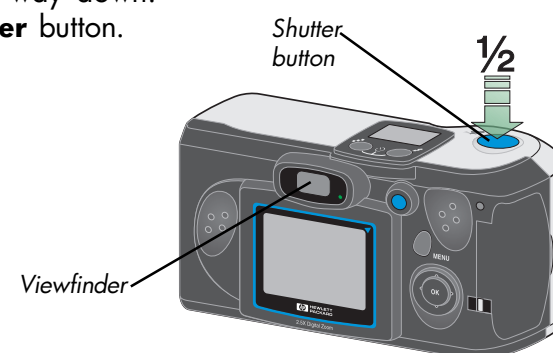


## 3 Review your photos




After you have taken some photos, you can review them on the image LCD.

1. Slide the lens cover closed to turn the camera off.
2. Press the **image LCD on/off** button to turn the image LCD on.
3. Use the 5-way controller to sequence through your photos.

Note: To preserve battery life while you review photos, you can use an HP-approved AC adapter (purchased separately) to power the camera.

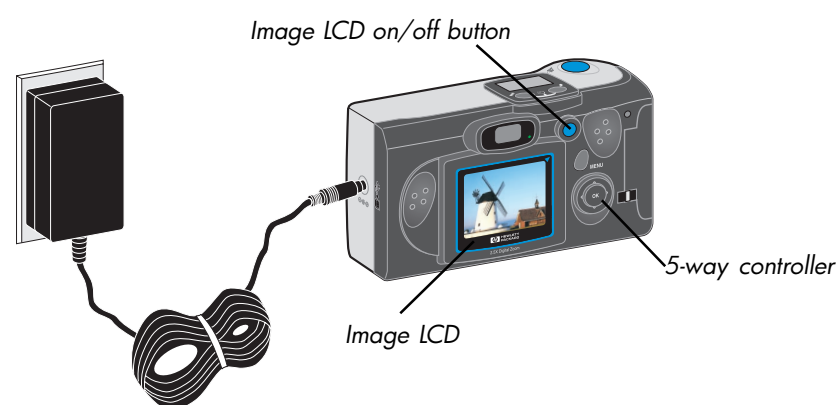

# Quick Success

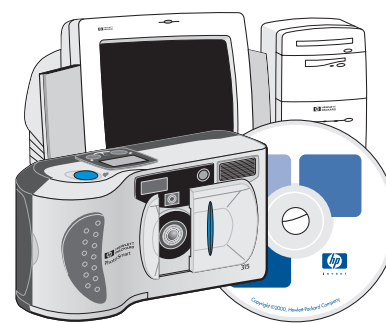

With a computer and your camera's software, you can print copies of your favorite photos, design creative album pages, send photos via email, and even post photos on the Internet! Follow the instructions below to learn how to transfer photos to your computer, then refer to the online help in the software that came with your camera for more information.

hp photosmart 315

## 4 Install the software




### \* Windows PC \*


Insert the HP PhotoSmart 315 CD into your computer's CD-ROM drive, then click **Next** in the installation window that appears on your computer screen. Follow the instructions on the screen to install the software.

Note: If you are using a Macintosh, you do not need to install software to download photos. Proceed to step 5 below.

## 5 Connect the camera

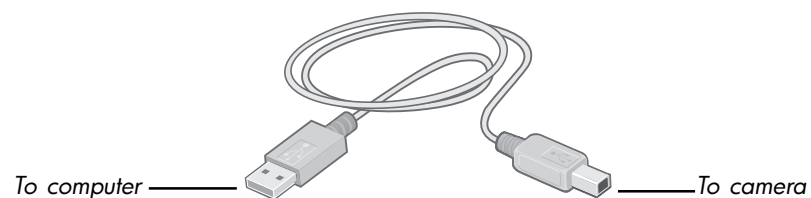

1. Connect the camera to your computer using the USB cable provided.
2. Slide the lens cover open to turn the camera on. If you are using a Windows PC, the HP Photo Imaging Software window automatically appears on your computer screen after a few seconds. If you are using a Macintosh, an **Untitled** drive icon automatically appears on your desktop after a few seconds.

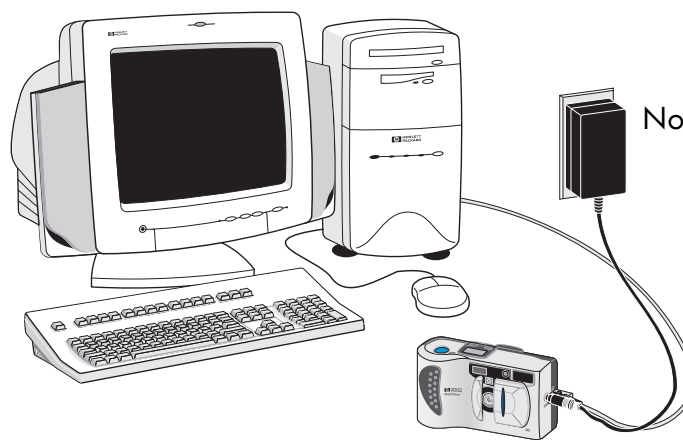

Note: To preserve battery life while you transfer photos, you can use an HP-approved AC adapter (purchased separately) to power the camera.

## 6 Transfer photos

 


### \* Windows PC \*



1. Click **Unload Camera** in the HP Photo Imaging Software window.
2. The photos will be saved in the folder shown in the **Save my images to** box. If you want to save them in a different folder, click the **browse (...)** button to select the folder where you want to store the photos. Make other selections in the dialog box as desired.
3. Click **Start**.
4. Click **Yes**.

### \* Macintosh \*



1. Double-click the **Untitled** drive icon on your desktop.
2. Double-click the **DCIM** folder.
3. Double-click the **HP315** folder.
4. Double-click the hard drive window and the folder you want to store the photo(s) in.
5. In the **HP315** folder window, select the photo(s) you want to transfer.
6. Drag the selected photo(s) to the folder you opened in step 4. When you are finished transferring photos, you can use the ArcSoft PhotoImpression software that came with your camera to work with your photos. For more information on the ArcSoft PhotoImpression software, visit [www.arcsoft.com](http://www.arcsoft.com).



C8452-90101  
Printed on recycled paper  
©2000 Hewlett-Packard Company  
Windows is a registered trademark of Microsoft Corporation  
Macintosh is a registered trademark of Apple Computer, Inc.

[www.hp.com/photosmart](http://www.hp.com/photosmart)



For HP Customer Care information, see your HP PhotoSmart 315 User's Guide.