


**hp officejet
7100 series
all-in-one**



i n v e n t

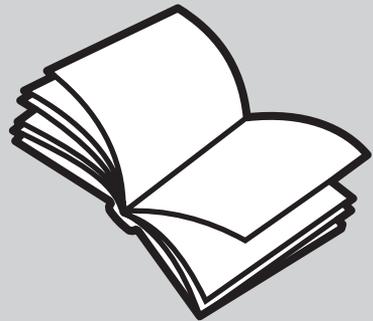

reference guide

© Copyright Hewlett-Packard Company
2002

All rights are reserved. No part of the document may be photocopied, reproduced, or translated to another language without the prior written consent of Hewlett-Packard Company.

Portions Copyright © 1989-2001 Palomar Software Inc. The HP OfficeJet 7100 Series includes printer driver technology licensed from Palomar Software, Inc.
www.palomar.com

Copyright © 1999-2001 Apple Computer, Inc.

Apple, the Apple logo, Mac, Mac logo, Macintosh, and Mac OS are trademarks of Apple Computer, Inc., registered in the U.S. and other countries.

Publication number: C8380-90183

First edition: September 2001

Printed in U.S.A., Mexico, Germany, Singapore, or China

Windows®, Windows NT®, Windows ME®, Windows XP®, and Windows 2000® are U.S.-registered trademarks of Microsoft Corporation.

Intel® and Pentium® are registered trademarks of Intel Corporation.

notice

The information contained in this document is subject to change without notice and should not be construed as a commitment by the Hewlett-Packard Company.

Hewlett-Packard assumes no responsibility for any errors that may appear in this document, nor does it make expressed or implied warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

The Hewlett-Packard Company shall not be liable for incidental or consequential damages in connection with, or arising out of the furnishing, performance, or use of this document and the program material which it describes.

Note: Regulatory information can be found in the "Technical information" section of the Support and Specifications Booklet.



It is not lawful in many places to make copies of the following items. When in doubt, check with a legal representative first.

- Governmental paper or documents:
 - Passports

- Immigration papers
- Selective service papers
- Identification badges, cards, or insignias
- Governmental stamps:
 - Postage stamps
 - Food stamps
- Checks or drafts drawn on Governmental agencies
- Paper currency, traveler's checks, or money orders
- Certificates of deposit
- Copyrighted works

safety information




Warning! To prevent fire or shock hazard, do not expose this product to rain or any type of moisture.

Always follow basic safety precautions when using this product to reduce risk of injury from fire or electric shock.

WARNING: potential shock hazard

- 1 Read and understand all instructions in the setup poster.
- 2 Use only a grounded electrical outlet when connecting the unit to a power source. If you do not know whether the outlet is grounded, check with a qualified electrician.
- 3 Observe all warnings and instructions marked on the product.
- 4 Unplug this product from wall outlets before cleaning.
- 5 Do not install or use this product near water or when you are wet.
- 6 Install the product securely on a stable surface.
- 7 Install the product in a protected location where no one can step on or trip over the line cord, and where the line cord will not be damaged.
- 8 If the product does not operate normally, see the online Troubleshooting help.
- 9 No operator-serviceable parts inside. Refer servicing to qualified service personnel.
- 10 Use in a well-ventilated area.

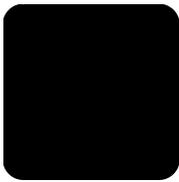

contents

1	get help	1
2	quick start	3
	tutorial	3
	before you begin	3
	front panel features	3
	make a copy	5
	enhance your copy	5
	copy from the automatic document feeder	6
	menu button review	6
	front panel overview	8
	use your hp officejet with a computer	10
	review the hp director	10
	hp officejet menu functions	13
3	load originals and load paper	15
	print using 4800 optimized dpi	15
	print using 4800 optimized dpi in Windows	15
	print using 4800 optimized dpi in Macintosh OS 9	16
	print using 4800 optimized dpi in Macintosh OS X	17
	load originals	17
	load originals on the glass	17
	load originals in the automatic document feeder	18
	load paper	19
	load envelopes	20
	tips for loading other types of paper in the main tray	22
	choose the paper tray and set the paper type	23
	set the paper size	24
	learn more	24
4	use the scan features	25
	scan an original	25
	scan to a different software program	26
	stop scanning	26
	learn more	26
5	use the copy features	27
	make copies	27
	make a copy	27
	increase copy speed or quality	27
	reduce or enlarge a copy	28
	make copies lighter or darker	28
	change color intensity	28
	enhance text sharpness and photo colors	28

- set the number of copies 29
- change settings for all copy tasks 29
- perform special copy jobs. 30
 - copy at 4800 optimized dpi 30
 - copy a photo 30
 - fit a copy to the page 31
 - print several copies on one page 31
 - print two originals on one page 32
 - shift image to increase the margin 33
 - make two-sided copies 33
 - collate copies. 34
 - make a poster 34
 - prepare a color T-shirt transfer 35
- stop copying. 36
- learn more 36
- copy setup menu options 36
- 6 use a photo card 37**
 - what is a photo card? 37
 - insert a photo card 37
 - cards inserted incorrectly 38
 - save files to the computer 38
 - view and edit image files 38
 - use the hp photo view center 38
 - use the hp workplace 39
 - print from a photo card 39
 - print a proof sheet 39
 - print all photos 40
 - print individual photos. 40
 - print a DPOF file. 41
 - use a proof sheet. 41
 - fill out the proof sheet 41
 - scan a proof sheet 42
 - learn more 43
 - photo card functions menu options. 44
- 7 use the fax features 45**
 - send a fax 45
 - send a fax from your hp officejet. 45
 - use speed dial entries to send a fax 46
 - send a color fax 46
 - broadcast a fax to multiple recipients 47
 - schedule a fax 47
 - cancel a scheduled fax 47
 - receive a fax. 48
 - receive a fax automatically. 48
 - receive a fax manually 48
 - print reports 48
 - generate automated reports 49


generate manual reports	49
redial a number automatically	49
adjust the volume	50
set up speed dialing	50
create individual speed-dial settings	50
create group speed-dial settings	50
set the date and time	51
set the fax header	52
enter text	52
reprint the faxes in memory	53
use an answering machine or pc modem	53
learn more	54
fax feature menu options	55
8 maintain your hp officejet	57
clean the glass	57
clean the lid backing	57
clean the exterior	57
install the automatic document feeder	58
work with printheads and ink cartridges	58
print a self-test report	58
check the ink level	58
perform color calibration	59
handle printheads	59
verify a printhead needs to be replaced	59
replace the printheads	61
handle ink cartridges	63
replace the ink cartridges	63
align the printheads	65
clean the printheads	66
clean the ink cartridge contacts	66
clean the printhead contacts	67
replacement alternatives	69
override the ink level gauge	70
restore factory defaults	70
set the country or language	71
set the power save mode time	72
maintenance menu options	73
9 additional setup information	75
possible installation problems	75
selecting an hp officejet on a network (Macintosh)	76
connect your hp officejet to your computer	77
connect your parallel cable adapter	77
setup for simple sharing	78
connect your usb port	78
connect your hp officejet to a phone, modem, or answering machine	79
remove and reinstall your hp officejet software	79
learn more	80

index.81

1

get help

help	description	win	mac
Setup Poster	The Setup Poster provides instructions for setting up and configuring your HP Officejet. Make sure you use the correct poster for your operating system (Windows or Macintosh).	X	X
Product Tour	The tour provides a brief introduction to the HP Officejet and its capabilities, so you can start using it immediately. You can take the tour immediately after installing the HP Officejet software, or to take the tour at any time, do the following: <ol style="list-style-type: none"> 1 Double-click the HP Officejet 7100 Series shortcut on the Windows desktop. 2 In the HP Director, click Help, then choose Product Tour. 3 After the Product Tour dialog box appears, insert the HP Officejet 7100 Series CD-ROM into your computer's CD-ROM drive, and click Search. 	X	
User's Guide	The onscreen User's Guide provides detailed information on using your HP Officejet and its features. It also provides detailed information on topics ranging from paper types to using other programs with your HP Officejet. For Windows users: Go to the Director , click Help , and then choose User's Guide . For Macintosh users: Go to the Director , click Tools , and then choose View Onscreen Guide .	X	X
Reference Guide	This printed Reference Guide contains information on using your HP Officejet and provides additional troubleshooting assistance for the installation process.	X	X
Support and Specifications booklet	The printed Support and Specifications booklet provides information for your HP Officejet, including how to order supplies and accessories, technical specifications, support, and warranty information.	X	X
Troubleshooting help	To access troubleshooting information, go to the Director , click Help , then choose Troubleshooting . Troubleshooting is also available via the Help button that appears on some error messages.	X	
Internet help and technical support	If you have Internet access, you can get help from the HP website at: www.hp.com/support The website also provides answers to frequently-asked questions.	X	X

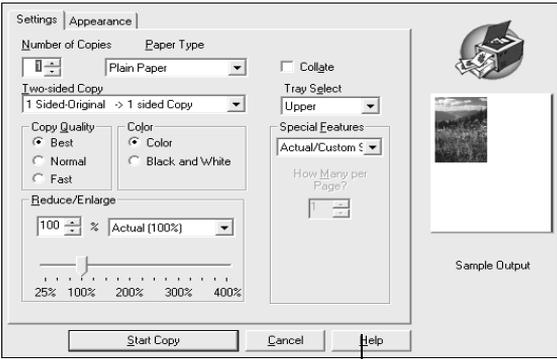help	description	win	mac
Readme file	<p>After you install your software, you can access the Readme file from either the HP Officejet 7100 Series CD-ROM or the HP Officejet 7100 Series program folder. To access the Readme file, do the following:</p> <p>For Windows: go to the Windows taskbar, click Start, point to Programs or All Programs (XP), point to Hewlett-Packard, point to HP Officejet 7100 Series, and then choose View the Readme File.</p> <p>For Macintosh: go to the HD:Applications:HP Officejet Software folder.</p>	X	X
Dialog-box help	<p>For Windows: Clicking Help in a dialog box displays information about options and settings within the dialog box.</p>  <p>To get help while working in a dialog box, click Help.</p>	X	
Accessories guide	<p>The Accessories guide provides information on attaching and setting up the HP 250-sheet plain paper tray, as well as how to load paper into it. It also includes information about the two-sided printing accessory.</p>	X	X

2

quick start

You can perform many functions using either the front panel or the HP Officejet software.

Even if you do not connect your HP Officejet to a computer, you can use the front panel to copy, print photos, or fax documents. You can change a wide variety of settings using the front-panel buttons and menu system.

tutorial

This brief tutorial teaches you how to use your HP Officejet to make a copy, adjust copy settings, and change settings. This is not a comprehensive tutorial; its purpose is to familiarize you with the front panel and the different buttons. It should take about ten minutes to complete the tutorial, after which you can experiment on your own.

Note: We highly recommend that you take this tutorial before you start using your HP Officejet for daily tasks.

Review the table of contents or the index to find out about the other front-panel tasks covered in this Reference Guide.

before you begin

Do the following:

- Follow the instructions in the Setup Poster to set up your HP Officejet. You should install the HP Officejet software before connecting the HP Officejet to the computer.
- If you are using Macintosh OS X, once the HP Officejet software is installed, add your printer to the Print Center. For more information, see **add your hp officejet** in the onscreen User's Guide.
- Make sure paper is loaded in the main tray. If you need more information, see **load paper** on page 19.
- Have available a color photograph or picture that is smaller than Letter or A4 size. You will use this image for tutorial activities.
- Obtain a two or three-page document. You will use it for tutorial activities.


front panel features

The front panel is divided into the following main regions:


- Fax area
- Keypad
- Shared buttons and front-panel display
- Copy area
- Scan area
- On button

Review the illustrations below and identify the location of the buttons on the front panel. You will not use all of the front-panel features in the tutorial, but you may find it helpful to note the locations of all the buttons.

Left side of the front panel showing the Fax area and the keypad

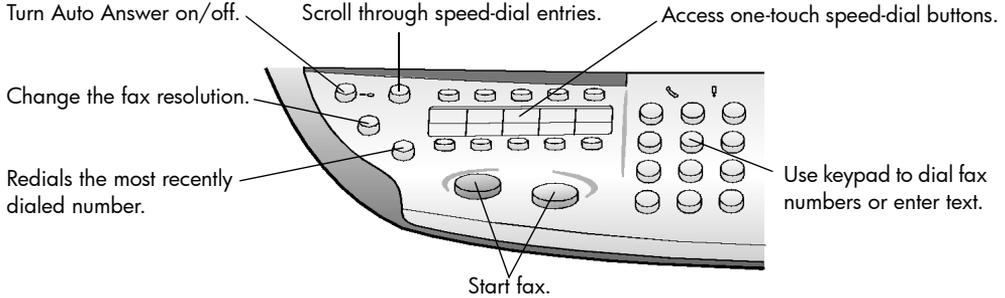


Right side of the front panel showing the shared buttons and front-panel display, the Copy area, and the Scan area

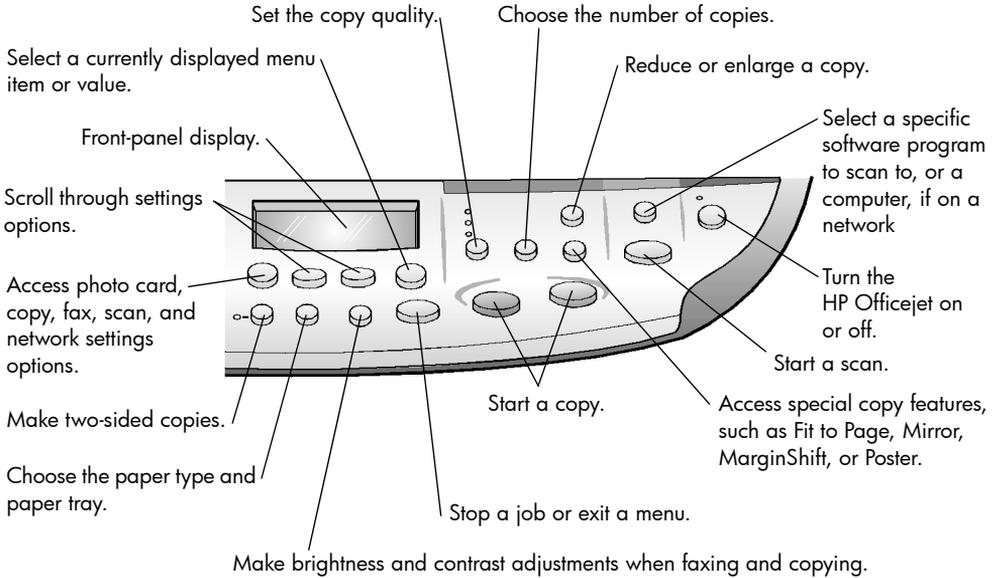

make a copy

Follow the instructions below to make a copy of your color photo or picture.

- 1 Open the lid of your HP Officejet and place your picture face down in the bottom-right corner of the scanner glass with the sides of the picture touching the right and bottom edges.

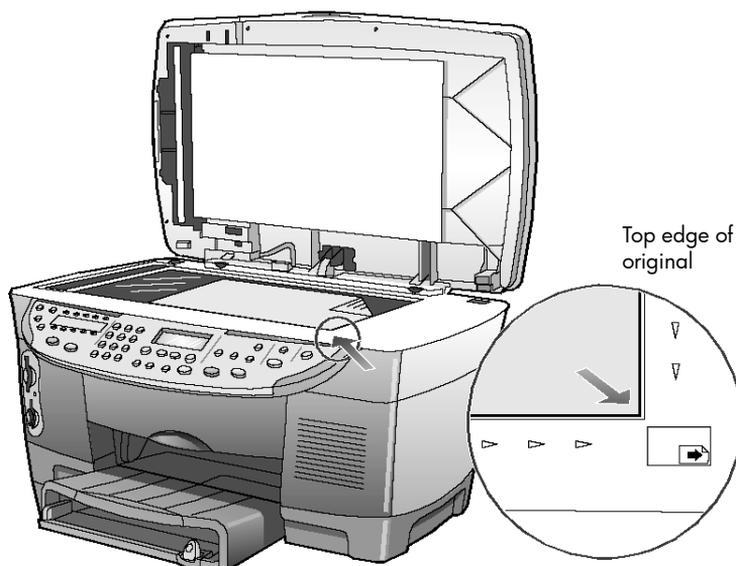

- 2 In the **Copy** area of the front panel, press **Start Copy, Color**.
If you had wanted to save the picture to the computer, you would have pressed **Start Scan**. If you had wanted to fax the picture, you would have pressed the **Black** or **Color** button in the **Fax** area. For this tutorial, you will continue making a copy.

The default is a single copy. Pressing the **Start Copy, Color** button on the HP Officejet automatically prints one color copy of the picture on the glass. If you had pressed the **Start Copy, Black** button, the HP Officejet would have made a single grayscale copy of your color picture.

enhance your copy


- 1 Without moving your photo or picture from the glass, press the **Number of Copies** button two times until **2 Copies** is showing.
- 2 Press **Start Copy, Black** on the front panel.
The HP Officejet makes two black and white copies of your picture.
Notice that you did not have to do anything else but select the number of copies and press a start key. Now you will change an additional setting before making more copies.
- 3 Press **Number of Copies** one more time to increase the copies to 3.
- 4 Press the **Reduce/Enlarge** button.
Custom 100% appears in the front-panel display.
Use this option to reduce or enlarge your picture.

- 5 Press **5** and then the **0** button on the keypad so that 50% appears, then press **Enter**.
- 6 Press **Color** on the front panel.
The HP Officejet prints three color copies of your picture, reduced by 50%.
If you do not do anything else with your HP Officejet, the settings that you adjusted will return to their default settings within two minutes. The number of copies returns to one and the copy percentage returns to 100%.
- 7 If you do not want to wait, press **Cancel**.
Next you will use one of the **Special Features** options to enlarge your photograph.
- 8 Press **Special Features** until **Fit to Page** appears.
- 9 Press **Enter**.
- 10 Press **Start Copy, Black** or **Start Copy, Color**.
A copy of your picture is printed, which fills the whole page.
Next, you will review the automatic document feeder.

copy from the automatic document feeder

Your HP Officejet has an automatic document feeder (ADF), which you can use to load multiple originals for faster copying, faxing, or scanning. In the next part of this tutorial, you are going to make a fast copy of your two or three-page document.

- 1 Remove the photo from the glass.
- 2 Place the two or three originals face-up in the automatic document feeder.
- 3 Adjust the paper-width guide to fit the size of your original.
A message appears on the front-panel display indicating that the originals are loaded.

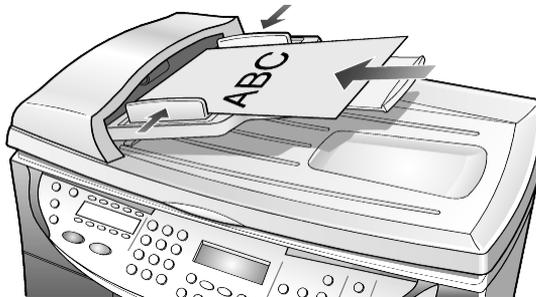

- 4 Press the **Quality** button until **Fast** is lit.
- 5 Press **Start Copy, Black** or **Start Copy, Color**.
The documents are fed through the ADF and are quickly copied.
Next, you will review the **Menu** button.


menu button review

The **Menu** button lets you enter the menu system that you use to change photo card, fax, and copy settings, as well as perform maintenance and print reports.


- 1** Press **Menu**.
The first submenu appears, which depends on what model of HP Officejet you have.
- 2** Press **Menu** repeatedly to view all the submenus.
The submenus are as follows:
 - 0:Photo Card (some models)
 - 1:Copy Setup
 - 2:Fax Functions
 - 3:Print Report
 - 4:Speed Dial Setup
 - 5:Basic Fax Setup
 - 6:Advanced Fax Setup
 - 7:Status and Maintenance
 - 8:Network Setup (if network hardware is installed, advanced users only)Some options are available only on certain models of your HP Officejet.
- 3** Press **Menu**.
- 4** Press **7**, then press **1**.
This selects **Status and Maintenance**, then selects the **Check Ink Level**.
The ink supply levels for both the black ink cartridge (#14) and the tri-color ink cartridge (#14) appear in the front-panel display.
- 5** Press **Cancel** to clear the front-panel display, if desired.
This concludes the brief tutorial.
Review the rest of this Reference Guide to find out how to make other changes and use other features.

front panel overview

Left side of the front panel

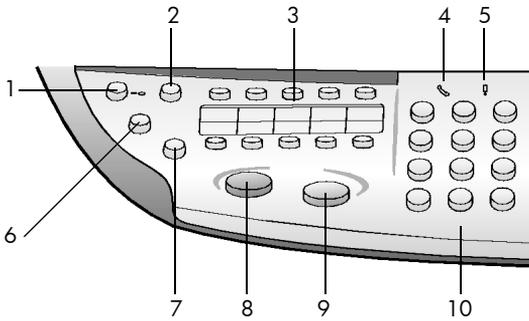

Right side of the front panel

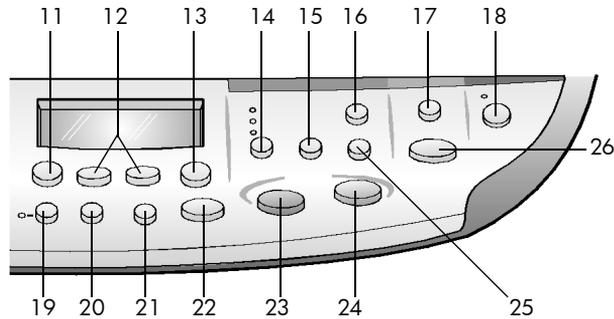

feature	purpose
1	Auto Answer: when the green light is on, fax transmissions will automatically be accepted.
2	Speed Dial: use to access speed-dial numbers that have been set up from the front panel or with the HP Director software.
3	One-Touch Speed-Dial Buttons: use to access the first 10 speed-dial entries.
4	Phone Hook: the green LED in the shape of a phone indicates that the fax line is in use when lit.
5	Needs Attention: the amber LED in the shape of an exclamation point indicates that the device needs attention.
6	Resolution: use to set the fax resolution to Fine, Standard, 300 dpi, or Photo. It will remain at the most recent setting until changed.
7	Pause/Redial: redials the most recently dialed number when in the ready state. Inserts a pause (hyphen) when in the dialing state.
8	Start Fax - Black: starts a black and white fax.
9	Start Fax - Color: starts a color fax.

feature	purpose
10	Keypad: use to dial fax numbers, and enter numbers such as the quantity of copies or percentages when reducing or enlarging. You can also enter text using the keypad.
11	Menu: use to access the menu system. The menus that are available depend which model of the HP Officejet you have. Menu options include; Photo Card Functions, Copy Setup, Fax Functions, Print Report, Speed Dial Setup, Basic Fax Setup, Advanced Fax Setup, Status & Maintenance, and Network Setup.
12	Arrows: use to scroll through menu settings, through options within settings, or to move forward or backward to erase a text entry.
13	Enter: use to select or save the displayed setting.
14	Quality: use to select the quality of the copy from Best, Normal, or Fast.
15	Number of Copies: use to change the number of copies for this copy job. This button can be used in conjunction with the arrow keys or the keypad to make additional copies.
16	Reduce/Enlarge: use to reduce or enlarge an original to a specified image size on paper loaded in the selected tray. The original may be fed from the automatic document feeder (ADF) or placed on the glass.
17	Scan To: use to access a list of software programs that an image can be scanned to. You must configure the Scan To list using the HP Officejet software on the PC prior to using this feature.
18	On: turns the HP Officejet on and off.
19	Two-Sided Copy: use to make hands-free two-sided copies. Available only if you have the two-sided printing accessory and the automatic document feeder (ADF).
20	Tray Select/Paper Type: use to select the paper type. The main paper tray supports plain paper and specialty papers. If your HP Officejet has the 250-sheet plain paper tray, use this button to select both the paper type and the paper tray to use.
21	Lighter/Darker: use to adjust the lightness and darkness of the copies you make and the faxes you send.
22	Cancel: use to stop a job, exit a menu, or exit button settings.
23	Start Copy - Black: use to start a black and white copy.
24	Start Copy - Color: use to start a color copy.
25	Special Features: use to access options that let you reduce or enlarge to a specified copy image size on paper loaded in the selected tray. The options are Normal, Fit to Page, Which Size?, Poster, 2 on 1, MarginShift and Mirror.

feature	purpose
26	Start Scan: use to start the scan of an original from the ADF or the glass to the designated Scan To destination. If no change was made to the Scan To destination, the image will be scanned to the HP Photo View Center (Windows) or HP Scan Window (Macintosh) if the HP Officejet software is installed.

use your hp officejet with a computer

If you installed the HP Officejet software on your computer according to the Setup Poster, you can access all the features of the HP Officejet using the HP Director.

review the hp director

The HP Director is available through the desktop shortcut.

For **Windows Users:** Do one of the following:

- Double-click the **HP Officejet 7100 Series** shortcut on the Windows desktop.
- In the Windows taskbar, click **Start**, point to **Programs** or **All Programs** (XP), point to **Hewlett-Packard**, choose **HP Officejet 7100 Series**, then choose **HP Director**.


For **Macintosh Users:** Double-click the **HP Director** icon on the desktop.

See the *HP Officejet 7100 Series: Onscreen User's Guide* for comprehensive onscreen information about the Director.

For **Windows Users:** Go to the **HP Director**, click **Help**, and then choose **User's Guide**.


For **Macintosh Users:** Go to the **HP Director**, click **Tools**, and then choose **View Onscreen Guide**.

The following figure shows some of the features available through the HP Director for Windows.

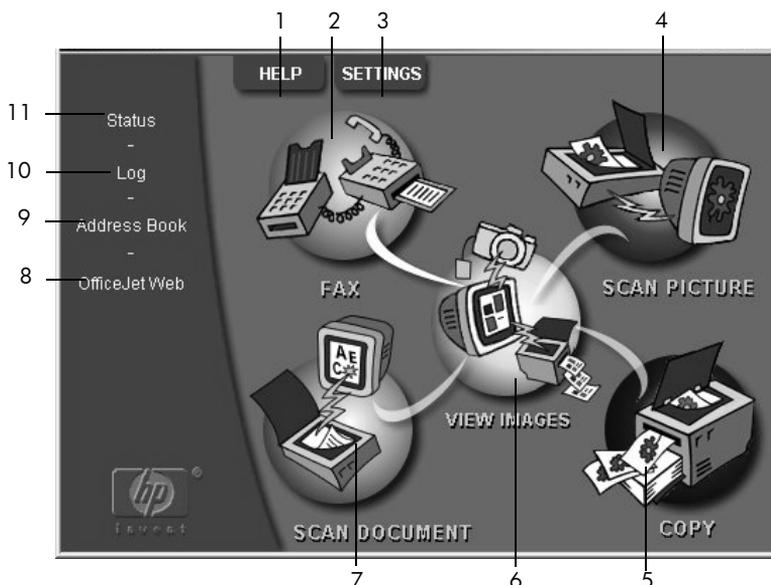

feature	purpose
1	Help: provides access to onscreen assistance in the form of an onscreen User's Guide, Troubleshooting, Product Tour, Director Help, and information about your HP Officejet.
2	Fax: displays the Send Fax dialog box where you can enter the fax recipient information, specify the fax quality and color, and start a fax job.
3	Settings: displays dialog boxes that allow you to view or change various settings for print, scan, copy, photo card, Director, maintenance, and fax.
4	Scan Picture: scans a picture and displays it in the HP Photo View Center after first previewing it in the HP Image Viewer.
5	Copy: displays the Copy dialog box where you can select the paper type, number of copies, the color, the size, the Creative Copy features, and start a copy.
6	View Images: displays the Photo View Center, where you can view and edit images, use creative printing, make and print a photo album, print, e-mail, or fax an image, upload an image to the web, or save an image.
7	Scan Document: scans the document and displays it in the HP Image Viewer for previewing. After you accept the preview, the document is scanned into the text editing program that you have set up.
8	OfficeJetWeb: launches your browser and accesses the HP Officejet website.
9	Address Book: provides access to the Windows address book.
10	Log: displays a list of faxes recently sent and received.
11	Status: displays the status window.

The following figure shows some of the features available through the HP Director for Macintosh. Consult the legend for a brief explanation of a specific feature.

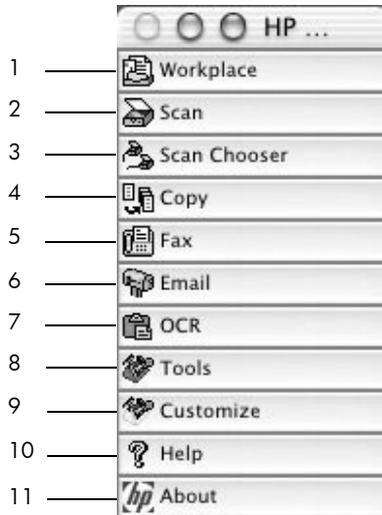


The Director for Macintosh, in OS9 and OSX

Feature	Purpose
1	HP Workplace: displays the HP Workplace, where you can view thumbnails, view and edit images, print single or multiple photos.
2	Scan: scans a document or photo into the HP Scan Window, where you can select a destination.
3	Scan Chooser: provides a short cut to the chooser, where you can select the HP Officejet 7100 Series as the scanning device.
4	Copy: copies in black and white or color.
5	Fax: scans a document and opens the fax program.
6	Email: scans a document or photo and attaches it to an e-mail message.
7	OCR: scans a document and converts it to text for editing in a word processor.
8	Tools: accesses the Toolbox, which you can use to maintain and configure the HP Officejet 7100 Series.
9	Customize: displays options for customizing the appearance and functionality of the Director and scanning.
10	Help: accesses Help for assistance with the HP Officejet software.
11	About: accesses copyright information about the HP Officejet software.

hp officejet menu functions

Access **Menu** functions by pressing the corresponding numbers for each menu option. For example: to set the language and country, press **Menu**, then press **7** and **7**. This automatically selects the **Status and Maintenance** menu, then selects the **Set Country and Language** option.

Not all features are available on all models.

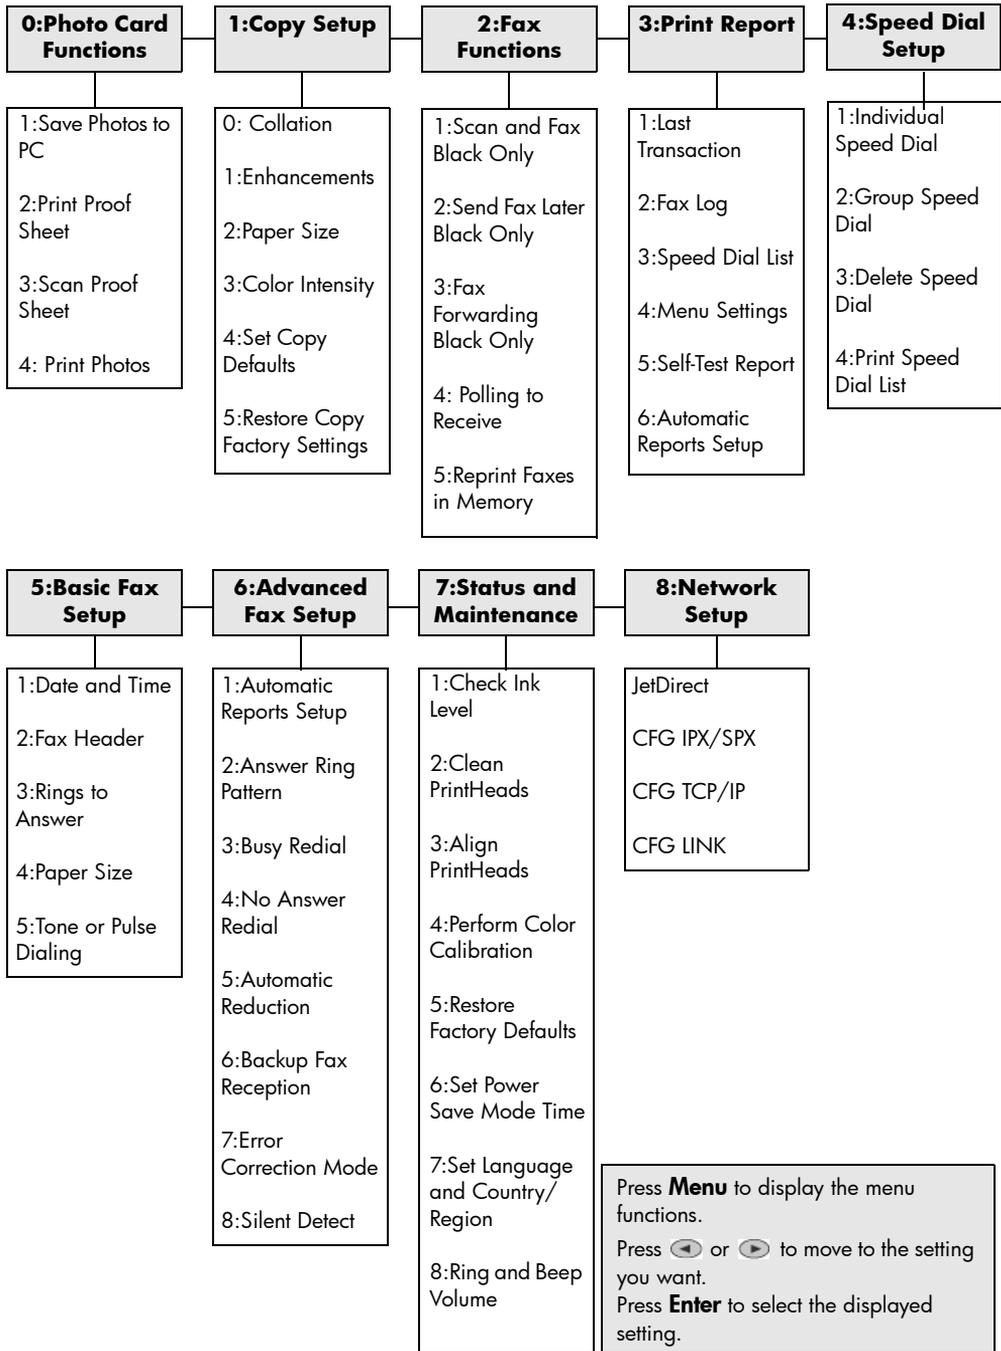

3

load originals and load paper

You can copy from originals loaded on the glass or in the automatic document feeder. You can also print and copy onto a variety of paper types, weights, sizes, and transparency films. It is important, however, that you choose the right paper and make sure that it is loaded correctly and not damaged.

print using 4800 optimized dpi


Print using 4800 Optimized dpi to get the best print quality when you are printing your photos on photo paper. With this setting the HP Officejet prints significantly slower. To achieve 4800 Optimized dpi, you must select one of the following types of photo paper:

- hp premium photo paper
- hp premium plus photo paper, matte
- hp premium plus photo paper, glossy
- hp colorfast photo paper, glossy
- hp photo paper
- snapshot photo media, 4 x 6 (Windows only)
- Other Photo Papers (Windows only)

Note: All other paper types, including hp photo quality paper, matte finish and hp everyday photo paper, semi gloss, will print at 1200 dpi.

print using 4800 optimized dpi in Windows

- 1 Open the photo you wish to print.
- 2 Load the photo paper in the main paper tray. For more information, see **load paper** on page 19 and **tips for loading other types of paper in the main tray** on page 22.
- 3 From the program's **File** menu, select **Print**, then **Properties** or **Preferences**, and then click the **Setup** tab.
- 4 In the **Paper Type** list, choose a type of photo paper.
Your HP Officejet automatically sets the **Print Quality** to **Best**.
- 5 In the **Paper Size** list, choose the appropriate paper size.
- 6 In the **Photo Paper Printing** area, select **4800 x1200 Optimized dpi**.

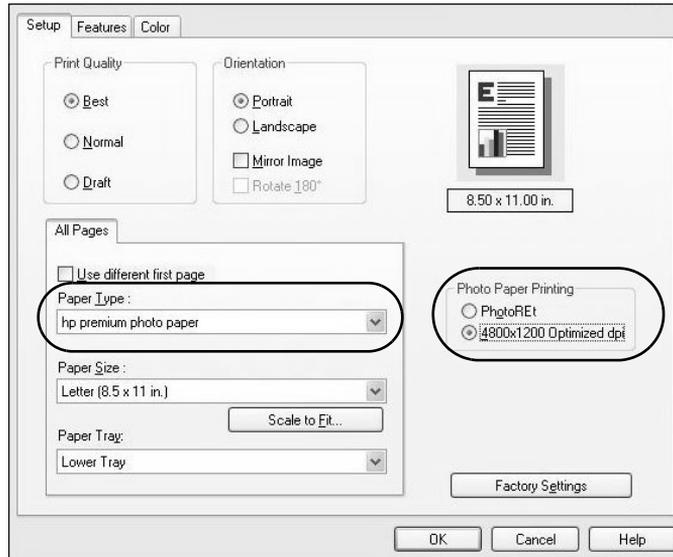

select 4800 x1200 Optimized dpi for high resolution photo printing


- 7 Click **OK** to close the dialog box, and then click **OK** or **Print** in your program's Print dialog box to begin printing.

print using 4800 optimized dpi in Macintosh OS 9

- 1 Open the photo you wish to print.
- 2 Load the photo paper in the main paper tray. For more information, see **load paper** on page 19 and **tips for loading other types of paper in the main tray** on page 22.
- 3 From the program's **File** menu, select **Print**.
The Print dialog box opens.
- 4 Select **Paper Type/Quality** from the list.
- 5 Select the **Quality** tab.
- 6 In the Paper Selection area, select **Photo Paper** from the **Group** list.
- 7 In the Paper Selection area, select the appropriate photo paper from the **Type** list.
Your HP Officejet automatically sets the **Quality** to **Best**.
- 8 In the **Quality** area, select the **High Resolution Photo** option.
Note: You must select **Photo Paper** from the **Group** list before you can access this option.
- 9 Click **OK**.

print using 4800 optimized dpi in Macintosh OS X

- 1 Open the photo you wish to print.
- 2 Load the photo paper in the main paper tray. For more information, see **load paper** on page 19 and **tips for loading other types of paper in the main tray** on page 22.
- 3 From the program's **File** menu, select **Print**.
The Print dialog box opens.
- 4 Select **Paper Type/Quality** from the list.

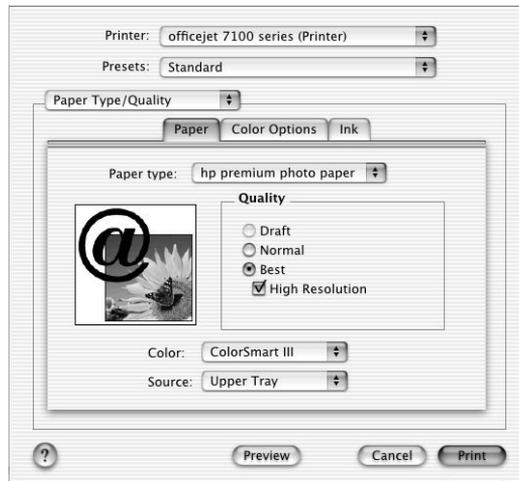

Macintosh OS X

- 5 In the **Paper** tab, choose a type of photo paper from the **Paper type** list.
Your HP Officejet automatically sets the **Quality** to **Best**.
- 6 In the Quality area, select the **High Resolution** option.
Note: You must select a type of photo paper from the **Paper type** list before you can access this option.
- 7 Click **Print**.

load originals

Your HP Officejet provides two ways to load originals for copying, scanning, and faxing. You can do the following:

- Load originals on the glass
- Load originals in the automatic document feeder


load originals on the glass

You can copy or scan any original by placing it on the glass.

Note: Many of the **Special Features** options, such as **Which Size?** or **Poster**, will not work correctly if the glass and lid backing are not clean. For more information, see **clean the glass** and **clean the lid backing** on page 57.

- 1 Lift the lid and place the original face down on the glass in the bottom-right corner with the sides of the originals touching the right and bottom edges.
It is important to use the bottom-right corner when using the copy, fax, or scan feature.

Tip: If you are copying from a transparency (that is, your original is printed on transparency film), place a blank piece of paper on top of the transparency.

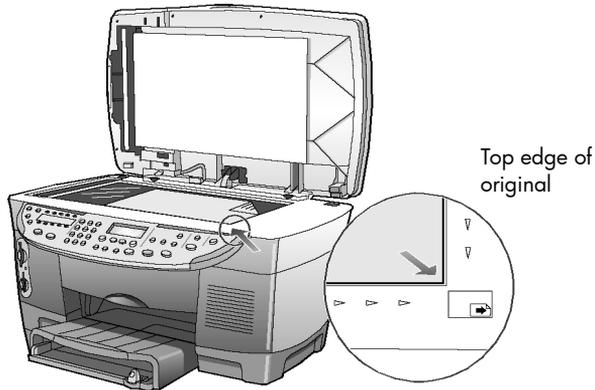

- 2 Close the lid.

load originals in the automatic document feeder


Your HP Officejet has an automatic document feeder (ADF), which you can use to load up to 50 originals of the following paper types:

- Plain Paper
 - 16 to 24 lb. long grain only
- Specialty Paper
 - HP Premium Inkjet Paper
 - HP Bright White Inkjet Paper

You can also use the ADF to load the following types of originals, but you must load them one sheet at a time:

- Other specialty papers, such as glossy paper
- Overhead transparencies, such as HP Premium Inkjet Transparency Media
- Photo paper, such as Kodak EktaColor Edge-5 (glossy)
- Real Estate paper (single sheet only)

- 1 Place all originals in the ADF print side up.
- 2 Adjust the paper-width guide to fit the size of your original.
A message appears on the display indicating that the originals are loaded.

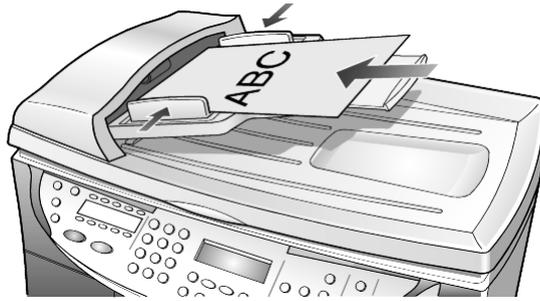

load paper

Following is the basic procedure for loading paper. There are specific considerations for loading certain types of paper, transparency film, and envelopes. After you review this procedure, see **tips for loading other types of paper in the main tray** on page 22 and **load envelopes** on page 20.


For best results, adjust the paper settings each time you change paper types or paper sizes. For more information, see **choose the paper tray and set the paper type** on page 23.

If you have the HP 250-sheet plain paper tray, you can load paper into both the main paper tray and the 250-sheet plain paper tray. If you have the 250-sheet plain paper tray, you should use it for plain paper only. Please refer to the Accessories guide that comes with the paper tray for information about installing the tray, loading paper, and adjusting paper-width and paper-length guides.

Caution! You must also have the two-sided printing accessory installed to use the 250-sheet plain paper tray.


to load the main paper tray

- 1 Lift the output tray up until it catches in the raised position, and slide the paper-width and paper-length guides to their outermost positions.

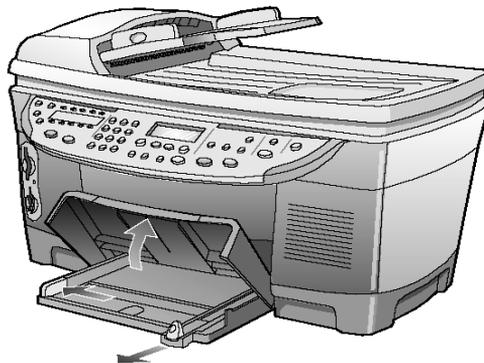


- 2 Tap the stack on a flat surface to align the edges of the paper, and then check the paper for the following:
 - Make sure it is free of rips, dust, wrinkles, and curled or bent edges.
 - Make sure all the paper in the stack is the same size and type, unless you are working with photo paper.

- 3 Insert paper into the main tray print-side down until it stops. If you are using letterhead, insert the top of the page first.
Be careful not to use too much or too little paper. Check that the stack of paper contains several sheets but is no higher than the top of the paper-length guide.

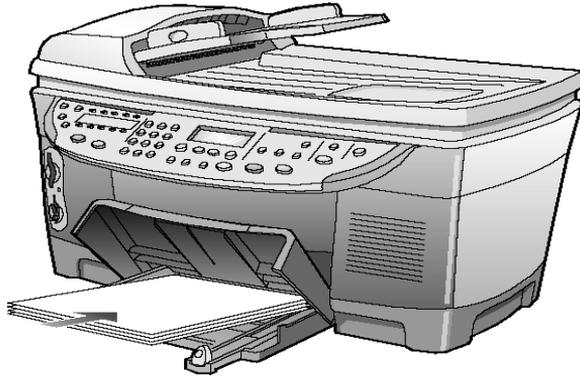

- 4 Slide the paper-width and paper-length guides in until they stop at the edges of the paper. Make sure that the paper stack lies flat in the main tray and fits under the tab of the paper-length guide.
- 5 Lower the output tray.
- 6 To prevent printed paper from falling off the tray, fully extend the output-tray extender.

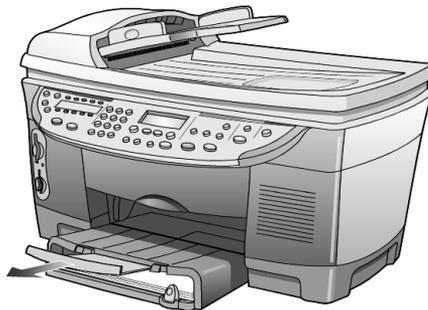


To load the 250-sheet plain paper tray

- ▶ Review the Accessories guide that came with the 250-sheet plain paper tray for information on loading paper in this accessory.


load envelopes

Your HP Officejet provides two methods for working with envelopes. Do *not* use shiny or embossed envelopes, or envelopes that have clasps or windows.

- If you are printing one envelope, slide the envelope into the envelope slot, which is located on the right side toward the back of the output tray. Insert the envelope with the flap up and on the left, as shown in the illustration. Slide the envelope on the top until it stops.

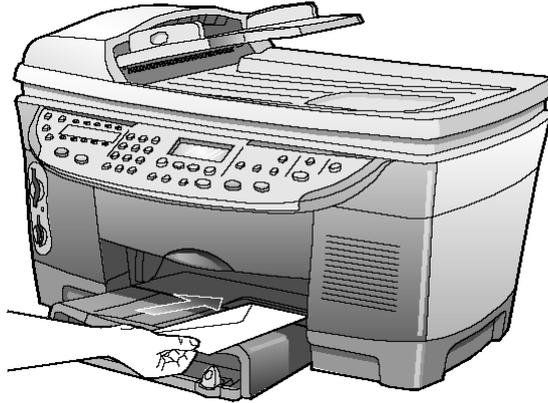

- If you are printing multiple envelopes, remove all paper from the main tray, and then slide a stack of envelopes into the tray, with the envelope flaps up and to the left (print-side down), until they stop.

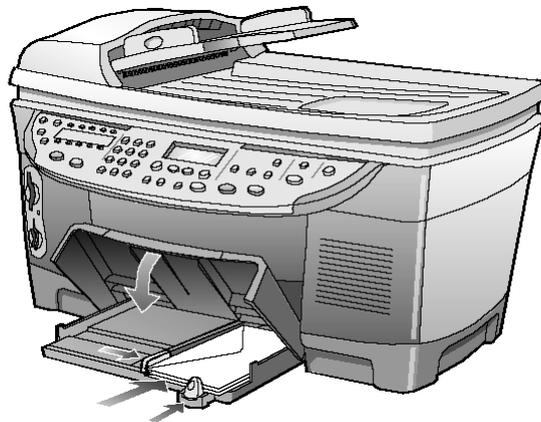


Adjust the paper-width guide against the envelopes (be careful not to bend the envelopes). Make sure the envelopes fit within the tray (do not overload it).

Consult the help files in your word processing software for details on how to format text for printing on envelopes.

tips for loading other types of paper in the main tray

The following table provides guidelines for loading certain types of paper and transparency film. For best results, adjust the paper settings each time you change paper types and paper sizes. For more information, see **choose the paper tray and set the paper type** on page 23.

paper	tips
HP papers	<ul style="list-style-type: none"> • HP Premium Inkjet Paper: Locate the gray arrow on the nonprinting side of the paper, and then insert paper with the arrow side facing up. • HP Premium or Premium Plus Photo Paper: Load the glossy (print) side down. Always load at least five sheets of regular paper in the main tray first, and then place the photo paper on top of the regular paper. • HP Premium Inkjet Transparency Film: Insert the film so that the white transparency strip (with arrows and the HP logo) is on top and is going into the tray first. • HP Iron-On T-shirt Transfers: Flatten the transfer sheet completely before using it; do not load curled sheets. (To prevent curling, keep transfer sheets sealed in the original package until you are ready to use them.) Manually feed one sheet at a time, with the unprinted side facing down (the blue stripe faces up). • HP Greeting Cards, Glossy Greeting Cards, or Textured Greeting Cards: Insert a small stack of HP greeting-card paper, with the print-side down into the main tray until it stops. • HP Restickable Inkjet Stickers: Place the sheets in the main tray, print-side (sticker-side) down.
Legal-size paper	Fully extend the paper-length guide and make sure that the main tray is pushed all the way in.
Postcards (only works with printing)	Insert a stack of postcards with the print-side down into the main tray until it stops. Line the postcards up on the right side of the main tray, slide the width guide up against the left side of the cards, and then slide the paper-length guide in until it stops.
Labels (works only with printing)	<ul style="list-style-type: none"> • Always use letters-size or A4-size label sheets designed for use with HP inkjet products (like Avery Inkjet Labels), and make sure that the labels are not over two years old. • Fan the stack of labels to make sure none of the pages are sticking together. • Place a stack of label sheets on top of standard paper in the main tray, print-side down. Do <i>not</i> insert labels one sheet at a time.
4" x 6" Photo paper (works only with printing)	Insert the photo paper with the print-side down into the main tray until it stops. Place the long edge of the photo paper against the right side of the main tray, slide the paper-width guide up against the long edge of the photo paper, and slide the paper-length guide in until it stops. If the photo paper you are using has perforated tabs, load the photo paper so that the tabs are closest to you.

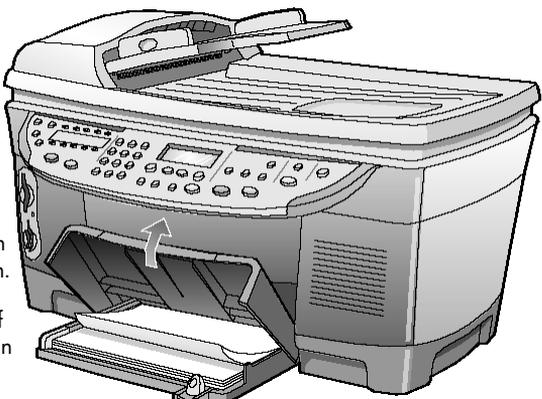paper	tips
<p>Continuous (banner) paper (works only with printing)</p>	<p>Continuous banner paper is also known as computer or z-fold paper.</p> <ul style="list-style-type: none"> • Before loading banner paper, remove all other paper from the main tray, then raise the output tray until it catches in the raised position.  <p>Raise the output tray until it stays in the raised position.</p> <p>Insert first edge of paper into the main tray.</p> <ul style="list-style-type: none"> • If you use non-HP banner paper, use 20-lb. paper and fan the paper before loading it. • Verify that the stack of banner paper contains at least five pages in the stack. • Carefully tear off the perforated edge strips from both sides of the paper stack, if any, and unfold and refold the paper to make sure the pages do not stick together. • Put the paper in the main tray so that the unattached edge is at the top of the stack. Insert the first edge into the main tray until it stops, as shown in the illustration above.

choose the paper tray and set the paper type

If you want to use a different type of paper, such as photo paper, transparency film, banner paper, or envelopes, simply load that paper in the main tray. You should then change the paper type settings to ensure the best print quality.

If you have installed HP 250-sheet plain paper tray, that paper tray is the default paper tray that is used for copying. If you load a different type of paper in the main paper tray, you need to not only change the paper type settings, but also specify the paper tray to use.

Caution! You must also have the two-sided printing accessory installed to use the 250-sheet plain paper tray.

You can change copy settings from the front panel or from the HP Director. When you change settings using the front panel, the copy settings are reset two minutes after the unit completes the copy.

HP recommends paper type settings according to the type of paper you're using. For more information, see **recommended paper-type settings for copying** in the onscreen User's Guide.

- 1 Press **Tray Select/Paper Type**.
If you have both paper trays, press **Tray Select/Paper Type** until the desired paper tray is selected, indicated by the dot on the left.
- 2 When copying from the main tray, press  until the appropriate paper type appears.
- 3 Press **Enter** to choose the displayed paper type.

set the paper size

For more information, see **adjust paper settings for printing** in the onscreen User's Guide.

- 1 Press **Menu**.
- 2 Press **1**, then press **2**.
This selects **Copy Setup**, then selects **Paper Size**.
- 3 Press  until the desired size appears, then press **Enter** to select it.

learn more

See the load section in the onscreen User's Guide to learn more about the following:

- Recommended paper-type settings for printing
- Recommended paper-type settings for copying

4

use the scan features

Scanning is the process of converting text and pictures into an electronic format for your computer. You can scan just about anything:

- Text documents
- Photos
- Magazine articles
- 3D objects (be careful not to scratch the glass) to put into catalogs and flyers

Because the scanned image or text is in an electronic format, you can bring it into your word processor or graphics program and modify it to suit your needs. You can do the following:

- Scan text from an article into your word processor and quote it in a report, saving you a lot of retyping.
- Scan in a logo and use it in your publishing software, allowing you to print business cards and brochures for yourself.
- Scan in photos and e-mail them to coworkers and friends, create a photographic inventory of your office or home, or create an electronic scrapbook.

To use the scan features, your HP Officejet and computer must be connected and turned on. The HP Officejet software should also be installed on your computer prior to connecting the computer to the HP Officejet.

If your HP Officejet is connected to a network, you can scan to any of the computers that are on the network from the front panel or computer. The other computers on the network must also have the HP Officejet software installed.

scan an original

You can start a scan from your computer or from your HP Officejet.

to scan an original from your Windows computer

- 1 Load your original on the glass or in the automatic document feeder (ADF).
- 2 Press **Start Scan**.
A scan of the original appears in the HP Image Viewer.
- 3 In the HP Image Viewer, you can edit the scanned image. When you have finished, click **Accept**.

The HP Officejet does a final scan of the original and sends the image to the HP Photo View Center.

See the onscreen User's Guide for more information about using the HP Image Viewer.

to scan an original from your Macintosh computer

- 1 Load your original on the glass or in the automatic document feeder (ADF). For more information, see **load originals** on page 17.
- 2 Press **Start Scan**.
A scan of the original appears in the HP Scan Window.
- 3 In the HP Scan Window, you can preview the image, change the image type, and select a different destination. Select a destination, then click **Send Now!**.
The HP Officejet does a final scan of the original and sends the image to the HP Workplace.
See the onscreen User's Guide for more information about using the HP Workplace.

scan to a different software program

If you prefer to scan your document to a software program other than the HP Photo View Center or HP Workplace, you can choose a different program from the Scan To list that appears in the front-panel display. The HP Officejet scans the document, launches the selected software program, and displays the scanned image in that program.

- 1 Load your original.
For more information, see **load originals** on page 17.
- 2 Press **Scan to** then press  to scroll through the **Scan To** list until the desired scan-to software program appears.
- 3 If you have more than one computer networked to the HP Officejet, you see a list of computers that have the HP Officejet software installed on them. Press  to scroll through the **Scan To** list until the desired scan-to software program appears.
- 4 Press **Start Scan** to begin the scan.
The HP Officejet scans your original and displays it in the selected software program.

stop scanning

You can stop a scan by pressing the **Cancel** button located on the front panel.

learn more

See the scanning section in the onscreen User's Guide to learn more about:

- Scanning text
- Scanning from a software program
- Editing scanned images
- Changing scan settings
- Change the scan-to settings for scanning text or images
- Scanning to a brochure or flyer

5

use the copy features

The copy features let you do the following:

- Produce high-quality color and black-and-white copies using a variety of paper types and sizes, including iron-on transfers.
- Reduce or enlarge the size of the copies you make from 25% to 400% of the copy's original size. (Percentages may vary between models.)
- Make the copy lighter or darker, adjust the color intensity, select the number of copies, and specify the quality of the copies you make.
- Use special copying features to create a poster, make many sizes of photos, make high-quality copies of photos using special photo paper, or to create transparencies.
- Make two-sided copies or copy from two-sided documents.

make copies

You can make copies using the front panel of your HP Officejet or by using the HP Officejet software on your computer. Many copy features are available using either method. However, you may find that the software offers easier access to special copy features.

All copy settings that you select on the front panel are reset **two minutes** after the HP Officejet completes the copy, unless you save the settings as the default settings. For more information, see **change settings for all copy jobs** in the onscreen User's Guide.

make a copy

- 1 Load your original on the glass or in the automatic document feeder (ADF).
- 2 Press **Start Copy, Black** or **Start Copy, Color**.

increase copy speed or quality

The HP Officejet provides three options that affect copy speed and quality.

- **Best** produces the highest quality for all paper and eliminates the banding (striping) effect that sometimes occurs in solid areas. **Best** copies more slowly than the other quality settings.
- **Normal** delivers high-quality output and is the recommended setting for most of your copying. **Normal** copies faster than **Best**.
- **Fast** copies faster than the **Normal** setting. The text is of comparable quality to the **Normal** setting, but the graphics may be of lower quality. Using **Fast** also cuts down on the frequency of replacing your ink cartridges, because it uses less ink.

- 1 Load your original on the glass or in the ADF.
- 2 Press **Quality** until the green light in front of the desired quality is lit.

- 3 Press **Start Copy, Black** or **Start Copy, Color**.

reduce or enlarge a copy

You can reduce or enlarge a copy of an original using either the **Reduce/Enlarge** button or the **Special Features** buttons. This section explains the **Reduce/Enlarge** features only.

For more information about Special Features options, see **perform special copy jobs** on page 30 for information about using **Fit to Page**, **Which Size?**, **Poster**, **2 on 1**, **Margin Shift**, or **Mirror**.

- 1 Press **Reduce/Enlarge** to choose one of the following:
 - Custom 100%— lets you enter the percentage to reduce or enlarge your copy.
 - Full Page 91% — lets you reduce an original to 91% of its original size, which prevents cropping that may occur if you make a full-size (100%) copy.
 - Legal/Letter 72% — reduces an original to 72% of its original size, which lets you copy a legal-sized original to letter-sized paper.
- 2 If you are using the **Custom** option, press ◀ or ▶ to reduce or enlarge the copy.
You can also enter a number using the keypad.
- 3 Press **Start Copy, Black** or **Start Copy, Color**.

make copies lighter or darker

Use **Lighter/Darker** to adjust the lightness and darkness of the copies you make.

- 1 Press **Lighter/Darker**.
- 2 Press ◀ to lighten the copy or ▶ to darken it.
The circle moves to the left or right, depending on the button you press.
- 3 Press **Start Copy, Black** or **Start Copy, Color**.

change color intensity

You can adjust color intensity to make colors on your copy more vivid or more subtle.

- 1 Press **Menu**.
- 2 Press **1** and then press **3**.
This selects **Copy Setup**, and then selects **Color Intensity**.
- 3 Press ◀ to make the image more pale or ▶ to make the image more vivid.
The range of color intensity values appears as a circle on a scale on the front-panel display.
- 4 Press **Start Copy, Black** or **Start Copy, Color**.

enhance text sharpness and photo colors

Use **Text** enhancements to sharpen edges of black text. Use **Photo** for photographs or pictures to enhance light colors that may otherwise appear white.

Text enhancement is the default option. You can turn off **Text** enhancement by selecting **Photo** or **None** if the following occur:

- Stray dots of color surround some text on your copies.
- Large, black typefaces look splotchy (not smooth).
- Thin, colored objects or lines contain black sections.
- Horizontal grainy or white bands appear in light- to medium-gray areas.

1 Press **Menu**.

2 Press **1**, then press **1**.

This selects **Copy Setup**, and then selects **Enhancements**.

3 Press  until the desired enhancement (**Text**, **Photo**, **Text and Photo**, or **None**) appears.

4 Press **Start Copy, Black** or **Start Copy, Color**.

set the number of copies

You can set the number of copies using the front panel.

1 Press **Number of Copies**.

2 Press  until the desired number of copies appear, or use the keypad to enter the desired number of copies.

3 Press **Start Copy, Black** or **Start Copy, Color**.

change settings for all copy tasks

Save the copy settings you use most often by setting them as the default. This includes changes to Copy Setup options in the menu system, as well as other Copy area settings.

1 Make any desired changes to the Copy Setup options.

2 Make any desired changes to the button settings in the Copy Area.

3 Press **Menu**.

4 Press **1**, then press **4**.

This selects **Copy Setup**, and then selects **Set Copy Defaults**.

Your settings are saved.

perform special copy jobs

In addition to supporting standard copying, your HP Officejet can also do the following:

- **copy at 4800 optimized dpi**
- **copy a photo**
- **fit a copy to the page**
- **print several copies on one page**
- **print two originals on one page**
- **shift image to increase the margin**
- **make two-sided copies**
- **collate copies**
- **make a poster**
- **prepare a color T-shirt transfer**

copy at 4800 optimized dpi

Copy at 4800 Optimized dpi to get the best print quality when you are printing on photo paper. This copy setting causes the HP Officejet to print significantly slower. To copy using 4800 Optimized dpi, you must use hp photo paper or hp premium photo paper.

- 1 Load the photo on the glass.
- 2 Load the photo paper in the main paper tray. If you have the HP 250-sheet plain paper tray, do not load the photo paper into that tray. For more information, see **load paper** on page 19 and **tips for loading other types of paper in the main tray** on page 22.
- 3 Press **Tray Select/Paper Type** until the **Upper Tray** is selected.
- 4 Press  until the desired photo paper type option appears, and then press **Enter** to select it.

Note: You must select hp photo paper or hp premium photo paper in order to copy at 4800 Optimized dpi.

Tip: To enlarge a photo automatically to a full page, press **Special Features** until **Fit to Page** appears, then press **Enter**. For more information, see below.

- 5 Press **Quality** until the green light in front of **Best** is lit.
- 6 Press **Start Copy, Black** or **Start Copy, Color**.

copy a photo

- 1 Load the photo on the glass.
- 2 If you are using photo paper, you must load it in the main paper tray. If you have the HP 250-sheet plain paper tray, do not load photo paper into that tray.
- 3 Press **Tray Select/Paper Type** until the **Upper Tray** is selected, as shown by the dot.


If you do not have the HP 250-sheet plain paper tray, the upper tray (main tray) is selected by default.

- 4 When **Upper Tray** is selected, press  until the desired photo paper option appears, then press **Enter** to select it.
For more information, see **recommended paper-type settings for copying** in the onscreen User's Guide.
Tip: To enlarge a photo automatically to a full page, press **Special Features** until **Fit to Page** appears, then press **Enter**. For more information, see below.
- 5 Press **Menu**.
- 6 Press **1**, then press **1** again.
This selects **Copy Setup**, and then selects **Enhancements**.
- 7 Press  until **Photo** appears, then press **Enter** to select it.
- 8 Press **Start Copy, Black** or **Start Copy, Color**.

fit a copy to the page

Use **Fit to Page** when you want to automatically enlarge or reduce your original to fit the paper size you have loaded.

Tip: Make sure that the glass is clean and the original has been placed in the bottom-right corner of the glass. You cannot use the automatic document feeder (ADF) for this feature.

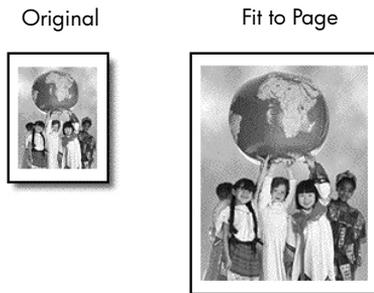

- 1 Load the original on the glass.
- 2 Load the appropriate paper.
- 3 Press **Special Features** until **Fit to Page** appears.
- 4 Press **Enter**.
- 5 Press **Start Copy, Black** or **Start Copy, Color**.

print several copies on one page


You can place multiple copies of an original on one page by selecting a photo size and then selecting the number of copies you want.

There are several common photo sizes available from the **Which Size?** option, which you access from the **Special Features** button. After you select one of the available sizes, you may be prompted to select the number of copies that can be placed on the page if there is room for more than one.

Original



Copy

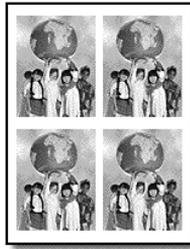

- 1 Load the original on the glass.
- 2 Load the appropriate paper in the main tray.
- 3 Press **Special Features** until **Which Size?** appears.
- 4 Press  until the desired photo size appears, then press **Enter**.
- 5 When **How Many?** appears, press  to select the number of images that will fit on a page.
Some larger sizes do not prompt you for a number of images.
- 6 Press **Enter** to select the number of photos you want to appear on a page.
- 7 Press **Start Copy, Black** or **Start Copy, Color**.

Tip: If the number of copies of the photo on a single page does not come out as expected, try turning the original on the glass 90 degrees and start the copy again.



print two originals on one page

You can print two different letter- or A4-sized originals on one page using the **2 on 1** feature. The copied images will appear side by side on the page in a landscape format. You can use the automatic document feeder (ADF) to load the originals or place them directly on the glass.


You cannot collate when making a 2 on 1 copy. Clipping may occur with legal-size originals.

This feature can be used with the Two-Sided Copy button to make 2 on 1, two-sided copies. See **make two-sided copies** on page 33.

Two Originals

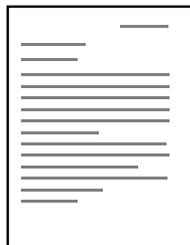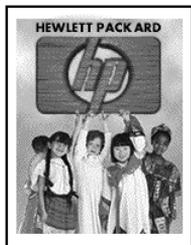

Two originals on one page

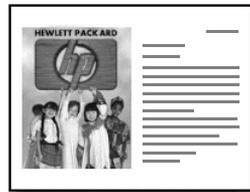

- 1 Place the first original on the glass. If you are using the ADF, load both originals there.
- 2 Press **Special Features** until **2 on 1 59%** appears, then press **Enter**.

- 3 Press **Start Copy, Black** or **Start Copy, Color**.
- 4 If you placed your first original on the glass you will be prompted to **Place 2nd original on glass**, then press **Enter**.


shift image to increase the margin

The MarginShift feature lets you shift the image to the left or right to increase the margin for binding. You can also adjust the reduction/enlargement percentage in this mode by entering a number on the numeric keypad.

Original



MarginShift

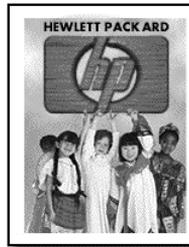

- 1 Load the original on the glass or in the ADF.
- 2 Press **Special Features** until **MarginShift 100%** appears.
- 3 Press **◀** or **▶** to shift the margin to the left or to the right. Each step is a ¼-inch (6.35 mm) shift.
- 4 If you wish to change the reduction/enlargement percentage as well, enter a number using the keypad, then press **Enter**.

Tip: If you do not wish to change the reduction/enlargement percentage, press **Enter** after you have selected the amount of MarginShift you want.

- 5 Press **Start Copy, Black** or **Start Copy, Color**.

make two-sided copies

The **Two-Sided Copy** button on the front panel lets you automatically make two-sided copies from single-sided or double-sided originals that are letter- or A4-sized.

Note: You can make two-sided copies automatically only if your HP Officejet has an HP two-sided printing accessory. The two-sided printing accessory is standard equipment with some models or can be purchased separately.

- 1 Load your letter- or A4-sized originals in the ADF. You cannot make two-sided copies from legal-sized originals loaded in the automatic document feeder (ADF).
- 2 Press the **Two-Sided Copy** button.

- 3 Choose one of the following by pressing  until the desired setting appears and then press **Enter**.
 - 1-sided original, 1-sided copy
This option produces a standard single-sided copy from a single-sided original.
 - 1-sided original, 2-sided copy
This option takes 2 single-sided originals and produces a two-sided copy.
 - 2-sided original, 1-sided copy
This option produces single-sided copies of a two-sided original.
 - 2-sided original, 2-sided copy
This option produces a two-sided copy from a two-sided original.
- 4 Press **Start Copy, Black** or **Start Copy, Color**.


collate copies

The collate feature lets you produce sets of copies in the exact order that they are scanned from the automatic document feeder (ADF). The collate feature is available only on certain models. You must copy more than one original to use the collate feature.

- 1 Load originals in the ADF.
- 2 Press **Menu**,
- 3 Press **1**, then press **0**.
This selects **Copy Setup**, then selects **Collation**.
- 4 Press  until the desired setting (On or Off) appears, then press **Enter**.
If you turn the feature on, the front panel displays **Collation On**.
- 5 Press **Start Copy, Black** or **Start Copy, Color**.

make a poster

When you use the Poster feature you divide your original into sections, then enlarge the sections so you can assemble them into a poster.

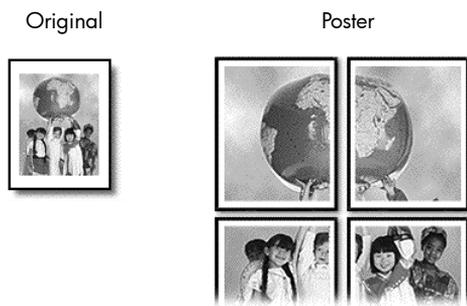

Tip: You can print a poster from a file on your computer. For more information, see **print a poster** in the onscreen User's Guide.

- 1 Load the original on the glass.
Tip: You cannot use the automatic document feeder (ADF) when making a poster.

- 2 Load the appropriate paper in the main tray.
- 3 Press **Special Features** until **Poster** appears.
The option **Poster 2 pages Wide** appears by default.
- 4 Press **▶** to select how wide you want the poster to be.
- 5 Press **Enter** to confirm your selection.
- 6 Press **Start Copy, Black** or **Start Copy, Color**.

Tip: After you select the poster width, the HP Officejet adjusts the length automatically to maintain the proportions of the original. If the original cannot be enlarged to the selected poster size, an error message appears that tells you the number of pages wide that are possible. Select a smaller poster size and make the copy again.

prepare a color T-shirt transfer

Use the **Iron-On** feature to reverse text and images so that they appear backwards. After you iron a transfer onto a T-shirt, the picture appears properly on the shirt.

Original



Iron-On



Tip: We recommend that you practice applying a T-shirt transfer on an old garment first.

- 1 Load the original on the glass or in the ADF.
- 2 Load the T-shirt transfer paper in the main tray.
- 3 Press **Tray Select/Paper Type** until the Upper Tray is selected.
- 4 Press **▶** until **Iron-On** appears and then press **Enter** to select it.
Selecting this option automatically activates the **Mirror** function.
- 5 Press **Start Copy, Black** or **Start Copy, Color**.

stop copying

- ▶ To stop copying, press **Cancel** on the front panel.


learn more

See the copy section in the onscreen User's Guide to learn more about the following:

- Perform special copying
- Change color intensity
- Enhance text sharpness and photo colors
- Change settings for copying

copy setup menu options

The following options are available in the **Copy Setup** menu.

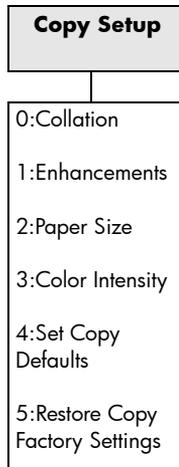

Press **Menu** to display the Copy Setup options.
Press ◀ and ▶ to move to the setting you want.
Press **Enter** to select the displayed setting.

6

use a photo card


Photo card features are available only on certain models of the HP Officejet 7100 Series.

After you take photos with your digital camera, you can print them immediately or save them directly to your computer.

what is a photo card?

If your digital camera uses a photo card to store photos, you can insert the photo card into your HP Officejet to print or save your photos. Your HP Officejet has three different slots for photo cards.

 Your HP Officejet can read SmartMedia, CompactFlash, Secure Digital and Memory Stick photo cards.



SmartMedia



Memory Stick



CompactFlash



Secure Digital

Note: You can use only one photo card in your HP Officejet at a time.

insert a photo card

- ▶ Insert the photo card into the appropriate slot on your HP Officejet. **Reading camera photo card...** appears on the front-panel display. The light next to the card slot blinks green when the card is being accessed. When the HP Officejet is finished reading the card, another message appears showing the number of files found on the photo card. You can safely remove the card only when the light is off.

cards inserted incorrectly

If you insert a photo card backwards, the light next to the card slot blinks amber and the front panel displays an error message such as **Photo card is in backwards** or **Gold side should face left**.

save files to the computer

You can save files directly from a photo card to your computer. If you are using Windows, you can save photos to your computer and view them in the HP Photo View Center. For the Macintosh, you can save the photos to your computer, then view them in the HP Workplace. Once saved, you can edit them, create photo collages or album pages — the possibilities are endless.

When your HP Officejet is connected to a computer, you should save all the photos to your computer. This allows you to reuse your photo card.

For Windows: files are saved by default in month and year folders depending on when the photos were taken. The folders are created under the C:\My Documents\My Pictures\ folder, or C:\Documents and Settings\\My Documents\My Pictures\ folder for Windows 2000 or Windows XP.

For Macintosh: files are saved to the computer in the default location HardDrive\Documents\HP All-in-One Data\Photos\ directory.

to save files to the computer when inserting the card

- 1 Insert the photo card into the appropriate slot on your HP Officejet.
- 2 Press **1** when **Save Photos to PC?** appears on the front-panel display.
- 3 If your HP Officejet is on a network, you are also asked to identify the desired computer.

to save files to the computer when the card is already inserted

- 1 Press **Menu**.
- 2 Press **0**, and then press **1**.
This selects **Photo Card Functions**, then selects **Save Photos to PC**.
- 3 Press **Enter**.

view and edit image files

Your operating system (Windows or Macintosh) determines where you view and edit images on your photo card.

use the hp photo view center

The HP Photo View Center is a Windows software program for viewing and editing image files. You can print images, send images by e-mail or fax, upload images to a website, or use images in printing projects with the HP Photo View Center.

When you save photo card files to your computer, the HP Photo View Center opens automatically and displays thumbnails (small versions) of your images. If you want to open the HP Photo View Center at a later time, open the **HP Director** and click the **View Images** icon, which is located in the middle of the Director window.

use the hp workplace

The HP Workplace is a Macintosh software program for editing and organizing your documents. In addition to adding text or other graphic elements to your saved photos, you can also use the **Custom Print** feature to print your photos in standard photo sizes, print an index page, print T-shirt transfers, banners, and posters. For more information about the HP Workplace, see the onscreen User's Guide.

print from a photo card

If you choose not to save the files from your photo card to the computer, you can use the front panel to print directly from a photo card. In fact, you can print photos from your photo card without being connected to a computer. You can print a proof sheet, all photos on a photo card, or selected photos. If your digital camera supports it, you can also print photos using the Digital Print Order Format (DPOF).

print a proof sheet

A proof sheet, which may be several pages long, shows thumbnail views of photos stored on the photo card. The file name, photo number, and date appear under each thumbnail.

A proof sheet is a simple and convenient way to request and make prints directly from a photo card.

You can use the proof sheet photo number to select which photos to print. This number may be different from the number associated with the photo on your digital camera. If you add photos to, or delete photos from your photo card, you will need to reprint the proof sheet to see the new photo numbers. See **use a proof sheet** on page 41 for information on what to do next with your proof sheet.

to print a proof sheet when first inserting the card

- 1 Insert the photo card into the appropriate slot on your HP Officejet.
- 2 Press **2** when **Save Photos to PC?** appears on the front-panel display. At this point, you do not want to save the photos, but instead, choose an option to print the proof sheet.
- 3 Press  until **Proof Sheet** appears, then press **Enter**. The proof sheet is printed. If you have more than 20 photos on the card, you can select the range of photos to be printed on the proof sheet.

to print a proof sheet from a card that is already inserted

- 1 press **Menu**.
- 2 Press **0**, and then press **2**. This selects **Photo Card Functions**, then selects **Print Proof Sheet**.

The proof sheet is printed. If you have more than 20 photos on the card, you can select the range of photos to be printed on the proof sheet.


print all photos

If you simply want to print all photos on your card, use the following procedure.

- 1 Do one of the following:
 - If your card is already in the slot, press **Menu**, press **0**, then press **4**. This selects **Photo Card Functions**, then selects **Print Photos**.
 - If your card is not in the slot, insert the photo card, and press **2** when **Save Photos to PC?** appears.
- 2 Press **▶** until **Photos on Card** appears, then press **Enter**.
- 3 Press **Enter** again to select **All**.
- 4 Press **▶** to select a photo size, then press **Enter**.
- 5 Press **▶** to select a paper type, then press **Enter**.
- 6 Press **▶** to select the number of copies, then press **Enter**. All photos on the card are printed.

print individual photos

If you don't know the photo number for individual photos, you may want to print a proof sheet to help you select individual photos to print.

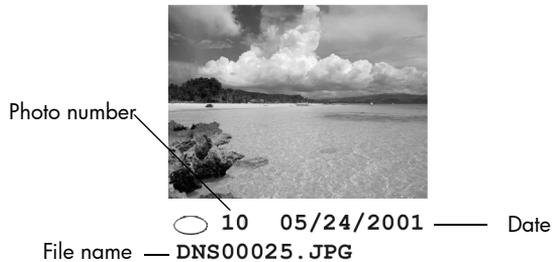

- 1 Do one of the following:
 - If your card is already in the slot, press **Menu**, press **0**, then press **4**. This selects **Photo Card Functions**, then selects **Print Photos**.
 - If your card is not in the slot, insert the photo card, and press **2** when **Save Photos to PC?** appears.
- 2 When **Print What?** appears, press **▶** until **Photos on Card** appears, then press **Enter**.
- 3 Press **▶** to select **Custom**, then press **Enter**.
- 4 Use the keypad to enter the photo numbers for the photos you want to print.
- 5 Press **▶** or **Enter** to enter the next photo number. A comma is inserted automatically as the cursor advances to the right.

Tip: You can specify a range using a dash, which you enter by pressing the **Symbols** button (*) on the keypad.

Note: You can erase entries by pressing . As the bottom line is filled, the data entry field scrolls left to show the number as it is entered.

- 6 Press **Enter** when you have typed all the photo numbers for the photos you want to print.
- 7 Press  to select a photo size, then press **Enter**.
- 8 Press  to select a paper type, then press **Enter**.
- 9 Press  to select the number of copies, then press **Enter**.
The selected photos are printed.

print a DPOF file

The Digital Print Order Format (DPOF) is an industry-standard print file request that can be created by some digital cameras. Consult your digital camera documentation to see if it supports Digital Print Order Format (DPOF).

The DPOF file is stored by the digital camera on a photo card and specifies the following information:

- Which photos to print
 - The quantity of each photo to be printed
- 1 Do one of the following:
 - If your card is already in the slot, press **Menu**, press **0**, then press **4**.
This selects **Photo Card Functions**, then selects **Print Photos**.
 - If your card is not in the slot, insert the photo card, and press **2** when **Save Photos to PC?** appears.
 - 2 When **Print What? Use DPOF** appears, press **Enter**.
 - 3 Press  to select a photo size, then press **Enter**.
 - 4 Press  to select a paper type, then press **Enter**.

use a proof sheet

After printing a proof sheet, fill in the circles and place the proof sheet on the glass. The proof sheet is scanned and photo prints are generated.

fill out the proof sheet

Fill out the proof sheet to select the photos you want to print, as well as the number of prints, the image size, the paper size, and the type of border or frame you would like.

hp photo proof sheet **hp officejet**
all-in-one

3 simple steps to print photos from camera card

step 1: to select photo(s), fill in bubble(s) underneath with a dark pen.

1 May 2 2002 IMAGE001.JPG
2 May 2 2002 IMAGE002.JPG
3 May 2 2002 IMAGE003.JPG
4 May 2 2002 IMAGE004.JPG
5 May 2 2002 IMAGE005.JPG
6 May 2 2002 IMAGE006.JPG
7 May 2 2002 IMAGE007.JPG
8 May 2 2002 IMAGE008.JPG
9 May 2 2002 IMAGE009.JPG
10 May 2 2002 IMAGE010.JPG

step 2: select print options, select only one choice per section

number of prints	image size (in.)	paper size	borders & frames	none
<input type="radio"/> single	<input type="radio"/> 2 1/2 x 3 1/2	<input type="radio"/> 4 x 6	<input type="radio"/> none	<input type="radio"/> none
<input type="radio"/> double	<input type="radio"/> 3 1/2 x 5	<input type="radio"/> Letter	<input type="radio"/> frame	<input type="radio"/> frame
	<input type="radio"/> 4 x 6		<input type="radio"/> frame	<input type="radio"/> frame
	<input type="radio"/> 8 x 10			

step 3: place sheet on scanner glass at front right corner. Press Menu, 0, 3.

step 1: Select the photos you want by filling in the circles located underneath each photo with a dark pen.

step 2: Select the number of prints, image size, paper size, and borders & frames.

step 3: Place sheet on scanner at bottom right corner. Press **Menu, 0, 3**.


scan a proof sheet

After you print a proof sheet and fill it out, simply scan it to print chosen photos from your photo card.

- 1 Load paper in the main tray, such as photo paper.
- 2 Make sure that the photo card is inserted in the appropriate slot on your HP Officejet.
- 3 Fill out step 1 of the proof sheet, which lets you select the photos you want to print by filling in the circles underneath the thumbnail images.
- 4 Fill out step 2 of the proof sheet, which lets you select the number of prints, the image size, and the paper size for your photos. You can also choose the type of border and frame you would like for your photos.

Tip: Select only one option in each section of the proof sheet.

- 5 Place the top of the proof sheet face down on the scanner glass as shown in the following figure.

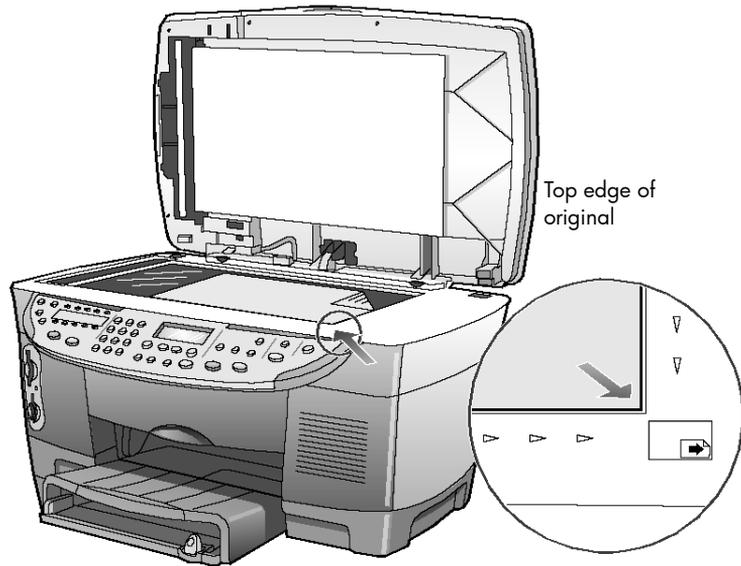


- 6 Close the lid.
- 7 If you have the lower paper tray installed, press **Tray Select/Paper Type** to select the main paper tray.
Note: If you have the lower paper tray installed, and it is set as the default paper tray, make sure that you select the upper (main) paper tray if you are printing on photo paper. If you are printing on plain paper, you can print from either paper tray.
- 8 Press **Menu**.
- 9 Press **0**, then press **3**.
 This selects **Photo Card Functions**, then selects **Scan Proof Sheet**.
 The proof sheet is scanned and the HP Officejet prints the photos you specified on the proof sheet from the paper in the upper tray.

learn more

See the onscreen User's Guide to learn more about the following:

- Use the HP Photo View Center or HP Workplace
- Find and select images on your photo card
- Edit images
- Create projects
- Make and print photo albums
- E-mail an image
- Upload a scanned image on the web
- Send images to another program
- Print a scanned image

photo card functions menu options

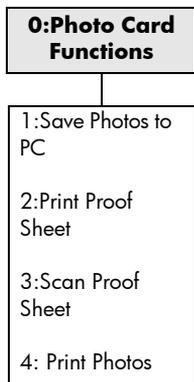

7

use the fax features

Using your HP Officejet, you can do the following:

- Send and receive paper faxes
- Send a computer file as a fax
- Send and receive color faxes

send a fax


Your HP Officejet lets you send a fax in a variety of configurations. These include the following:

- Sending a paper fax (legal, letter, or A4) using the front panel or computer.
- Sending a paper fax with a computer-generated cover page using the computer.
- Sending a computer file with or without a cover page using the computer.
- Sending a computer generated cover page as a single-page fax using the computer.

See the onscreen User's Guide for more information about sending faxes and creating cover pages using your computer.

Note: By default, your HP Officejet prints a report only if there is a problem with sending or receiving a fax. A confirmation message indicating that an item was successfully sent appears briefly on the front-panel display after each transaction. If you need printed confirmation that your faxes are successfully sent, see **print reports** on page 48 for information about report options.

See the illustration that follows to reacquaint yourself with the buttons in the Fax area of the front panel.

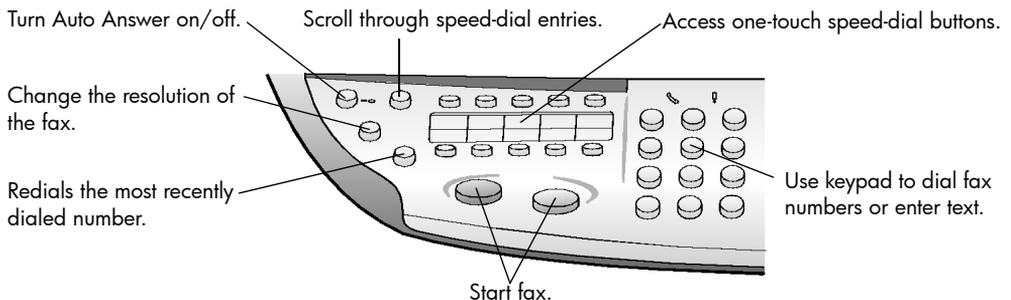

send a fax from your hp officejet

Follow these steps to send a fax from your HP Officejet.

- 1 Load your original.
For more information, see **load originals on the glass** on page 17 and **load originals in the automatic document feeder** on page 18.
Note: You must use the automatic document feeder (ADF) for multi-page faxes.
- 2 Enter the fax number using the keypad.
- 3 Press **Start Fax, Black** or **Start Fax, Color**.
- 4 If there is no original in the document feeder, you will be asked **Send from Glass?** Press **1** for **Yes** or **2** for **No**.
If you press **1** for **Yes**, the document is scanned from the glass. If you press **2** for **No**, the front-panel display message asks you to **Load original in document feeder**. After you load the document, the HP Officejet begins to send the fax.

use speed dial entries to send a fax

When sending faxes to frequently used numbers, consider setting up and using speed dial entries. Using a speed-dial entry lets you send a fax by pressing just a few buttons. Speed dial entries do not appear unless you have set them up first. For more information on speed dialing, see **set up speed dialing** on page 50.

- 1 Load your original.
- 2 Press the **Speed Dial** button.
Tip: Alternately, if the speed-dial entry you want to use is in the first 10 entries, you can use one of the one-touch speed-dial buttons. You can then press **Start Fax, Black** or **Start Fax, Color** immediately.
- 3 Do one of the following to locate the desired number:
 - Press  until the desired speed-dial entry appears.
 - Enter the number for the speed dial entry using the keypad.
- 4 When the speed-dial number that you want appears, press **Start Fax, Black** or **Start Fax, Color**.

send a color fax

You can send and receive color faxes to and from other color fax machines. If you attempt to send a color fax to a recipient who has a black-and-white fax machine, your HP Officejet sends the fax in black and white.

To ensure the best quality when sending faxes in color, we recommend that you use a color original rather than a color copy if possible.

In addition, you cannot send a color fax to a group using the speed-dial features. To fax in color to a group, send the fax from the computer. For more information, see **send a fax from your computer** in the onscreen User's Guide.

- 1 Load your original.
For more information, see **load originals** on page 17.
- 2 Enter the fax number using the keypad, speed dial button, or one-touch speed-dial buttons.
- 3 Press **Start Fax, Color**.

broadcast a fax to multiple recipients

If you send a fax from your HP Officejet, broadcasting lets you send a black-and-white fax to one group, which can contain up to 20 individual speed-dial entries. To use broadcasting, the fax must fit into your HP Officejet's memory.

If you send a fax from your computer, broadcasting lets you send it to an unlimited number of groups and individuals.

- 1 Load your original.
- 2 Press **Speed Dial** until the desired group speed-dial entry appears.
- 3 Press **Start Fax, Black**.

schedule a fax

You can schedule a black-and-white fax to be sent later during the same day (for example, when telephone lines are not as busy). If you use the front panel, you can select a single recipient or group.

Using the computer to schedule a fax, you can schedule multiple faxes for different delivery dates and times. For more information, see **schedule a fax** in the onscreen User's Guide.

When the specified time is reached, your fax is automatically sent as soon as a connection can be made.

- 1 Load your original on the glass or in the ADF.
For more information, see **load originals** on page 17.
- 2 Press **Menu**.
- 3 Press **2**, then press **2** again.
This will select **Fax Functions** and **Send Fax Later Black Only**.
- 4 Enter the **Send Time** using the numeric keypad.
- 5 Press **1** for **AM** or **2** for **PM**.
- 6 When **Enter fax number** appears, enter the fax number of the recipient or select the group using the **Speed Dial** button.
- 7 When **Store Fax Now?** appears, press **1** for **Yes**, or **2** for **No**.
If you selected **1**, the document is scanned to memory and is sent at the selected time. If you select **2**, a message may appear reminding you to **Load the original before the send time** (if your documents are loaded in the ADF, you will not see this message).

cancel a scheduled fax

You can cancel a fax stored in memory or one that is currently in progress.

- 1 Press **Menu**.
- 2 Press **2**, then press **2** again.
This selects **Fax Functions** and **Send Fax Later Black Only**.
The control panel displays **Scheduled Fax in Memory** and the scheduled time and fax #.
- 3 When **Cancel? 1 = Yes 2 = No** appears, press **1** to cancel the scheduled fax.

When you select **Yes**, **Cancelled Scheduled Fax** appears on the front-panel display.

receive a fax

Depending on how you set up your HP Officejet, you can receive faxes automatically or manually. For more information, see **set the answer mode** in the onscreen User's Guide.

For more information about using your HP Officejet with voice mail or with an answering machine, see **use other configurations with your fax features** in the onscreen User's Guide.

Your HP Officejet is automatically set to receive and print received faxes (unless you have turned the auto-answer feature off). If you receive a legal-size fax and your HP Officejet is not currently loaded with legal-size paper, the unit automatically reduces the fax so that it fits on the paper that is loaded, unless you have disabled the automatic-reduction feature. For more information, see **set automatic reduction** in the onscreen User's Guide.

receive a fax automatically

When you turn on your HP Officejet, it automatically turns on the Auto Answer feature. Confirm this by making sure the green light next to the **Auto Answer** button is turned on. If the light is not on follow the instructions below.

- ▶ Press the **Auto Answer** button until the green light is lit.

receive a fax manually

Before manually receiving a fax to your HP Officejet, we recommend that you remove any originals from the glass.

- 1 Press the **Auto Answer** button until the green light is off.
This disables the automatic answering feature.
- 2 When your HP Officejet rings, pick up the handset of a telephone that is on the same telephone line as your HP Officejet (a handset can be plugged into the back of the HP Officejet using one of the RJ-11 accessory ports).
- 3 If you hear fax tones, do one of the following:
 - Press **Start Fax, Black**.
 - If you are receiving from an extension phone (on the same telephone line as your HP Officejet, but not connected directly to it), press **1 2 3** on your phone. Wait for the fax tones, then hang up the telephone.

print reports

You can set up your HP Officejet to print error reports and confirmation reports for each fax you send and receive. You can also manually print reports as you need them.

Note: Reports must be printed on letter or A4 paper sizes only. Before you begin printing reports, make sure the letter or A4 paper is loaded in the main paper tray. For information on loading paper, see **load paper** on page 19.

generate automated reports

- 1 Press **Menu**.
- 2 Press **3**, then press **6**.
This selects the **Print Report** menu, then selects the **Automatic Reports Setup** option.
- 3 Press  to scroll through the following report types.
 - **Every Error**, which prints whenever there is any kind of fax error (default).
 - **Send Error**, which prints whenever there is a transmission error.
 - **Receive Error**, which prints whenever there is a receiving error.
 - **Every Fax**, which confirms every time a fax is sent or received.
 - **Send Only**, which prints every time a fax is sent.
 - **Off**, which does not print automatic fax reports.
- 4 After the option that you want appears, press **Enter**.

generate manual reports

- 1 Press **Menu**, then press **3**.
This selects the **Print Report** menu.
- 2 Press  to scroll through the following report types.
 - **1:Last Transaction**, which indicates the status of the last fax sent.
 - **2:Fax Log**, which lists approximately the last 40 faxes sent and received.
 - **3:Speed Dial List**, which lists your individual and group numbers.
 - **4:Menu Settings**, which lists in outline form the entire menu system and indicates the current and default settings.
 - **5:Self-Test Report**, which prints a self-test report. For more information, see **print a self-test report** in the onscreen User's Guide.
 - **6:Automatic Reports Setup**, which is the automatic reports setting described in **generate automated reports** on page 49.
- 3 Select the report you want, then press **Enter**.

redial a number automatically

You can set your HP Officejet to redial a busy or an unanswered number automatically. The default setting for **Busy Redial** is **Redial**. The default setting for **No Answer Redial** is **No Redial**. The number of redial attempts is 5 times.

- 1 Press **Menu**.
- 2 Press **6**, then press **3**.
This selects the **Advanced Fax Setup** menu, then selects the **Busy Redial** option.
- 3 Press  to display **Redial** or **No Redial** options.
- 4 When the desired setting appears, press **Enter** to select it.
- 5 Press **Menu**.
- 6 Press **6**, then press **4**.

This selects the **Advanced Fax Setup** menu, then selects the **No Answer Redial** option.

- 7 Press  to display **Redial** or **No Redial** options.
- 8 When the desired setting appears, press **Enter** to select it.

adjust the volume

Your HP Officejet provides three levels for adjusting the ring and speaker volume. The ring volume is the volume of the phone rings. The speaker volume is the level of everything else, such as the dial and fax tones. The default setting is **Soft**.

- 1 Press **Menu**.
- 2 Press **7**, then press **8**.
This selects the **Status and Maintenance**, then selects the **Ring and Beep Volume** option.
- 3 Press  to select one of the options: **Soft**, **Loud**, or **Off**.
- 4 Press **Enter**.

set up speed dialing

Through your HP Officejet or your computer, you can assign entries to fax numbers you use often. This lets you dial those numbers quickly using the front panel's **Speed Dial** button or one-touch speed-dial buttons. You can create up to 130 individual and group speed-dial entries (varies by HP Officejet model).

You can use speed-dial entries *only* from the front panel.

create individual speed-dial settings

You can enter fax numbers that you will reuse frequently.

- 1 Press **Menu**.
- 2 Press **4**, and then press **1**.
This selects the **Speed Dial Setup** menu, then selects the **Individual Speed Dial** option.
The first unassigned speed-dial entry appears on the display.
- 3 Press **Enter** to select the displayed speed-dial entry.
- 4 Enter the fax number to assign to that number, then press **Enter**.
Tip: To enter a two-second pause within a number sequence, press **Symbols** repeatedly until a dash appears.
- 5 Enter the person's or company's name, then press **Enter**.
For more information, see **enter text** on page 52.
- 6 When **Enter Another?** appears, press **1** for **Yes**, if you want to set up another number, or press **2** for **No** to exit.

create group speed-dial settings

You can create a distribution list of up to 20 individual speed-dial entries so that you can send a fax to all of them at the same time.

To use a fax number in a speed-dial group, the number must already have an assigned speed-dial entry. You can include only individual speed-dial entries. You can't assign a group to another group.

- 1 Press **Menu**.
- 2 Press **4**, then press **2**.
This selects the **Speed Dial Setup** menu, then selects the **Group Speed Dial** option.
- 3 Choose one of the following:
 - If this is your first group, the first unassigned number appears. Press **Enter** to select it.
 - If this is not your first group, **1=New 2=Edit** appears. Press **1** to create a new group. The first unassigned number appears. Press **Enter** to select it.
- 4 When **Add 1 of 20** appears, press  until the appropriate speed-dial number appears, then press **Enter** to select it.
The selected number and corresponding name appear on the display.
- 5 Choose one of the following:
 - If the displayed number is correct, press **Enter** to add it to the group.
 - To select a different number, press  or  until the appropriate speed-dial number appears, then press **Enter** to select it.
- 6 When **Add Another** appears, press **1** for **Yes** if you want to add another individual number to the group, or press **2** for **No**.
- 7 When you are done selecting individual numbers, enter a name for the group.
For more information, see **enter text** on page 52.
- 8 Press **Enter** to save the group.
- 9 When **Another group?** appears, press **1** for **Yes** if you want to create another group, or press **2** for **No** to exit.

set the date and time

You can set the date and time from the front panel. When a fax is transmitted, the current date and time are printed along with the fax header. The date and time format is based upon the language and country setting.

Normally the computer software sets the date and time automatically.

- 1 Press **Menu**.
- 2 Press **5**, then press **1**.
This selects the **Basic Fax Setup** menu, then selects the **Date and Time** option.
- 3 Enter the month, day, and year (last two digits only) by pressing the appropriate number on the keypad.
The underline cursor presented initially beneath the first digit advances automatically to each digit after, each time you press a button. The time prompt automatically appears after you enter the last digit of the date.
- 4 Enter the hours and minutes.

The **AM/PM** prompt automatically appears after the last digit of the time is entered.

- 5 Press **1** for AM or **2** for PM.

The new time and date settings appear on the front panel.

set the fax header

The fax header is usually set up during installation using the Fax Setup Wizard. If you need to change it, you can use the Fax Setup Wizard from the HP Director, or you can follow these steps to enter your name and fax number from the front panel.

Note: In Hungary, the subscriber identification code (fax header) can be set or changed only by authorized personnel. For more information, contact your authorized HP dealer.

- 1 Press **Menu**.
- 2 Press **5**, then press **2**.
This selects the **Basic Fax Setup** menu, then selects the **Fax Header** option.
- 3 When **Your Name** appears, enter your name using the keypad as described in the next section, **enter text** on page 52.
- 4 Press **Enter**.
- 5 When you are prompted, use the keypad to enter your fax number.
- 6 After you finish entering your fax number, press **Enter**.

enter text

The following list provides tips for entering text using the front-panel keypad.

- Press the keypad numbers that correspond to the letters of a name.

ABC These letters correspond to this number, and so on.


- Press a button multiple times to see a letter first in lowercase and then in uppercase. The first letter of a word is set to uppercase automatically.

JKL	To get this character:	j	k	l	J	K	L	5
5	Press 5 this many times:	1	2	3	4	5	6	7

- After the correct letter appears, press , then press the number that corresponds to the next letter in the name. Again, press multiple times until the correct letter appears.
- The cursor automatically advances to the right 1.5 seconds after the last button is pressed.
- To insert a space, press **Space (#)**.
- To enter a symbol, such as @, press **Symbols (*)** repeatedly to scroll through the list of available symbols, which are: *, -, &, ., / (), ', =, #, @, _, and !.
- If you make a mistake, press  to clear it, then make the correct entry.
- After you are done entering text, press **Enter** to store your entries.

reprint the faxes in memory

Your HP Officejet can store a limited number of fax pages in its memory, with the number of pages depending on the model you purchased. When your HP Officejet runs out of memory to store faxes, it will not receive any more fax calls until the stored faxes are printed.

Reprint Faxes in Memory enables you to reprint a fax stored in memory. For example, if your ink cartridge runs out of ink or paper becomes jammed when printing a fax. This option prints all faxes in memory; press **Cancel** to stop printing faxes you do not need.

1 Press **Menu**.

2 Press **2**, then press **5**.

This selects the **Fax Functions** menu, then selects the **Reprint Faxes in Memory** option.

The faxes are printed from memory.

use an answering machine or pc modem

An answering machine or PC modem can be connected directly to the HP Officejet. If you are connecting a PC modem, turn off the modem's fax-receive feature.

- If you have an answering machine connected directly to the HP Officejet, verify that it is set to **Auto Answer**. Then set the **Rings to Answer** setting on the HP Officejet to a number greater than the rings to answer setting for the answering machine. For more information, see **receive a fax automatically** on page 48 or **set the rings to answer setting** in the onscreen User's Guide.
- If you have an answering machine that automatically shuts off when another phone extension has been picked up, it is not necessary to connect the answering machine directly to the HP Officejet.
- If you use an answering machine that will share the phone line with the HP Officejet, set the HP Officejet to receive faxes manually if the following items are true:
 - The answering machine does not have an automatic shutoff feature when an extension phone is picked up.
 - The answering machine is not directly connected to the back of the HP Officejet.
- If you answer a phone and hear fax tones, press **1 2 3** on your phone to accept the fax. Fax tones indicate that the HP Officejet is prepared to receive the incoming fax. You should then hang up the receiver. When the HP Officejet is set to receive faxes manually, you must be available to respond to the incoming call or your HP Officejet cannot receive faxes. See **receive a fax** on page 48 for more information.


learn more

See the fax section in the onscreen User's Guide to learn more about the following:

- Use a cover page and creating a cover page template
- Preview a fax
- Change resolution and contrast
- Forward faxes to another number
- Change fax settings from the Director

fax feature menu options

The following options are available for fax functions.

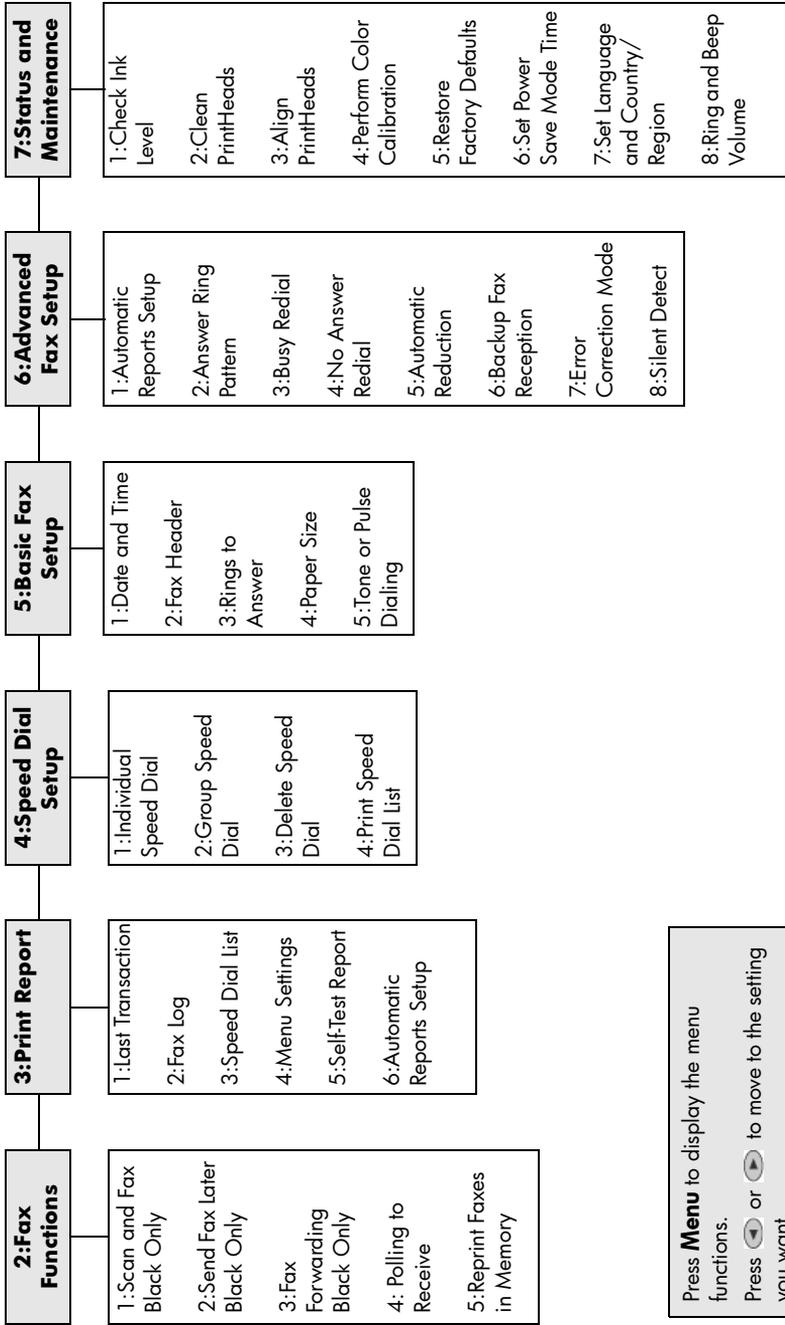

Press **Menu** to display the menu functions.

Press **Left Arrow** or **Right Arrow** to move to the setting you want.

Press **Enter** to select the displayed setting.

8

maintain your hp officejet

This section provides instructions for keeping your HP Officejet in top working condition. Perform these maintenance procedures as necessary.

clean the glass

Dirty glass, from fingerprints, smudges, hair, and so on, slows down performance and affects the accuracy of special features such as Fit to Page and Copy.

- 1 Turn off the unit, unplug the power cord, and raise the lid.
- 2 Clean the glass with a soft cloth or sponge slightly moistened with a nonabrasive glass cleaner.

Caution! Do not use abrasives, acetone, benzene, or carbon tetrachloride on the glass; these can damage it. Do not place liquids directly on the glass. They may seep under it and damage the unit.

- 3 Dry the glass with a chamois or cellulose sponge to prevent spotting.

clean the lid backing

Minor debris can accumulate on the white document-backing located underneath the unit's lid.

- 1 Turn off the unit, unplug the power cord, and raise the lid.
- 2 Clean the white document-backing with a soft cloth or sponge slightly moistened with a mild soap and warm water.
- 3 Wash the backing gently to loosen debris; do not scrub the backing.
- 4 Dry the backing with a chamois or soft cloth.

Caution! Do not use paper-based wipes as these may scratch the backing.


- 5 If this does not clean the backing well enough, repeat the previous steps using isopropyl (rubbing) alcohol, and wipe the backing thoroughly with a damp cloth to remove any residual alcohol.

clean the exterior

Use a soft, damp, lint-free cloth to wipe dust, smudges, and stains off the case. The interior of the unit does not require cleaning. Keep fluids away from the interior of the unit as well as the front panel.

install the automatic document feeder

If you remove the automatic document feeder tray for any reason, you can replace it easily. Use the illustration below, and make sure the tray snaps into place.

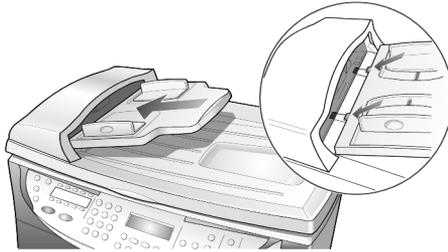

work with printheads and ink cartridges

As you discovered when you installed your HP Officejet, the ink delivery system consists of both ink cartridges, which contain the ink, and printheads, which control the print quality. To ensure the best print quality from your HP Officejet, you will need to perform some simple maintenance procedures, and when prompted by a front-panel message, replace the ink cartridges or printheads.

print a self-test report

If you are experiencing problems with printing, before cleaning or replacing the ink cartridges or printheads, you should print a self-test report. This report provides useful information about both your ink cartridges and your printheads, including status information, installation and expiration dates, and ink levels. It is useful to know the ink cartridge expiration dates, so you can purchase replacements before that date.

- 1 Press **Menu**.
- 2 Press **3**, and then press **5**.

This selects the **Print Report** menu, then selects **Self-Test Report**.

A self-test report is printed for your HP Officejet, which may indicate the source of any problems you may be having. For example, you may notice that one color does not print evenly across the page, which may indicate a problem with the corresponding printhead.

check the ink level

An easy way to check the ink supply level can be done from the front panel.

- 1 Press **Menu**.
- 2 Press **7**, then press **1**.

This selects the **Status and Maintenance** menu, then selects the **Check Ink Level** option.

A message in the front-panel display lets you know how much ink you have left, for both black (#14) and tri-color ink (#14) cartridges.

- 3 Press **Cancel** to exit the menu.


perform color calibration

The **Color Calibration** option prints out a report that lets you manually improve your color printing or copying. You should perform this procedure only if you see problems with color tints, such as noticeably incorrect flesh tones.

- 1 Press **Menu**.
- 2 Press **7**, then press **4**.
This selects the **Status and Maintenance** menu, then selects the **Perform Color Calibration** option.
A Color Calibration report is printed.
- 3 Follow the instructions on the report to determine the correct Color Patch Number.
- 4 At the prompt on the front-panel display, enter the Color Patch Number, then press **Enter**.

handle printheads

Before you replace or clean a printhead, you should know the part names and how to handle the printhead.

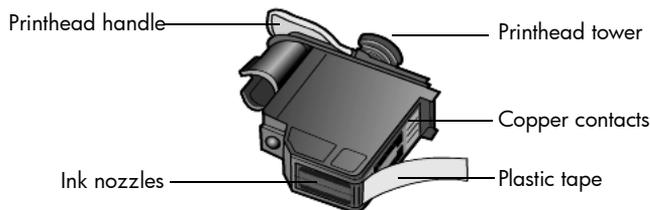


Do not touch the copper contacts, the ink nozzles, or the printhead tower.


verify a printhead needs to be replaced

If a printhead error message appears on the front-panel display, verify that the printhead needs to be replaced.


- 1 Turn the unit off and then turn it on.
If the error message still appears, continue with the following steps.
- 2 Open the print-carriage access door by lifting the handle until the door locks into place.
The print carriage moves to the center of the unit.

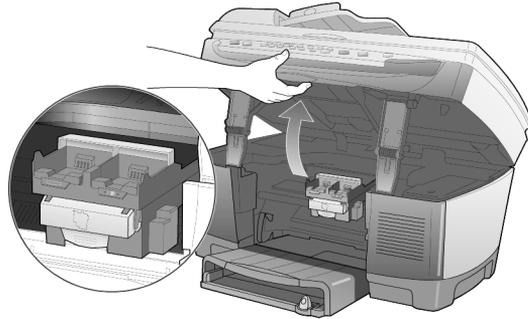


- 3 After the print carriage stops moving, release the gray print carriage latch and then lift the print carriage to access the printheads.

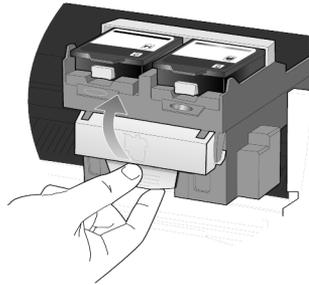

- 4 Remove the old printhead by lifting the printhead handle and pulling upward.

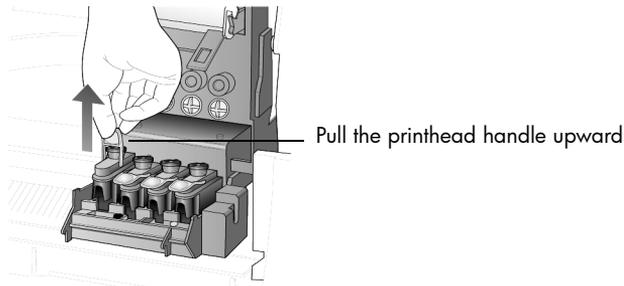

- 5 If there is plastic tape on the failed printhead, remove the plastic tape.
- 6 Push the failed printhead firmly down into the appropriate slot using the printhead handle. Do not touch the printhead tower, and do not remove the printhead handle.

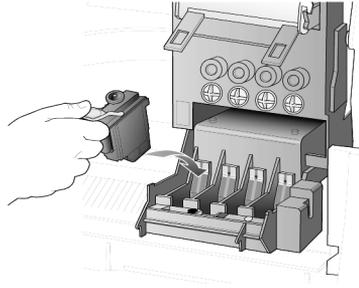


- 7 Move the print carriage latch down, and make sure the loops catch the hooks. Snap the latch into place, then close the print carriage access door.
- 8 If the error message still appears, remove and reinsert the printhead again and close the print carriage access drawer.
- 9 If the error message still appears, replace the printhead as described in the following section.

replace the printheads


If you experience print quality issues that cannot be resolved by cleaning your printheads and you have verified that the printheads need to be replaced, you may need to replace them. You may also see front-panel display messages that indicate when individual printheads need to be replaced.

See the *Support and Specifications* booklet for information on ordering replacement printheads.

- 1 Turn on the unit, then open the print-carriage access door by lifting the handle until the door locks into place. The print carriage moves to the center of the unit.

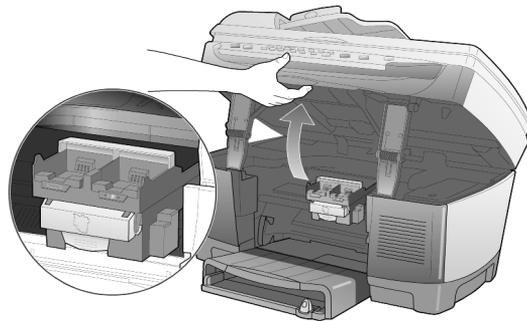


- 2 After the print carriage stops moving, release the gray print carriage latch and then lift the print carriage to access the printheads.

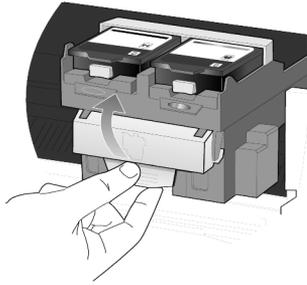

Caution! To avoid damaging the printer, remove a printhead only when a replacement is available. If a printhead is removed without being replaced:


- Close the print carriage and the print-carriage access door.
- Replace the printhead within 24 hours.
- Never remove an ink cartridge and a printhead at the same time.

- 3 Remove the old printhead by lifting the printhead handle and pulling upward.

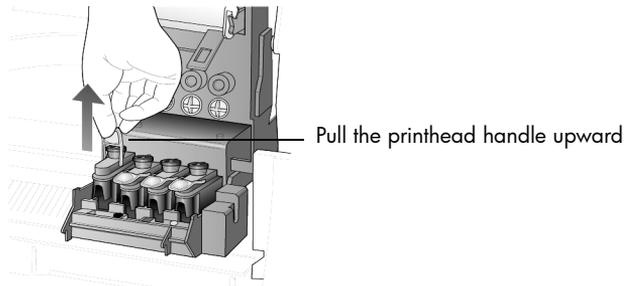


- 4 Remove the new printhead from its packaging and, being careful to touch only the black plastic, gently remove the plastic tape.

Caution! Do not touch the copper contacts, the printhead tower, or the ink nozzles.

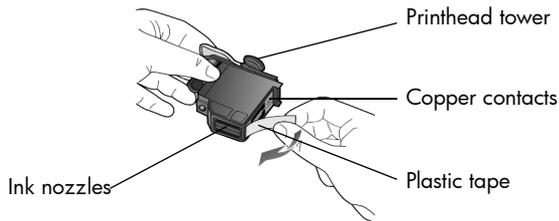

removing the plastic tape from the printhead


- 5 Match the color on the top of the printhead to the color on the printhead carriage.
- 6 Push the new printhead firmly down into the appropriate slot using the printhead handle. Do not touch the printhead tower, and do not remove the printhead handle.

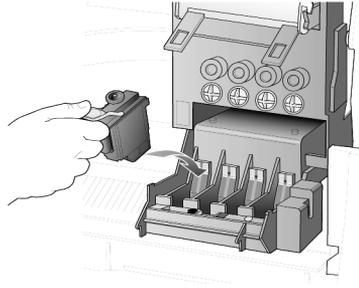

- 7 Move the print carriage latch down, and make sure the loops catch the hooks. Snap the latch into place, then close the print carriage access door.
- 8 After the message appears in the front-panel display, press **Enter** to align the printheads.
A page prints to confirm alignment. You can discard or recycle this page. If the page does not appear, see the Troubleshooting help, which you access from the HP Director.

handle ink cartridges

Before you replace or clean an ink cartridge, you should know the part names and how to handle them.

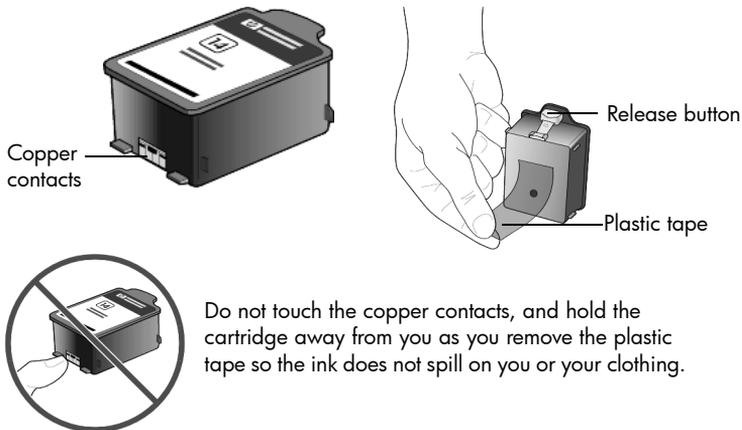

Do not touch the copper contacts, and hold the cartridge away from you as you remove the plastic tape so the ink does not spill on you or your clothing.

replace the ink cartridges


Front-panel display messages appear under the following conditions to let you know that you should replace your ink cartridges.

- Low ink levels
- Ink cartridges are approaching their expiration dates

Caution! If you ignore the messages and do not replace the ink cartridges, eventually the HP Officejet will stop working completely to avoid damaging the printheads.

See the *Support and Specifications* booklet for information on ordering replacement ink cartridges.


- 1 Turn on the unit, then open the print-carriage access door by lifting the handle until the door locks into place.
The print carriage moves to the center of the unit.

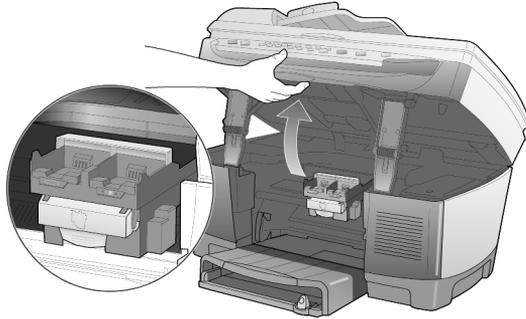

- 2 After the carriage stops moving, press the gray button to release the ink cartridge, then pull it up and out of its slot.


Caution! To avoid damaging the printer, remove an ink cartridge only when a replacement is available. If an ink cartridge is removed without being replaced:

- Close the print carriage and the print-carriage access door.
- Replace the ink cartridge within 24 hours.
- Never remove an ink cartridge and a printhead at the same time.

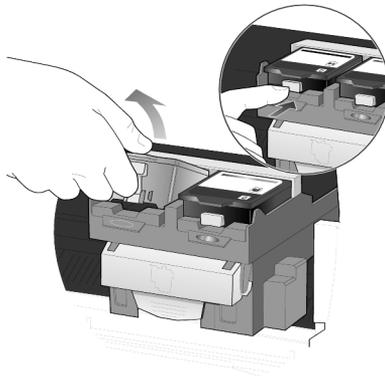


- 3 Remove the new ink cartridge from its packaging and, being careful to touch only the black plastic, gently remove the plastic tape.

Caution! Hold the cartridge away from you as you remove the plastic tape so the ink does not spill on you or your clothing.

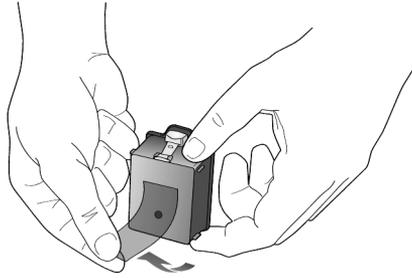

Caution! Do not touch the copper contacts.

- 4 Push the new ink cartridge firmly down into the appropriate slot until it clicks into place.
Note the color bars on the print carriage.
The ink-cartridge label should be face-up after the cartridge is inserted.

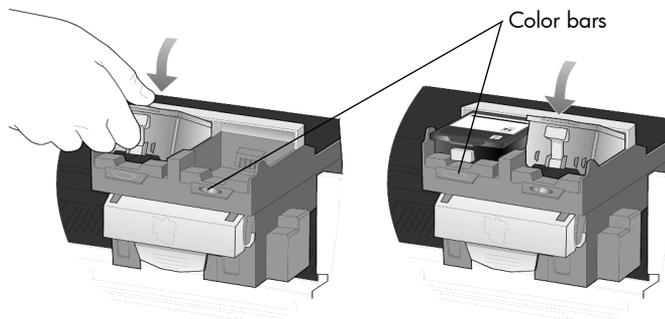

place the ink cartridges into their respective slots on the left and right

- 5 Close the print-carriage access door.

align the printheads

The HP Officejet prompts you to align the printheads every time you install or replace a printhead or ink cartridge. Aligning the printheads ensures high-quality output.

Printhead alignment is a two-step process that requires two sheets of plain white paper. An alignment pattern will be printed on each page. The first page is automatically calibrated for you as it prints. You then calibrate the second page manually by using the scanner glass (not the ADF.)

Note: If your HP Officejet has both upper and lower input trays, the white paper must be loaded in the upper tray.

to align the printheads from the front panel

- 1 Press **Menu**, **7**, and **3**.
- 2 The HP Officejet will print two alignment pattern sheets. This process may take several minutes.
You can recycle or discard the first alignment sheet.

- 3 Load the top of the second alignment sheet, which is named **Instructions to Perform 4800 Optimized DPI Alignment**, face down on the scanner glass in the front, right corner.
- 4 Press **Enter** on the front panel when prompted.
- 5 The process may take a several minutes. When **4800 optimized align complete** displays, the alignment process is complete.

to troubleshoot the alignment process

If an error occurs after the first alignment page is printed, you may receive an error message on the display of the front panel or a blank page will print. Verify the following items:

- Make sure that you have removed the nozzle tape from all printheads.
- Make sure that you are using clean sheets of A4 or letter sized plain white paper. Do not use special, photo, odd-sized, color, or previously marked paper.
- If you have two input trays, make sure that you have the plain white paper loaded in the upper tray.
- Make sure that the paper in the input tray is not skewing during the printing of the alignment pattern. If necessary, reload the paper in the input tray.

If an error occurs after you scan the second alignment page, verify the following items:

- Be sure that you are using the **Instructions to Perform 4800 Optimized DPI Alignment** page when performing the scanning process.
- Make sure that you have positioned the second alignment page properly on the scanner glass. The alignment page should be placed on the front, right corner of the glass. The scan will fail if the page is positioned improperly or placed print side up.
- Make sure that the paper in the input tray is not skewing during the printing of the alignment pattern. If necessary, reload the paper in the input tray.

After correcting the problem, restart the alignment process.

clean the printheads

Use this feature when the Self-Test Report shows streaking or white lines through any of the colored bars. Do not clean printheads unnecessarily. This wastes ink and shortens the life of your printheads.

- 1 Press **Menu**.
- 2 Press **7**, then press **2**.

This selects the **Status and Maintenance** menu, then selects the **Clean PrintHeads** option.

If copy or print quality still seem poor after you clean the printheads, replace the printhead that is affected.

clean the ink cartridge contacts

Clean the ink cartridge contacts only if you get repeated front panel messages prompting you to check a cartridge after you already have.

Caution! Do not remove both ink cartridges at the same time. Remove and clean them one at a time.

Make sure you have the following materials available:


- A clean, lint-free cloth
- Distilled, filtered, or bottled water (do not use tap water, as it may contain contaminants that can damage the printheads)

Caution! Be careful not to get ink on your hands or clothing.

- 1 Turn the unit on and open the print-carriage access door. The print carriage moves to the center.
- 2 After the print carriage has moved to the center, unplug the power cord from the back of the unit.

Warning! It is very important that you disconnect the printer from its electrical power source before touching the ink cartridge contacts. Electrical shock or severe damage to the printer can occur if you touch the contacts while there is electrical power to the printer. Do not use the **On** button to turn the printer off.

- 3 Press the gray button to release the ink cartridge, then pull it up and out of its slot.
- 4 Inspect the ink cartridge contacts and the contacts inside the ink cartridge socket for ink and debris buildup.
- 5 Clean any visible ink deposits with a clean, soft, lint-free cloth. If necessary, moisten the cloth with one drop of water.

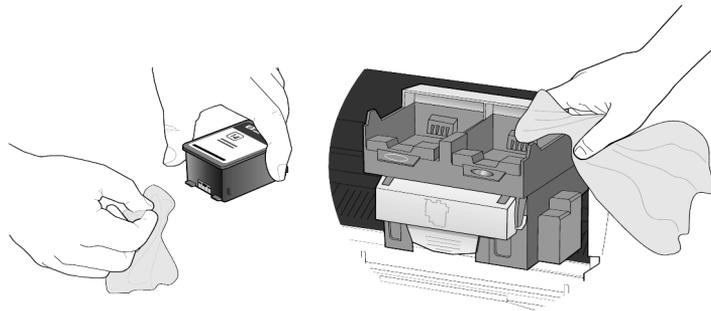

- 6 Place the ink cartridge back into the holder.
- 7 Repeat if necessary for the other ink cartridge.
- 8 Close the door and plug in the unit. Because you removed an ink cartridge from its holder, the HP Officejet needs to align the printheads.
- 9 After the message appears in the front-panel display, press **Enter** to align the printheads. A page is printed to confirm alignment.

clean the printhead contacts

Clean the printhead copper contacts only if you get repeated front panel messages prompting you to check a printhead after you already have.

Caution! Do not remove all printheads at the same time. Remove and clean them one at a time.

Make sure you have the following materials available:

- A clean, lint-free cloth
- Distilled, filtered, or bottled water (do not use tap water, as it may contain contaminants that can damage the printheads).


Caution! Be careful not to get ink on your hands or clothing.

- 1 Turn the unit on and open the print-carriage access door.
The print carriage moves to the center.
- 2 After the print carriage has moved to the center, unplug the power cord from the back of the unit.

Warning! It is very important that you disconnect the printer from its electrical power source before touching the printhead contacts. Electrical shock or severe damage to the printer can occur if you touch the contacts while there is electrical power to the printer. Do not use the **On** button to turn the printer off.

- 3 Release the gray print carriage latch and then lift the print carriage to access the printheads.
- 4 Remove the printhead by lifting the printhead handle and pulling upward.
- 5 Inspect the copper contacts and the contacts inside the printhead socket for ink and debris buildup.
- 6 Clean any visible ink deposits with the clean, soft, lint-free cloth. If necessary, moisten the cloth with one drop of water.

Caution! Clean only the copper contacts in the front of the printhead, and wipe upwards only. Do not clean the ink nozzles on the under side of the printhead. They can become damaged or clogged by this type of cleaning.

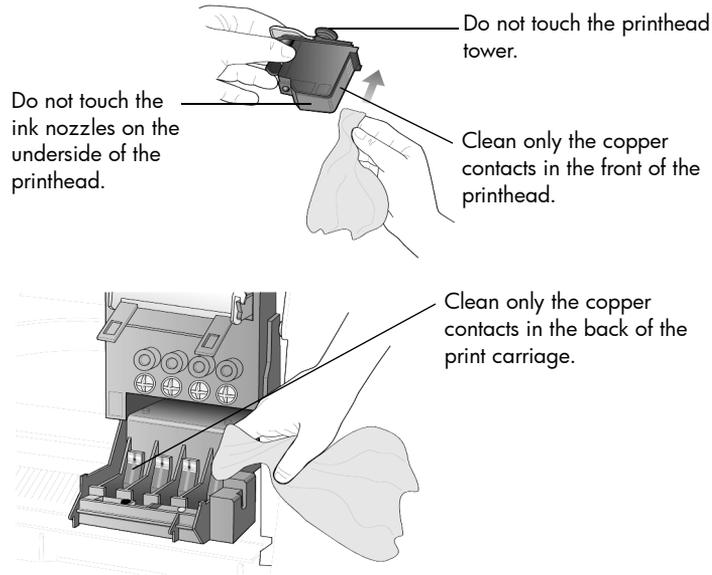

- 7 Place the printhead back into the holder.
- 8 Repeat cleaning of other printheads, if necessary.
- 9 Move the print carriage latch down, and make sure the loops catch the hooks. Snap the latch into place, then close the print-carriage access door.
- 10 Close the door and plug in the unit.
After cleaning the contacts, you should align the printheads.
- 11 Press **Menu**.
- 12 Press **7**, then press **3**.
This selects the **Status and Maintenance** menu, then selects the **Align PrintHeads** option.
A page prints to confirm printhead alignment. You can either discard or recycle this page. If the page does not appear, see the Troubleshooting help, which you access from the HP Director.

replacement alternatives

To get the best performance from your HP Officejet, we recommend using only genuine Hewlett-Packard supplies. See the Support and Specifications booklet for information on ordering replacement ink cartridges and printheads.

Caution! Damage that results from modifying or refilling HP ink cartridges or the use of non-HP ink is specifically excluded from the warranty coverage for the printer and printer supplies.

non-hp ink cartridges

The Ink Level Gauge may not work properly with a non-HP ink cartridge. If you choose to print with a non-HP ink cartridge, you may not know when the cartridge is running low or empty. Printing with an empty ink cartridge may seriously damage the printheads.

Any damage resulting from the use of a non-HP ink cartridge is not the responsibility of Hewlett-Packard.

refilled ink cartridges

To install a refilled HP ink cartridge, you must override the Ink Level Gauge.

override the ink level gauge

Overriding the Ink Level Gauge disables the printer's ink level tracking feature, but allows you to use a refilled cartridge.

Caution! If you use the override sequence described below, you will disable the Ink Level Gauge for your ink cartridge. If you choose to continue printing with an ink cartridge that has had its Ink Level Gauge disabled, you will not know when the cartridge is running low or empty. Printing with an empty cartridge may seriously damage your printheads. Damage that results from continued use of an ink cartridge with a disabled Ink Level Gauge is not the responsibility of Hewlett-Packard. Damage that results from the use of non-HP ink is not the responsibility of Hewlett-Packard.

The Ink Level Gauge is automatically reset when a different ink cartridge is installed in the printer.

Overriding the Ink Level Gauge does not affect ink cartridge expiration dates. The printer cannot use an expired ink cartridge.

Follow these steps to override the Ink Level Gauge:

to override the ink level gauge for the black ink cartridge

- 1 Press  and  at the same time, then release.
- 2 On the keypad, press in order, **7**, **8**, **9**.
- 3 When the prompt appears asking if you want to override the ink level gauge, press **1** for **Yes**, or **2** for **No**.

to override the ink level gauge for the tri-color ink cartridge

- 1 Press  and  at the same time, then release.
- 2 On the keypad, press in order, **4**, **5**, **6**.
- 3 When the prompt appears asking if you want to override the ink level gauge, press **1** for **Yes**, or **2** for **No**.

Always install an ink cartridge before performing an Ink Level Gauge override.

restore factory defaults

You can restore the original factory settings to what they were when you purchased your HP Officejet. Choosing to restore your factory defaults restores all settings, except copy settings, speed-dial entries, date, and fax header information.

You can perform this process from the front panel only.

- 1 Press **Menu**.
- 2 Press **7**, then press **5**.

This selects the **Status and Maintenance** menu, then selects the **Restore Factory Defaults** option.

The factory default settings are restored.

set the country or language

Usually, the language and country are set when you install the HP Officejet. If you need to reset either the country or the language, use the following procedure. The following table lists the available language codes.

Code	Language
11	English
12	Espanol
13	Francais
14	Deutsch
15	Portugues
16	Nederlands
17	Italiano
18	Dansk
19	Suomi
20	Norsk
21	Svenska

Tip: If you accidentally choose the wrong language and are unable to read the front-panel display, simply follow the first 3 steps using the keypad to choose the correct language. You may also consider printing a Self-Test report to identify the country and language that have been selected.

- 1 Press **Menu**.
- 2 Press **7**, then press **7**, then press **Enter**.
This selects the **Status and Maintenance** menu, then selects the **Set Country and Language** option.
- 3 To select the language, you can do the following:
 - Press  until the desired language appears.
 - Wait until the desired language appears on the front panel display.
- 4 Enter the two-digit number corresponding to the language on the keypad.
For example: for English, you would enter 11.
- 5 After entering the language, you are prompted to confirm that the language you selected is the one you want.
- 6 Press **1** for **Yes** and **2** for **No**.
- 7 After the language is selected, you are prompted with all the countries for that selected language.

- 8 To select the country, you can:
 - Press  until the desired country appears.
 - Wait until the desired country appears on the front panel display.
- 9 Enter the two-digit number corresponding to the country on the keypad.
For example: for USA, you would enter 10.
- 10 After entering the country, you are prompted to confirm that the country or region you selected is the one you want.
- 11 Press **1** for **Yes** or **2** for **No**.
You can confirm the country and language by printing a Self-Test Report.
- 12 Press **Menu**, press **3**, and then press **5** to print the Self-Test report.


set the power save mode time

The bulb in your HP Officejet remains on for a specified period so that the unit is immediately ready to respond to your request. When the HP Officejet has not been used within that specified period, it turns the bulb off to preserve power and displays **Power Save On** in the front-panel display. (You can exit this mode by pressing any button on the front panel.)

Your unit is automatically set to enter power-save mode after 12 hours. Follow these steps if you want the HP Officejet to enter this mode earlier.

- 1 Press **Menu**.
- 2 Press **7**, then press **6**.
This selects the **Status and Maintenance** menu, then selects the **Set Power Save Mode Time** option.
- 3 Press  until the desired time appears, then press **Enter**.

maintenance menu options

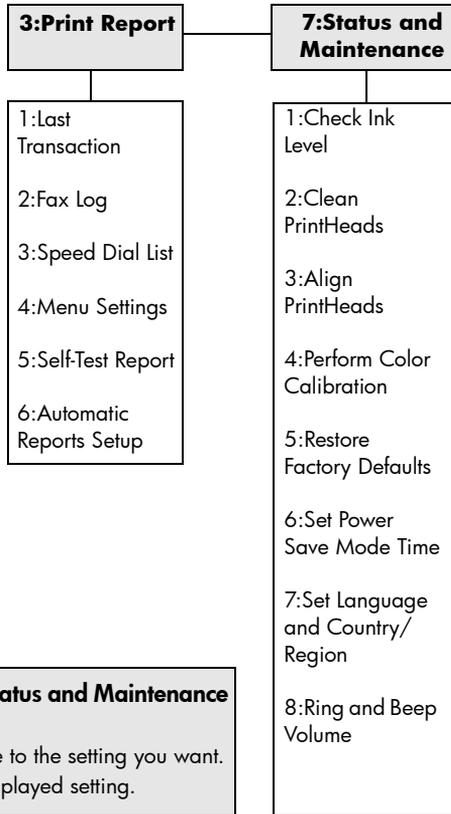

Use **Menu** to display the **Status and Maintenance** menu options.

Press **◀** and **▶** to move to the setting you want.

Press **Enter** to select the displayed setting.

9

additional setup information

This section covers how to handle messages that may or may not appear during installation, how to set up the connection between your computer and your HP Officejet, and how to add and remove the HP Officejet software. The standard installation instructions are provided in your Setup Poster, which you should keep for later use.

For comprehensive information, see the fully-searchable onscreen User's Guide, which is accessible only if the software has been installed. To access the guide for **Windows**, go to the **Director**, click **Help**, and then choose **User's Guide**.

To access the guide for **Macintosh**, go to the **Director**, click **Tools**, and then choose **View Onscreen Guide**.

possible installation problems

If you follow the instructions in the Setup Poster correctly, you should not have any problems with the installation of your HP Officejet. If you do not follow the instructions, you may see any of the following problems:

If Microsoft's New Hardware Found message does not appear

If you installed the HP Officejet software first as requested on the Setup Poster, and you are a Windows 98/2000/ME/XP user, a series of Microsoft New Hardware Found messages should have appeared on your screen during software installation.

If the Microsoft messages did not appear, try the following:


- Verify that you are using a high-speed (12 Mbps) USB cable and that it does not exceed five meters in length (16.4 feet).
- Verify that the computer is USB-ready. For more information about determining whether your computer is USB-ready, see your computer's documentation or check with the computer's manufacturer.
- Verify that the cable is plugged fully into your HP Officejet and directly connected to the USB port on your computer. After the cable is connected properly, turn your HP Officejet off and then on again.
- Turn your HP Officejet off and then on again, then restart your computer.
- If the previous steps do not solve the problem, remove and reinstall the software. For more information, see **remove and reinstall your hp officejet software** on page 79.

If the Fax Setup Wizard does not appear

Follow the instructions explained above.

If the New Hardware Message appears (Windows 98, 2000, XP, or ME)

If you set up your HP Officejet and connect it directly to your computer *before* you install the software, you may encounter one of the following messages:

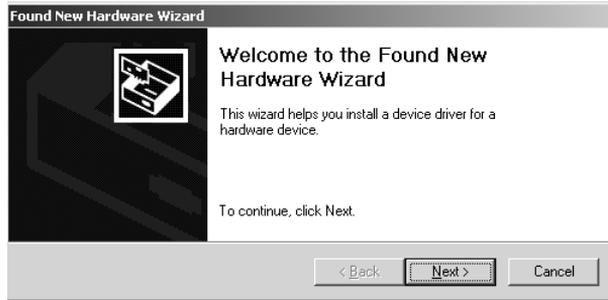

To avoid errors, install the HP Officejet software before you connect the HP Officejet to your computer. If the Add New Hardware Wizard or Found New Hardware Wizard dialog box appeared *and* you clicked **Next** or **OK**, do the following:

- 1 Press **Esc** to exit.
- 2 Turn off your HP Officejet.
- 3 Follow the software installation steps outlined in the Setup Poster that came with your HP Officejet.

If the previous version installed message appears

If you receive a message that you have a previously installed version, you will not be able to finish installing the HP Officejet software.

You will have to uninstall the previously installed version in order to install the HP Officejet software.

If your computer is unable to communicate with your HP Officejet

If communication cannot be established between your computer and HP Officejet (for example, the HP Officejet status icon has the yellow error triangle), try the same tasks outlined under **If Microsoft's New Hardware Found message does not appear** on page 75.

selecting an hp officejet on a network (Macintosh)

If your HP Officejet model supports networking, you can use automatic discovery or manual setup to locate your printer using the HP All-in-One Setup Assistant (Hard Disk:Applications:HP All-in-One Software:HP All-in-One Setup Assist). Automatic discovery allows you to select from a list of printers on your network. Manual setup allows you to type in the network IP address to access the desired printer.

- 1 In the Paper size dialog box, select a default paper size and click **Continue**.
- 2 In the HP All-in-One Setup Assistant dialog box, click **Next**.
- 3 Select **TCP/IP**.

You can select a printer automatically or manually:

To set up automatically:

- Click the **Rescan TCP/IP** button. A list of available printers appears in the Network Devices dialog box.
- In the Network Devices dialog box, select the desired printer.
- Click **OK**.

OR**To set up manually:**

- Click the **Create** button.
- Enter the network IP address for the desired printer.
- Click **OK**.

- 4 Complete the HP-All-in-One Setup Assistant.

connect your hp officejet to your computer

Your HP Officejet supports HOT Swapping, meaning you can connect to the HP Officejet while the power is on at your computer and on the HP Officejet.

This section covers the following topics:


- **connect your parallel cable adapter**
- **setup for simple sharing**
- **connect your usb port**

For more information about networking options and installation and configuration issues, see the parallel cable adapter flyer or the HP JetDirect 200m print server connector booklet.

connect your parallel cable adapter

Your HP Officejet can be connected to your computer with your parallel printing cable and the parallel cable adapter.

Simply attach your parallel printing cable to the parallel cable adapter and plug the parallel cable adapter into the port on the back of your HP Officejet. The parallel cable adapter should click into place when correctly attached.

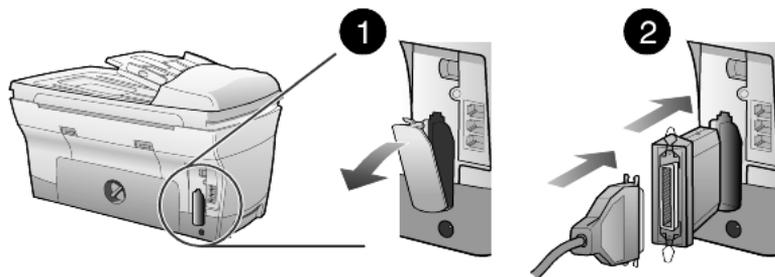

Note: Should you need to disconnect your parallel adapter from the HP Officejet, press the buttons found on the top and bottom of the adapter and pull the adapter straight out. You may need to disconnect the power cord to access the lower button on the adapter.

setup for simple sharing

Your HP Officejet can be shared by two different computers by having both computers connected directly to the HP Officejet. Both computers must have the HP Officejet software installed. The list below shows the supported combinations of communication between the HP Officejet and your computers.

The following communication configurations can be used with your HP Officejet:

- HP JetDirect 200m print server connector (network) and USB (Windows and Macintosh)
- Parallel cable adapter (parallel) and USB (Windows only)

Note: Simple Sharing is supported by connecting to the HP Officejet in one of the following configurations: HP Officejet to two Windows computers or HP Officejet to two Macintoshes. You cannot mix platforms, that is, you cannot connect the HP Officejet to both a Windows computer and a Macintosh.


Note: There can be up to 10 client computers on the network portion of the 200m print server connector and USB combination.

connect your usb port

Connecting to your HP Officejet with USB is straightforward. Simply plug one end of the USB cable into the back of your computer and the other in the back of the HP Officejet.

what works	what does not work
Plugging into the USB port on your computer	Plugging into the USB port located on the keyboard
Plugging into a powered hub that is connected to the USB port on your computer	Plugging into a non-powered USB hub

Note: AppleTalk is not supported.

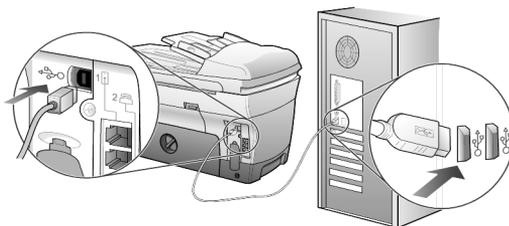

connecting to the USB port on your computer

connect your hp officejet to a phone, modem, or answering machine

This section explains how to connect your HP Officejet to various office devices:

- **phone:** connect a phone to the HP Officejet so it can use the same phone connection as the fax line
- **modem:** connect a modem to your HP Officejet so it can use the same phone connection
- **answering machine:** set your HP Officejet to direct voice calls to the answering machine and fax calls to the HP Officejet

Note: For information on connecting your HP Officejet to your computer and phone system, see the Setup Poster that came with the unit.

to connect your hp officejet to a phone, modem, or answering machine

- 1 Remove the white plastic stopper from connector 2 on the back of the HP Officejet.



connector 2 on the HP Officejet

- 2 If you want to connect more than one device to the HP Officejet, you can use connector 3.
- 3 Connect the phone cord from the phone, modem, or answering machine to connector 2 or 3.

Caution! Do *not* use the phone cord that came with the HP Officejet for this purpose. That phone cord must connect connector 1 on the HP Officejet to the wall jack for your phone system. See the Setup Poster for details.



connector 1 on the HP Officejet

- 4 If you are connecting an answering machine, see **use an answering machine or pc modem** in the onscreen User's Guide for information on correctly setting the number of rings.

If you are connecting a modem, turn off its fax-receive feature. See your onscreen User's Guide for information on tone versus pulse dialing and phone services.

remove and reinstall your hp officejet software

Do *not* simply delete the HP Officejet program files from your hard drive. Be sure to remove them properly using the uninstall utility provided in the HP Officejet program group.

to uninstall from a Windows computer

- 1 On the Windows taskbar, click **Start**, choose **Programs** or **All Programs** (XP), choose **Hewlett-Packard**, choose **hp officejet 7100 series**, then choose **HP Uninstaller**.
- 2 Follow the directions on the screen.
- 3 If you are asked whether you would like to remove shared files, click **No**. Other programs that use these files may not work properly if the files are deleted.
- 4 After the program finishes removing the software, disconnect your HP Officejet, and restart your computer.
- 5 To reinstall the software, insert the HP Officejet 7100 Series CD-ROM into your computer's CD-ROM drive, and follow the instructions that appear.


to uninstall from a Macintosh computer

- 1 Double-click on **Applications:HP All-in-One Software** folder.
- 2 Double-click on **Uninstaller**.
- 3 Follow the directions that appear on the screen.

learn more

See the additional setup information section in the onscreen User's Guide to learn more about:

- Set up your HP Officejet for network printing
- Understand point-and-print and peer-to-peer networks
- Set up the host
- Set up a point-and-print client
- Set up a peer-to-peer client (Windows 98 server to 2000 client)

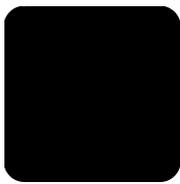

Numerics

- 2 on 1 feature, **32**
- 250-sheet plain paper tray, **9, 19, 20, 23**
- 4800 Optimized dpi
 - copy, **30**
 - print, **15**

A

- address book, sending faxes to groups, **50**
- adjust settings
 - copy, **29**
 - fax, **50**
- adjust sound volume for fax, **50**
- align printheads, **65**
- auto-answer button, **8, 48**
- automatic document feeder
 - copy from, **6**
 - load originals in, **18**
 - use for two-sided copies, **33**

B

- banner paper, tips on loading, **23**
- basic fax setup, **55**
- best copy quality, **27**
- broadcast a fax, **47**
- busy redial, **49**
- buttons
 - auto-answer, **48**
 - cancel, **9**
 - front panel, **3**
 - keypad, **9, 52**
 - lighter/darker, **9, 28**
 - menu, **6, 9**
 - number of copies, **9, 29**
 - quality, **9, 27**
 - reduce/enlarge, **9, 28**
 - resolution, **8**
 - scan to, **9, 26**
 - special features, **9, 32, 33, 34**
 - speed dial, **8, 46, 50**
 - start scan, **10, 25**
 - tray select/paper type, **9, 35**
 - two-sided copy, **33**

C

- cancel
 - button, **9**
 - copy, **36**
 - scan, **26**
 - scheduled fax, **47**
- cartridge
 - check ink level, **58**
 - clean contacts, **66**
 - replace ink cartridges, **63**
- change paper tray, **23**
- clean
 - ink cartridge contacts, **66**
 - printhead contacts, **67**
 - printheads, **66**
 - the exterior, **57**
 - the glass, **57**
 - the lid backing, **57**
- collate copies, **34**
- color
 - fax, **46**
 - improve printing, **59**
 - intensity of copy, **28**
- CompactFlash, **37**
- connect
 - a modem, **79**
 - a phone, **79**
 - an answering machine, **79**
- connect your parallel cable adapter, **77**
- continuous paper, tips on loading, **23**
- contrast, enhance photo colors, **28**
- copy
 - 2 on 1, **32**
 - 4800 Optimized dpi, **30**
 - an original, **31**
 - buttons, **3**
 - change default settings, **29**
 - color intensity, **28**
 - darken, **9, 28**
 - defaults, **29**
 - enhancements, **28**
 - enlarge, **28**
 - fit to page, **31**
 - from ADF, **6**
 - lighten, **9, 28**

- make a poster, **34**
- make copies, **5, 27**
- photo, **30**
- quality, **9, 27**
- reduce, **28**
- set number of copies, **5, 29**
- several copies on a page, **31**
- special copy jobs, **30**
- speed, **27**
- stop, **36**
- T-shirt transfer, **35**
- two-sided copies, **9, 33**
- country setup, **71**

D

- darken a copy, **28**
- date setup, **51**
- default settings
 - change for copy, **29**
 - restore factory defaults, **70**
- delay fax, **47**
- director review, **10**
- double-sided copies, **33**
- DPOF, print, **41**

E

- enhancements, **28**
- enlarge a copy, **9, 28, 31**
- enter text from keypad, **52**
- envelopes, load, **20**
- error reports, fax, **48**
- exclamation light (needs attention), **8**

F

- factory defaults
 - change for copying, **29**
 - restore, **70**
- fast copy quality, **27**
- fax
 - adjust volume, **50**
 - answering machine, **53**
 - auto redial, **49**
 - auto-answer, **8**
 - broadcast, **47**
 - busy redial, **49**
 - buttons, **3**
 - cancel scheduled fax, **47**

- confirmation reports, **48**
- create group speed-dial settings, **50**
- create individual speed-dial settings, **50**
- delay send, **47**
- enter text, **52**
- error reports, **48**
- header, **52**
- pc modem, **53**
- print reports, **48**
- receive, **48**
- receive manually, **48**
- redial numbers
 - automatically, **8, 49**
- reports, **45, 49**
- reprint fax in memory, **53**
- resolution, **8**
- schedule send, **47**
- send, **45**
- send fax to multiple recipients, **47**
- send in color, **46**
- send using speed dial settings, **46**
- set the header, **52**
- speed dialing, **50**
- transaction reports, **49**
- fax functions menu, **55**
- fit to page, **31**
- front panel
 - enter text, **52**
 - features, **3**
 - overview, **8**
 - print photos, **39**
 - scan from, **25**
 - tutorial, **3**
- front-panel display, **3**
 - set language, **71**
- G**
- glass cleaning, **57**
- greeting cards, load, **22**
- group speed-dial settings, creating, **50**
- H**
- header, fax, **52**
- help, **1**
- hp director, **10–12**
- hp officejet
 - menu functions, **13**
 - simple sharing, **78**
 - software, **10**
- hp papers, tips on loading, **22**
- hp two-sided printing accessory, **33**
- I**
- image, shift, **33**
- individual speed-dial settings, create, **50**
- ink cartridges
 - check ink level, **58**
 - clean, **66**
 - refill, **70**
 - replace, **63**
- ink level
 - check, **58**
 - low, **63**
 - override gauge, **70**
- inkjet paper, load, **22**
- intensity of color copy, **28**
- introduction to the Director, **10**
- iron-on, **35**
- K**
- keypad, **9**
 - enter text, **52**
- L**
- labels, load, **22**
- lamp power save mode, **72**
- language setup, **71**
- legal-size paper
 - copy from, **28**
 - tips on loading, **22**
- lid backing, clean, **57**
- light power save mode, **72**
- lighten or darken copies, **9, 28**
- load
 - 250-sheet plain paper tray, **19**
 - change the paper type, **23**
 - envelopes, **20**
 - ink cartridges, **63**
 - multiple originals, **6**
 - original in the ADF, **6, 18**
 - original on the glass, **17**
 - paper, **19**
 - photo paper, **22**
 - postcards, **22**
 - printheads, **61**
 - set the paper size, **24**
 - tips, **22**
- lower paper tray, see 250-sheet plain paper tray
- M**
- main paper tray, load, **19**
- maintenance
 - align printheads, **65**
 - check ink level, **7**
 - clean the exterior, **57**
 - clean the glass, **57**
 - clean the lid backing, **57**
 - clean the printheads, **66**
 - power save mode time, **72**
 - printhead replacement verification, **59**
 - replace ink cartridges, **63**
 - replace printheads, **61**
 - restore factory defaults, **70**
 - self-test report, **58**
- margins, increase, **33**
- memory card see photo card
- Memory Stick, **37**
- menus, **55**
 - advanced fax setup, **55**
 - copy setup, **36**
 - fax functions, **55**
 - photo card functions, **44**
 - print reports, **73**
 - speed dial setup, **55**
 - status and maintenance, **55, 73**
- multiple recipients
 - create groups, **50**
 - send fax to, **47**
- N**
- no answer redial, **49**
- normal copy quality, **27**
- number of copies, **9**
 - set, **5, 29**
- numbers, redialing, **49**
- O**
- originals
 - how to place in the ADF, **18**
 - how to place on glass, **17**
 - multiple copies, **31**
 - print two on one page, **32**
- output tray, **23**
 - extender, **20**
- P**
- paper
 - change default size for copy, **23**
 - change the type, **23**
 - load, **19**
 - recommended, **18, 19**
 - set the size, **24**
 - tips on loading, **22–23**
- paper size, change for copy, **23**

- paper tray
 - select, **9**
 - set, **23**
- parallel cable adapter, **77**
- phone hook light, **8**
- photo card
 - CompactFlash, **37**
 - insert a card, **37**
 - inserted incorrectly, **38**
 - Memory Stick, **37**
 - Photo View Center, **38**
 - print a DPOF file, **41**
 - print a proof sheet, **39**
 - print all photos, **40**
 - print individual photos, **40**
 - print photos from, **39**
 - save files to computer, **38**
 - scan a proof sheet, **42**
 - SmartMedia, **37**
 - types, **37**
 - what is a photo card, **37**
- photo mode enhancement, **30**
- photo paper, load, **22**
- Photo View Center, **38**
- photo view center, **25**
- photos
 - copy, **30**
 - enhance copy, **28**
 - print, **39**
 - print a DPOF file, **41**
 - print all, **40**
 - print individual photos, **40**
 - save, **38**
 - view, **38**
- postcards, load, **22**
- poster, copy to, **34**
- power save mode setup, **72**
- power save mode time, **72**
- print
 - 4800 Optimized dpi, **15**
 - all photos, **40**
 - color calibration report, **59**
 - continuous (banner) paper,
 - tips on loading, **23**
 - DPOF file, **41**
 - envelopes, **20**
 - fax reports, **48**
 - faxes in memory, **53**
 - individual photos, **40**
 - photos from photo card, **39**
 - proof sheet, **39**
 - self-test report, **58**
- print cartridges, *see ink cartridges*
- printheads
- align, **65**
- clean, **66, 67**
- load, **61**
- replace, **61**
- replacement verification, **59**
- proof sheet
 - print, **39**
 - scan, **42**
 - use, **41**
- Q**
- quality, **27**
- quick start, **3**
 - review the director, **10**
 - use with a computer, **10**
- R**
- receive, fax, **48**
- redialing, numbers, **49**
- reduce a copy, **5, 9, 28, 31**
- reinstall software, **79**
- remove software, **79**
- reports
 - automatic fax, **49**
 - color calibration, **59**
 - fax, **45**
 - manual fax, **49**
 - self-test, **58**
- restore factory settings, **70**
- ring and beep volume, set, **50**
- S**
- save
 - a scanned image, **25**
 - photos to computer, **38**
- scan
 - buttons, **3**
 - different destination, **26**
 - from front panel, **25**
 - proof sheet, **42**
 - stop, **26**
- schedule
 - cancel scheduled fax, **47**
 - fax, **47**
- self-test report, **58**
- send
 - delay fax, **47**
 - fax, **45**
 - fax to multiple recipients, **47**
- set
 - country and language, **71**
 - date and time, **51**
 - fax header, **52**
 - number of copies, **29**
 - power save mode, **72**
 - speed dialing, **50**
- settings
 - best copy quality, **27**
 - copy a photo, **30**
 - copy color intensity, **28**
 - copy defaults, **29**
 - copy quality, **27**
 - copy speed, **27**
 - country and language, **71**
 - darken a copy, **28**
 - date and time, **51**
 - enlarge a copy, **28**
 - fast copy quality, **27**
 - fax header, **52**
 - lighten a copy, **28**
 - normal copy quality, **27**
 - paper tray, **23**
 - power save mode, **72**
 - reduce a copy, **28**
 - ring and beep volume, **50**
 - save copy, **29**
 - text enhancement, **28**
- setup
 - additional information, **75**
 - simple sharing, **78**
- shift margins, **33**
- SmartMedia, **37**
- software
 - introduction, **10**
 - remove and reinstall, **79**
- sound volume, adjust, **50**
- special features, **9, 32, 33, 34**
 - limitations, **17**
- speed dialing
 - buttons, **8**
 - create group settings, **50**
 - create individual
 - settings, **50**
 - enter text, **52**
 - set up, **50**
 - to send fax, **46**
- stickers, load, **22**
- stop
 - copy, **36**
 - scan, **26**
- supply, check ink level, **58**
- T**
- text
 - enhance, **28**
 - enter from keypad, **52**
- time setup, **51**
- transparency film
 - recommend choices, **19**
 - tips on loading, **22**
- troubleshooting

index

remove and reinstall
software, **79**
T-shirt transfer, **35**
load, **22**
tutorial, **3**

before you begin, **3**
front panel features, **3**
make a copy, **5**
two-sided copies, **9, 33**

U
USB cable installation, **78**

V
volume, adjust for fax, **50**

Visit the hp officejet information center

It has everything you need to get the most value from your HP Officejet.

- Technical Support
- Supplies and Ordering Information
- Project Tips
- Ways to Enhance Your Product

www.hp.com/support

© 2002 Hewlett-Packard Company

Printed in the U.S.A., Mexico, Germany, Singapore, or China.



C8380-90183