




i n v e n t



hp LaserJet 9055 mfp  
hp LaserJet 9065 mfp

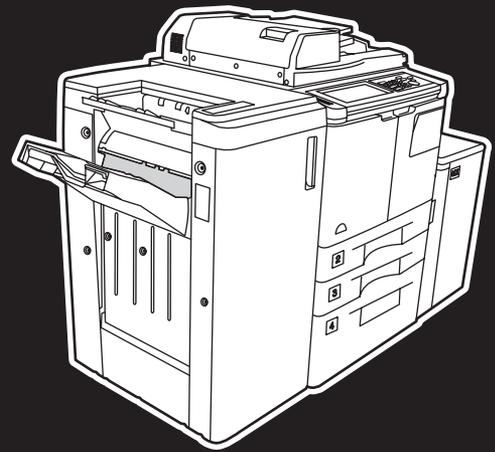

Quick Reference



hp LaserJet 9055mfp and 9065mfp

---

**quick reference guide**

## Copyright Information

© 2003 Copyright Hewlett-Packard  
Development Company, LP

Reproduction, adaptation, or translation  
without prior written permission is prohibited,  
except as allowed under the copyright laws.

A user of the Hewlett-Packard printer  
associated with this user guide is granted a  
license to: a) print hard copies of this user  
guide for PERSONAL, INTERNAL, or  
COMPANY use subject to the restriction not to  
sell, re-sell, or otherwise distribute the hard  
copies; and b) place an electronic copy of this  
user guide on a network server, provided  
access to the electronic copy is limited to  
PERSONAL, INTERNAL users of the  
Hewlett-Packard printer associated with this  
user guide.

The information contained in this document is  
subject to change without notice.

Part number: Q3643-90901

Edition 1: 11/2003

## FCC Class A Statement

This equipment has been tested and found to  
comply with the limits for a Class A digital  
device, pursuant to Part 15 of the FCC Rules.  
These limits are designed to provide  
reasonable protection against harmful  
interference when the equipment is operated  
in a commercial environment. This equipment  
generates, uses and can radiate radio  
frequency energy and, if not installed and  
used in accordance with the instruction  
manual, may cause harmful interference to  
radio communications. Operation of this  
equipment in a residential area is likely to  
cause harmful interference, in which case the  
user will be required to correct the  
interference at his own expense. The end  
user of this product should be aware that any  
changes or modifications made to this  
equipment without the approval of  
Hewlett-Packard could result in the product  
not meeting the Class A limits, in which case  
the FCC could void the user's authority to  
operate the equipment.

## Trademark Credits

All products mentioned herein may be  
trademarks of their respective companies.

# Table of Contents

## 1 Getting started

MFP parts . . . . .	2
The MFP . . . . .	2
The control panel . . . . .	3
The touch screen . . . . .	4
Turning the MFP on and off . . . . .	5
Help mode . . . . .	5

## 2 Copying

Using the scanning glass . . . . .	8
Using the ADF . . . . .	9
Choosing a paper size . . . . .	10
Orientation . . . . .	10
To reduce and enlarge . . . . .	10
Duplexing (2-sided copying) . . . . .	10
Using the optional finisher features . . . . .	11
To staple . . . . .	11
To punch holes . . . . .	11
To fold in the center . . . . .	11
To make a triple fold . . . . .	12
To insert covers . . . . .	12
To create booklets . . . . .	12
Finishing feature paper sizes . . . . .	12

## 3 Printing

Accessing the print screen . . . . .	16
To access the configuration page . . . . .	16

## 4 Loading trays

Tray 1 . . . . .	18
To load paper . . . . .	18
To load tabs . . . . .	18
Trays 2 and 3 . . . . .	19
To load paper . . . . .	19
To load tabs . . . . .	20
Tray 4 . . . . .	21
To load paper . . . . .	21
To load tabs . . . . .	22
Optional tray 5 . . . . .	23
To load paper . . . . .	23
To load tabs . . . . .	24
Supported paper sizes for trays . . . . .	25

## 5 Adding toner

Adding toner . . . . .	28
------------------------	----

## **6 Emptying the punch waste box**

Emptying the punch waste box . . . . .32

## **7 Clearing paper jams**

Clearing paper jams . . . . .34

## **Appendix A Paper Sizes**



## **Appendix B Warranty and regulatory information**

Hewlett-Packard limited warranty statement . . . . .37

# 1 Getting started


## MFP parts

### The MFP

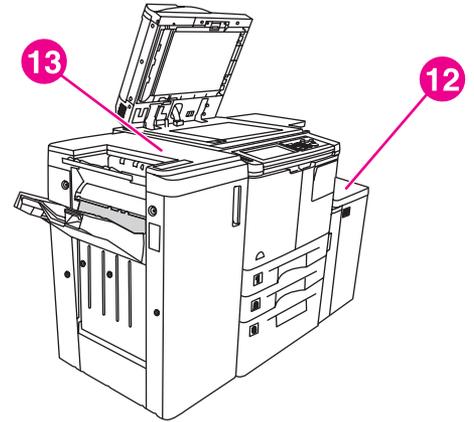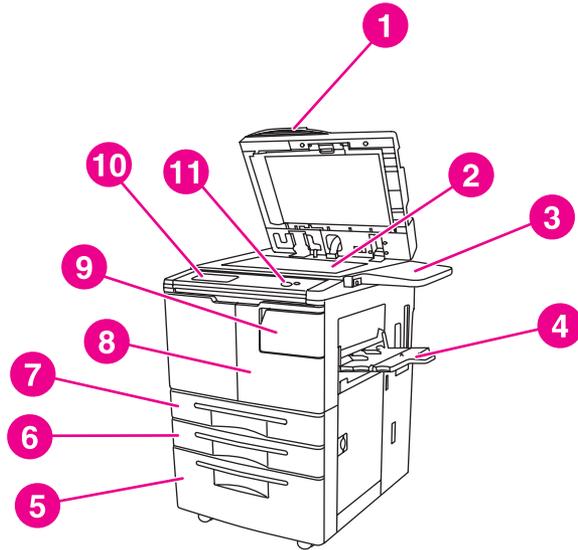

- 1 Automatic document feeder (ADF)
- 2 Scanning glass
- 3 Shelf
- 4 Tray 1
- 5 Tray 4
- 6 Tray 3
- 7 Tray 2
- 8 Front door
- 9 Toner access door
- 10 Touch screen
- 11 Control panel
- 12 Optional Tray 5 (high capacity input device)
- 13 Optional finisher (output device)

## The control panel

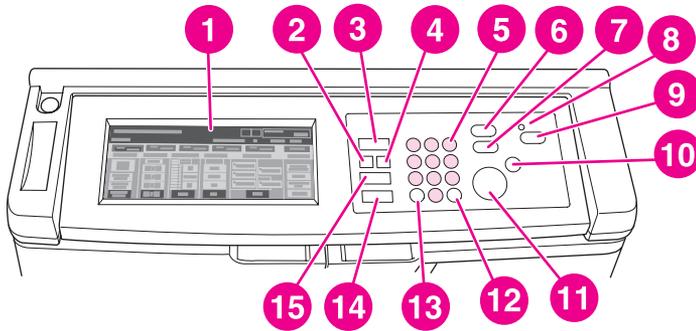

- |                       |                    |
|-----------------------|--------------------|
| 1) Touch screen       | 9) Sleep On/Off    |
| 2) Check              | 10) Stop           |
| 3) Mode selection key | 11) Start          |
| 4) Help               | 12) Clear Quantity |
| 5) Numeric keypad     | 13) Counter        |
| 6) Interrupt          | 14) Reset          |
| 7) Proof Copy         | 15) Job Memory     |
| 8) Timer              |                    |

The control panel allows access to the following functions:

- **Check (2)** displays a screen summarizing all settings that are selected for the current job.
- **Mode selection key (3)** switches the machine operation mode to copy, scan/fax, or print.
- **Help (4)** displays a screen with help for the currently selected function, or accesses the Key Operator Mode screen. Not every function has a corresponding help screen.
- **Numeric keypad (5)** provides the means for entering numeric values.
- **Interrupt (6)** stops copying that is in progress to allow copying from the scanning glass.
- **Proof Copy (7)** outputs a single set of copies to confirm whether the current settings are selected properly.
- **Timer (8)** lights when the Weekly Timer function is activated. The function allows the MFP to automatically shut down power for specific periods of time, up to one week in duration.
- **Sleep On/Off (9)** activates power-saving mode for times when the MFP is inactive, or activates the timer interrupt mode when the weekly timer function is active.
- **Stop (10)** stops the copying and deletes the stored memory.
- **Start (11)** activates copying or scanning.
- **Clear Quantity (12)** allows resetting of the copy quantity.
- **Counter (13)** displays the counter screen or accesses programming modes for setting special functions.
- **Reset (14)** restores the MFP to automatic mode settings or to Key Operator settings.
- **Job Memory (15)** displays screens for selecting job store/job recall functions.

## The touch screen

### CAUTION

Do not apply weight or pressure to the touch screen glass, or it may be damaged.

The touch screen is an LCD that displays interactive screens with touch keys for making job selections. Selections are highlighted when they are touched. The touch screen is not active until the MFP is completely warmed up.

Use the initial screen to access the FINISHER, DUPLEX, CONTRAST, SCALE, PAPER, and ADVANCED options.

Under FINISHER, choose OPTIONS, which leads to selections about EXIT BIN, BINDING, STAPLE, OUTPUT, and STORE FOR HDD. You may also choose STAPLE and SORT. STAPLE turns the stapling function on and off. SORT turns the sort function on and off.

Under DUPLEX, choose duplexing options for 1- or 2-sided originals and printing.

Under CONTRAST, choose RESET or AUTO. These settings allow you to make the contrast of the copy lighter or darker.

Under SCALE, choose AUTO, ZOOM, or PRESETS. This allows you to reduce or enlarge a document. You may choose a preset ratio using PRESETS, or manually adjust the ratio using ZOOM. AUTO returns the ratio to 1:1.

Under PAPER, choose the tray from which to copy. The size of the paper is displayed. Corresponding icons show how much paper is left in each tray.


Under ADVANCED, choose ORIGINALS, OUTPUT, ROTATION OFF, or STORE. ORIGINALS allows you to tell the MFP what kind of original you are copying (for example, a mixed-size original or an original on tab paper). OUTPUT allows you to select options for your copy, such as cover insertion, transparency interleave, repeat an image, or add a stamp/overlay. ROTATION OFF, when selected and highlighted, deactivates the automatic mode that enables an original image to rotate 90 degrees to fit the orientation of the copy page with no loss of data. For example, when ROTATION OFF is selected, a landscape-oriented image will not rotate before printing on a portrait-oriented copy sheet. If you would like to print a landscape document on portrait paper (or alternately, a portrait document on landscape) by first rotating the image, the automatic mode should be activated (ROTATION OFF not highlighted). STORE allows you to scan a document and save it in the MFP to print later.

## Turning the MFP on and off

To turn on the MFP, press the primary power switch (2), and then press the secondary power switch (1).

### CAUTION

Always turn off the MFP by pressing the secondary power switch (1), and then pressing the primary power switch (2).

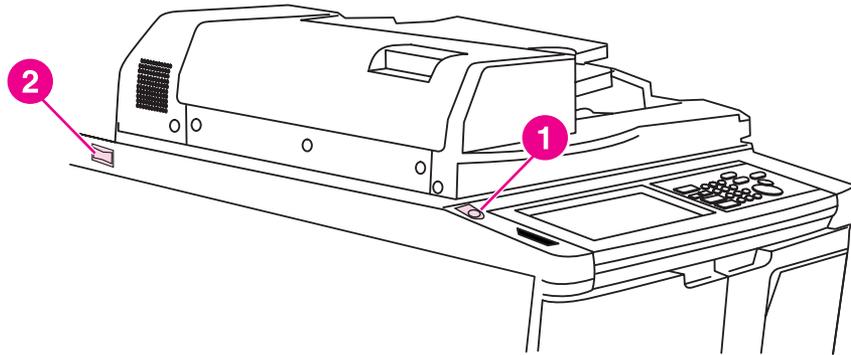

- 1 Secondary power switch
- 2 Primary power switch

## Help mode

Most functions provide a help option. To display the help, press **? Help** on the control panel.

Use the **? Help** option to access information about the current screen mode and to learn about making jobs.

When the **? Help** option is selected, the screen displays a list of all MFP functions. When a function is touched, the help screen displays information specific to that function. To use the help, perform the following procedure:

- 1 Press **? Help**.
- 2 Touch **STAPLE SUPPLY**, **PUNCH**, **ADF**, **TONER SUPPLY**, **PAPER SUPPLY**, **Help MENU**, or **FOR ASSISTANCE** to display specific help information. Select the topic you want.
- 3 For help on operations, touch **Help MENU** in the center of the screen.
- 4 Touch **Exit** to return to the screen displayed before pressing the **? Help** option.



# 2 Copying



## Using the scanning glass


Use the scanning glass when originals are not suitable for use with the automatic document feeder (for example, when the size is incompatible, or when originals are folded, stapled, torn, or in poor condition).

Use the scanning glass up to the following sizes:


- 280 by 432 mm (11 by 17 inches) sheet or book
- 6.8 kg (15 lb) book weight
- 30 mm (1.2 inches) thickness

### To use the scanning glass

- 1 Place the original document face-down on the scanning glass, in the rear-left corner.

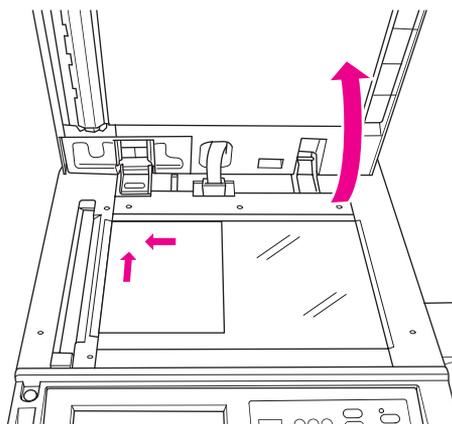

- 2 Close the document cover to prevent the original document from shifting on the scanning glass.

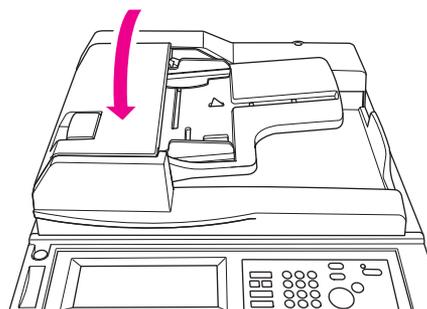

- 3 Select any options, and press **Start**.

## Using the ADF

The Automatic Document Feeder (ADF) automatically feeds up to 100 originals that are placed face-up in the tray. The ADF should be used only for unstapled, unfolded, smooth, flat original documents. See [Paper Sizes](#) for dimensions of various paper sizes. The following sizes can be used in the ADF:

- A3
- A4
- A4R
- A5
- A5R
- B4
- B5
- B5R
- B6R
- 5.5x8.5
- 5.5x8.5R+
- Letter
- LetterR
- Legal
- Tabloid/Ledger


Do not use the ADF for the following original documents:

- curled, creased, or folded
- paste-ups or cut-outs
- books
- glossy paper, overhead transparencies, pre printed forms, or cellophane
- folded, punched, or stapled originals
- very thin or very thick originals (thin paper is 49 to 57 g/m<sup>2</sup> (13 to 15 lb bond), thick paper is 90 to 200 g/m<sup>2</sup> (25 to 110 lb bond)).

### To use the ADF

The MFP determines the correct paper size to use according to the paper guide adjustments on the ADF.

- 1 Place the original document face-up in the ADF tray. Make sure the ADF is completely closed.
- 2 Adjust the paper guides to the size of the document being fed through the ADF.

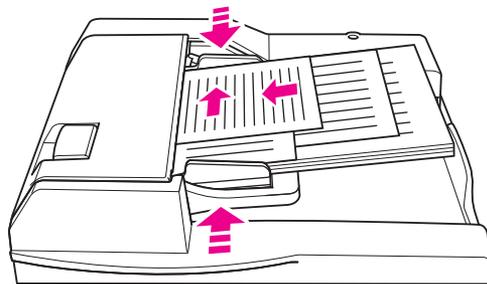

- 3 Use the numeric keypad to enter the number of copies that you want.
- 4 Press **Start**.

### To use the ADF with mixed originals

Original documents that contain a variety of paper sizes can be copied from the ADF in one of two Auto modes. In the Auto mode under *PAPER*, copies will output on mixed paper sizes to match the originals. In the Auto mode under *SCALE*, copies will output on one common paper size that you select. An appropriate magnification ratio is selected automatically.

- 1 Place the original document, face-up and in order, in the ADF tray, aligned with the left-rear of the tray. Anything larger than A4 paper (210 by 297mm (8.3 by 11.7 inches)) should be fed short edge first.

- 2 Adjust the paper guides to the largest original page.
- 3 Press **Start**.

## Choosing a paper size

### Orientation

You can use the Auto mode under either SCALE or PAPER to copy original documents on paper that feeds into the copier differently than the original. For example, if the original document feeds into the ADF short-edge first, and the only paper loaded is the same size, but oriented long-edge first, the MFP will automatically rotate the image so that the copy comes out correctly.

Auto mode under SCALE will rotate the image, and reduce or enlarge the original image to fit the selected paper.

Auto mode under PAPER will only rotate the image, selecting the same size paper as the original.

#### to turn automatic rotation off

The default setting for automatic rotation is on (ROTATION OFF is highlighted). You can turn automatic rotation off by touching ROTATION OFF on the touch screen.

### To reduce and enlarge

Use the Zoom mode to reduce or enlarge the copied original image in 1 percent increments.

- 1 On the touch screen, touch ZOOM.
- 2 Use the numbers or arrows on the pop-up menu to set the desired ratio.
- 3 Touch OK.
- 4 Place the original document in the ADF or place it on the scanning glass.
- 5 Press **Start**.

### Vertical/horizontal zoom (delete)

Use the Vertical/Horizontal Zoom mode to reduce or enlarge vertical and horizontal dimensions.

- 1 On the touch screen, touch ZOOM.
- 2 Touch Vert. to select a vertical ratio, or touch Horiz. to select a horizontal ratio.
- 3 Use the numbers or arrows on the pop-up menu to set the desired ratio.
- 4 Touch OK.
- 5 Select the desired copy size.
- 6 Place the original document in the ADF tray or place it on the scanning glass.
- 7 Press **Start**.

## Duplexing (2-sided copying)

Use duplexing when you want to make a 2-sided copy from a multiple-page original document that is printed on one side, or an original document that is printed on both sides.

### To duplex

- 1 If the original document is printed on one side, and you would like to duplex, touch 1 ▶ 2 .  
If the original document is printed on two sides, and you would like to duplex, touch 2 ▶ 2 .
- 2 Place the original document in the ADF tray or place it on the scanning glass.
- 3 Press **Start**.

## Using the optional finisher features

### To staple

The stapling feature allows you to make stapled copies. You may choose a single-corner staple or two staples along one edge. For specific paper sizes, see [Finishing feature paper sizes](#).

- 1 Touch **OPTIONS**.
- 2 Under the **STAPLE** menu, select the appropriate staple position and binding mode (if necessary).
- 3 Touch **OK**.
- 4 Touch **ORIGINALS**.
- 5 Select the appropriate original orientation, and then touch **OK**.
- 6 Select any additional copying features, including the number of copies.
- 7 Place the original document in the ADF tray.
- 8 Press **Start**.

### To punch holes

For specific paper sizes, see [Finishing feature paper sizes](#).

---

#### Note

---

Do not punch holes in special paper (for example, labels, tabbed sheets, or transparent films).

- 1 Touch **OPTIONS**.
- 2 Touch **PUNCH**.
- 3 Select the appropriate punch position.
- 4 Touch **OK**.
- 5 Touch **ORIGINALS**.
- 6 Select the appropriate original orientation, and then touch **OK**.
- 7 Select any additional copying features, including the number of copies.
- 8 Place the original document in the ADF tray.
- 9 Press **Start**.

### To fold in the center

You can fold up to three sheets without using the stapling function. For specific paper sizes, see [Finishing feature paper sizes](#).

- 1 Close the document cover securely, and then press **Reset** to clear previous settings.
- 2 Touch **OPTIONS**.
- 3 Touch **FOLDING**.
- 4 Touch **OK**.
- 5 Select any additional copying features, including the number of copies.
- 6 Place the original document in the ADF tray.
- 7 Press **Start**.

## To make a triple fold

This finisher option, which is useful for brochures and letters, takes A4- or letter-size paper and folds it three times. For specific paper sizes, see [Finishing feature paper sizes](#).

- 1 Touch **OPTIONS**.
- 2 Touch **TRI-FOLD**.
- 3 Touch **OK**.
- 4 Select any additional copying features, including the number of copies.
- 5 Place the original document in the ADF tray.
- 6 Press **Start**.

## To insert covers

For specific paper sizes that the optional post insertion kit uses, see [Finishing feature paper sizes](#).

- 1 Close the document cover securely, and then press **Reset** to clear previous settings.
- 2 Touch **OPTIONS**.
- 3 Touch **COVER SHEET**.
- 4 Select the appropriate front and back cover option. Select the tray that you would like to use for each cover.
- 5 Touch **OK** twice.
- 6 Select any additional copying features, including the number of copies.
- 7 Load the covers into the post insertion trays.
- 8 Place the original document in the ADF tray.
- 9 Press **Start**.

## To create booklets

- 1 Close the document cover securely, and then press **Reset** to clear previous settings.
- 2 Touch **OPTIONS**.
- 3 Touch **Stapling & Folding**.
- 4 Touch **OK**.
- 5 If a cover will be inserted, touch **COVER SHEET**, and then touch **Booklet**. Select the appropriate options.
- 6 Select any additional copying features, including the number of copies.
- 7 Place the original document in the ADF tray.
- 8 Press **Start**.

## Finishing feature paper sizes

The following table shows the standard paper sizes that can be used for stapling, hole punching, center folding, tri-folding, and inserting covers.

Size	Stapling	Hole punching	Center folding	Tri-folding	Inserting covers	
					Upper tray	Lower tray
A3	✓	✓	✓			
A4	✓	✓			✓	
A4R	✓		✓	✓	✓	
A5	✓				✓	
B4	✓	✓	✓			
B5	✓	✓			✓	
B5R	✓				✓	
5.5x8.5					✓	✓
5.5x8.5R+	✓					
Folio (F4)R	✓					
Letter	✓	✓			✓	✓
LetterR	✓			✓	✓	✓
Legal	✓		✓			
Tabloid/Ledger	✓	✓	✓			✓

---

### Note

Some wide paper sizes are supported. For more information, see the *System Administrator's Guide*.



# 3 Printing



## Accessing the print screen

You can use the MFP to store jobs sent from your computer. To access these jobs later, perform the following procedure:

- 1 Press **↵** **Mode selection key** twice.
- 2 To print the job, select the name of the stored job.
- 3 Press **Start**.

### To access the configuration page

To access the configuration page, perform the following procedure:

- 1 Press **↵** **Mode selection key** twice.
- 2 Touch **INFORMATION**.
- 3 Touch **CONFIGURATION PAGE**.
- 4 Press **Start**.

# 4 Loading trays



## Tray 1

Tray 1 can accommodate up to 100 sheets of 75 g/m<sup>2</sup> (20 lb) paper. Any size between 100 by 148 mm (5.5 by 8.26 inches) and 314 by 459 mm (12.36 by 18.07 inches) can be used. For specific paper sizes, see [Supported paper sizes for trays](#).

### To load paper


---

#### Note


---

Load overhead transparencies one at a time.

- 1 Open Tray 1. Tray 1 is located on the right side of the MFP.

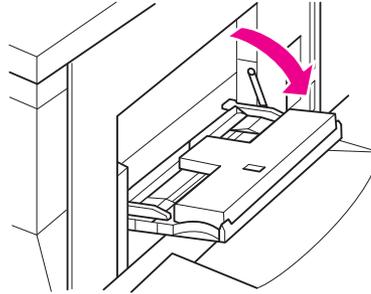


- 2 Open the tray extender.
- 3 Place the paper in the tray, and adjust the paper guides to the appropriate size.

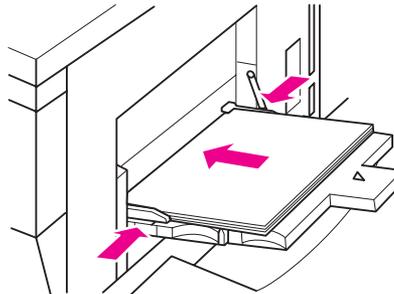


### To load tabs

The top sheet is designated face-down as the first tab of the finished set. Subsequent offset tab sheets follow in sequence.

- 1 Open Tray 1, and open the tray extender.

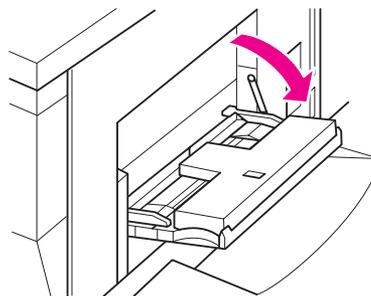

- 2 Load offset tabbed sheets so that the tab extensions are on the right, at the rear of the tray. The tab extension width should be 12.5 mm (0.5 inches) or less.

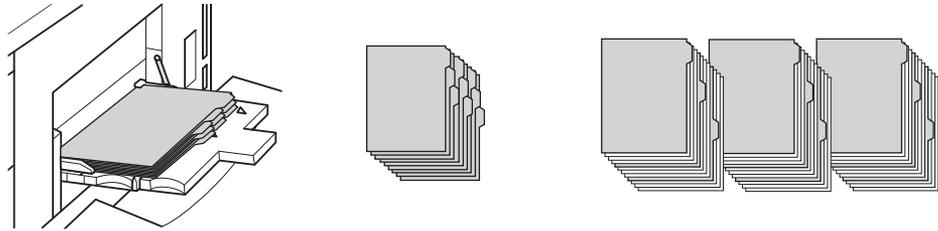


## Trays 2 and 3

Trays 2 and 3 can accommodate up to 500 sheets of 75 g/m<sup>2</sup> (20 lb) paper. Any size between 210 by 140 mm (8.26 by 5.51 inches) and 314 by 459 mm (12.36 by 18.07 inches) can be used. For specific paper sizes, see [Supported paper sizes for trays](#).

### To load paper

**Note** When the paper type is displayed on the tray indicator of the touch screen, load the specified paper.


- 1 Pull out Tray 2 or 3, and open the paper feed roller.

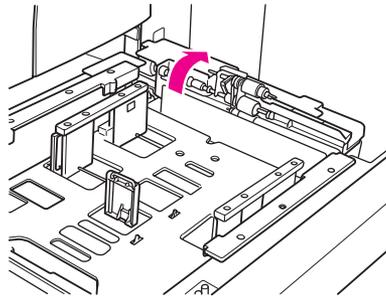

- 2 Place paper in the tray and, if necessary, adjust the side guide to fit paper.

**Note** Do not stack paper above the thick red line.

- 3 Move the green lever of the rear paper guide to the edge of the paper.

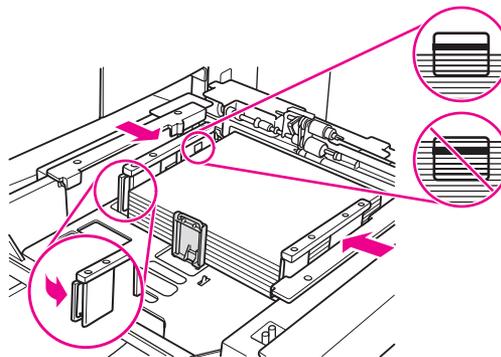


- 4 Close the paper feed roller.
- 5 Close the tray.

## To load tabs

The top sheet is designated face-down as the first tab of the finished set. Subsequent offset tab sheets follow in sequence.

- 1 Load offset tabbed sheets so that the tab extensions are on the left, at the rear of the tray. The tab extension width should be 12.5 mm (0.5 inches) or less.

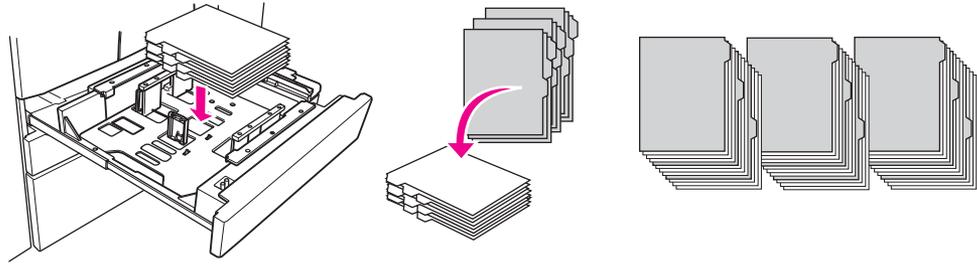

- 2 Specify the paper type as **TAB** in the Key Operator Mode.

## Tray 4

Tray 4 can accommodate up to 1,500 sheets of 75 g/m<sup>2</sup> (20 lb) paper. Any size between 210 by 140 mm (8.26 by 5.51 inches) and 314 by 459 mm (12.36 by 18.07 inches) can be used. For specific paper sizes, see [Supported paper sizes for trays](#).

### To load paper


---

**Note**

---

When the paper type is displayed on the tray key of the touch screen, load the specified paper.

- 1 Pull out Tray 4, and open the paper feed roller.

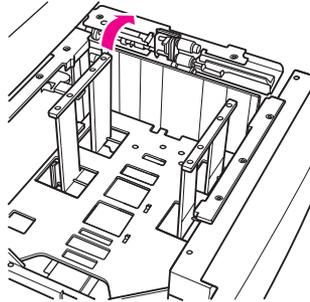

- 2 Place paper in the tray.


---

**Note**

---

Do not stack paper above the thick, red line.

- 3 Move the green lever of the rear paper guide to the edge of the paper.

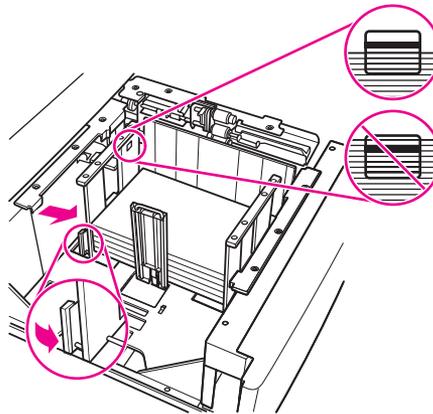


---

**Note**

---

Do not move the front and rear paper guides without using the green lever.

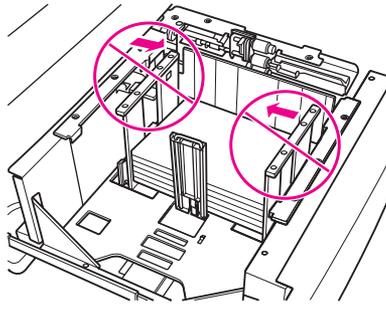

- 4 Close the paper feed roller and, if necessary, adjust the side guide to fit paper.
- 5 Close the tray.

### **To load tabs**

See [To load tabs](#) under the [Trays 2 and 3](#) section.

## Optional tray 5

Tray 5 can accommodate up to 4,000 sheets of 75 g/m<sup>2</sup> (20 lb) paper. The following two versions of Tray 5 are available with this MFP:

- hp 4000 sheet high capacity input (A4/Letter): This optional tray is configured for A4 or Letter during installation.
- hp 4000 sheet high capacity input (A3/Ledger): This optional tray is configured for A3 or Ledger during installation.

---

### Note

The A4/Letter version is configured for either A4 or Letter during installation, while the A3/Ledger version is configured for A3 or Ledger during installation. To configure Tray 5 for other paper sizes, contact your service provider.

For specific paper sizes, see [Supported paper sizes for trays](#).


## To load paper

---

### Note

When the paper type is displayed on the tray key of the touch screen, load the specified paper.

- 1 Open the Tray 5 top door.
- 2 Press the paper loading button to lower the bottom plate.

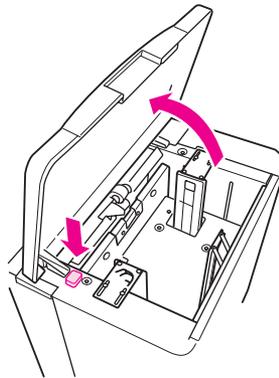


---

### Note

Do not stack paper above the red line.

- 3 Place paper in the tray.

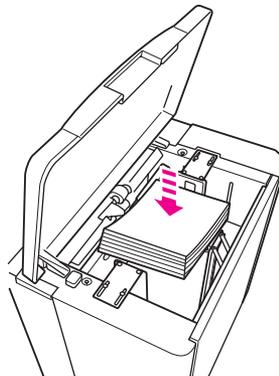


- 4 Close the top door.

## To load tabs

The top sheet is designated face-down as the first tab of the finished set. Subsequent offset tab sheets follow in sequence.

- 1 Load offset tabbed sheets so that the tab extensions are on the right, at the rear of the tray. The tab extension width should be 12.5 mm (0.5 inches) or less.

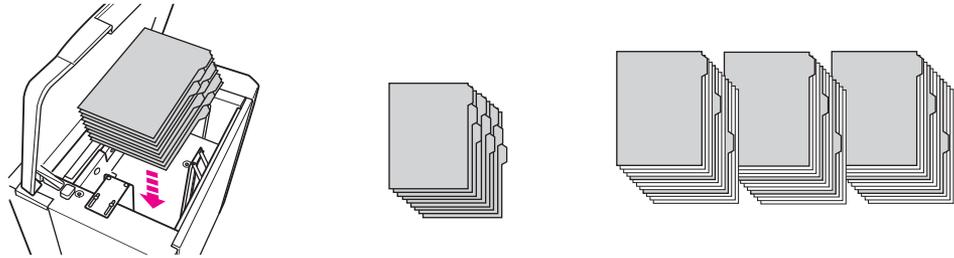

- 2 Specify the paper type as **TAB** in the Key Operator Mode.

## Supported paper sizes for trays

The following table shows the standard paper sizes for each of the trays.

Size	Tray 1	Tray 2	Tray 3	Tray 4	Tray 5	
					A4/Letter	A3/Ledger
A3	✓	✓	✓	✓		✓ <sup>3</sup>
A4	✓	✓	✓	✓	✓ <sup>2</sup>	✓ <sup>3</sup>
A4R	✓	✓	✓	✓		✓ <sup>3</sup>
A5	✓	✓	✓	✓		
B4	✓	✓	✓	✓		✓ <sup>3</sup>
B5	✓	✓	✓	✓	✓ <sup>2</sup>	
B5R	✓	✓	✓	✓		
5.5x8.5	✓ <sup>1</sup>	✓ <sup>1</sup>	✓ <sup>1</sup>	✓ <sup>1</sup>		
Folio (F4)	✓	✓	✓	✓		✓ <sup>3</sup>
Letter	✓	✓	✓	✓	✓ <sup>2</sup>	✓ <sup>3</sup>
LetterR	✓ <sup>1</sup>	✓ <sup>1</sup>	✓ <sup>1</sup>	✓ <sup>1</sup>		✓ <sup>3</sup>
Legal	✓	✓	✓	✓		✓ <sup>3</sup>
Tabloid/ledger	✓	✓	✓	✓		✓ <sup>3</sup>

<sup>1</sup> Requires “special size setting” in Key Operator Mode. See the *System Administrator’s Guide*.

<sup>2</sup> Tray 5 is configured for A4 or Letter during installation. Other paper sizes require changes to the tray. Contact your service provider.

<sup>3</sup> Tray 5 is configured for A3 or Ledger during installation. Other paper sizes require changes to the tray. Contact your service provider.

**Note** Some wide paper sizes are supported. For more information, see the *System Administrator’s Guide*.



# 5 Adding toner




## Adding toner


Toner can be replaced while the MFP is operating.

**WARNING!** If you get toner on your skin or clothing, wash with cold water. Hot water sets toner.


- 1 Open the toner supply door.

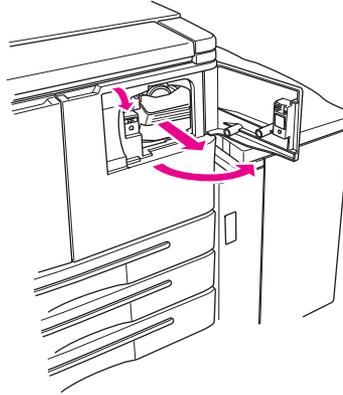


- 2 Pull the toner bottle supply unit toward you.
- 3 Remove the empty toner bottle.

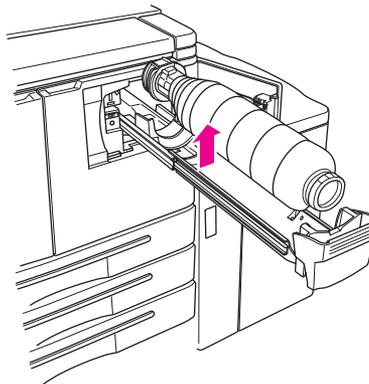


- 4 Hold the new toner bottle vertically, and shake the bottle slightly up and down.

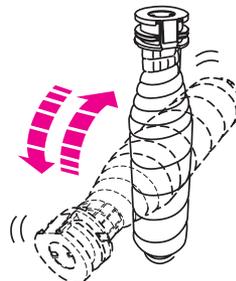


- 5 Remove the toner cap.

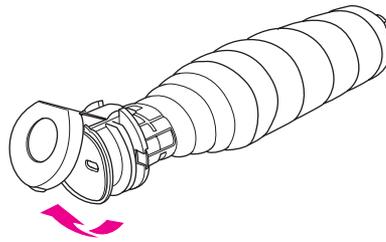

- 6** Place the bottle horizontally, and align the position of the rings on the toner bottle with the grooves on the toner supply unit.

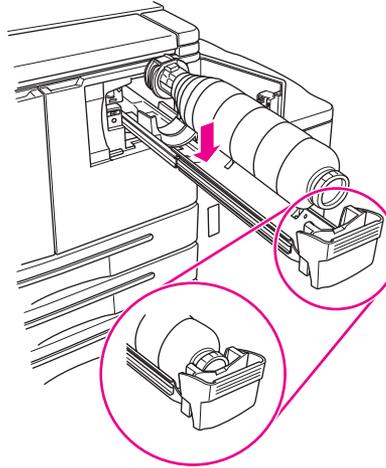

- 7** Push in the toner supply unit, and close the toner supply door.

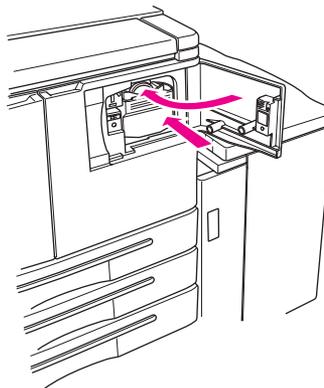

- 8** Recycle or dispose of empty toner bottle in accordance with local requirements.





# 6 Emptying the punch waste box




## Emptying the punch waste box

If an optional punch kit is installed, a message appears on the touch screen indicating when it is time to empty the punch waste box.


- 1 Open the finisher door, and take out the punch waste box.

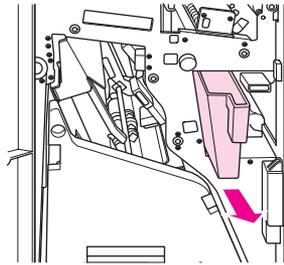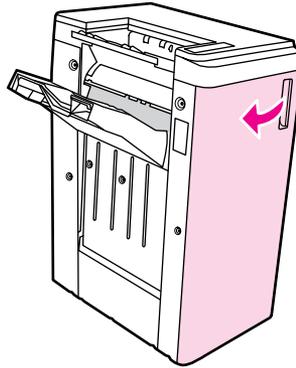

- 2 Empty the punch waste box.

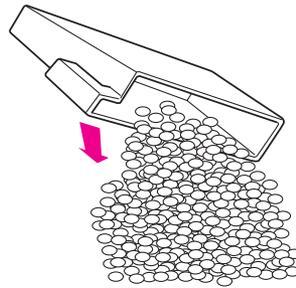

- 3 Return the punch waste box to its original position, and then close the finisher door.

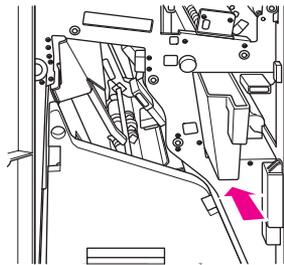

# 7 Clearing paper jams



# Clearing paper jams

## WARNING!


Observe the following information to protect yourself from possible injury:

- The right, rear area of the ADU (Automatic Duplexing Unit) generates high voltage. Do not touch this area while power is applied to the MFP.
- The fuser is very hot. Do not touch the fuser when withdrawing the ADU or removing paper jams.
- The ADU is heavy. Use care and draw it out gently.
- Do not put your hand between the MFP chassis and the ADU.
- Do not put your hand inside the booklet tray on the optional finisher when removing booklets; there is a roller drive unit that can injure you.

## CAUTION

When clearing a paper jam, make sure that you remove all pieces of jammed paper from the MFP. Avoid touching the drum or scratching it in any way. Keep all metal and magnetic objects such as watches and jewelry away from the drum area.

When a paper misfeed occurs, the MFP stops copying or printing, and a jam code displays on the screen to indicate a paper jam. A flashing code indicates the area that should be cleared first. To view help screen instructions, touch the illustration explanation when the flashing mishandled paper code displays. Remove the paper from each flashing location until all locations are cleared. The following illustration is an example of how a paper jam display appears on the screen.

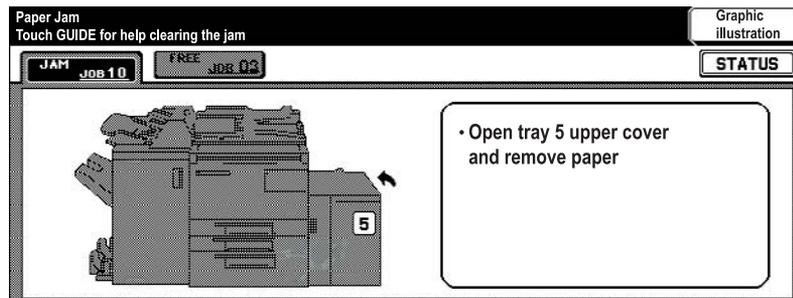

The following table shows the various codes for the MFP locations where paper jams occur.

### Paper jam codes

Code	Location	Code	Location	Code	Location
1	Tray 2	8	Between Tray 5 and MFP	14	ADF
2	Tray 3	9	Upper-right corner	15	ADF
3	Tray 4	10	Upper center	16	Upper finisher
5	Tray 5	11	Upper-left corner	17	Post insertion
6	Tray 1	12	Middle center	18	Booklet tray
7	Right door of MFP	13	ADU or middle center		

# A Paper Sizes

The following table provides dimensions for commonly used paper sizes.

<b>Size</b>	<b>English (inches)</b>	<b>Metric (millimeters)</b>
A3	11.69 by 16.54	297 by 420
A4	8.27 by 11.70	210 by 297
A4R	11.70 by 8.27	297 by 210
A5	5.83 by 8.27	148 by 210
A5R	8.27 by 5.83	210 by 148
B4	10.12 by 14.33	257 by 364
B4R	14.33 by 10.12	364 by 257
B5	7.17 by 10.12	182 by 257
B5R	10.12 by 7.17	257 by 182
B6R	5.02 by 7.17	128 by 182
5.5x8.5	5.5 by 8.5	140 by 216
5.5x8.5R+	8.5 by 5.5	216 by 140
Letter	8.5 by 11.0	215.9 by 279.4
LetterR	11.0 by 8.5	279.4 by 215.9
Legal	8.5 by 14	215.9 by 355.6
Tabloid/Ledger	11.0 by 17.0	279.4 by 431.8



# B Warranty and regulatory information

## **Hewlett-Packard limited warranty statement**

- 1 HP offers the customer no product warranty on this MFP; however, for information on a Service Maintenance Contract on your product, please contact your authorized HP Reseller. The Supplies warranty is set forth below.
- 2 HP products may contain remanufactured parts equivalent to new in performance or may have been subject to incidental use.
- 3 TO THE EXTENT ALLOWED BY LOCAL LAW, THE ABOVE WARRANTIES (IF ANY) ARE EXCLUSIVE AND NO OTHER WARRANTY OR CONDITION, WHETHER WRITTEN OR ORAL, IS EXPRESSED OR IMPLIED AND HP SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, AND FITNESS FOR A PARTICULAR PURPOSE. Some countries/regions, states, or provinces do not allow limitations on the duration of an implied warranty, so the above limitation or exclusion might not apply to you. This warranty gives you specific legal rights and you might also have other rights that vary from country/region to country/region, state to state, or province to province.
- 4 TO THE EXTENT ALLOWED BY LOCAL LAW, THE REMEDIES IN THIS WARRANTY STATEMENT ARE YOUR SOLE AND EXCLUSIVE REMEDIES. EXCEPT AS INDICATED ABOVE, IN NO EVENT WILL HP OR ITS SUPPLIERS BE LIABLE FOR LOSS OF DATA FOR DIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL (INCLUDING LOST PROFIT OR DATA), OR OTHER DAMAGE, WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE. Some countries/regions, states, or provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.
- 5 THE WARRANTY TERMS CONTAINED IN THIS STATEMENT, EXCEPT TO THE EXTENT LAWFULLY PERMITTED, DO NOT EXCLUDE, RESTRICT, OR MODIFY AND ARE IN ADDITION TO THE MANDATORY STATUTORY RIGHTS APPLICABLE TO THE SALE OF THIS PRODUCT TO YOU.



# Index

## Numerics

- 2-hole punch 11
- 2-sided copying 10
- 3-hole punch 11

## A

- adding toner 28
- ADF 9
- automatic document feeder 9

## B

- bigger image 10
- booklet folding 11
- booklets, creating 12
- brochure folding 12

## C

- center folding 11
- changing toner 28
- clearing paper jams 34
- codes, paper jam 34
- control panel 3
- covers, adding 12
- creating booklets 12

## D

- different-sized originals 9
- dimensions
  - paper sizes 35
- duplexing 10

## E

- emptying punch waste box 32
- enlarging 10

## F

- filling Tray 1 18
- filling Tray 2 19
- filling Tray 3 19
- filling Tray 4 21
- filling Tray 5 23
- filling trays
  - paper sizes 25
- finishing feature paper sizes 12
- folding
  - paper sizes 12
- folding paper 11

## H

- Help 5
- help mode 5
- hole punch 11
- horizontal zoom 10

## I

- inserting covers 12
  - paper sizes 12

## J

- jammed paper 34

## L

- letter folding 12
- loading Tray 1 18
- loading Tray 2 19
- loading Tray 3 19
- loading Tray 4 21
- loading Tray 5 23
- loading trays
  - paper sizes 25

## M

- mixed-size originals 9

## O

- orientation 10

## P

- Paper 34
- paper jams 34
- paper sizes
  - commonly used 35
  - filling trays 25
  - folding 12
  - inserting covers 12
  - punching holes 12
  - stapling 12
- Part ii
- platen glass 8
- print screen 16
- printing 16
- punching holes 11
  - paper sizes 12

## R

- reducing 10

## S

scanning glass 8  
smaller image 10  
staple 11  
stapling 11  
paper sizes 12

## T

Tray 1 18  
Tray 2 19  
Tray 3 19  
Tray 4 21  
Tray 5 23  
trays  
supported paper sizes 25  
tri-folding 12  
turn off 5  
turn on 5

## V

vertical zoom 10





i n v e n t

© 2003 Copyright Hewlett-Packard Development Company, L.P.

[www.hp.com](http://www.hp.com)



Q3643-90901