



hp
xp8010 series
digital projector

Ceiling Mount Installation Card

 
△ **Be sure to install the projector into a solid, structural ceiling member:**

▶ **Ceiling Mounting Procedure:**


Before installation, refer to the user manual for the projection distance based upon the desired image size. Use this projection distance to locate the ceiling mount.

△ **HP recommends that a competent carpenter or electrician install this ceiling mount.**

- 1** Drill four holes into the structural ceiling member.
Attach the ceiling rod to the ceiling with the four cylinder screws.

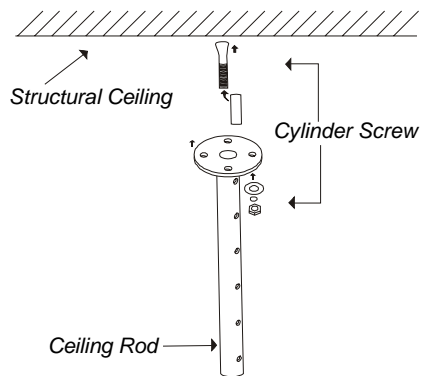

 
- 2** Mount the projector to the ceiling mount bracket with the three bracket screws.

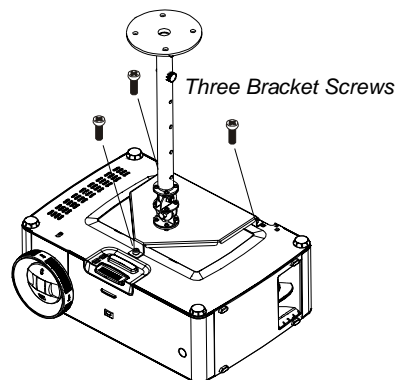

3

Attach the ceiling bracket to the ceiling rod with the round thumbscrew. Height adjustments can be made by using different holes on the ceiling rod and ceiling bracket.

 
- ❖ The total adjustment range is 15.75 to 25.6 inches (40-65cm). Adjustments can be made in one inch (2.5cm) increments.

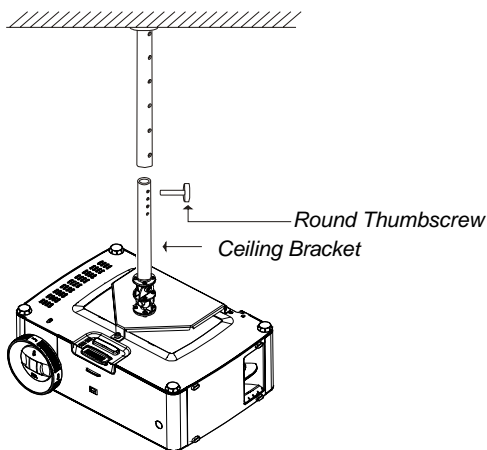


4

Make necessary roll and yaw adjustments to the projector.

 (YAW ADJUSTMENT)

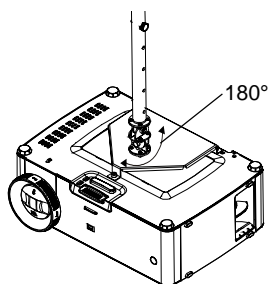

(ROLL ADJUSTMENT)

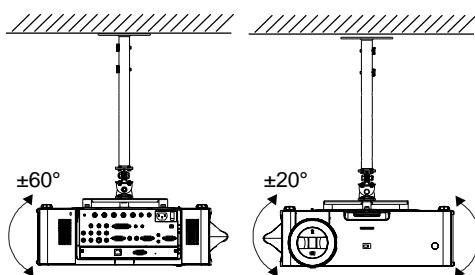 

- ❖ Open the on-screen menu and select **Setup > Projector Position**. Select the appropriate ceiling option.