



Power Connection 4

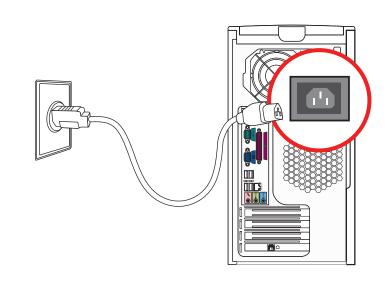

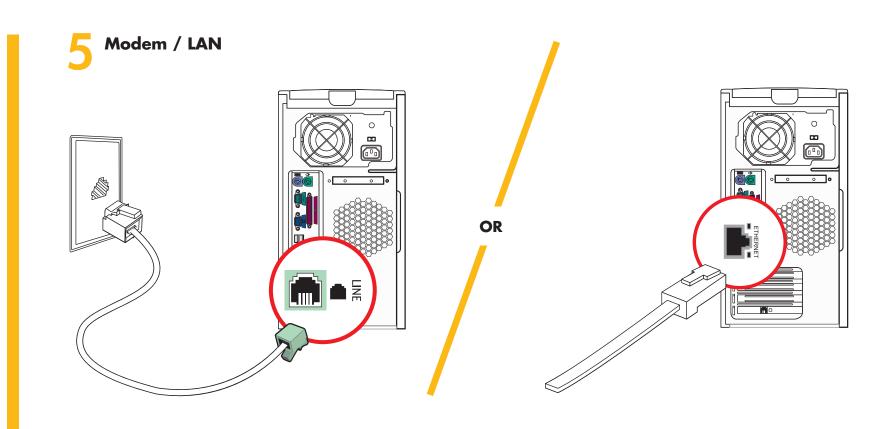




e ,


Power On

6

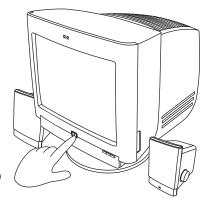


3

NOTE: Your components and connection locations may vary by model.

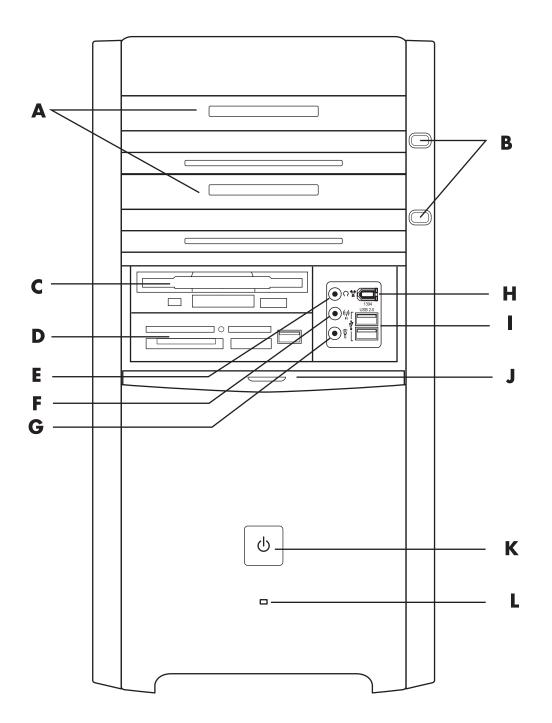

- A Optical drives
- Optical drive Eject buttons В
- Floppy drive С
- Card reader D
- Headphones E
- **F** Audio Line In
- **G** Microphone
- **H** FireWire (IEEE 1394) port
- − USB 2.0 ports
- J Door
- **K** On button with Indicator
- L Hard drive Activity light

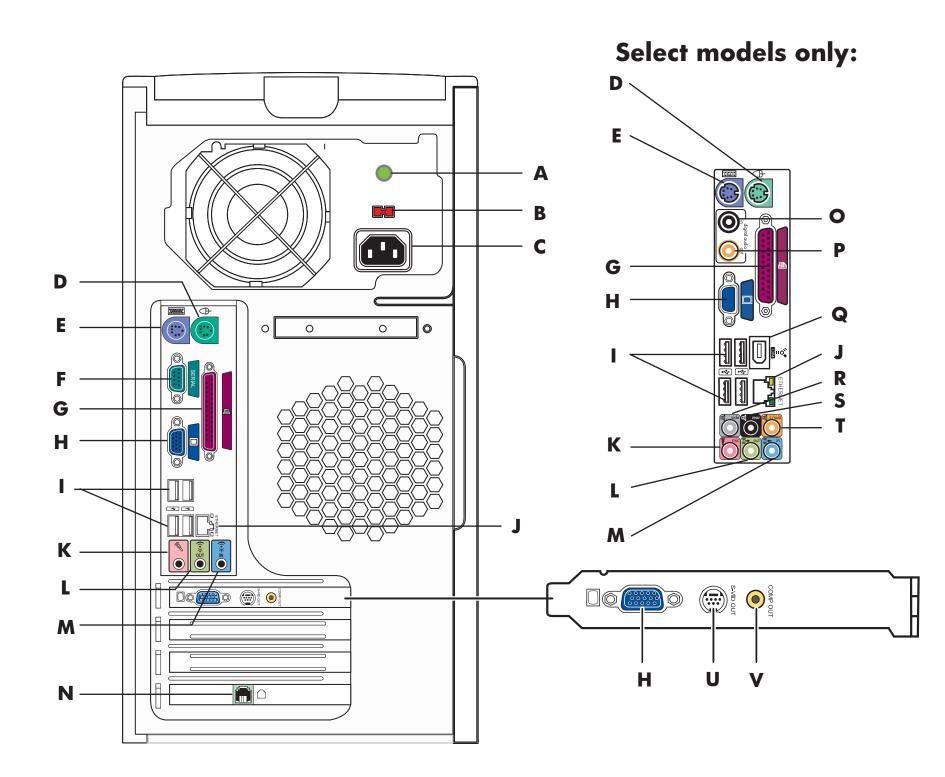

- A Power LED
- Voltage selector В
- Power Cord connector С
- \mathbf{D} PS/2 Mouse connector
- **E** PS/2 Keyboard connector
- **F** Serial port **G** – Parallel port
- H VGA Monitor port
- 4 USB 2.0 ports
- **J** LAN (Ethernet)
- **K** Microphone connector
- L Audio Line Out
- ${\bf M}~-$ Audio Line In
- **N** Modem (Line In RJ-11)

Select models only:

- – Digital Audio În
- P Digital Audio Out
- **Q** FireWire (IEEE 1394) port
- **R** Side speaker port
- Rear speaker port S
- **T** Center speaker/subwoofer port
- **U** S-Video (TV Out)
- ${f V}~-$ Composite Video Out

