

快速入門 Quick Start


you + hp



HP Photosmart 8400 series

1 從包裝盒中取出 HP Photosmart 印表機

Unpack the HP Photosmart printer

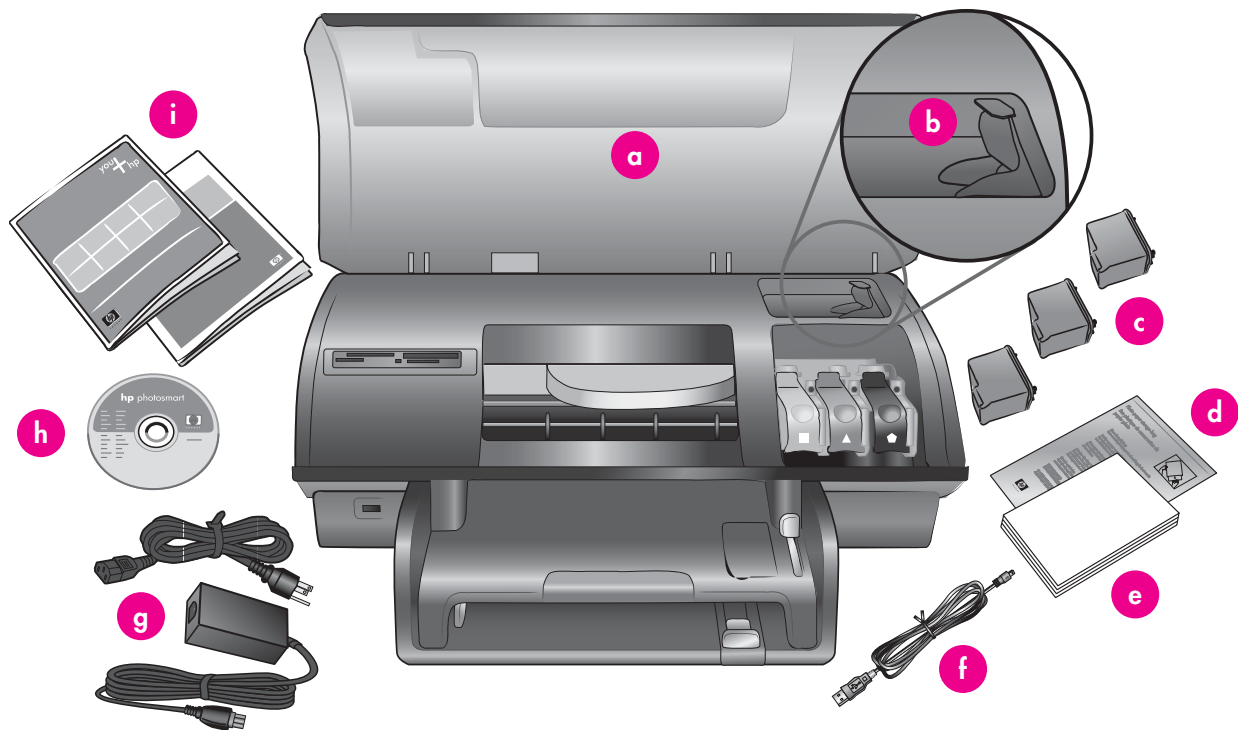

1. 移除膠帶和印表機內部與四周的包裝厚紙板。

2. 檢查包裝盒中的內容物：

- a. HP Photosmart 8400 series 印表機
- b. 列印墨匣護套
- c. 列印墨匣
- d. 相紙儲存袋
- e. 紙張樣本
- f. USB 纜線
- g. 電源和變壓器
- h. HP Photosmart 軟體光碟
- i. 使用者文件

1. Remove the tape and cardboard packaging from inside and around the printer.



2. Check the contents of the box:

- a. HP Photosmart 8400 series printer
- b. Print cartridge protector
- c. Print cartridges
- d. Photo paper storage bag
- e. Paper sampler
- f. USB cable
- g. Power supply and power adapter
- h. HP Photosmart software on CD
- i. User documentation

2

接上電源並設定您的語言

Connect the power and set your language

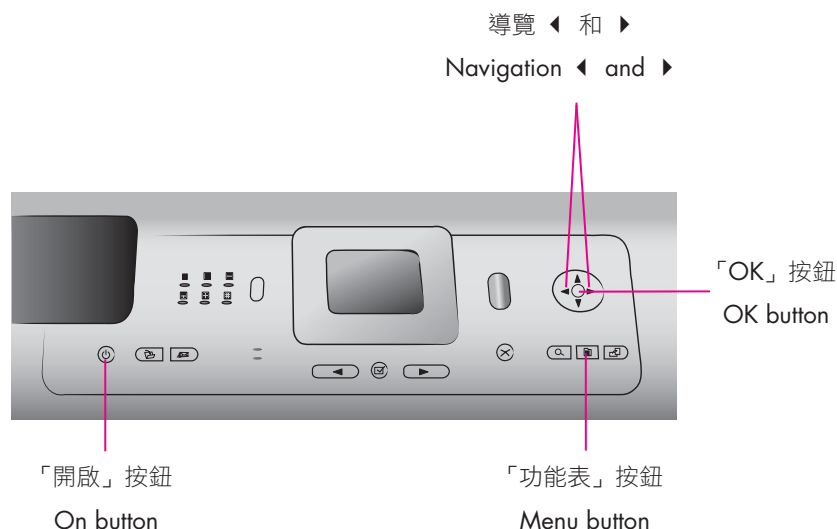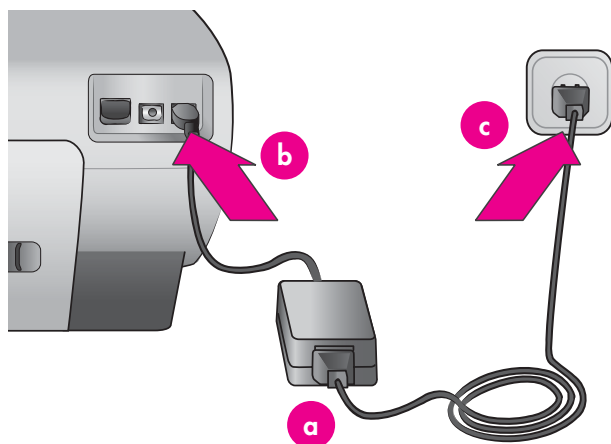

1. 將電源線一端與印表機連接，另一端則接到牆上插座。

重要：軟體安裝期間，未獲得提示前請勿連接 USB 纜線。

2. 按「開啟」，開啟印表機。

3. 當印表機螢幕上出現「**Select Language**」（選擇語言）時，請使用導覽 ◀ 或 ▶ 反白顯示您的語言。

4. 按「OK」選取您的語言。

5. 使用導覽 ◀ 或 ▶ 反白顯示「Yes」（是）進行確認，然後按「OK」。會出現「確認」的畫面。

6. 當印表機螢幕上出現「**Select Country/Region**」（選擇國家/地區）時，請反白顯示您的國家/地區，然後按「OK」。

1. Connect the power cord to the printer and to a wall outlet.

Important: Do not connect the USB cable until prompted during software installation.

2. Press **On** to turn on the printer.

3. When **Select Language** appears on the printer screen, use Navigation ◀ or ▶ to highlight your language.

4. Press **OK** to select your language.


5. Use Navigation ◀ or ▶ to highlight **Yes** to confirm, then press **OK**. A confirmation screen appears.

6. When **Select Country/Region** appears on the printer screen, highlight your country/region, then press **OK**. A confirmation screen appears.

3

裝入一般紙張

Load plain paper

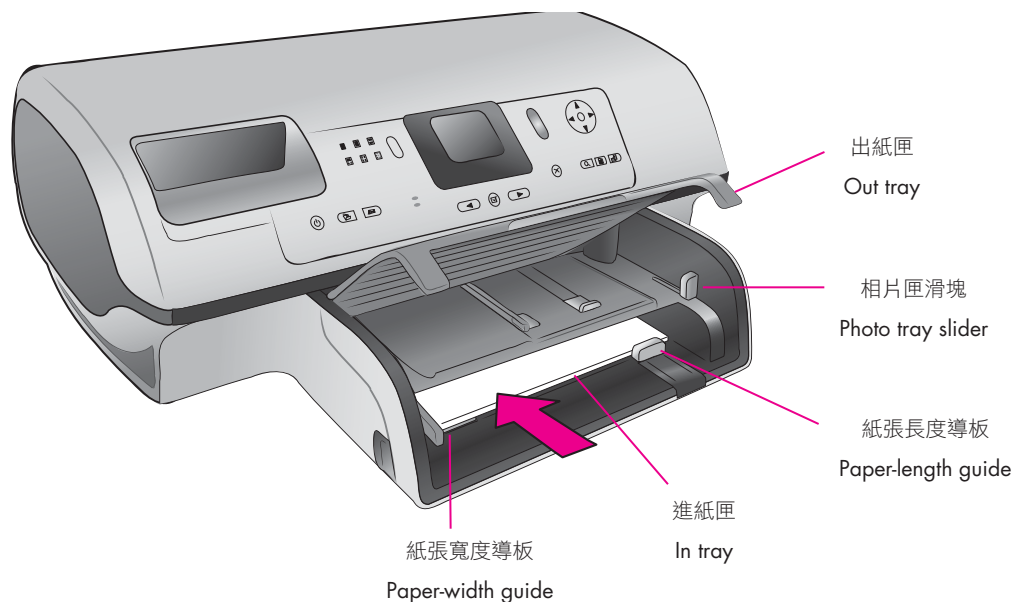

裝入一般紙張以校正列印墨匣。

1. 提起出紙匣。
2. 將進紙匣上的紙張長度導板拉出，並將紙張寬度導板滑到最左側。
3. 在進紙匣中放入一疊 Letter 尺寸的一般紙張（不超過 100 張）。
4. 調整紙張寬度導板與紙張長度導板，使其緊靠紙張邊緣但不會使紙張彎曲。
5. 放下出紙匣。
6. 請確定相片匣滑塊朝印表機前方拉出。這樣會拉開相片匣。

註：若要列印精美的 10x15 公分（4x6 英吋）相片，請使用相片匣。請參閱此手冊的第 12 頁或是《使用者手冊》以取得更多資訊。


Load plain paper to align the print cartridges.

1. Raise the Out tray.
2. Pull out the paper-length guide on the In tray and slide the paper-width guide as far to the left as it will go.
3. Place a stack of plain letter paper (no more than 100 sheets) in the In tray.
4. Adjust the paper-width guide and the paper-length guide to fit close to the edges of the paper without bending the paper.
5. Lower the Out tray.
6. Make sure the photo tray slider is pulled toward the front of the printer. This disengages the photo tray.

Note: To print beautiful 10x15 cm (4x6 inch) photos, use the Photo tray. See page 12 of this booklet or the User's Guide for more information.


4 安裝列印墨匣

Install the print cartridges

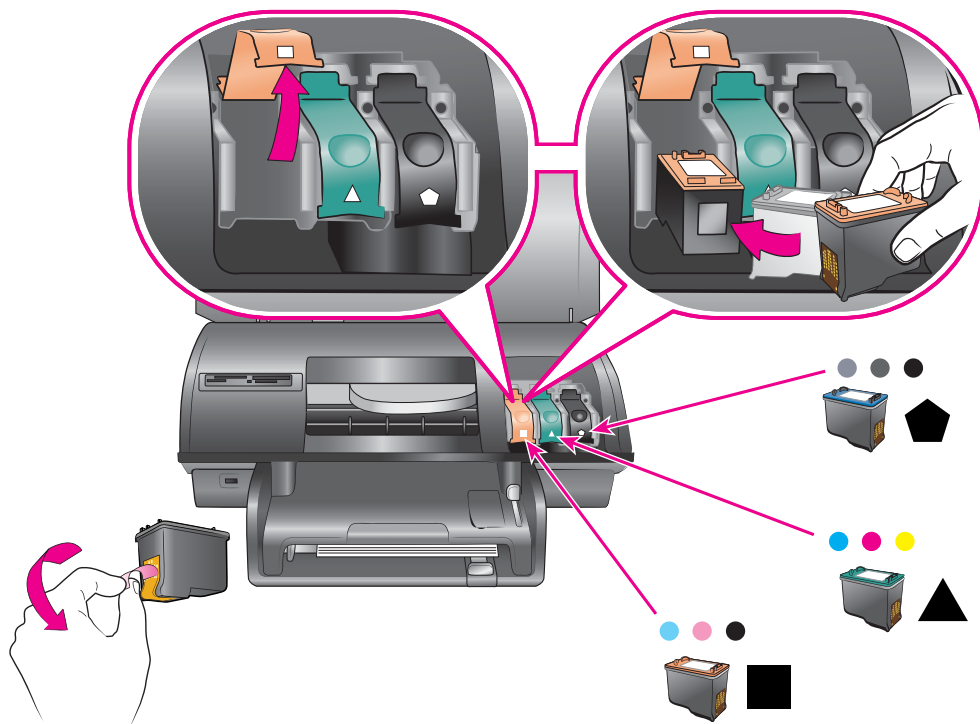

* 儲存選用的列印墨匣與護套。

* Store the optional print cartridge and protector.

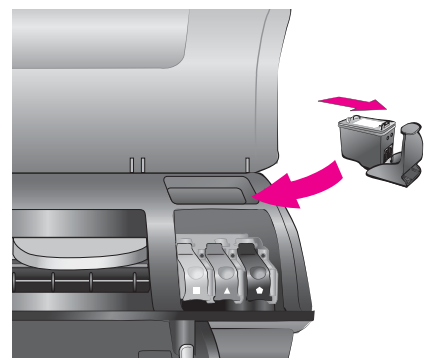

1. 提起頂蓋，接著下壓並拉出列印墨匣門鎖。
2. 打開相片列印墨匣，然後拉開粉紅色標籤以移除透明膠帶。
請勿碰觸墨水噴嘴或銅色接點。
3. 手持墨匣使銅接點先進入印表機。將墨匣滑入金屬桿下方托架的左側。將墨匣向內推，直到卡至定位。
4. 向下推壓墨匣門鎖，直到鎖住為止。
5. 重複此程序以安裝三色與灰色相片列印墨匣。
6. 放下頂蓋。當印表機螢幕提示您列印校正頁時，請按控制台上的「OK」。

* 將所有未使用的列印墨匣儲存於此。

您可以選購黑色列印墨匣。請閱讀此手冊的封底，找出最適用於您列印專案的墨匣。


1. Raise the top cover, then push down and pull out the print cartridge latch.
2. Unwrap the Photo print cartridge, then pull the pink tab to remove the clear tape. **Do not touch the ink nozzles or copper-colored contacts.**
3. Hold the cartridge so the copper-colored contacts go into the printer first. Slide the cartridge into the left side of the cradle under the metal bar. Push the cartridge until it snaps into place.
4. Push down on the cartridge latch until it locks.
5. Repeat this process to install the Tri-color and Gray Photo print cartridges.
6. Lower the top cover. Press **OK** on the control panel when the printer screen prompts you to print an alignment page.

* Store any unused print cartridge here.

You can purchase an optional Black print cartridge. Check the back cover of this booklet to find the best cartridges to use for your print projects.

安裝 HP Photosmart 軟體 (Windows)


Install the HP Photosmart software (Windows)

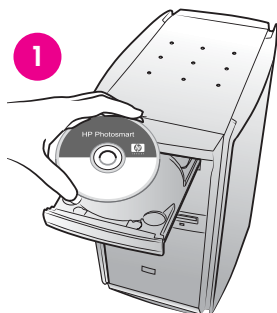

2



3

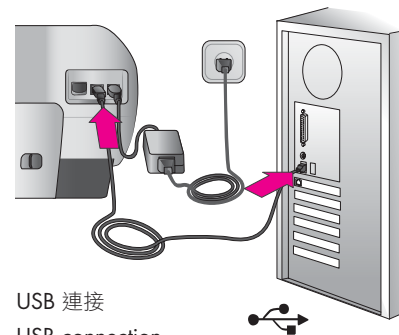

USB 連接
USB connection

僅限 Windows

僅限 USB 安裝

關於**網路安裝**，請依照《使用者手冊》中「網路連線」附錄的指示進行。

重要：未獲得提示前，請勿連接 USB 纜線。

「**典型安裝**」所提供的軟體可讓您檢視、編輯、管理與分享影像。若您的系統記憶體或硬碟空間有限，請僅選擇「**最小安裝**」。

1. 將 HP Photosmart CD 插入電腦並依照螢幕上的指示進行。若未顯示指示，請找出並連按兩下 CD 上的 **setup.exe** 檔案。

註：若出現「發現新硬體」的畫面（如下所示），請按一下「取消」，拔掉 USB 纜線並重新啟動安裝。



2. 選擇 USB 連接類型。
3. 出現提示時，使用 USB 纜線連接印表機與電腦。複製檔案可能需要數分鐘的時間，舊版的作業系統則需要更長的時間。
4. 出現「恭喜」頁時，請按一下「列印展示頁」。

註：安裝過程中若有任何問題，請參閱第 8 頁的疑難排解。

Windows only

USB Installation Only

For **Network installation**, follow the instructions in the Network appendix of the User's Guide.

Important: Do not connect the USB cable until prompted.

The **Typical** installation provides software to view, edit, manage, and share images. Only choose **Minimum** if you have limited system memory or hard drive space.


1. Insert the HP Photosmart CD into the computer and follow the onscreen instructions. If instructions do not appear, locate and double-click the **setup.exe** file on the CD.

Note: If the **Found New Hardware** screen (shown below) appears, click **Cancel**, unplug the USB cable, and restart the installation.



2. Choose USB connection type.
3. When prompted, connect the printer to the computer with the USB cable. It may take several minutes to copy files and possibly longer on older systems.
4. When the Congratulations page appears, click **Print a demo page**.

Note: If you experience problems during installation, see Troubleshooting on page 8.

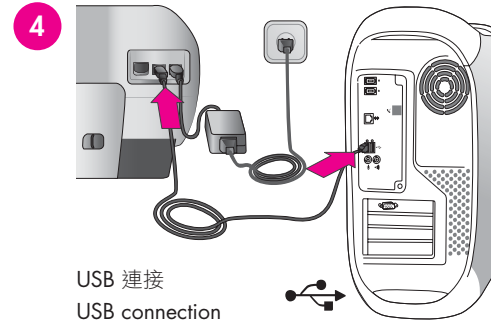

僅限 Macintosh

Macintosh only

僅限 USB 安裝

關於網路安裝，請依照《使用者手冊》中「網路」附錄的指示進行。

● **重要：**未獲得提示前，請勿連接 USB 纜線。

1. 將 HP Photosmart CD 插入電腦。
2. 連按兩下「HP Photosmart CD」圖示。
3. 連按兩下「HP Photosmart Install」（HP Photosmart 安裝）圖示。依照螢幕上的指示進行。
4. 出現提示時，使用 USB 纜線連接印表機與電腦。複製檔案可能需要數分鐘的時間，舊系統則可能需要更久的時間。
5. 在「Print」（列印）對話方塊中選擇印表機。如果在清單並未顯示該印表機，請選擇「Edit Printer List」（編輯印表機清單）以新增印表機。

註：安裝過程中若有任何問題，請參閱第 8 頁的疑難排解。

USB Installation Only

For **Network installation**, follow the instructions in the Network appendix of the User's Guide.

● **Important:** Do not connect the USB cable until prompted.

1. Insert the HP Photosmart CD into the computer.
2. Double-click the **HP Photosmart CD** icon.
3. Double-click the HP Photosmart Install icon. Follow the onscreen instructions.
4. When prompted, connect the printer and computer with the USB cable. It may take several minutes to copy files and possibly longer on older systems.
5. Select the printer in the Print dialog box. If the printer does not appear in the list, select **Edit Printer List** to add the printer.

Note: If you experience problems during installation, see Troubleshooting on page 8.

安裝疑難排解

Installation troubleshooting

若印表機軟體未成功地安裝，或軟體安裝後，印表機與電腦未正確連接，請閱讀此頁以取得可能的解決方案。若您仍需協助，請閱讀印表機文件或是聯絡客戶貼心服務。

請檢查印表機與電腦間所有纜線的連接情況，並確保您所安裝的印表機軟體是最新的版本。

Windows

問題：插入 CD 時，並沒有自動啟動安裝軟體。

解決方案：從 Windows「開始」功能表，選取「執行」。按一下「瀏覽」，並導覽至您已插入 HP Photosmart 軟體 CD 的 CD 光碟機。連按兩下 `setup.exe` 檔。

問題：若「發現新硬體精靈」開啟，但沒有識別出印表機，則您可能在完成軟體安裝之前，已經先將印表機接上 USB 纜線了。

解決方案：拔掉 USB 纜線並重新啟動軟體安裝。軟體安裝期間，請在出現提示後連接 USB 纜線。

問題：系統需求檢查指出，電腦目前所執行的是舊版的 Internet Explorer。

解決方案：按住鍵盤上的 **Ctrl + Shift** 並在「系統需求」對話方塊中按一下「取消」，略過限制並完成軟體安裝。您必須在安裝完成 HP Photosmart 軟體後立即升級 Internet Explorer，否則 HP 軟體將無法正常執行。**註：**Internet Explorer 完成升級後，您無須重新安裝 HP 軟體。

問題：軟體安裝期間，若電腦停止回應，可能是因為背景正在執行防毒軟體或其他軟體程式，減慢安裝作業速度。

解決方案：軟體完成複製檔案期間，請等待；這可能需要數分鐘的時間。若數分鐘後電腦仍無回應，請重新啟動電腦、暫停或停用任何使用中的防毒軟體、關閉所有其他的軟體程式，然後根據第 6 頁的指示，重新安裝印表機軟體。**註：**當您重新開機時，您的防毒軟體將會自動重新啟動。

Windows 與 Macintosh

問題：安裝期間若出現「系統需求」對話方塊，表示該電腦系統中的某一元件不符合最低系統需求。

解決方案：將該元件升級至符合最低系統需求，然後重新安裝印表機軟體。

問題：電腦無法讀取 HP Photosmart CD。

解決方案：請確定 CD 沒有弄髒或有刮痕。若其他 CD 可以運作，只有 HP Photosmart CD 無效，則表示該 CD 可能已經損壞。您可以從客戶貼心服務處要求一張新的 CD。如果其他 CD 也不能正常運作，則表示您需要維修 CD-ROM 光碟機。

If the printer software did not install successfully or if the printer and computer are not communicating properly after software installation, check this page for possible solutions. If you still need help, check the printer documentation or contact Customer Care.

Check all cable connections between the printer and computer, and ensure you are using the most recent version of the printer software.

Windows

Problem: The installation software does not start automatically when the CD is inserted.

Solution: From the Windows Start menu, select Run. Click Browse, and navigate to the CD drive where you inserted the HP Photosmart software CD. Double-click the setup.exe file.

Problem: If the Found New Hardware Wizard opens but doesn't recognize the printer, you may have connected the USB cable before completing the software installation.

Solution: Disconnect the USB cable and restart the software installation. Connect the USB cable when prompted during software installation.

Problem: The system requirements check indicates that the computer is running an outdated version of Internet Explorer.

Solution: Press **Ctrl + Shift** on the keyboard and click **Cancel** in the System Requirements dialog box to bypass the block and complete the software installation. You must update Internet Explorer immediately after installing the HP Photosmart software, or the HP software will not work properly. **Note:** You do not have to reinstall the HP software after updating Internet Explorer.

Problem: If the computer stops responding during software installation, it may mean that virus protection software or another software program is running in the background and slowing down the installation process.

Solution: Wait while the software finishes copying files; this may take several minutes. If, after several minutes, the computer is still not responding, restart the computer, pause or disable any active virus protection software, quit all other software programs, and then reinstall the printer software using the instructions on page 6. **Note:** Your virus protection software will turn back on automatically when you restart the computer.

Windows and Macintosh

Problem: If the System Requirements dialog box appears during installation, it means a component of the computer system does not meet minimum system requirements.

Solution: Upgrade the component to the minimum system requirement and then reinstall the printer software.

Problem: The computer could not read the HP Photosmart CD.

Solution: Make sure the CD isn't dirty or scratched. If other CDs work but the HP Photosmart CD does not, you may have a damaged CD. You can request a new CD from Customer Care. If other CDs don't work, you may need to service the CD-ROM drive.


列印您的第一張相片

Print your first photo



1 插入記憶卡

Insert a memory card

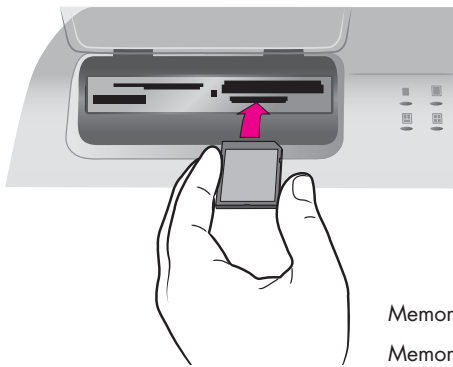

SmartMedia 或 xD-Picture Card
SmartMedia or xD-Picture Card

Microdrive 或 CompactFlash
Microdrive or CompactFlash

Memory Sticks
Memory Sticks



MultiMediaCard 或 Secure Digital
MultiMediaCard or Secure Digital

註：一次僅插入一張記憶卡到印表機。

1. 打開記憶卡插槽門。
2. 手持記憶卡，使正確的面朝上。如需更多有關使用記憶卡的資訊，請參閱《使用者手冊》。
3. 將記憶卡插入適當的記憶卡插槽。將記憶卡輕輕推入印表機，直到停止移動。

小心：記憶卡不會完全插入印表機。強行插入記憶卡可能會損壞記憶卡或印表機。

Note: Insert only one memory card into the printer at a time.


1. Raise the Memory Card door.
2. Hold the memory card so the correct side faces up. For more information about using memory cards, see the User's Guide.
3. Insert the memory card into the appropriate card slot. Gently push the memory card into the printer until it stops.

Caution: The memory card does not insert all the way into the printer. Forcing the memory card into the printer too far may damage the memory card or the printer.

2

選取要列印的相片

Select a photo to print

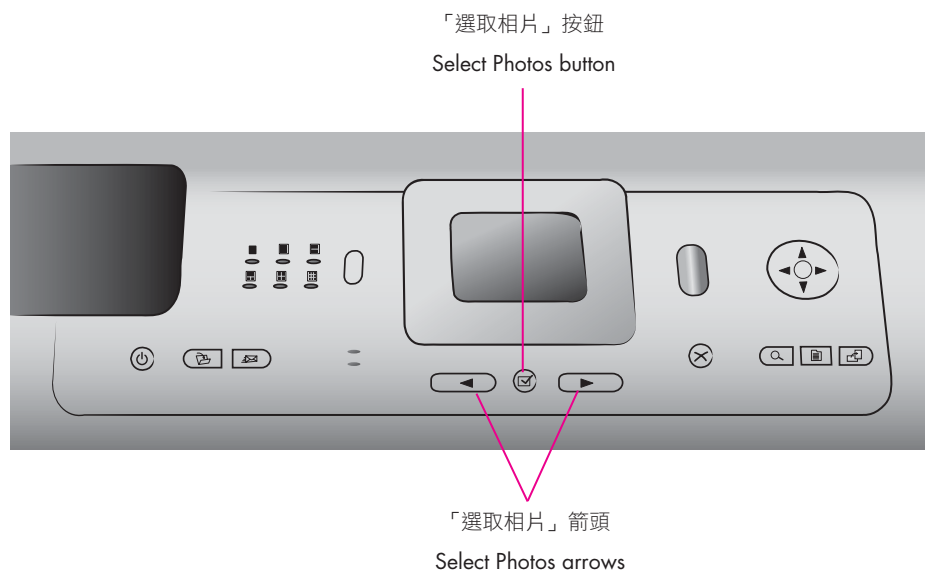



1. 請確定含有相片的記憶卡已插入正確的記憶卡插槽。
2. 按「選取相片」箭頭，導覽記憶卡上的相片。
3. 當印表機螢幕上顯示您要列印的相片時，按「選取相片」✓。

1. Make sure a memory card that contains photos is inserted into the correct memory card slot.
2. Press the **Select Photos** arrows to navigate through the photos on the memory card.
3. When the photo you want to print appears on the printer screen, press **Select Photos** ✓.

3

裝入 10x15 公分 (4x6 吋) 相紙

Load 10x15 cm (4x6 inch) photo paper

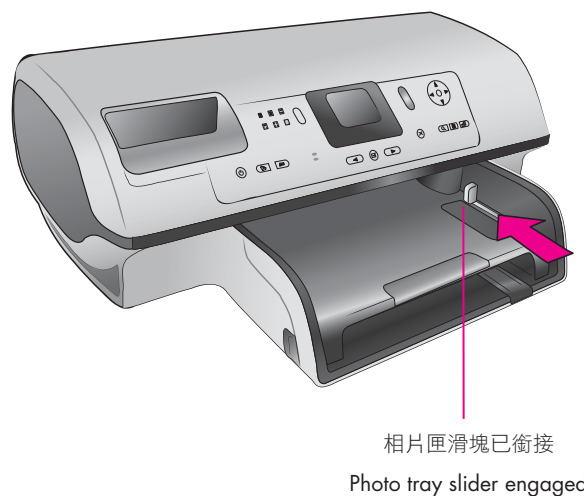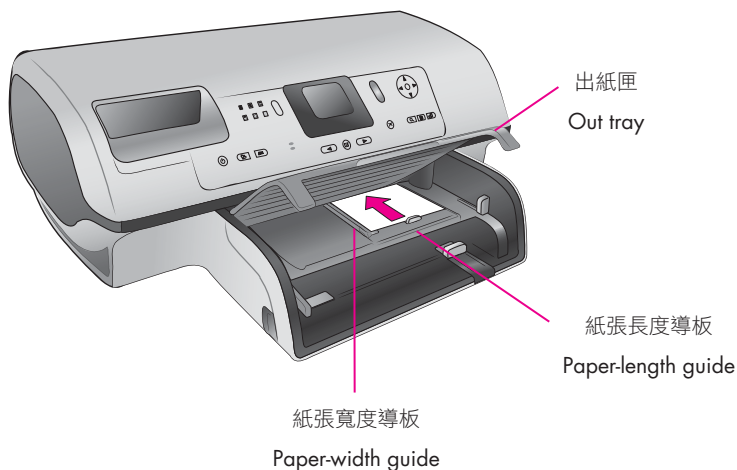


1. 提起出紙匣。
2. 按下「版面」按鈕以選取無框相片版面。
3. 將相片匣紙張長度導板拉出，並盡可能的將相片匣紙張寬度導板靠左側滑入。
4. 將列印面朝下，在相紙匣裡放入最多 20 張 10x15 公分 (4x6 英吋) 的相紙。
5. 調整相片匣紙張長度導板與紙張寬度導板，使其緊靠紙張邊緣但不會使紙張彎曲。
6. 將相片匣滑塊朝印表機背面推入，直到停止移動。此時，從相片匣視窗看過去，將會看不見相片匣。
7. 放下出紙匣。

1. Raise the Out tray.
2. Ensure that the photo tray slider is pulled away from the printer.
3. Pull out the Photo tray paper-length guide and slide the Photo tray paper-width guide as far to the left as it will go.
4. Place up to 20 sheets of 10x15 cm (4x6 inch) photo paper in the Photo tray so the **side to be printed on faces down**.
5. Adjust the Photo tray paper-length guide and paper-width guide to fit close to the edges of the paper without bending the paper.
6. Push the Photo tray slider toward the back of the printer until it stops. The Photo tray disappears from view in the Photo tray window.
7. Lower the Out tray.

4 列印無框相片

Print a borderless photo

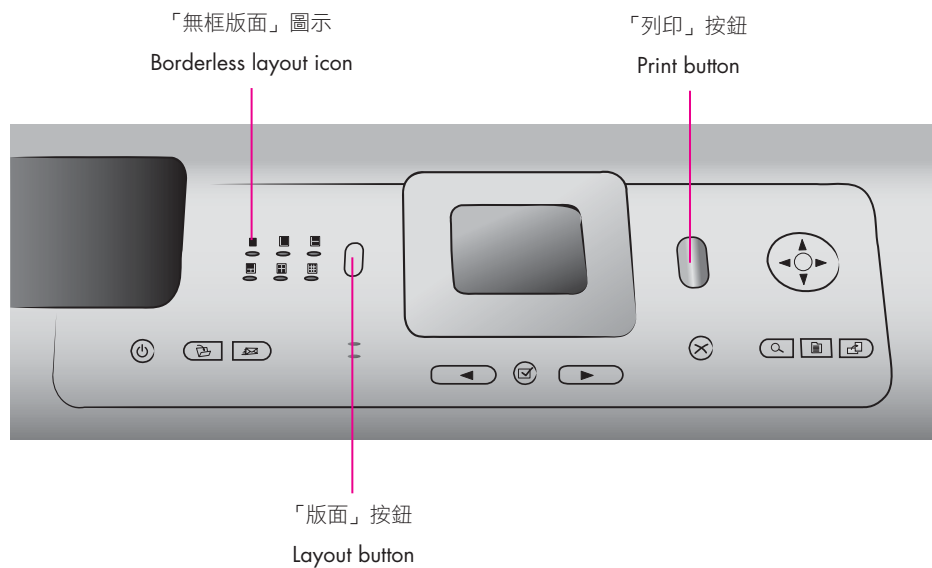

1. 請確定您要列印的相片出現在印表機螢幕上。
2. 按下「版面」按鈕以選取無框相片版面。
3. 按「列印」。

1. Make sure the photo you want to print appears on the printer screen.
2. Press the Layout button to select the borderless photo layout.
3. Press **Print**.


快速訣竅

Quick tips



無須電腦即可列印相片

Print photos without a computer

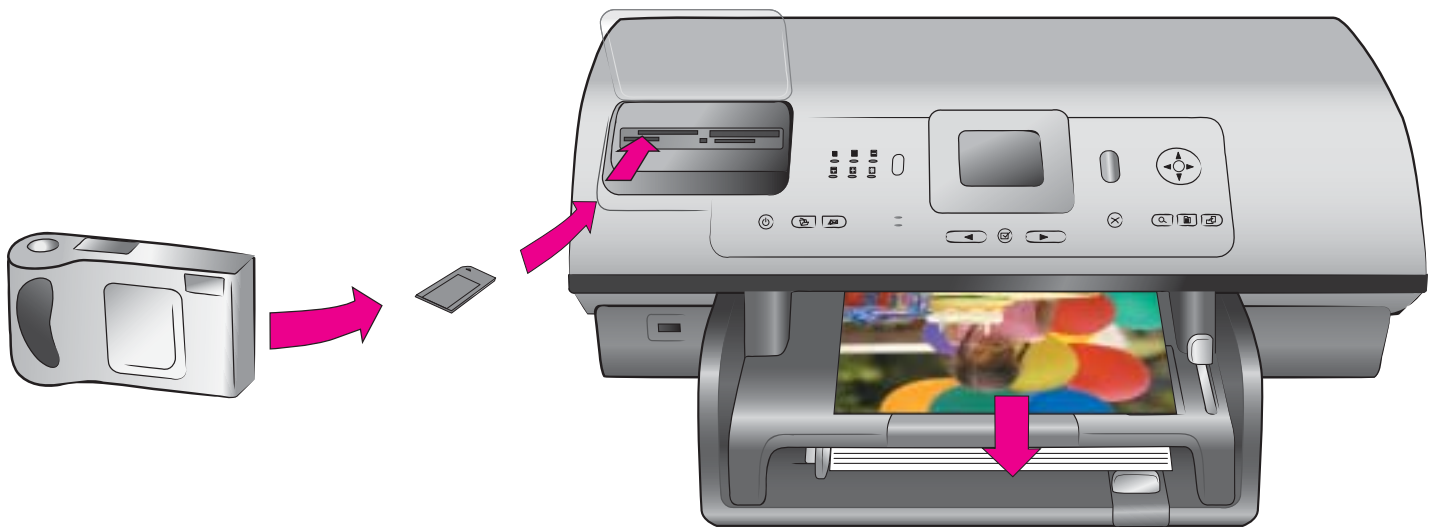

HP Photosmart 8400 series 印表機可讓您不需要使用電腦，即可從 HP 直接列印數位相機印出精美的相片。只要將記憶卡直接插到印表機上適當的卡片插槽中，在控制面板上確定您的選擇，然後列印相片即可。

如需更多有關無須電腦即可從數位相機或記憶卡列印相片的資訊，請參閱《使用者手冊》。

The HP Photosmart 8400 series printer allows you to print beautiful photos from an HP direct-printing digital camera without connecting to a computer. Simply insert a memory card directly into the appropriate card slot on the printer, make your selections on the control panel, then print the photo.

For more information about printing photos from a digital camera or memory card without using a computer, see the User's Guide.

利用電腦與 HP Image Zone 列印

Print with a computer and HP Image Zone



使用 HP Image Zone 軟體可激發您無限創造相片專案的可能性。

- 利用您的數位相片來設計日曆、小冊子以及傳單。
- 創造您自己的相簿與紀念品。
- 製作自創襯衫、CD 封面與相框。
- 使用 HP Instant Share 功能，透過電子郵件傳送相片，以及在線上分享相片。

如需更多有關自行創造有趣專案的資訊，請參閱 HP Image Zone 的線上說明。

註：HP Image Zone 軟體、HP Instant Share 按鈕功能與螢幕上的說明會在您選擇「典型安裝」HP Photosmart 印表機軟體時，自動完成安裝。

The possibilities are endless when you use HP's Image Zone software to create your photo projects.

- Design calendars, brochures, and flyers using your digital photos.
- Create your own photo albums and keepsakes.
- Craft custom T-shirts, CD covers, and picture frames.
- Use HP Instant Share to e-mail photos and to share photos online.

For more information about creating your own fun projects, see the HP Image Zone onscreen Help.

Note: HP Image Zone software, the HP Instant Share button feature, and onscreen help are installed automatically when you choose the Typical installation of the HP Photosmart printer software.


為您的專案安裝最優的列印墨匣

Install the best print cartridges for your project



三色、相片與灰色相片

Tri-color, Photo, and Gray Photo

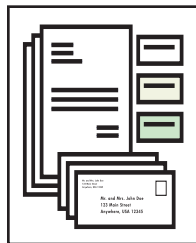

三色、相片與黑色

Tri-color, Photo, and Black



三色、相片與灰色相片

Tri-color, Photo, and Gray Photo




重要：未使用的墨匣請一律儲存在印表機隨附的列印墨匣護套中。

Important: Always store the unused cartridge in the print cartridge protector that came with the printer.

需要更詳細的資訊？

Need more information?

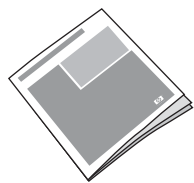

使用者手冊

User's Guide



線上 HP Photosmart 印表機說明

Onscreen Photosmart Printer Help



www.hp.com/support

www.hp.com



Q3388-90167



新加坡印製，2004 年 7 月 • v1.0.1 • 以再生紙印製
© 2004 Hewlett-Packard Development Company, L.P.
Printed in Singapore 07/04 • v1.0.1 • Printed on recycled paper
© 2004 Hewlett-Packard Development Company, L.P.



invent