



hp embedded web server

hp color LaserJet 9500mfphp LaserJet 9040mfp/9050mfp

HP Embedded Web Server

User Guide

Copyright

© 2004 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

EWS v. 8.0

Edition 2, 6/2004

Trademark Credits

Adobe® and PostScript® are trademarks of Adobe Systems Incorporated.

Microsoft® and Windows® are U.S. registered trademarks of Microsoft Corp.

ii ENWW

Contents

1 Overview	
What is an embedded Web server?	
Additional features with a permanent storage device	
HP Web Jetadmin and the HP Embedded Web Server	
System requirements	
Login and logoff	3
Navigating through the HP Embedded Web Server	5
2 Viewing product status from the Information screens	
Device Status	
Configuration Page	
Event Log	3
Usage Page	
Control Panel	
Print	
Printing a file from the Print screen18	2
3 Configuring the product from the Settings screens	
Configure Device	
E-mail Server	
Configuring outgoing e-mail	
Configuring incoming e-mail	
Using the Alerts screen with a product24	4
Sending e-mail commands to the product	
Security	1
Edit Other Links	
Removing a link	
Device Information	
Language	
Wake Time	
4 Setting the digital sending options	
General	
Send to E-mail	
Send to Fax	
Advanced Fax Settings46	

ENWW Contents iii

Activity LogPreferences	
5 Managing network operation from the Networking screen	
6 Using the Other Links as a resource	00
hp instant support How hp instant support works Information you can get from hp instant support Order Supplies Product Support My Service Provider and My Service Contract.	58 58 58 59

Index

iv Contents ENWW

Overview

What is an embedded Web server?

A Web server provides an environment in which Web programs can run, in much the same way that an operating system, such as Microsoft® Windows®, provides an environment in which programs can run on your computer. A Web browser, such as Microsoft Internet Explorer, Apple Safari, or Mozilla, can show output from a Web server.

An embedded Web server (EWS) resides on a hardware product (such as a printer) or in the firmware, rather than as software that is loaded on a network server.

The advantage of an embedded Web server is that it provides an interface to the product that anyone who has a network-connected computer and a standard Web browser can open and use. No special software needs to be installed or configured.

With the HP Embedded Web Server, you can view product status information, change settings, and manage the product at your computer.

Note

In this guide, the terms "product" and "device" are used interchangeably. When products or devices are discussed in this guide, the information pertains to HP LaserJet printers, HP Color LaserJet printers, and HP LaserJet MFPs, unless otherwise noted. For specific information about the features that your printer or multifunction peripheral (MFP) supports, see the documentation that came with your product.

Features

You can use the HP Embedded Web Server to view product and network status and to manage printing functions from your computer, rather than at the product control panel. With the HP Embedded Web Server, you can perform these tasks:

- View control-panel messages and product-status information.
- Determine the remaining life for all supplies and configure specific ordering information for supplies.
- Gain access to the product's technical support page.
- Gain access to specific support for recent product events.
- Add or customize links to other Web sites.
- View and change product configuration, such as tray configurations.
- View and change network configuration.
- View and print information pages, such as the Configuration page.
- Receive alerts about product events, such as when the product is low on supplies, through e-mail.
- Select the language in which to display the HP Embedded Web Server screens.
- Print to an HP product without having to install the product printer driver.
- Conserve energy by scheduling the product sleep delay so that the product will go into sleep mode after a period of time of not being used.
- Schedule wakeup times for each day so that the product has finished initializing and calibrating by the time it is to be used.
- Send product configuration and supplies usage information periodically to your service provider.

Additional features with a permanent storage device

If you have a permanent storage device installed in your product, such as a hard disk, you can view, set up, and retain additional information.

- Alerts. Set up four different destination lists, with up to 20 recipients on each of the four lists.
 (Without the permanent storage device, you can send alerts to only four e-mail addresses.)
- Other Links. Add up to five additional links to the Web sites of your choice. (Without the extra storage, you can add one additional link.)

A hard disk might be installed in your product, depending on the product model. If your product does not have a hard disk, you might be able to order one. For more information, see the user guide that came with your product, or go to:

http://www.hp.com/country/us/eng/othercountriesbuy.htm.

HP Web Jetadmin and the HP Embedded Web Server

HP Web Jetadmin is a Web-based system management tool that you can use with a Web browser. The HP Embedded Web Server and HP Web Jetadmin work together to meet all of your product-management needs. You can use the software to install and manage networked products effectively. Network administrators can manage networked products remotely, from practically anywhere.

The HP Embedded Web Server provides a simple, easy-to-use solution for one-to-one product management in environments that have a limited number of products. However, in environments that have several products, you might want to use HP Web Jetadmin to manage groups of products. With HP Web Jetadmin you can discover, manage, and configure multiple products simultaneously.

HP Web Jetadmin is available from HP online support (http://www.hp.com/go/webjetadmin).

2 Overview ENWW

System requirements

In order to use the HP Embedded Web Server, you must have the following components:

- A supported Web browser. EWS-supported Web browsers include (but are not limited to) the following:
 - Konqueror 3.0 or later
 - Microsoft Internet Explorer 6.0 or later
 - Mozilla 1.0 (and Mozilla derivatives)
 - · Netscape Navigator 6.2 or later
 - · Opera 7.0 or later
 - Safari 1.0 or later
- A transmission control protocol/Internet protocol- (TCP/IP-) based network connection.
- An HP Jetdirect print server (embedded or enhanced input/output [EIO]) installed in the product.

Opening the HP Embedded Web Server

Use the following procedure to open the HP Embedded Web Server.

Note

You cannot view the HP Embedded Web Server screens from outside of a firewall.

- Open a supported Web browser.
- 2 In the **Address** or **Go to** field, type the Internet protocol (IP) address that is assigned to the product (for example, http://192.168.1.1) or the host name (for example, npi[XXXXXX] or a configured host name such as http://www.[your_server].com).

If you do not know the IP address for the product, you can find it on the Configuration page. See the user guide that came with your product to see how to print a Configuration page at the control panel.

Login and logoff

The HP Embedded Web Server (EWS) has screens that can be used to view product information and change configuration options. The screens that appear, and the settings on them, vary according to how you gain access to the EWS: as a general user, an information technology (IT) administrator, or a service provider. These passwords can be customized by an IT administrator or a service provider.

In a password-protected HP Embedded Web Server, only the **Information** tab is available to users who do not log in by using the password. If no password has been set (which is the default), all of the tabs are visible.

If a password has been set, you must log on as an IT administrator or a service provider to gain access to the protected HP Embedded Web Server tabs (**Settings**, **Digital Sending**, and **Networking**).

Note

For information about changing passwords as an IT administrator, see "Security" on page 31. If you are a service provider, see your product service guide.

To log in as an administrator

Use the following procedure to log in to the HP EWS as an administrator.

1 After you open the EWS, click the **Log In** link in the upper-right corner of the screen.

The **Enter Network Password** dialog box appears, as shown in the following illustration. The appearance of the login screen might vary, depending on your operating system and browser.



2 Type admin for the user name, type your password, and then click **OK**.

To log off as an administrator

Use the following procedure to log off.

- 1 Click the **Log Off** link.
- 2 To complete the logoff, close the browser.

CAUTION

If you do not close the browser, the connection to the product EWS continues to run and could pose security risks.

4 Overview ENWW


Navigating through the HP Embedded Web Server

To navigate through the HP Embedded Web Server screens, click one of the tabs (such as **Information** or **Settings**), and then click one of the menus on the navigation bar that is located on the left side of the screen.

The following illustration and table provide information about the EWS screens.

Note

The appearance of the EWS screens might differ from the illustrations in this user guide, depending on the product features and the settings that your IT administrator has established.

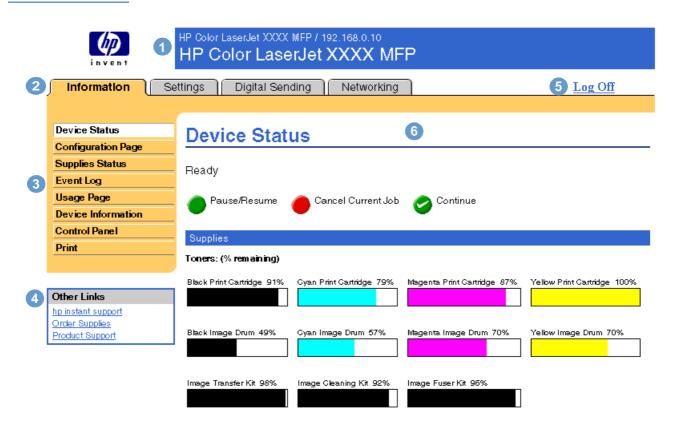

Callout	EWS screen feature	Description		More information
1	Product name and IP address	View the product name and Internet protocol (IP) address.		
2	Tabs	Information tab	View information about the product. You cannot configure the product using the screens on this tab.	See "Viewing product status from the Information screens" on page 7.
		Settings tab	Use the features on this tab to configure the product.	See "Configuring the product from the Settings screens" on page 19.
		Digital Sending tab	Use the features on this tab to configure the digital sending capabilities.	See "Setting the digital sending options" on page 39.
		Networking tab	View network status and configure the product network card.	See "Managing network operation from the Networking screens" on page 55.
3	Menus	Different on each tab	Click a tab to show the menus.	

Callout	EWS screen feature	Description		Мо	re information
4	Other Links	hp instant support	Connect to a set of Web resources that help solve problems and describe the additional services that are available for your HP product.	•	See "Using the Other Links as a resource" on page 57. See "hp instant support" on page 58. See "Product Support" on page 59.
		Order Supplies	Use the Internet to order genuine HP supplies for your HP product.	•	See "My Service Provider and My Service Contract" on page 59.
		Product Support	Use product-specific help from the HP Web site to solve a problem.		
5	Log In/Log Off	Different for each type of user	Log in as an IT administrator or service provider.	See	e "Login and logoff" on page 3.
6	Screen	Different on each menu	Click a menu to show a screen.	•	See "Viewing product status from the Information screens" on page 7.
				•	See "Configuring the product from the Settings screens" on page 19.
				•	See "Managing network operation from the Networking screens" on page 55.

6 Overview ENWW

Viewing product status from the Information screens

The Information screens are for informational purposes only; you cannot configure the product from these screens. To configure the product through the EWS, see "Configuring the product from the Settings screens" on page 19.

The following are the Information screens:

- Device Status (page 8)
- Configuration Page (page 10)
- Supplies Status (page 12)
- Event Log (page 13)
- Usage Page (page 14)
- Device Information (page 15)
- Control Panel (page 16)
- Print (page 17)


Note

Some products do not support all of these screens.

ENWW 7

Device Status

Use the Device Status screen to view the current status of the product. The following illustration and table describe how to use this screen.

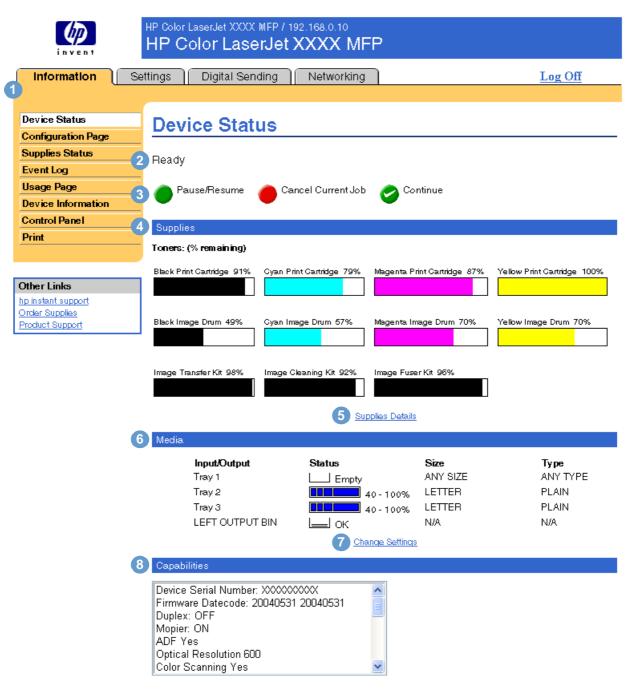


Callout	Area on the screen	Information or capability that the area provides
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.
2	Status	Shows the product status (the same information that appears on the control-panel display).
3	Control-panel buttons	Use these control-panel buttons just as you would at the product. To select which control-panel buttons appear on this screen, go to the Security screen on the Settings tab.
4	Supplies	Shows the percentage of life remaining for each supply.

Callout	Area on the screen	Information or capability that the area provides
5	Supplies Details	Opens the Supplies Status screen, where you can view information about product supplies.
6	Media	Shows the status and configuration information for the input trays and output bins.
7	Change Settings	Opens the Other Settings screen, where you can change the paper-type settings.
8	Capabilities	Lists components that are installed in the product.

ENWW Device Status 9

Configuration Page

Use the Configuration Page screen to view current product settings, help troubleshoot printer problems, and verify the installation of optional accessories such as dual inline memory modules (DIMMs) or paper-handling devices. The following illustration and table describe how to use this screen.

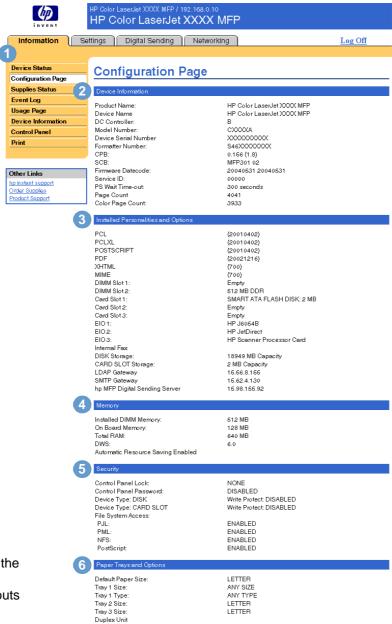


Note: See the table on the following page for descriptions of the callouts in this illustration.

Callout	Area on the screen	Information or capability that the area provides
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.
2	Printer Information	Lists the serial number, version numbers, and other information for the product.
3	Installed Personalities and Options	Lists all of the printer languages that are installed (such as printer command language [PCL] and PostScript® [PS]), and lists options that are installed in each DIMM slot and EIO slot.
4	Memory	Lists the memory information, PCL Driver Work Space (DWS), and resource saving information.
5	Security	Lists the status of the control-panel lock and disk write-protect options.
6	Paper Trays and Options	Lists the size and type of media that is specified for each of the trays in the product. If a duplexer or any paper-handling accessories are installed on the product, information about those devices is also listed here.

ENWW Configuration Page 11

Supplies Status

The Supplies Status screen shows more detailed supplies information and provides part numbers for genuine HP supplies. (It is helpful to have the part numbers available when ordering supplies.) The following illustration and table describe how to use this screen.

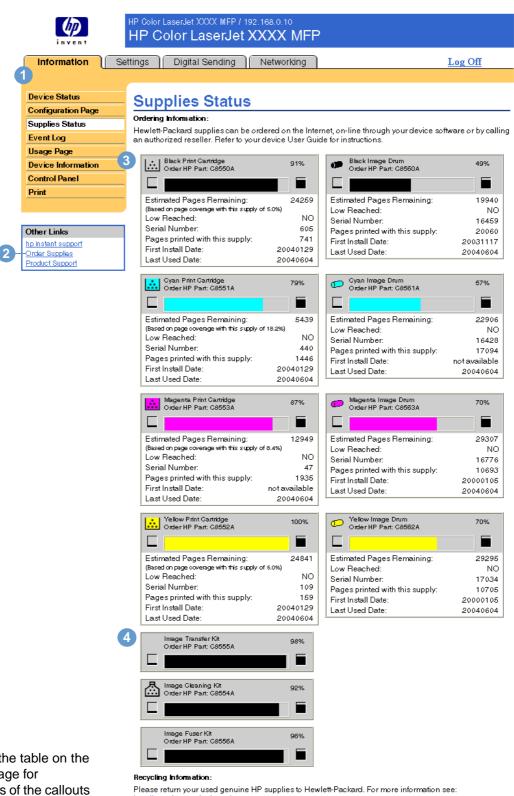


Note: See the table on the following page for descriptions of the callouts in this illustrations.

http://www.hp.com/go/recycle

Callout	Area on the screen	Information or capability that the area provides
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.
2	Order Supplies link	Use this feature to connect to a Web page that facilitates online ordering of supplies from a reseller of your choice.
3	Printer Cartridge and Image Drum Information	If available, this lists the percent of life remaining and the estimated number of pages remaining before the supply is empty; the total number of pages that have been processed with the supply; the supply serial number and HP part number; and an indication of whether or not the supply has reached the low status.
4	Long-Life Supplies Information	If available, this lists the percent of life remaining and the estimated number of pages remaining with the supply.

Event Log

The Event Log shows the most recent product events, including jams, service errors, and other printer errors. The following illustration and table describe how to use this screen.

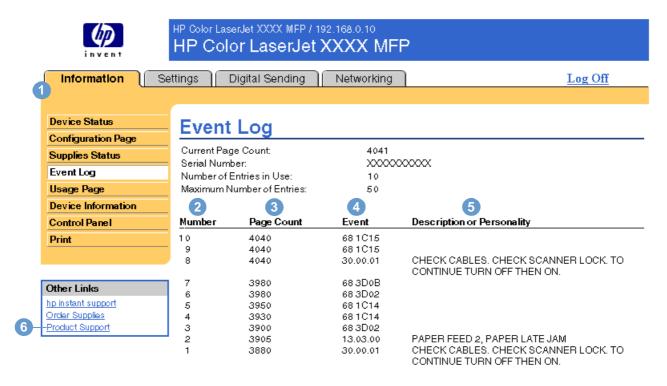


Callout	Area on the screen	Information or capability that the area provides
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.
2	Number	Lists the order in which the errors occurred. The last error to occur has the highest number.
3	Page Count	Lists the number of pages that had been printed from the product when the error occurred.
4	Event	Shows the internal event code for each event.
5	Description or Personality	Shows a brief description of some events.
6	Product Support link	Provides access to the HP support Web site for product-specific troubleshooting information.

ENWW Event Log 13

Usage Page

The Usage Page screen gives a page count for each size of media that has passed through the product, as well as the number of duplexed pages. The total is calculated by multiplying the sum of the print count values by the Units value.

The information on this screen can be used to determine how much toner or paper to keep on hand. The following illustration and table describe how to use this screen.

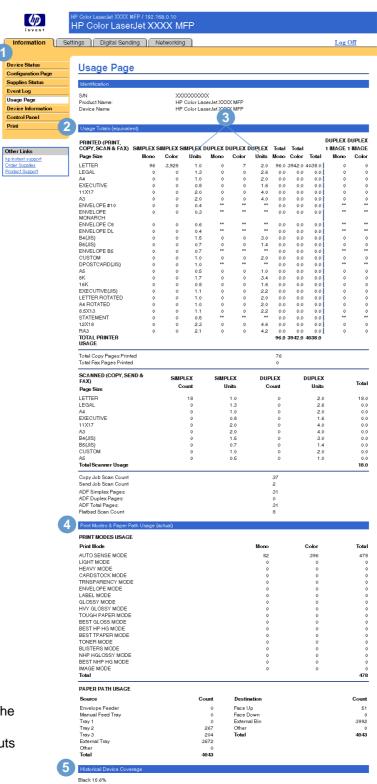

Note: See the table on the following page for descriptions of the callouts in this illustration.


Cyan 17.7% Magenta 22.3% Yellow 24.0%

Callout	Area on the screen	Information or capability that the area provides
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.
2	Usage Totals (equivalent)	Indicates the types of pages that have been printed, the number of single-sided pages that have been printed, the number of duplexed pages that have been printed, and the total number of pages that have been printed.
3	Units	A unit is equal to a standard A4-size (letter-size) page. All other page sizes are referenced in relation to this standard size. A A4-size (letter-size) page printed on both sides counts as 2 units.
4	Print Modes & Paper Path Usage (actual)	Indicates the different print modes that have been used for color and monochrome (black-and-white) print jobs.
5	Historical Printer Coverage	Indicates the average amount of toner that is used on each printed page.

Device Information

The Device Information screen shows the product name, asset number, company name, contact person, product location, and the product's IP address, name, model, and serial number.

The product name, asset number, company name, contact person, and product location can be configured from the Device Information screen, which is located on the **Settings** tab.

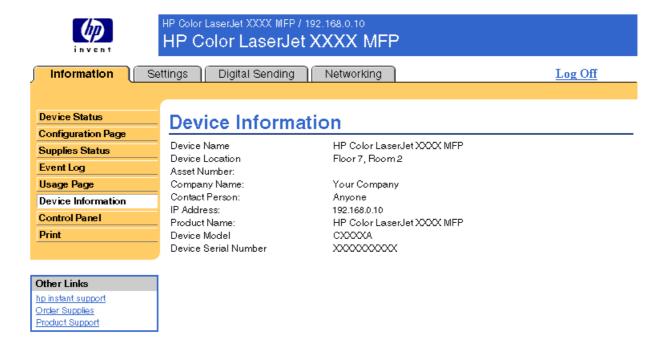


ENWW Device Information 15

Control Panel

For products that have a control panel, the Control Panel screen shows the product control-panel display as if you were standing at the product. Because this view shows the product status, it can help you troubleshoot problems with the product.

Note

The appearance of the screen might vary, depending on your product.

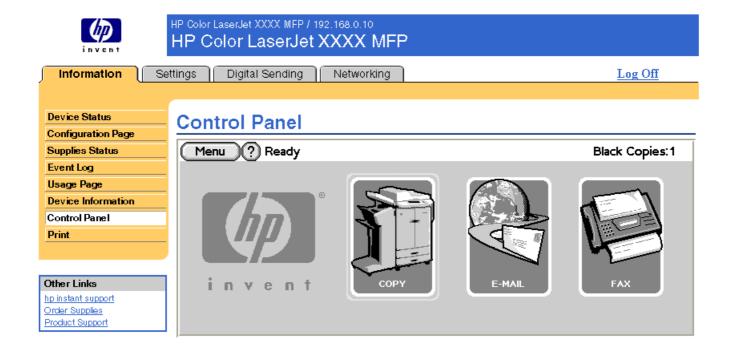

Print


You can use this screen to print one file at a time from a product that supports the HP Embedded Web Server. This feature is especially useful if you are a mobile user, because you do not have to install the product's printer driver in order to print—you can print anywhere at any time.

You can print print-ready files, such as documents that have been generated by using a "print to file" driver option. Print-ready files commonly have file name extensions such as .PRN (Windows Print Ready File), .PCL (Printer Control Language), .PS (PostScript), .PDF (Adobe Portable Document Format), and .TXT (text).

The following illustration and table describe how to use this screen.

Note

The Print screen (and the **Print** menu on the left) is available only if it has been configured to appear on the **Security** tab. For more information, see "Security" on page 31.

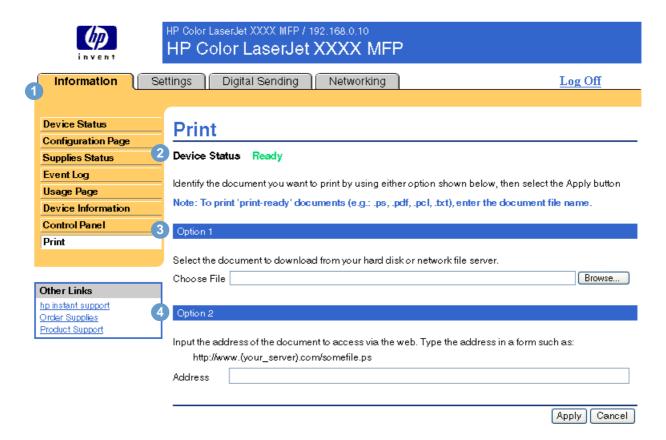

Callout	Area on screen	Information or capability that the area provides
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.
2	Device Status	Shows the product status (the same information that appears on the Device Status screen and the control-panel display).
3	Option 1	Prints a file that is located on your laptop, computer, or a network file server.
4	Option 2	Prints a file that you can gain access to over your intranet.

ENWW Print 17

Printing a file from the Print screen

Use the following steps to print a file from the Print screen.

- 1 Select the file that you want to print by using one of the following options:
 - Click the button under **Option 1** to browse to a file that you want to print.

-or-

- Type the address (beginning with "http://") in the **Address** field (under **Option 2**) to print a file that is available over your intranet.
- 2 Click Apply.

Configuring the product from the Settings screens

Use the screens on the **Settings** tab to configure the product from your computer. The following are the Settings screens:

- Configure Device (page 20)
- E-mail Server (page 21)
- Alerts (page 23)
- AutoSend (page 29)
- Security (page 31)
- Edit Other Links (page 32)
- Device Information (page 34)
- Language (page 35)
- Date & Time (page 36)
- Wake Time (page 37)

Note

Some products do not support all of these screens.


ENWW 19

Configure Device

You can use the Configure Device screen to print product information pages and configure the product remotely. The following illustration, table, and example procedure describe how to use this screen.

If your product has a control-panel display, these menus are similar to the menus that are available at your product control panel. Some of the product control-panel menus are not available from the HP Embedded Web Server.

See the documentation that came with your product for more information about the different menus that your product supports.

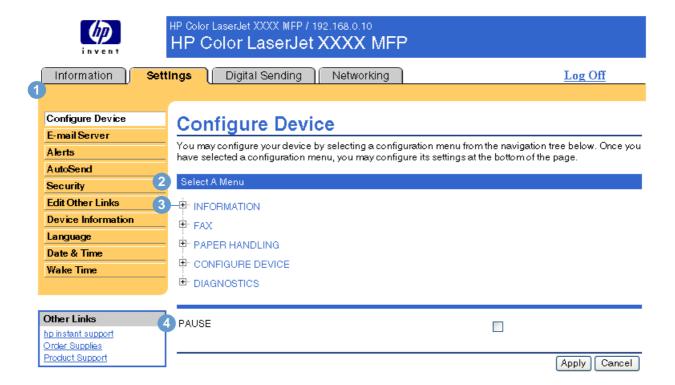

Callout	Area on the screen	Information or capability that the area provides	
1	EWS tabs and menus	For more information, see Server" on page 5.	e "Navigating through the HP Embedded Web
2	Select A Menu	INFORMATION menu	Print product information pages, which provide details about the product and its configuration.
		PAPER HANDLING menu	Set the type of media that is in each tray.
		menu	Configure the product to affect the product behavior. For example, you can configure product personality settings from this menu, such as print-quality settings or destination bins.
		DIAGNOSTICS menu	Print the event log, perform a paper-path test, configure the output bin and duplexing mode, and set the number of copies.
3	Plus sign	Click the plus sign (ℍ) next to a menu, or click the menu itself, to see the submenus or subentries.	
4	PAUSE	Select this check box to pause the printer.	

Using the menus on the Configure Device screen

The following procedure is provided *only* as an example. Similar procedures can be used to set other menu items.

Follow these steps to select a different default paper size (example procedure).

- 1 Click PAPER HANDLING.
- 2 Select Letter from the list, and then click Apply to save the change.


Note

Printer drivers and software programs frequently override selections that are made on the **Printing** menu and the **Paper Handling** menu. For more information, see the user guide that came with your product.

Any changes are reflected on the Printer Status screen, the Configuration Page screen, and the **Paper Handling** menu.

E-mail Server

Use the E-mail Server screen to configure e-mail settings for outgoing and incoming e-mail. Use the settings on this screen to send and receive e-mail messages, including product alerts. The following illustration, table, and procedures describe how to use this screen.

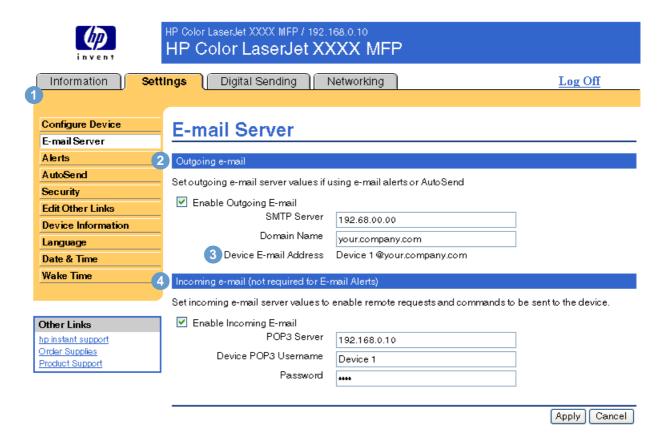

Callout	Area on the screen	Information or capability that the area provides	
EWS tabs and menus For more information, see "Navigating through the HF		For more information, see "Navigating through the HP Embedded Web	
		Server" on page 5.	
Outgoing e-mail Configure outgoing e-mail if you intend to use th		Configure outgoing e-mail if you intend to use the Alerts or AutoSend	
		features. For more information, see "Using the Alerts screen with a	
		product" on page 24.	

ENWW E-mail Server 21

Callout	Area on the screen	Information or capability that the area provides
3		This is the product's e-mail address that appears in product alerts. This is <i>not</i> the e-mail address that you want to use when sending commands to the product. See "Sending e-mail commands to the product" on page 28.
4		Configure incoming e-mail if you intend to request information pages from the product by using e-mail messages. For more information, see "Sending e-mail commands to the product" on page 28.

Configuring outgoing e-mail

You must configure outgoing e-mail if you intend to use the Alerts or AutoSend features.

- 1 Gather the following information. (Your organization's network or e-mail administrator typically provides the information that is required to configure outgoing mail.)
 - The IP address of the simple mail transfer protocol (SMTP) mail server on your network.
 The EWS uses the SMTP server IP address to relay e-mail messages to other computers.
 - The e-mail domain name suffix that is used to address e-mail messages within your organization.
- 2 Select the Enable Outgoing E-mail check box.
- 3 Type the SMTP server IP address in the SMTP Server text box.
- 4 Type the domain name, and then click **Apply** to save the changes.

Configuring incoming e-mail

You should configure incoming e-mail if you intend to request information pages from the product by using e-mail messages. For more information, see "Sending e-mail commands to the product" on page 28.

1 Establish a Post Office Protocol 3 (POP3) mailbox account for the product on a mail server within your organization's network.

Each POP3 account requires a username and a password. The username combined with the product's domain name (which is specified in the outgoing mail configuration) is the e-mail address for the product. For example, if the POP3 mailbox account username is "product" and the POP3 server is "hp.com", the product's e-mail address is "product@hp.com".

Note

Each product that is configured for incoming mail must have its own POP3 mailbox account on your network's e-mail server.

The POP3 mailbox accounts are typically configured by your organization's network or e-mail administrator.

- 2 Select the Enable Incoming E-mail check box.
- 3 Type the IP address of the POP3 mail server in the POP3 Server text box.
- **4** Type username and password for the product's mailbox account, and then click **Apply** to save the changes.

Alerts


From the Alerts screen, IT administrators can set up the product to send problem and status alerts to anyone through e-mail messages. When this function is configured, alerts are automatically triggered about supplies and paper-path status, as well as for service and advisory information. More than one individual can receive alerts, with each person receiving only specific alerts. For example, an administrative assistant might be responsible for ordering toner or fixing jams, and could receive advanced warning when toner is low or a jam occurs. Similarly, the long-life supplies might be handled by an external service provider, who could receive alerts about performing product maintenance, loading the front or rear stapler, and similar needs.

With a permanent storage device installed, such as a hard disk, you can create up to four different destination lists, with up to 20 recipients on each list. (Without the permanent storage device, you can send alerts to only four e-mail addresses.) The following example is for a product that has a permanent storage device installed. If a permanent storage device is installed, you can edit, test, and delete destinations and destination lists.

The following illustration, table, and procedures describe how to use this screen.

Note

In order for alerts to function, outgoing e-mail must be enabled. To enable outgoing mail, see "Configuring outgoing e-mail" on page 22.

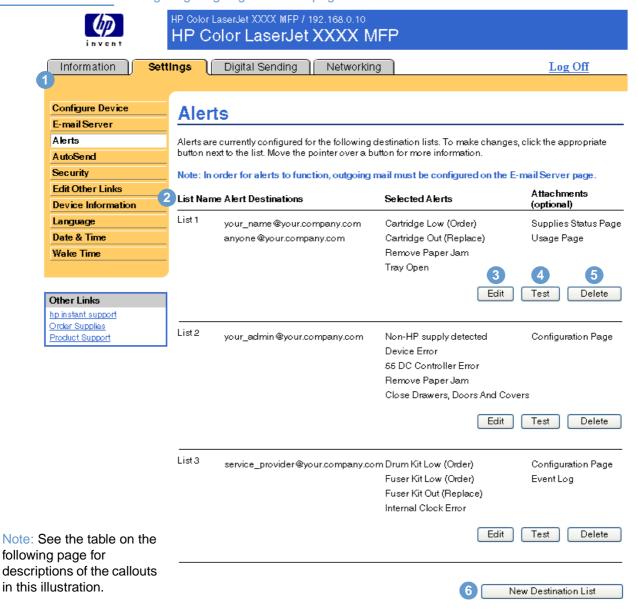

ENWW Alerts 23

Callout	Area on the screen	Information or capability that the area provides
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.
2	Destination list summary	Lists the current selections for each destination.
3	Edit	Click this button to make changes to the destination or destination list.
4	Test	Click this button to send a test alert to the destination or destination list.
5	Delete	Click this button to delete the destination or destination list.
6	New Destination List	Click this button to define the settings for a new destination list for alerts.

Using the Alerts screen with a product

This section contains information about these alerts features:


- "To configure alerts" on page 24
- "To test the configuration of a destination list" on page 27
- "To delete destinations and destination lists" on page 28

To configure alerts

With a permanent storage device installed, you can set up four different lists, with up to 20 recipients on each list. Without a permanent storage device, you have room for only four e-mail addresses.

- 1 Do one of the following:
 - To create a new destination list, click **New Destination List**.
 - -Or-
 - To modify an existing destination list, click **Edit** next to the list that you want to modify.

If a permanent storage device is installed, the screen that appears looks similar to the following illustration.

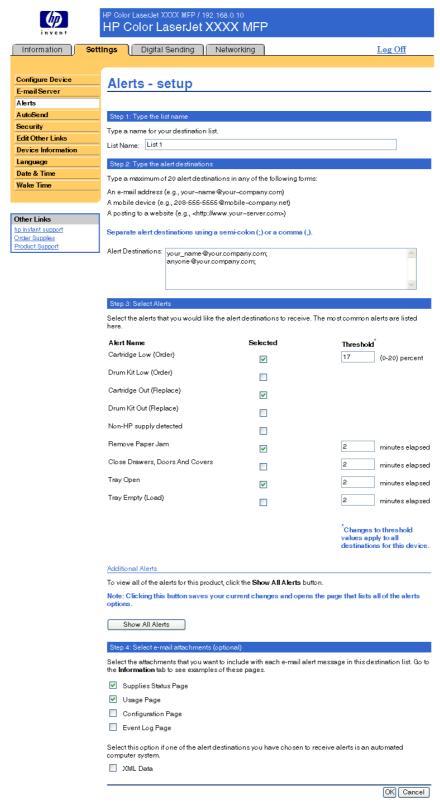

2 For products that have permanent storage devices installed, type a name in the **List Name** field, such as Service or Supplies. (If you do *not* have a permanent storage device, continue to step 3.)

ENWW Alerts 25

- Type the e-mail addresses for people who you want to receive alerts. In large environments, system administrators can route e-mail addresses to list servers, uniform resource locators (URLs), and mobile devices for expanded alerts. Add multiple destinations by separating each destination with a comma or semicolon.
- Select the check box for the alerts that you want to be sent with this destination list. (To see all of the alerts that are available for the product, click **Show All Alerts**.)
- Where applicable, set the threshold value for the individual alerts.
 - The threshold value for service alerts and for the paper-path alerts is a user-specified number of minutes. This is the amount of time that an event will be ignored before an e-mail alert message is sent. For example, you might want to set the threshold value for the "Tray Open" alert to 10 minutes to allow someone to close the tray after loading the tray or clearing a jam.
- Select the attachments that you want to be included with your e-mail alert messages. These attachments can include Supplies Status Page, Usage Page, Configuration Page, Event Log Page, and XML Data. (Go to the Information tab to see examples of the pages.) The XML Data option should be selected if one of the destinations you have chosen to receive alerts is an automated computer system. Each item that you select will be attached to the e-mail. For example, if you select Usage Page and Event Log Page, you will receive one e-mail message with two attachments, one for each selection. If you also select the XML Data option, you will receive one e-mail message with three attachments—one attachment for the Usage Page in HTML, one for the Event Log in HTML, and a third consisting of instant support information in a text file attachment that has an .XML extension.
- Click **Apply** to save the information.
- Repeat steps 1 through 7 for each additional list or destination.


Note	To test the configuration of a destination list, see "To test the configuration of a destination list"
	on page 27.

To test the configuration of a destination list

Use the following procedure to test the destination list configuration.

1 Click the **Test** button next to the destination list that you want to test.

The following window appears. (This illustration shows the screen from a system that has a permanent storage device installed. If no permanent storage device is installed, only one destination can be tested from this window.)

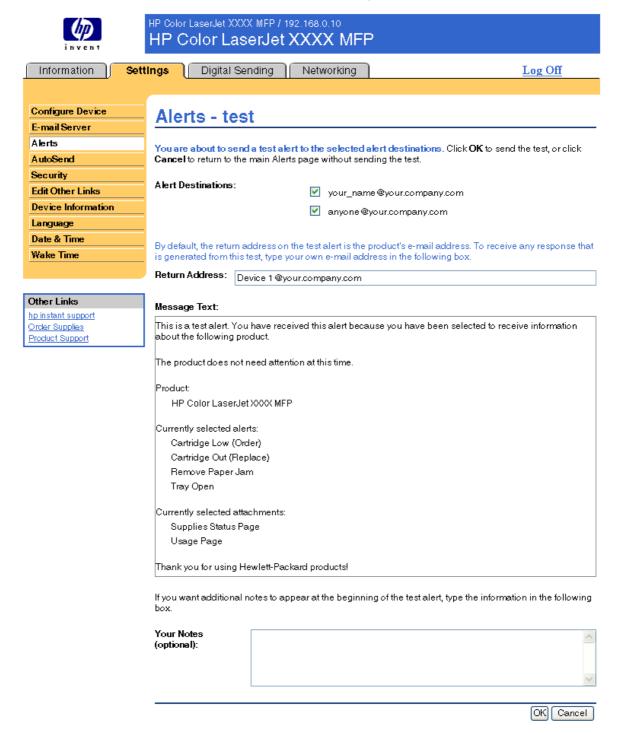

- 2 If you have a permanent storage device installed, select the destinations that you want to test.
- 3 The return address is the product's e-mail address. Type your e-mail address in the Return Address box if you would like to receive messages about any errors that are generated from the test alert (for example, to be notified of an incorrect destination address).

ENWW Alerts 27

- 4 If applicable, type additional information that you would like to appear at the beginning of the e-mail alert message in the **Your Notes (optional)** text field.
- 5 Click OK.

To delete destinations and destination lists

You can delete a destination or destination list by clicking the **Delete** button next to the destination or destination list that you want to delete. Click **OK** to confirm the deletion.

Sending e-mail commands to the product

Another method for receiving information pages is by requesting them from the product. When outgoing and incoming mail are configured, the product can attach information pages, such as the Supplies Status page or the Configuration page, to e-mail messages. You can use this feature to solve a problem or check the status of supplies.

To request information pages by using an e-mail message

When composing a message to the product, you must format the **To**, **From**, and **Subject** fields correctly in your e-mail program.

- 1 Make outgoing and incoming e-mail functions available by following the instructions that are listed in this chapter. (For more information, see "E-mail Server" on page 21.)
- **2** From your e-mail program, compose a message to the product by completing the following steps:
 - **a** In the **To** field, type the product's e-mail address. The username combined with the product's domain name (which is specified in the outgoing mail configuration) is the e-mail address for the product. For example, if the POP3 mailbox account username is "product" and the POP3 server is "hp.com", the product's e-mail address is "product@hp.com".
 - **b** Your e-mail program should automatically complete the **From** field with your return e-mail address.
 - c In the **Subject** field, type the appropriate text for the format and page that you would like to attach. You can request a Configuration page, a Supplies Status page, or an AutoSend page. For example, if you would like to attach the Configuration page in .HTML file format, type "this.configpage?configpage=email&format=html".

Page	HTML format	XML format
Configuration page	this.configpage?configPage =email&format=html	this.configpage?configPage =email&format=xml
Supplies Status page	this.configpage?suppliesPage =email&format=html	this.configpage?suppliesPage =email&format=xml
AutoSend page	not applicable	this.configpage?autosend =email&format=xml

3 Click Send.

The product checks for new e-mail messages once every 3 minutes. When the product receives the e-mail message, it generates a reply and sends the requested information back to the sender's e-mail address (as specified in the **From** field of the original e-mail message).

Note


Depending on delays in the network and your organization's mail server, a response might take from 1 minute to several hours to arrive in your e-mail program's Inbox.

If the **To**, **From**, and **Subject** fields are not correctly formatted in your e-mail message, the product does not send a message in response.

AutoSend

Use the AutoSend screen to send product-configuration and supplies-usage information periodically to your service provider. This feature establishes a relationship with Hewlett-Packard Company or another service provider to provide you with services that include, but are not limited to, toner replacement, pay-per-page contracts, support agreements, and usage tracking. The following illustration, table, and procedure describe how to use this screen.

With a permanent storage device installed, such as a hard disk, you can add up to twenty e-mail addresses. (Without the permanent storage device, you can add one e-mail address.) The following example is for a product that does have a permanent storage device installed.

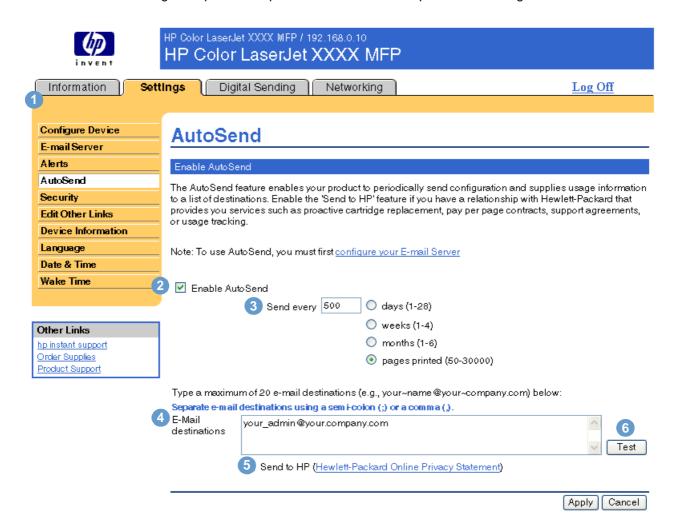

Callout	Area on the screen	Information or capability that the area provides
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.
2	Enable AutoSend	Select this check box to turn on the AutoSend feature.
3	Send every [interval]	Select the interval at which you want the product to send the product configuration and supplies usage information to the destinations that are configured in the E-Mail destinations field.
4	E-Mail destinations	Save a list of up to 20 e-mail addresses to receive the product-configuration information. Each e-mail address can be up to 50 characters long.

ENWW AutoSend 29

Callout	Area on the screen	Information or capability that the area provides
5	Send to HP	Select this check box to send device configuration and supplies status information to HP on a regular basis. The information will be sent to an HP e-mail address (for example, myprinter@hp.com) in a text-based file with an .XML file extension. This file will be created in English. To view more information about how HP treats the information that is sent by AutoSend, click Hewlett-Packard Online Privacy Statement.
6	Test	Click this button to save your settings and to send the information immediately, so that you can make sure that the recipient receives the messages.

To turn on the AutoSend feature

Use the following procedure to make the AutoSend feature available.

- 1 Make outgoing and incoming e-mail functions available by following the instructions that are listed in this chapter. (For more information, see "E-mail Server" on page 21.)
- 2 Select the Enable AutoSend check box.
- 3 Click an option to specify the interval at which you want the product to send the product-configuration and supplies-usage information to the e-mail recipients (determined in the next step), and then type the number of days, weeks, months, or pages printed.
- 4 For products with permanent storage devices installed, configure up to 20 destination e-mail addresses, using the format that appears on the screen. (If you do not have a permanent storage device, you can configure one e-mail address.)
- 5 To send device configuration and supplies status information to HP, select the Send to HP check box.
- 6 Click Apply.

Security

The following illustration and table describe how to use this screen.



Callout	Area on the screen	Information or capability that the area provides
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.
2	Set Password	Set an administrator password to control who can gain access to the EWS Settings , Digital Sending , Networking tabs. After the password has been set, users are prompted to type a password when they click the Log In link. For more information, see "Login and logoff" on page 3.
3	Print Page	Select to make the Print Page screen available in the Information tab.
4	Display On Device Status Page	Select the control-panel buttons that you want to appear on the Device Status screen (on the Information tab).


ENWW Security 31

Edit Other Links

Use the Edit Other Links screen to add or customize up to five links to the Web sites of your choice (see the following note). These links appear throughout the HP Embedded Web Server screens, in the **Other Links** box beneath the left navigational bar. Three permanent links (**hp instant support**, **Order Supplies**, and **Product Support**) have already been established. The following illustration, table, and procedures describe how to use this screen.

Note

With a permanent storage device installed, you can add up to five additional links; without the extra storage, you can add one additional link.

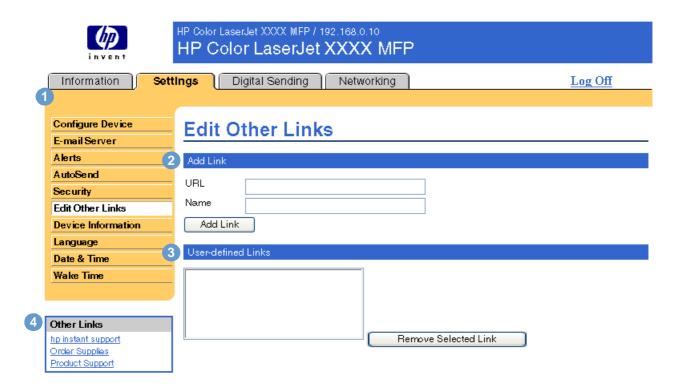

Callout	Area on the screen	Information or capability that the area provides	
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.	
2	Add Link	Add a user-defined link.	
3	User-defined Links	Lists the user-defined links that have been added. Use this area to delete links.	

Callout	Area on the screen	Information or capabi	lity that the area provides
4	Other Links	hp instant support	Connect to Web resources that help you to solve specific problems and determine what additional services are available for your product. (Detailed information, including serial number, error conditions, and status, is forwarded to HP Customer Care. Hewlett-Packard Company treats this information as confidential.)
		Order Supplies	Connect to a Web page that facilitates online ordering of supplies from a reseller of your choice.
		Product Support	Gain access to specific product help from the HP Web site.
		My Service Provider	Connect to the home page of your service provider. This link appears only if the service provider has configured it.
		My Service Contract	Connect to a page that shows the terms and limits of your service contract. This link appears only if the service provider has configured it.

Adding a link

Use this procedure to add a link.

- 1 Under **Add Link**, type the URL and the name of the link as you would like it to appear in the HP Embedded Web Server.
- 2 Click Add Link.

Removing a link


Use this procedure to remove a link.

- 1 Under **User-defined Links**, select the link or links that you would like to remove.
- 2 Click Remove Selected Link.

ENWW Edit Other Links 33

Device Information

Use the Device Information screen to provide a name of your choice for the product, assign an asset number, and configure the company name, the person to contact about the product, and the physical location of the product. The product IP address, product name, product model, and serial number are also available on this screen.

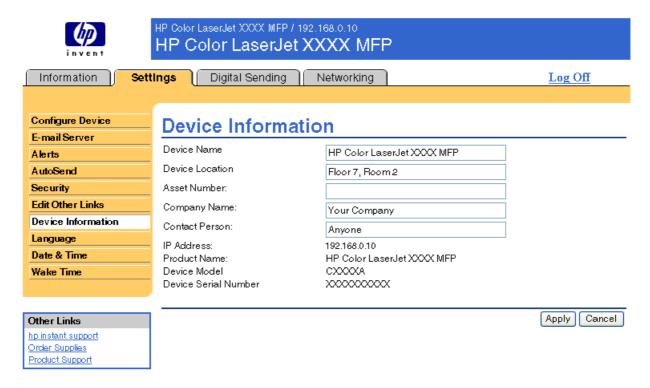


Note If you make any changes on the Device Information screen, click **Apply** to save the changes.

> The information that is typed here appears on the Device Information screen that can be opened from the Information tab. It also appears in e-mail messages that are sent from the product. This might be useful if you need to locate the product to replace supplies or fix a problem.

Language

Use the Language screen to select the language in which the HP Embedded Web Server screens appear. The following illustration and table describe how to use this screen.

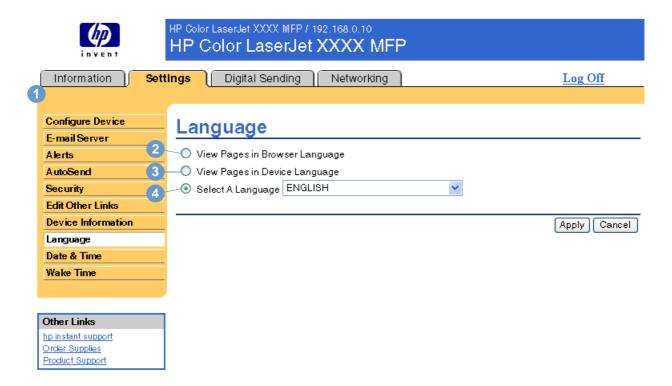

CAUTION

Selecting **View Pages in Printer Language** or **Select a Language** changes the language for everyone who uses the HP Embedded Web Server.

Callout	Area on the screen	Information or capability that the area provides	
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.	
2	View Pages in Browser Language (this is the default)	Use this feature to detect which language is selected for your Web browser. The HP Embedded Web Server screens appear in the same language.	
3	View Pages in Printer Language	Use this feature to detect which language is selected for the product control panel. The HP Embedded Web Server screen appear in the same language.	
4	Select A Language	Select the language for the HP Embedded Web Server screens from these choices: • English • Dansk (Danish)	
		 Francais (French) Deutsch (German) Italiano (Italian) Español (Spanish) Svenska (Swedish) Norsk (Norwegian) Nederlands (Dutch) Suomi (Finnish) Português (Portuguese) 	

Note


The default language is the language that the Web browser is currently using. If your browser and control panel both use a language that is not available for the HP Embedded Web Server, English is selected as the default.

If you make any changes on the Language screen, click Apply to save your changes.

ENWW Language 35

Date & Time


Use the Date & Time screen to update the product time. The following illustration and table describe how to use this screen.

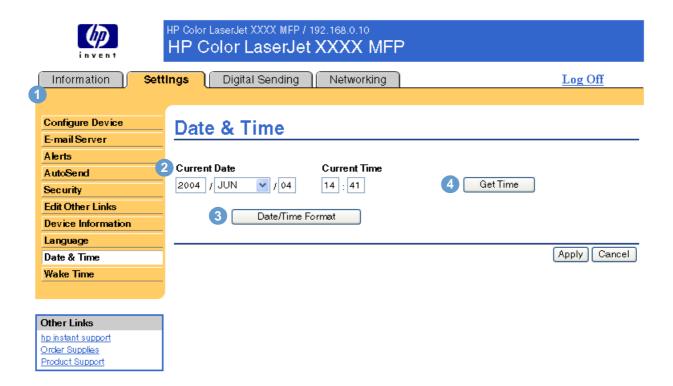

Callout	Area on the screen	Information or capability that the area provides
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.
2	Current Date and Current Time	Shows the product date and time when the EWS was opened. If either is incorrect, an IT administrator can change the information at the product control panel.
3	Date/Time Format	Click this button to open a screen where you can select the date and time format.
4	Get Time	Click this button to update the product date and time on the screen.

Wake Time

An IT administrator can use the Wake Time screen to schedule product wakeups on a daily basis. For example, the product can be set to wake up at 07:30, so the product has finished initializing and calibrating and is ready to use by 08:00. The administrator only sets one wakeup setting per day; however, each day can have a different wakeup setting. Additionally, to save energy, the sleep delay can be set to turn the product off after a specific period of inactivity.

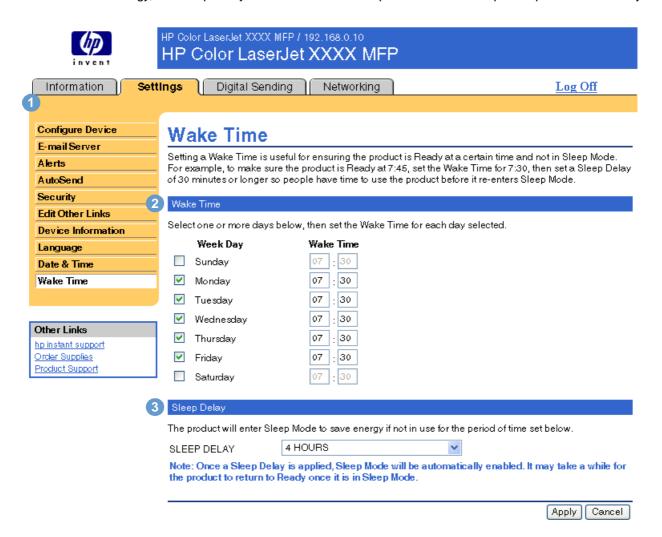

Callout	Area on the screen	Information or capability that the area provides
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.
2	Wake Time	Select one or more days on which to use the wakeup setting, and then set the time the product is turned on each day.
3	Sleep Delay	Set the amount of time the product is idle before it goes into Sleep Mode. When the product is in Sleep Mode, it uses less energy.

ENWW Wake Time 37

4 Setting the digital sending options

Administrators can use the Digital Sending screens to control the digital-sending features that some products offer. The following are the Digital Sending screens:

- General (page 40)
- Send to E-mail (page 41)
- Send to Fax (page 44)
- Addressing (page 48)
- Address Book (page 51)
- Activity Log (page 52)
- Preferences (page 53)


Note

Some products do not support all of these screens.

ENWW 39

General


Use the General screen to set digital-sending administrator information. The following illustration and table describe how to use this screen.

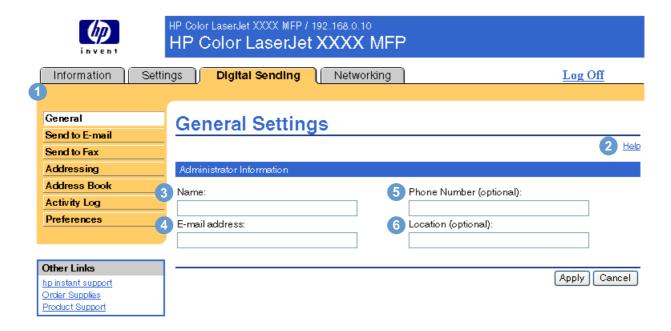

Callout	Area on the screen	Information or capability that the area provides
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.
2	Help	Click to open a help file that contains information about the screens on the Digital Sending tab.
3	Name	Type the administrator's name.
4	E-mail Address	Type the administrator's e-mail address.
5	Phone Number (optional)	Type the administrator's phone number (optional).
6	Location (optional)	Type the administrator's location (optional).

Send to E-mail

The product requires a Simple Mail Protocol Transfer (SMTP) Gateway server to forward e-mail messages to destination e-mail addresses. Use the Send to E-mail screen to configure SMTP settings, set the maximum e-mail attachment size, and set the default e-mail address for the product. You can also set a default subject for all e-mail messages that the product sends. The following illustration and table describe how to use this screen.

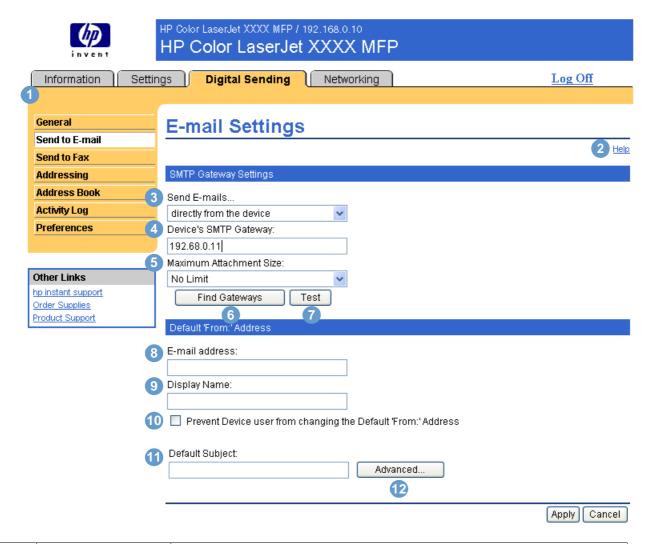


Callout	Area on the screen	Information or capability that the area provides	
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.	
2	Help	Click to open a help file that contains information about the screens on the Digital Sending tab.	
3	Send E-mails	Send e-mail messages to the SMTP Gateway server directly from the product.	
4	Device's SMTP Gateway	Type the IP address or the host name of the SMTP Gateway server that will manage the e-mail requests from the product. If you do not know the IP address or the host name of the SMTP Gateway, click the Find Gateways button to search the network for a suitable SMTP Gateway server.	
		Note Some products only recognize IP addresses. In such cases, host names will be converted to the equivalent IP address.	

ENWW Send to E-mail 41

Callout	Area on the screen	Information or capability that the area provides	
5	Maximum Attachment Size	Select the maximum size of e-mail attachments that the SMTP Gateway server can transmit. If the product needs to send an e-mail attachment that is larger than the maximum size that is specified, the attachment is broken into smaller files, which are sent in multiple e-mail messages.	
6	Find Gateways	If you do not know the IP address or the host name of the SMTP Gateway, click this button to search the network for a suitable SMTP Gateway server.	
7	Test	Click this button to verify that the specified SMTP Gateway server is valid and operational.	
8	E-mail address	Type the e-mail address of the person who will act as the default sender.	
9	Display Name	Type the name that you want to appear in the "From" field for the e-mail messages that are sent from the product. You can also use this field to include instructions, such as "Please type your e-mail address here." Note If a name is not provided, the e-mail address that was typed in the E-mail Address field will appear in the "From" field of	
		outgoing e-mail messages.	
10	Prevent Device user from changing the Default 'From:' Address	Select this check box to ensure that general users cannot change the e-mail address that the administrator set.	
1	Default Subject	If you want to, type the subject that will appear on all e-mail messages the product sends. You can also use this field to include instructions, such as "Please type a subject for your message."	
12	Advanced	Click this button to open a new screen that you can use to set message text and attachment settings for e-mail messages that the product sends. For more information, see "Advanced E-mail Settings" on page 43.	

Advanced E-mail Settings

The following illustration and table describe how to use this screen.

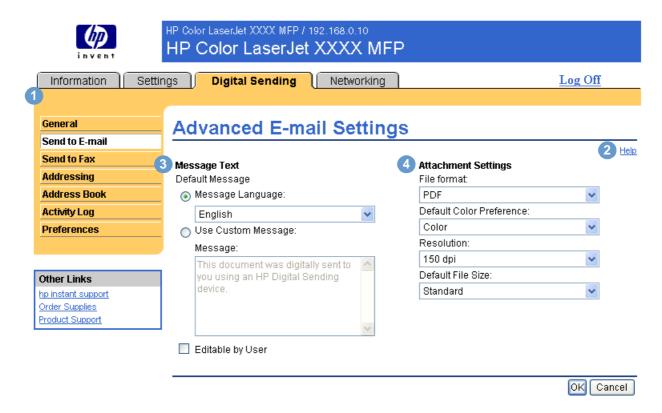


Callout	Area on the screen	Information or capability that the area provides
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.
2	Help	Click to open a help file that contains information about the screens on the Digital Sending tab.
3	Message Text	Modify how the message text will appear in the body of all e-mail messages that are sent from the product.
4	Attachment Settings	Select the default settings for attachments sent in e-mail messages that are sent from the product.

ENWW Send to E-mail 43

Send to Fax

The product can send scanned documents to a fax number to simulate the sending capabilities of a fax machine. If the product is equipped with a fax modem, it can also be set up to process incoming faxes.

Use the Send to Fax screen to configure the Send-to-Fax features for the product. The following illustration and table describe how to use this screen.

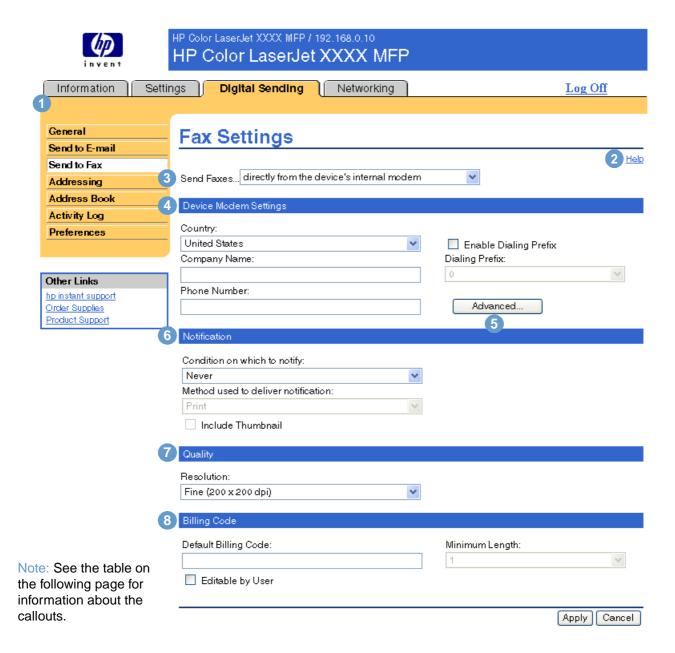


Callout	Area on the screen	Information or capability that the area	provides
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.	
2	Help	Click to open a help file that contains information about the screens on the Digital Sending tab.	
3	Send Faxes	directly from the device's internal modem	this option is selected, you must select or type the following information: The country/region
			The company name
			The phone number to which the internal modem of the product is connected
			 If applicable, any prefix number that your phone system requires
		via the Digital Sending service	Send faxes by using the digital sending software service (the settings on this screen).
4	Device Modem Settings	Type these settings if directly from the device's internal modem is selected from the Send Faxes list.	
5	Advanced	Click this button to open a new screen where settings, such as modem and ringer volume, screen, you can also print a fax activity log ar settings. For more information, see "Advance"	and send and receive settings. From this nd gain access to security and diagnostics
6	Notification	Set the notification options, such as whether a notification will be sent, whether the notification will be printed, or whether the sender should receive a notification report. Select the language for the notification report. The languages that are available are the same languages that are available on the Language screen of the Settings tab.	
7	Quality	Select the resolution for the outgoing faxes.	
8	Billing Code	Type the billing code, if applicable. If you want to, you can select the Editable by User check box to allow the user to change the code. Use the Minimum Length field to set the minimum length of the billing code. The billing code can be a value between 1 and 16.	

ENWW Send to Fax 45

Advanced Fax Settings

The following illustration and table describe how to use this screen.

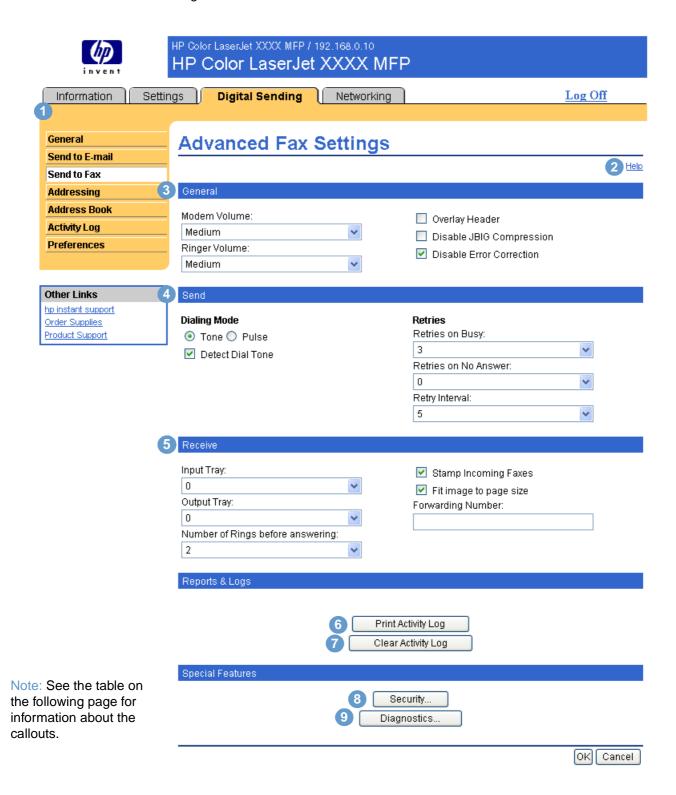


Callout	Area on the screen	Information or capability that the area provides
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.
2	Help	Click to open a help file that contains information about the screens on the Digital Sending tab.
3	General	Select the general settings, such as modem and ringer volume and whether to turn JBIG compression and Error Correction on or off. You can also select whether or not to overlay the header (phone number, time, and date), so that it covers only a small part of the top of the page.
4	Send	Select the settings for faxes that are sent from the product, such as dial tone and how many times you want the product to retry if the receiving fax line is busy or does not answer.
5	Receive	Select the settings for received faxes, such as which output bin the faxes are to be delivered, if you want incoming faxes to be scaled to the size of paper in the input tray, and the number of a another fax product to which incoming faxes can be forwarded.
6	Print Activity Log	Click this button to print the internal modem's fax activity log. The activity log lists all incoming and outgoing fax calls since the log was last cleared and is printed to the product.
7	Clear Activity Log	Click this button to clear all entries in the fax activity log. HP recommends printing the fax activity log periodically for record-keeping purposes, and then clearing the fax activity log to keep its size to a minimum.
8	Security	Click this button to set the security features for the internal modem. The first time you configure the security features, you are asked to type (and confirm) a Security PIN. Thereafter, you will need that PIN to view and reconfigure the security features.
9	Diagnostics	Click this button to set the diagnostic features of the internal modem.

ENWW Send to Fax 47

Addressing

In order for the product to send scanned documents, you must provide e-mail addresses. The product addressing feature simplifies this process by searching for destination e-mail addresses.

Use the Addressing screen to set features that allow the product to get e-mail addresses directly from the database of a Lightweight Directory Access Protocol (LDAP) server instead of from a replicated LDAP Address Book. Using the LDAP Address Book directly guarantees that the latest addresses are used. The following illustration and table describe how to use this screen.

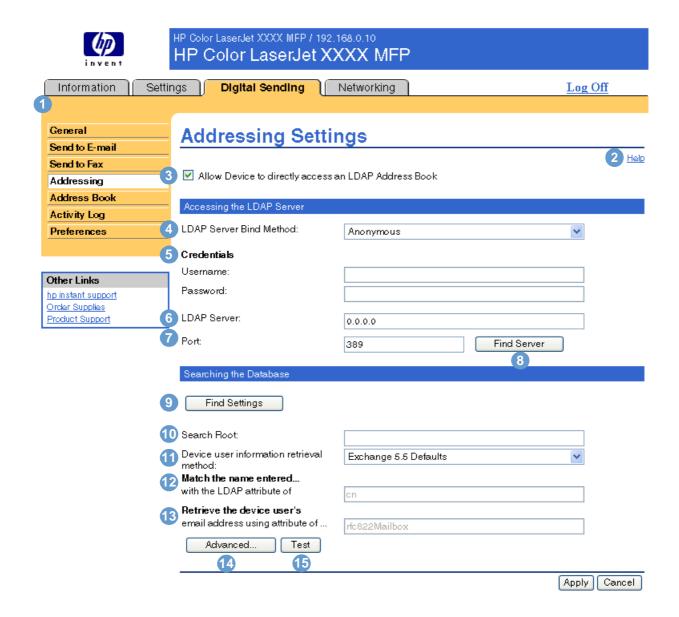

Callout	Area on the screen	Information or capability that the area provides
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.
2	Help	Click to open a help file that contains information about the screens on the Digital Sending tab.
3	Allow Device to directly access an LDAP Address Book	Select this check box to provide the product direct access to an LDAP Address Book.


Callout	Area on the screen	Information or capability that the area provides			
4	LDAP Server Bind Method	Anonymous Simple	Select this option to connect to the LDAP server if the LDAP server does not require user credentials to access the LDAP database. Select this option to connect to the LDAP server if the LDAP server requires user credentials to use the LDAP database. When this option is selected, you must enter the user, password, and domain. Note that the password will be sent across the network un-encrypted.		
		NTLM Select this option to connect to the LDAP if the LDAP server requires user credent use the LDAP database. This option sup NT Challenge Response. When this option is selected, you must e user, password, and domain.			
			Note This option is not available for all products.		
5	Credentials	Specify these settings if Simple or NTLM is selected from the LDAP Server Bind Method list.			
6	LDAP Server	Type the host name or IP address of the LDAP server whose database contain the centralized address book.			
		Note Some products only recognize IP addresses. In such cases, host names are converted to the equivalent IP address.			
7	Port	Type the TCP/IP port number on which the server is processing LDAP requests. This is typically port 389.			
8	Find Server	Click this button to sea	rch for available LDAP servers.		
9	Find Settings		te the product attempt to determine the best settings for then searching the LDAP database.		
10	Search Root	Type the Distinguished Name (DN) of the entry in the LDAP directory structure where address searching is to begin. A DN is made up of "attribute=value" pairs, separated by commas. For example: ou=departmentname, o=companyname, c=country ou=marketing, o=Hewlett Packard, c=US o=hp.com ou=engineering, cn=users, dc=hp, dc=com Note For some LDAP servers, the search root can be left blank			
1	Device user information retrieval method	Exchange 5.5 Default	(in which case its root node will be assumed). Select this option if you are connecting to a Microsoft Exchange 5.5 server that is running LDAP. The LDAP attribute values are automatically set.		
		Active Directory Defa	-		
		Custom	Select this option if you need to manually configure the LDAP attribute values.		

ENWW Addressing 49

Callout	Area on the screen	Information or capability that the area provides
12	Match the name entered with the LDAP attribute of	Type the attribute in the LDAP database that identifies a person in the address book. The value of this attribute will be compared to the name that the user types in order to retrieve the person's e-mail address. The following are a few possible LDAP attributes: uid: User Identifier cn: Common Name sn: Surname (Last Name) givenName: First Name
13	Retrieval the device user's e-mail address using attribute of	Type the LDAP attribute that contains the person's e-mail address. The following are two of the possible LDAP attributes: rfc822Mailbox mail
14	Advanced	Click this button to open a new screen where you can set advanced LDAP server features. For more information, see "Advanced Addressing Settings" on page 50.
15	Test	Click this button to test the settings that you specified.

Advanced Addressing Settings

The following illustration and table describe how to use this screen.

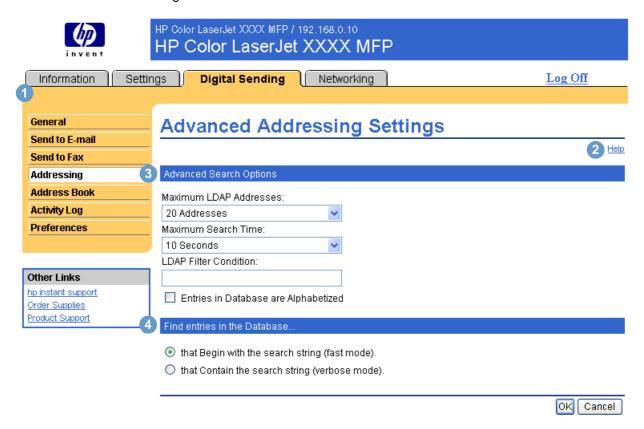

Callout	Area on the screen	Information or capability that the area provides
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.
2	Help	Click to open a help file that contains information about the screens on the Digital Sending tab.
3	Advanced Search Options	Select the advanced LDAP server search settings.
4	Find entries in the Database	Select whether the LDAP search queries include entries that begin with the partial name or all entries that contain the partial name anywhere within the entry's name.

Address Book


Use the Address Book screen to add a predefined list of e-mail addresses, in the form of a Comma-Separated Value (.CVS) file, to be imported into the product internal address book. The .CSV file is a plain-text file (in UTF-8 encoding) that contains each e-mail address entry on a separate line. An entry consists of an alias, which is the name that appears, followed by a comma and an e-mail address. The aliases and e-mail addresses cannot contain any commas. The following are examples.

name1, name1@your.company.com

name2, name2@your.company.com

At the product, use the alias name to search for e-mail addresses.

The following illustration and table describe how to use this screen.

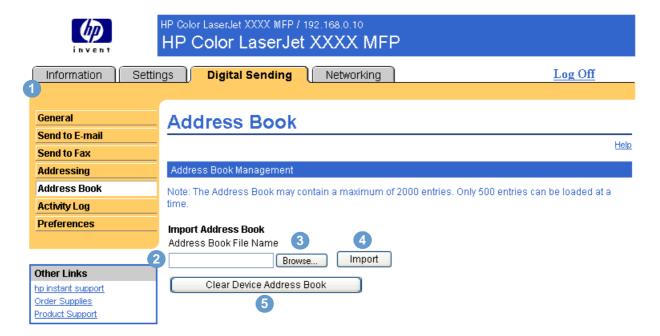


Callout	Area on the screen	Information or capability that the area provides
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.
2	Address Book File Name	Use this field for the path of the .CSV address book file.
3	Button used to browse for a file	Click this button to find the .CSV address book file.
4	Import	After the path of the .CSV file appears in the Address Book File Name field, click this button to import the address book into the product internal address book.
5	Clear Device Address Book	Click this button to clear the contents of the product's internal address book.

ENWW Address Book 51

Activity Log


Use the Activity Log screen to view digital sending job information, including any errors that occur. The following illustration and table describe how to use this screen.

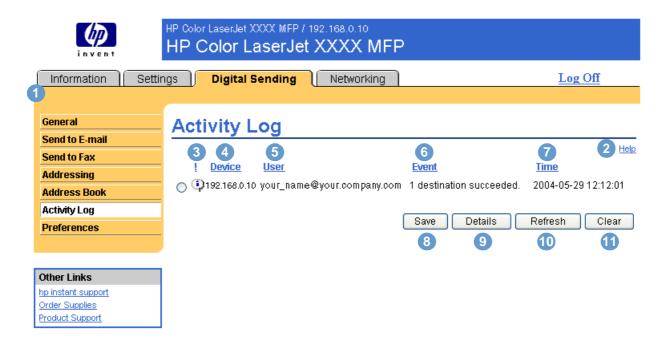

Callout	Area on the screen	Information or capability that the area provides			
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.			
2	Help	Click to open a help file that contains information about the screens on the Digital Sending tab.			
3	Severity	Lists the severity of the	error, if applicable, for each log entry.		
4	Device	Lists the IP address of	the product.		
5	User	Lists the user that initia	Lists the user that initiated the event.		
6	Event	Describes if the event was successful or if an error occurred.			
7	Time	Shows the time for each log entry.			
8	Save	Click this button to save the log information to a file.			
9	Details	Select the log entry and then click the Details button to view the log entry details.			
10	Refresh	Click this button to update the view to include the latest log information.			
1	Clear	Click this button to clear the information from the log.			
		Note	This only clears the log that appears onscreen. The log entries remain on the product for job-accounting purposes.		

Preferences

Use the Preferences screen to configure general settings for the digital-sending features. The following illustration and table describe how to use this screen.

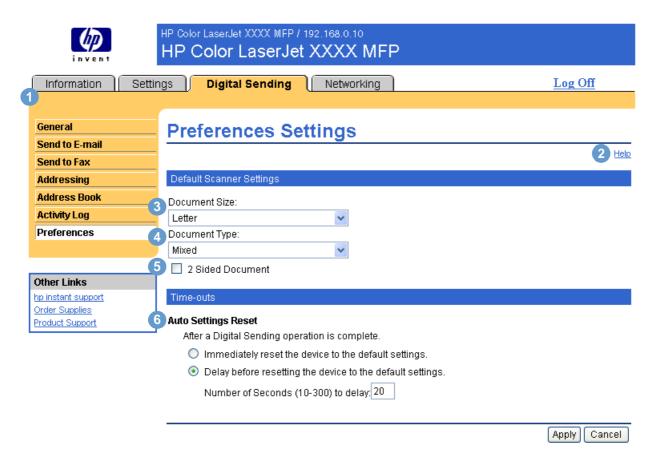


Callout	Area on screen	Information or capability that the area provides
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.
2	Help	Click to open a help file that contains information about the screens on the Digital Sending tab.
3	Document Size	Select the default media size that you want the product scanner to use when scanning a document.
4	Document type	Select the default media type that you want the product image processor to use when scanning a document. Text
		GraphicsMixed
5	2 Sided Document	Select this check box to have the product scan both sides of a document.
6	Auto Settings Reset	Use the Time-outs options to reset all digital sending settings that are associated with a job to the product default settings. You can have the settings reset immediately after a digital-send operation in which the settings have been changed by a user, or to delay the reset for any interval from 10 to 300 seconds.

ENWW Preferences 53

Managing network operation from the Networking screens

Overview

Use the Networking screens to configure and manage your product on your network. The appearance and features of the Networking screens differ depending on the model and version of your HP Jetdirect print server. The following screen is similar to what you might see when you click **Networking**. From the left navigational bar, click the **Networking** menu for the screen that you want to view.

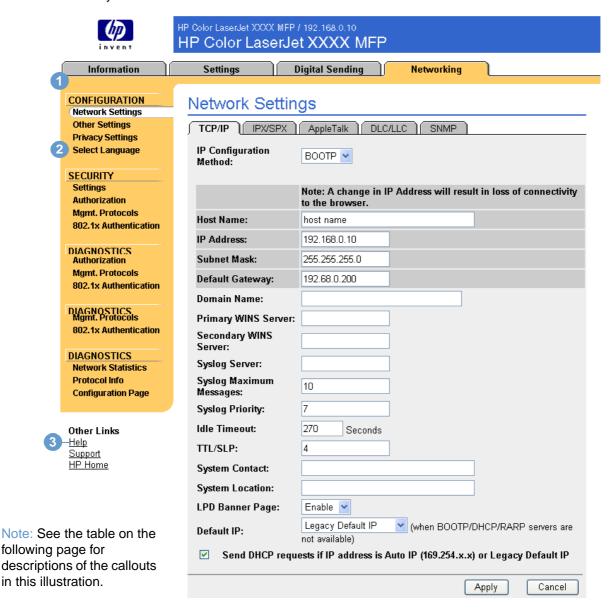

ENWW Overview 55

Callout	Area on screen	Information or capability that the area provides
1	EWS tabs and menus	For more information, see "Navigating through the HP Embedded Web Server" on page 5.
2	Select Language	Select the language for the Networking tab. The list of languages that are available in the Networking tab is <i>not</i> identical to the list of languages that are available in the Settings tab.
3	Help	Click Help for more information about the options on the Networking tab.

Depending on your HP Jetdirect print server model and operating version, the following are some tasks that you can perform from the Networking screens:


- Change network configuration settings for various types of network connections.
- Turn on or turn off printing protocols.
- Set up a support contact and support URLs.
- Set a password to control access to the printer and network configuration settings.
- Configure the security of your product through the use of passwords, access lists, and management protocols.
- View general network status information, including network statistics that are stored on the print server, for network troubleshooting or optimization.
- View protocol information for all supported network connections.
- Open the HP Jetdirect Configuration page.
- Set the frequency at which the HP Embedded Web Server checks the network status.

For more information about the Networking screens, see the following sources:

- Help. On each Networking screen, a Help link under Other Links provides a description of the networking features and helpful tips for using them. Also, from the Help screen you can gain access to additional help from the HP Web site.
- HP Jetdirect Print Server Administrator's Guide. This guide is normally available on the software CD that came with your product. To download the most recent version of the guide for your print server model, go to: http://www.hp.com/support/net_printing.

Using the Other Links as a resource

The **Other Links** box contains three permanent links that provide quick access to product-specific information, such as interactive troubleshooting and ordering information for genuine HP supplies.

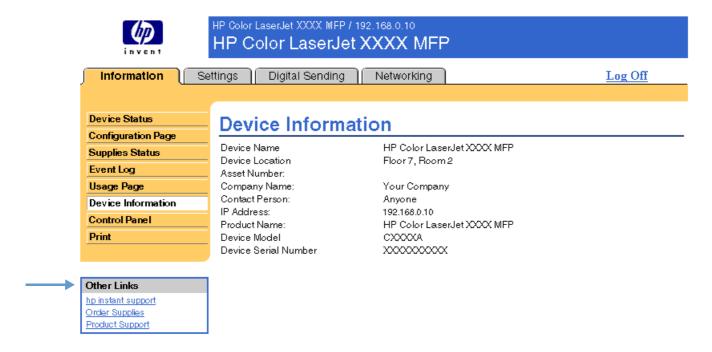

Note

You can use the Edit Other Links screen on the **Settings** tab to add up to five customized links to the Web sites of your choice. (With a permanent storage device installed, you can add up to five additional links; without the extra storage, you can add one additional link.) These links appear throughout the EWS screens, in the **Other Links** box beneath the left navigational bar. For more information, see "Edit Other Links" on page 32.

ENWW 57

hp instant support

Hewlett-Packard Company offers hp instant support, an Internet-based support system that collects diagnostic information from your product and matches it with the HP information database. At hp instant support, you can find intelligent solutions that help you resolve problems quickly and easily.

How hp instant support works

Information is gathered from your product and securely transmitted to Hewlett-Packard Company when you click hp instant support. The hp instant support Web site reads the product data to analyze the product's current status. The Web site creates a customized Web page that appears in the browser window and contains easy-to-follow text and visual aids. The hp instant support Web site also directs you to additional services that are available for your product.

Before any of the product data is sent to Hewlett-Packard for analysis, you can view all of the information (for example, the serial number, error conditions, and product status) that will be forwarded. Hewlett-Packard treats this information as confidential.

Information you can get from hp instant support

The hp instant support Web site provides these tools for troubleshooting and for maintenance:

- Firmware and software updates.
- Troubleshooting for recent events that are listed on the Event Log. For example, the product might show a jam as the most recent event listed in the event Log. The hp instant support Web site detects the event and provides troubleshooting information for the jam.
- Support packs.
- Product documentation, such as user guides and getting started guides.

Order Supplies

The Order Supplies link connects you to a Web page that facilitates your online ordering of supplies from a reseller of your choice. The supplies that you need are preselected. You can change quantities or select additional items. Your items are added to the shopping cart, ready for checkout, ensuring that the correct supplies are ordered through your selected reseller.

Product Support

The **Product Support** link connects you to a Web page that brings together a comprehensive menu of support resources that business people need. From this Web page, you can accomplish these tasks and more:

- Find a list of HP products at one site: computers, workstations, servers, storage devices, printer, scanners, digital imaging, and mobile devices.
- Obtain technical support. Solve a problem; find information to set up, install, and configure
 your product; discover and use a product; maintain your product; upgrade and migrate your
 product software and driver; and recycle products or dispose of them correctly.
- Gain access to self-solve resources such as FAQs, user documentation, features and specifications, and product-compatibility information.
- Collaborate with HP and with your peers through discussion groups, e-mail support, and phone support.
- Use task-based navigation to identify the task area that you want to work on and quickly discover related topics and tools.

In addition, you can find these features: hot topics, a subscription center, product rebate offers and other announcements, and training and education opportunities.

My Service Provider and My Service Contract

The **My Service Provider** and the **My Service Contract** links appear only if they have been created (and perhaps renamed) by the service provider in the Other Links screen on the **Settings** tab. The link can then be clicked by any user to get information about the service provider and the service contract. The information, which can be up to 50 characters long, is stored in the permanent storage of the product.

When these links have been created, the appearance of the **Other Links** box changes to include the new links, as shown in the following illustration.

OtherLinks

hp instant support Order Supplies Product Support My Service Provider My Service Contract

ENWW Product Support 59

Index

A	Device Information screen 15, 34
accessing the HP Embedded Web Server 3	device location 15
accessories, verifying installed 10	Device Status screen 8
activity logs	devices, defined 1
digital sending 52	diagnostics
fax 47	fax 47
Address Book screen 51	trays 20
addressing e-mail 48, 51	Diagnostics menu 20
administrators	Digital Sending screens
alerts, setting up 23	about 39
Digital Sending settings 40	Activity Log 52
logging off 4	Addressing 48
logging on 3	Advanced E-mail Settings 43
wake time settings 37	Advanced Fax Settings 46
Advanced E-mail Settings screen 43	General 40
Advanced Fax Settings 46	Preferences 53
alerts	Send to E-mail 41
configuring 24	Send to Fax 44
destination lists, testing 27	DIMMs, verifying installed 10
e-mail configuration 22	
e-mailing information pages 28	E
features 2, 23	Edit Other Links screen 32, 57
asset number 15	e-mail
attachments, e-mail 42, 43	addressing 48, 51
AutoSend 29	advanced settings 43
	alerts 23
В	attachments, size settings 42, 43
	incoming, configuring 22
billing codes, fax 45 browsers	information pages 28
	outgoing, configuring 22
closing after logging off 4 defined 1	settings 21
supported 3	SMTP gateway settings 41
buttons, control panel 8	support 59
buttons, control paner o	E-mail Server screen 21
	embedded Web server
C	defined 1
cartridge	features 2
ordering 33, 58	error messages 13
status 12	Event Log 13
usage information 14	Explorer, versions supported 3
clock settings 36	
Configuration Page screen 10	F
Configure Device menu 20	FAQs 59
Configure Device screen 20	
consumables. See supplies	fax settings 44, 46 features 2
control panel	firewalls 3
buttons 8	illewalls 3
menus 20	
viewing 16	G
Control Panel screen 16	gateway settings, SMTP 41
counts, page 14	General screen, Digital Sending 40
customer support	group product management 2
instant 58	
product 59	H
_	hard disks, features available with 2
D	help
Date & Time screen 36	instant support 58
default paper size, setting 21	product support 59
destination lists	HP Embedded Web Server
creating 24	defined 1
deleting 28	features 2
testing 27	hp instant support 58

ENWW Index 61

HP Jetdirect print server 56 HP Web Jetadmin 2	online help instant support 58 product support 59
T. Control of the Con	opening the HP Embedded Web Server 3
incoming e-mail configuration 22	Opera, versions supported 3
information pages, e-mailing 28	ordering
Information screens 7	hard disks 2 supplies 33, 58
Information tab	Other Links area 32, 57
locating 20 password protection 3	outgoing mail configuration 22
ink cartridge. See print cartridge	
Internet Explorer, versions supported 3	P
IP address	page counts 14
e-mail configuration 22	paper
locating 3, 15	default size, setting 21
IT administrators	usage 14
alerts, setting up 23 Digital Sending settings 40	Paper Handling menu 20 paper path tests 20
logging off 4	passwords 3, 31
logging on 3	PCL documents 17
wake time settings 37	PDF files, printing 17
	phone support 59
J	POP3 configuration 22
Jetadmin, HP Web 2	power, setting wake time 37 print cartridge
Jetdirect print server 56	ordering 33, 58
Job Cancel button 31	status 12
	usage information 14
K	Print screen 17
keys, control panel 8	print server, HP Jetdirect 56
Konqueror, versions supported 3	printing files 17, 18
L	PRN files 17
	product support 59 products, defined 1
Language screen 35 LDAP servers 48	PS files, printing 17
Lightweight Directory Access Protocol (LDAP) servers 48	/1 - 3
links 32, 57	R
log, event 13	receiving faxes 47
logging off 4	recycle supplies 59
logging on 3	remote configuration 20
M	S
mailbox configuration 22	Safari, versions supported 3
media usage 14 memory, verifying installed 10	Security screen 31
menus	security settings fax modem 47
control panel 20	general 31
HP Embedded Web Server 5	Send to E-mail screen 41
messages, error 13	Send to Fax screen 44
Microsoft Internet Explorer, versions supported 3	sending faxes 45, 47
mobile devices, printing from 17 Mozilla, versions supported 3	serial number 15
My Service Contract link 59	server, HP Jetdirect 56
My Service Provider link 59	service contract link 59 service providers
,	alerts, setting up 23
N	links to 59
navigating 5	logging off 4
Netscape Navigator, versions supported 3	logging on as 3
Networking screens 55	Settings tab 5, 19
Networking tab 5	shutdown, setting wake time 37
networks	SMTP gateway settings 41 status
configuring 55 types supported 3	alerts 23
Web Jetadmin 2	e-mailing information pages 28
	network 55
0	supplies 12
ON/OFF schedule 37	

62 Index ENWW

```
supplies
   AutoSend feature 29
   ordering 33, 58
   status page 12
   usage information 14
Supplies Status screen 12
support
   instant 58
   product 59
system requirements 3
TCP/IP-based network 3
technical support
   instant 58
   product 59
tests, paper path 20
text files, printing 17
time settings 36
toner cartridge. See print cartridge
trays, diagnostics 20
troubleshooting
   Configuration Page screen 10
   instant support 58
   product support 59
U
usage information, AutoSend 29
Usage screen 14
username 31
W
Web browsers
   closing after logging off 4
   defined 1
   supported 3
Web Jetadmin 2
Web server, embedded
   defined 1
   features 2
Web sites, support
   instant 58
   product 59
```

ENWW Index 63

64 Index ENWW

