

Start Here

从这里开始

1

Important: Do not connect the USB cable until Step 15 or software may not install properly.

Follow the steps in order. If you have problems during setup, see **Troubleshooting** on page 10.



 
注意：在第 15 步之前请不要连接 USB 电缆，否则可能无法正确安装软件。

请按顺序执行各个步骤。如果在安装期间遇到问题，请参阅第 10 页上的疑难排解。

2

Remove all tape and components

取下所有胶带和组件

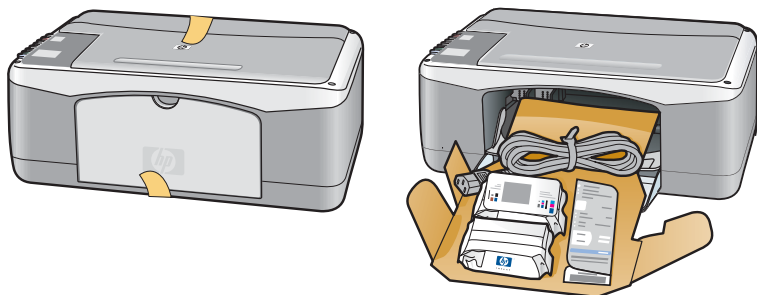

a Remove all tape.

b Lower the paper tray, and then the access door. Remove the shipping material and components.

a 取下所有胶带。

b 放下纸盒，然后放下检修门。取下装运材料和组件。

3

Locate components

查找组件



Windows CD

Windows CD



 
Macintosh CD

Macintosh CD



User Guide

使用手册



USB cable

USB 电缆



print cartridges

墨盒



power cord and adapter

电源线和适配器



control panel overlay (sticker, may be pre-attached)

控制面板盖（胶贴物，可能已经预先装上）

 
 
 
 
The contents of your box may differ.

包装盒内的物品可能有所不同。

4

Attach the control panel overlay (if not attached)

安装控制面板盖（如果尚未安装的话）

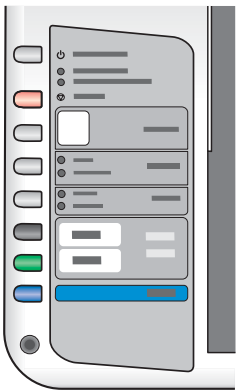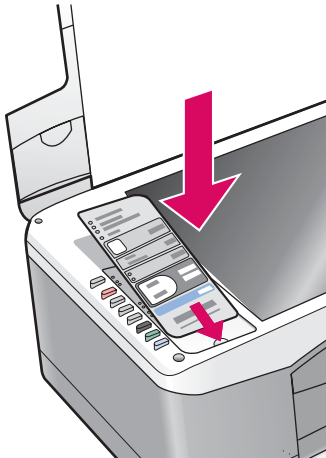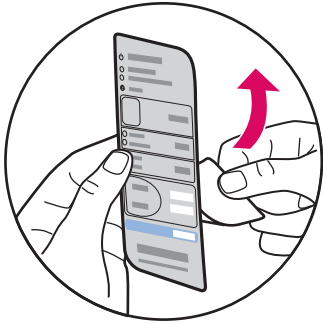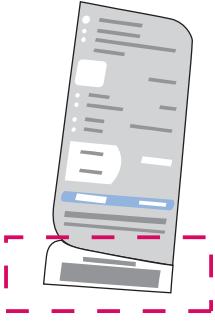

- a Bend the bottom of the control panel overlay.
- b Remove the bottom tab and the backing from the overlay.
- c Lift the lid. Attach the overlay to the device.
- d Press down on the overlay to ensure it is firmly attached.

- a 将控制面板盖的底部弯曲。
- b 取下控制面板盖的底部标签和背衬。
- c 抬起盖子。将控制面板盖安装到设备。
- d 向下按压控制面板盖，使其安装牢固。



 
CAUTION: The control panel overlay must be attached for the HP All-in-One to work!

小心： 只有在安装了控制面板盖之后，才能使用 HP All-in-One！

5

Connect the power cord and adapter

连接电源线和适配器

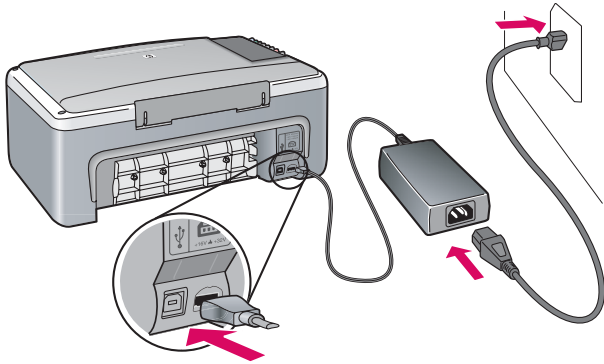

Important: Do not connect the USB cable until instructed later in this guide.

注意：除非本手册后续章节中有说明，否则请不要连接 USB 电缆。

 
6

Press the On/Resume button

按下“启动/重新开始”按钮

On/Resume

启动/重新开始

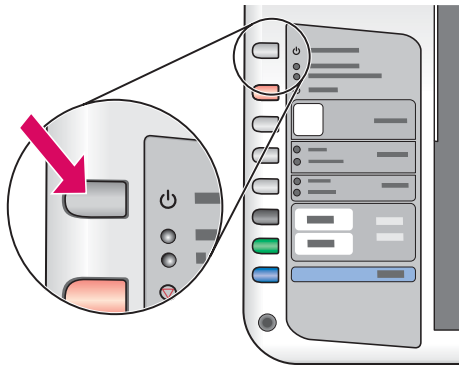

After you press the **On/Resume** button, the green light flashes, and then becomes solid. This may take up to a minute.

 
按下“启动/重新开始”按钮后，绿色指示灯将会闪烁，随后会转入稳定状态。这可能需要 1 分钟的时间。

7

Load plain white paper

装入普通白纸


1

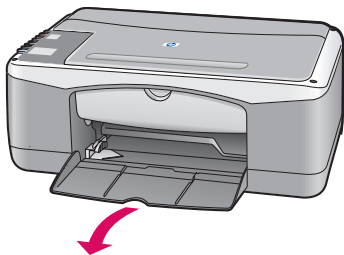


2



 3

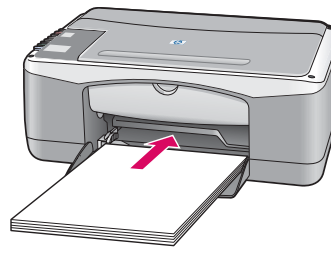

4

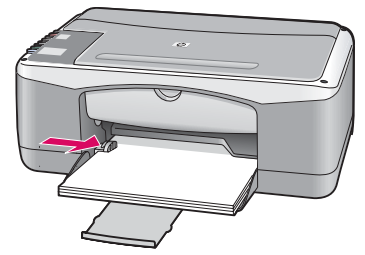 


CAUTION: To avoid paper jams, do not force paper too far into the tray.

小心：为避免塞纸，切不可用力将纸张送入纸盒过深。

8

Open access door

 打开检修门

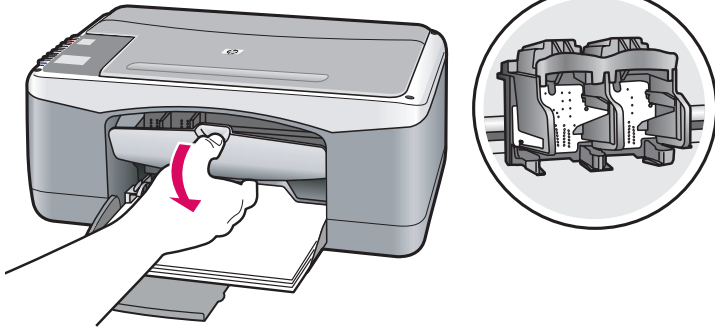

Lower the access door until it stops. Make sure the print carriage moves to the center.

放下检修门，直到其不能动为止。确保打印托架移向中心。

 
The device must be **On** before you can insert the print cartridges.

只有设备启动后，才能放入墨盒。

9


Remove tape from both cartridges

将两个墨盒上的胶带取下

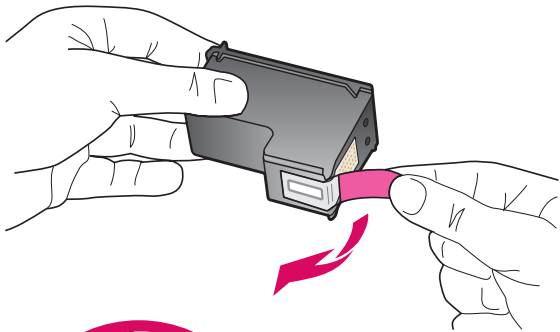

Pull the pink tab to remove the tape from **both** print cartridges.

 拉动粉色标签，将两个墨盒上的胶带取下。

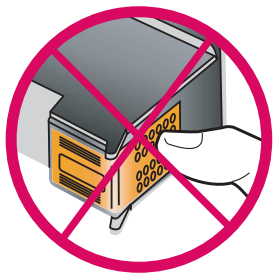


CAUTION: Do not touch the copper-colored contacts or retape the cartridges.

小心： 请勿触摸铜色触点或在墨盒上重新粘贴胶带。

10

Insert the tri-color print cartridge

 放入三色墨盒

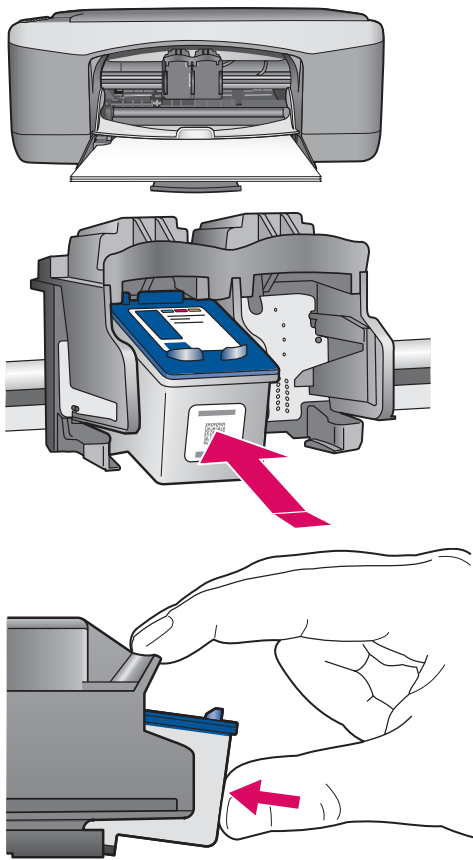


- a Hold the **tri-color** print cartridge with the blue HP logo on top.
- b Place the **tri-color** print cartridge in front of the **left** slot.
- c Push the cartridge firmly into the slot until it snaps into place.

- a 握住三色墨盒，使蓝色 HP 徽标朝上。
- b 将三色墨盒放在左侧插槽的前方。
- c 用力将墨盒推入该插槽中，直到墨盒卡到位。

11

Insert the black print cartridge

 放入黑色墨盒

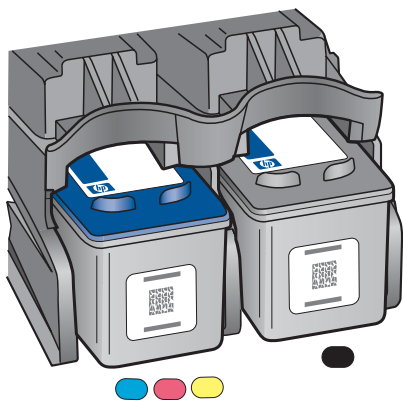


- a Hold the **black** print cartridge with the blue HP logo on top.
- b Place the **black** print cartridge in front of the **right** slot.
- c Push the cartridge firmly into the slot until it snaps into place.
- d Close the access door.

- a 握住黑色墨盒，使蓝色 HP 徽标朝上。
- b 将黑色墨盒放在右侧插槽的前方。
- c 用力将墨盒推入该插槽中，直到墨盒卡到位。
- d 关闭检修门。

12

Align the print cartridges

 
校准墨盒

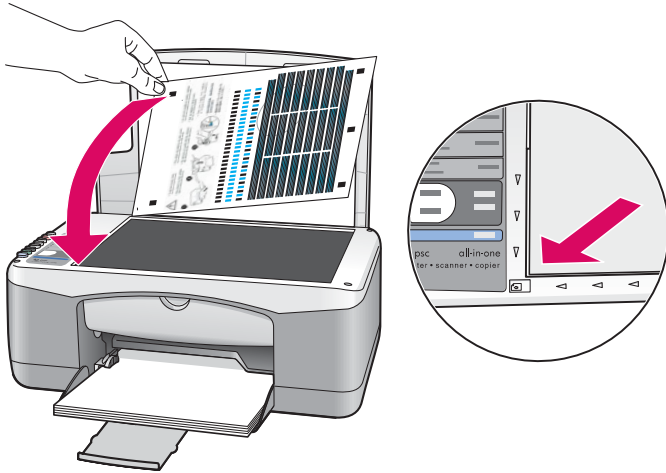

After you insert the cartridges, a print cartridge alignment page prints. (This may take a few minutes.)

- Lift the lid. Place the top of alignment page face down in the left front corner of the glass. Close the lid.
- Press the **Scan** button.

 After the **On/Resume** light stops blinking, alignment is complete. Recycle or discard the alignment page.

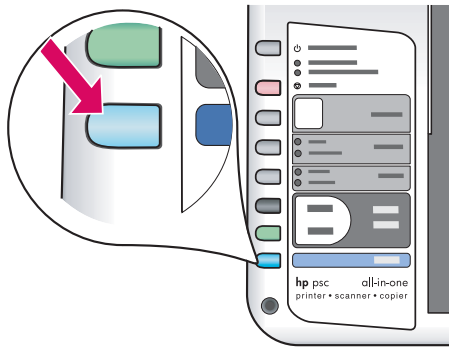

装入墨盒后，将会打印墨盒校准页。（这可能需要几分钟的时间。）

- 抬起盖子。将校准页有内容的面朝下放在玻璃板左下角。合上盖子。
- 按下“扫描”按钮。

在“启动/重新开始”指示灯停止闪烁后，校准过程便已完成。请回收或丢弃校准页。

13

 
Turn on your computer

启动计算机



- Turn on your computer, login if necessary, and then wait for the desktop to appear.
- Close any open programs.

- 启动计算机，根据需要进行登录，然后等待桌面出现。
- 关闭任何已打开的程序。

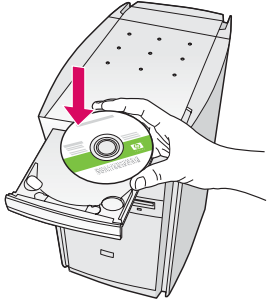**Windows Users:**

 
- a Insert the HP All-in-One **Windows** CD.
- b Follow the onscreen instructions.

Windows 用户:

- a 放入 HP All-in-One **Windows** CD。
- b 按照屏幕上的说明执行操作。

If the startup screen does not appear, double-click **My Computer**, double-click the **CD-ROM** icon, and then double-click **setup.exe**.

如果没有出现启动屏幕，请依次双击“我的电脑”、“CD-ROM”图标和“setup.exe”。

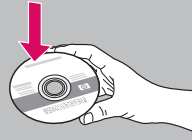**Macintosh Users:**

- a Locate the HP All-in-One **Macintosh** CD.
- b Continue to the next step.

Macintosh 用户:

- a 找到 HP All-in-One **Macintosh** CD。
- b 继续执行下一步操作。

Windows Users:

 
 
You may have to wait several minutes before you see the onscreen prompt to connect the USB cable.

Once the prompt appears, connect the USB cable to the port on the back of the HP All-in-One, and then to any USB port on your computer.

Windows 用户:

您可能需要等待几分钟，才能在屏幕上看到连接 USB 电缆的提示。


当出现上述提示后，请将 USB 电缆的一端连接到 HP All-in-One 背面的端口，然后再将电缆的另一端连接到计算机上任意一个 USB 端口。

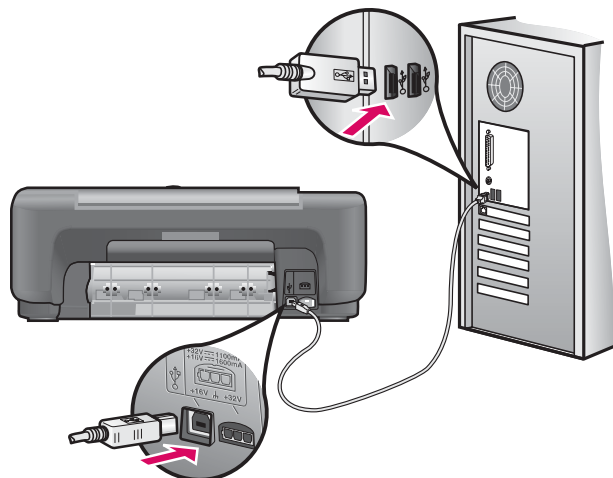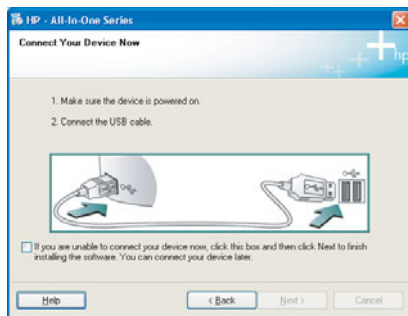**Macintosh Users:**

Connect the USB cable to the port on the back of the HP All-in-One, and then to any USB port on your computer.

Macintosh 用户:

 将 USB 电缆的一端连接到 HP All-in-One 背面的端口，然后再将电缆的另一端连接到计算机上任意一个 USB 端口。

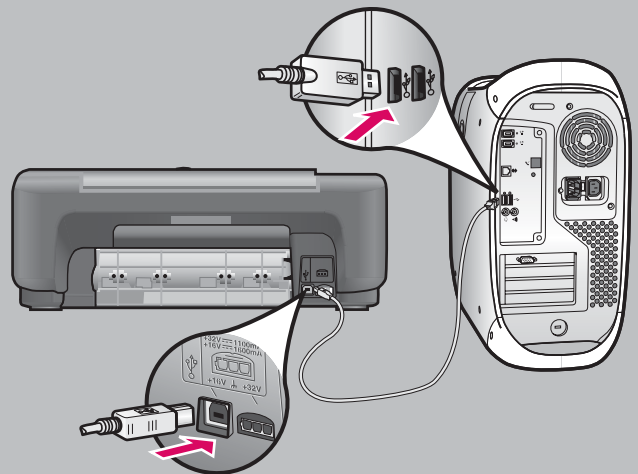


Windows Users:

Follow the onscreen instructions. Complete the **Sign up now** screen. Congratulations on completing the setup!

Windows 用户:

 按照屏幕上的说明进行操作。在“**Sign up now**（立即注册）”屏幕上完成相应的操作。祝贺您完成安装！

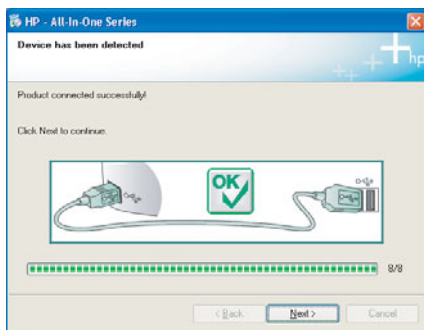

If you do not see these screens, see **Troubleshooting** on page 10.

 
如果没有看到这些屏幕，请参阅第 10 页上的**疑难排解**。

 
Macintosh Users:

- Insert the HP All-in-One **Macintosh** CD.
- Double-click the **HP All-in-One Installer** icon.
- Make sure you complete all screens, including the Setup Assistant. Congratulations on completing the setup!

Macintosh 用户:


- 放入 HP All-in-One **Macintosh** CD。
- 双击“**HP All-in-One installer**”图标。
- 确保完成所有屏幕上的操作，其中包括 Setup Assistant（安装帮助）。祝贺您完成安装！

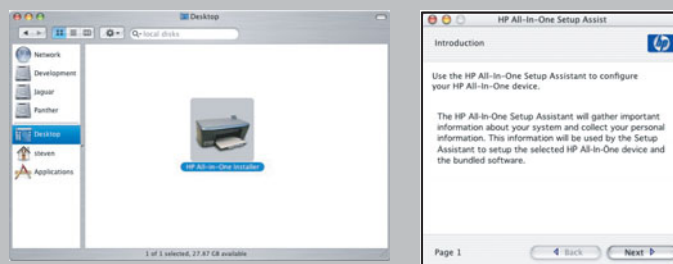

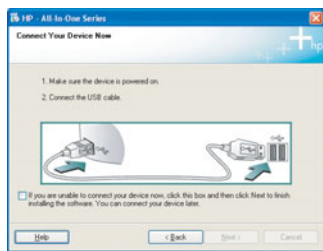


Problem: (Windows only) You did not see the screen telling you when to connect the USB cable.

 Action: Cancel all screens. Remove, and then re-insert the HP All-in-One **Windows** CD. Refer to Step 14.

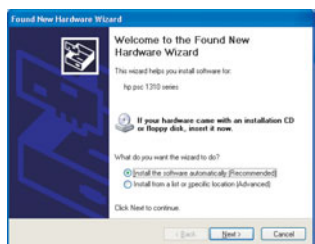

Problem: (Windows only) The **Microsoft Add Hardware** screens appear.

 Action: Click **Cancel** on all screens. Unplug the USB cable, and then insert the HP All-in-One **Windows** CD. Refer to Steps 14 and 15.

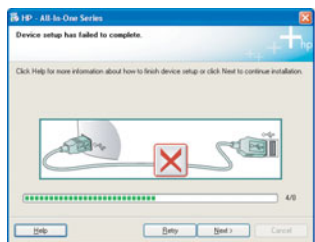

Problem: (Windows only) The **Device Setup Has Failed To Complete** screen appears.

Action: Verify that the control panel overlay is firmly attached. See Step 4. Unplug the device and plug it in again. Check all connections. Make sure the USB cable is plugged into the computer. Do not plug the USB cable into a keyboard or non-powered hub. See Step 15.

疑难排解



 
问题: (仅限于 Windows) 没有看见告诉您何时连接 USB 电缆的屏幕。

解决办法: 取消所有屏幕。取出并重新放入 HP All-in-One **Windows** CD。请参阅第 14 步。



问题: (仅限于 Windows) 出现“**Microsoft 添加硬件**”屏幕。


解决办法: 单击所有屏幕上的“取消”。拔掉 USB 电缆，然后放入 HP All-in-One **Windows** CD。请参阅第 14 步和第 15 步。

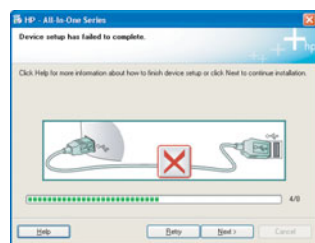

问题: (仅限于 Windows) 出现“**设备安装失败**”屏幕。

解决办法: 检查控制面板盖是否已安装牢固。请参阅第 4 步。断开设备连接后，再重新连接设备。检查所有的连接。确保 USB 电缆已插在计算机上。不要将 USB 电缆插在键盘或无源集线器上。请参阅第 15 步。

 Control Panel Overview

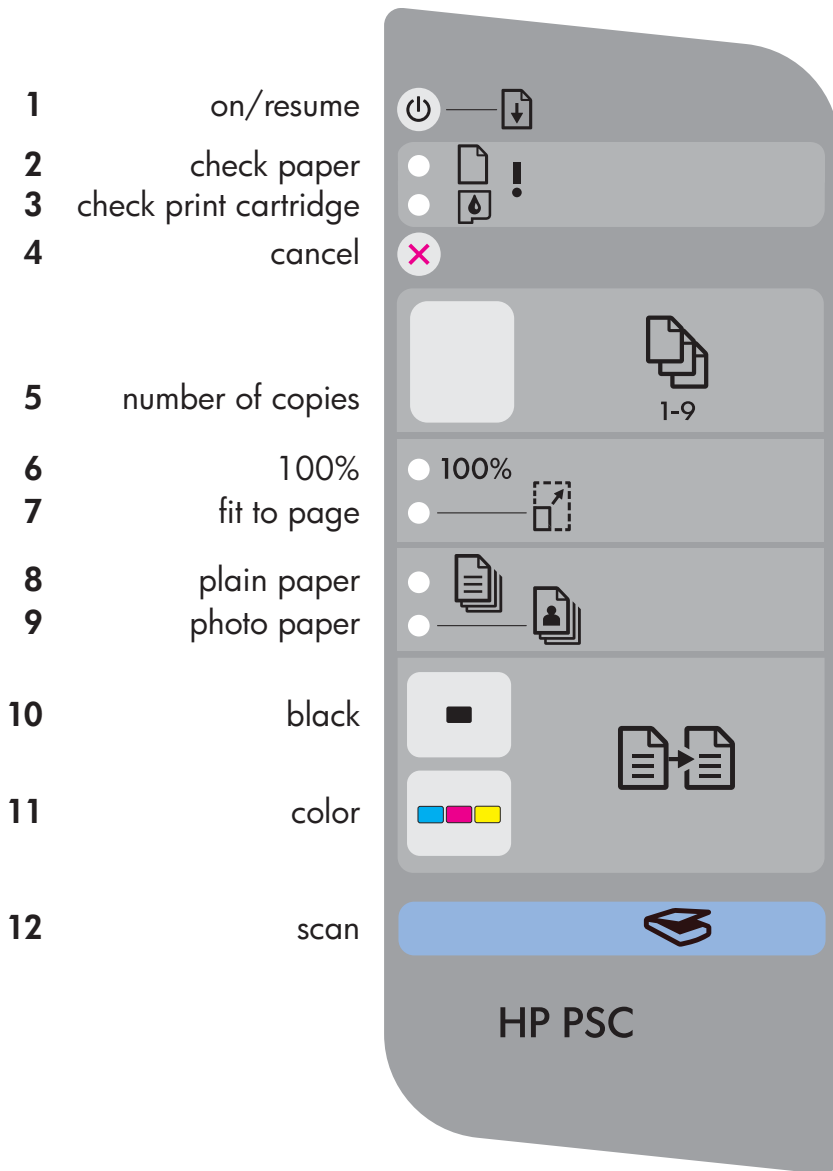

- 1 On/Resume** button: Powers on. Use after correcting a paper jam or print cartridge problem.
- 2 Check Paper** light: Indicates paper is not loaded correctly or there is a jam.
- 3 Check Print Cartridge** light: Indicates a print cartridge needs to be cleaned or replaced; or the access door is open.
- 4 Cancel** button: Stops a job.
- 5 Number of copies** button: Sets the number of copies. An "E" indicates an error. See Chapter 1 in the User Guide.
- 6 100%** button: Makes the copy the actual size of the original.
- 7 Fit to page** button: Adjusts the copy to the size of the paper.
- 8 Plain paper** button: Sets the paper type to plain.
- 9 Photo paper** button: Sets the paper type to photo.
- 10 Black** button: Starts a black and white copy job.
- 11 Color** button: Starts a color copy job.
- 12 Scan** button: Copies the original to the computer.

另一页有其它语言。

Printed on at least 50% total recycled fiber with at least 10% post-consumer paper.

Visit www.hp.com/support for assistance.

© Copyright 2005 Hewlett-Packard Development Company, L.P. Printed in [].

Printed in [].



Q7286-90208

- 1 启动/重新开始
- 2 检查纸张
- 3 检查墨盒
- 4 取消
- 5 份数
- 6 100%
- 7 调整到页面大小
- 8 普通纸
- 9 照片纸
- 10 黑白
- 11 彩色
- 12 扫描



- 1 “启动/重新开始”按钮：打开电源。在校正塞纸或墨盒问题后使用。
- 2 “检查纸张”指示灯：表示纸张未装好或出现塞纸。
- 3 “检查墨盒”指示灯：表示需要清理或更换墨盒；或检修门开启。
- 4 “取消”按钮：停止作业。
- 5 “份数”按钮：设定份数。“E”表示错误。请参阅《使用手册》中的第 1 章。
- 6 100% 按钮：按照原件的实际大小复印。
- 7 “调整到页面大小”按钮：将复印大小调整为纸张的大小。
- 8 “普通纸”按钮：将纸张类型设定为普通纸。
- 9 “照片纸”按钮：将纸张类型设定为照片纸。
- 10 “黑白”按钮：开始黑白复印作业。
- 11 “彩色”按钮：开始彩色复印作业。
- 12 “扫描”按钮：将原件复制到计算机。

Alternate language on other side of page.

使用至少 50% 完全再生纤维（至少具有 10% 消费后纸张）印刷。



欲寻求帮助，请访问 www.hp.com/support。