

Start Here

从这里开始

1

Important: Do not connect the USB cable until Step 15 or the software may not install properly.

Follow the steps in order. If you have problems during setup, see **Troubleshooting** at the end of this Guide.





注意：在第 15 步之前请不要连接 USB 电缆，否则可能无法正确安装软件。

请按顺序执行各个步骤。如果在安装期间遇到问题，请参阅本手册最后部分的**疑难排解**。

2

Remove all tape and cardboard

取下所有胶带和纸板

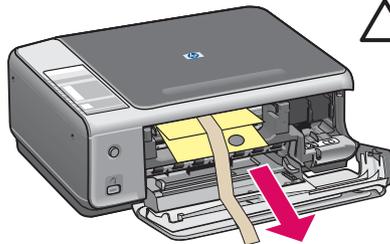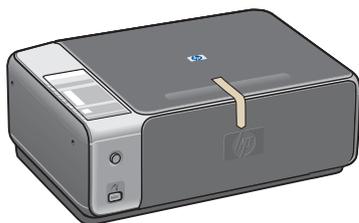

CAUTION: Make sure you remove all packing material or the device will not work properly.

小心：请确保取下所有的包装材料，否则设备将无法正常使用。

3

Locate components

 
查找组件



Windows CD
Windows 光盘



Macintosh CD
Macintosh 光盘



User Guide
使用手册



USB cable*
USB 电缆*



print cartridges
墨盒



power cord and adapter
电源线和适配器



control panel overlay
(glossy sticker, may be pre-attached)

控制面板盖（光滑的胶贴物，可能已经预先装上）

* Purchased separately.

The contents of your box may differ.

* 需要单独购买。



包装盒内的物品可能有所不同。





4

Attach the control panel overlay (if not attached)

安装控制面板盖（如果尚未安装的话）

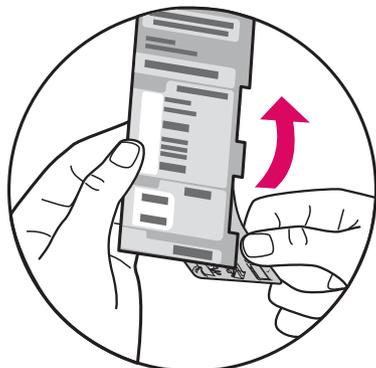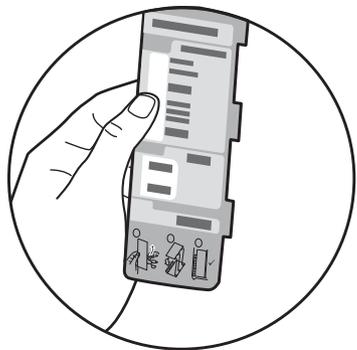

- a Bend the bottom of the control panel overlay.
- b Remove the bottom and the sticky back side from the overlay.
- c Lift the lid. Insert the tabs of the overlay into the device. Make sure the tabs are inserted correctly before sticking the overlay to the device.
- d Press down on the overlay to ensure it is firmly attached. Do not press on the LCD area. The tabs must be in the slots.

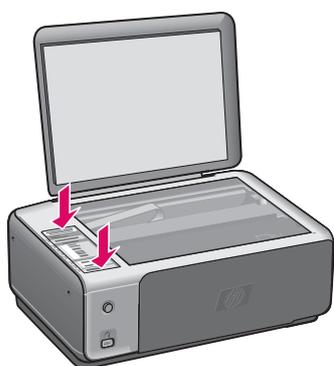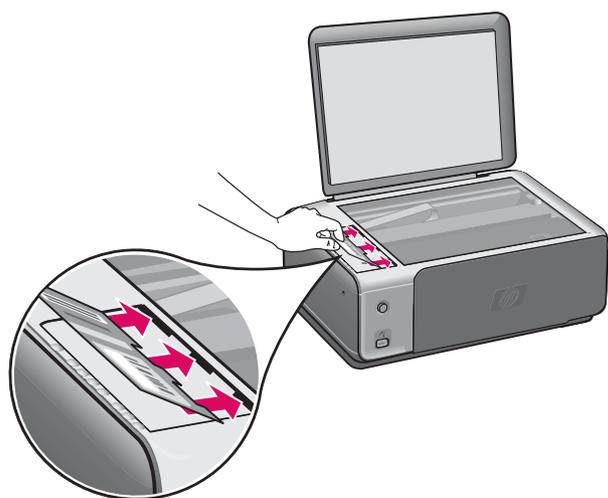

- a 将控制面板盖的底部弯曲。
- b 取下控制面板盖的底部和粘性背面。
- c 抬起盖子。将控制面板盖标签放入设备。在将面板盖粘贴到设备之前，确保标签放入正确。
- d 按压控制面板盖，使其安装牢固。请勿按压 LCD 区域。标签必须放入插槽内。




CAUTION: The control panel overlay must be attached for the HP All-in-One to work!

小心： 只有在安装了控制面板盖之后，才能使用 HP All-in-One！

5

Connect the power cord and adapter

连接电源线和适配器

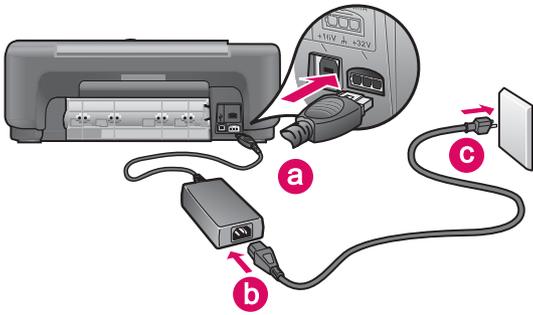

Important: Do not connect the USB cable until instructed later in this guide.

注意：除非本手册后续章节中有说明，否则请不要连接 USB 电缆。

6

Press the On button

按下“开/关机”按钮

On

开/关机




After you press the **On** button, the green light flashes, and then becomes solid. This may take up to a minute.

按下“开/关机”按钮后，绿色指示灯将会闪烁，随后又转入恒定状态。这可能需要 1 分钟的时间。

7

Load plain white paper


装入普通白纸

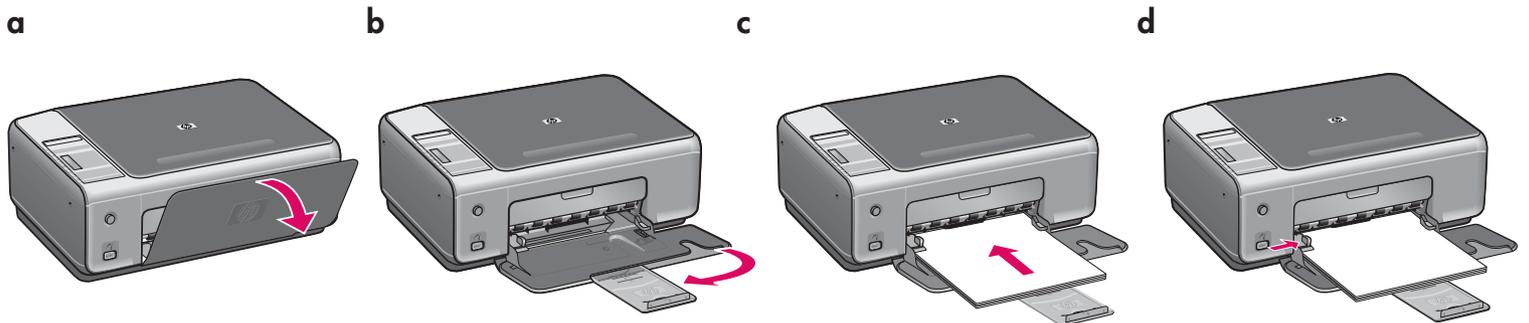

8

Open access door

打开检修门

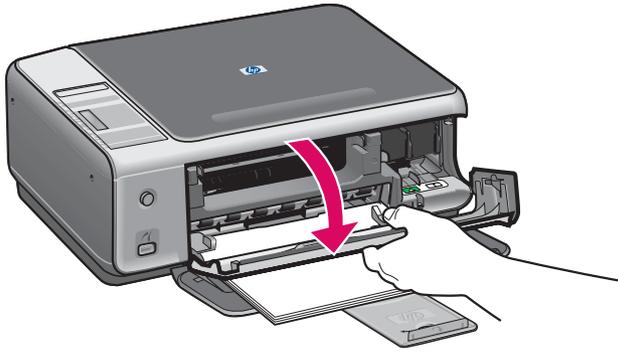


Lower the access door until it stops. Make sure the print carriage moves to the right side.

放下检修门，直到其不能动为止。确保墨盒移向右边。

9

Remove tape from both cartridges

将两个墨盒上的胶带取下

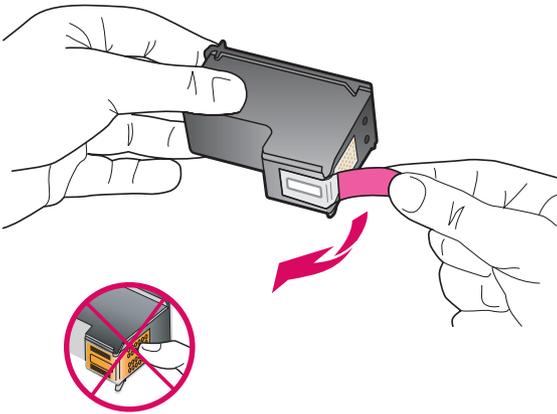

Pull the pink tab to remove the tape from **both** print cartridges.

拉动粉色标签，将两个墨盒上的胶带取下。



CAUTION: Do not touch the copper-colored contacts or retape the cartridges.

小心： 请勿触摸铜色触点或在墨盒上重新粘贴胶带。




The device must be **On** before you can insert the print cartridges.

只有打开设备后，才能放入墨盒。

10

Insert the tri-color print cartridge

放入三色墨盒

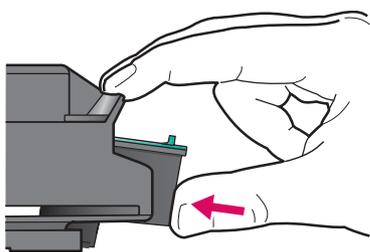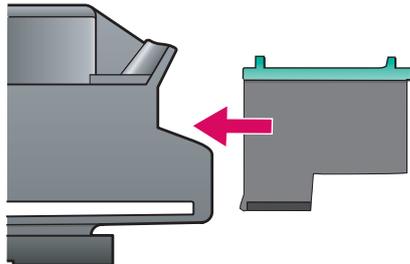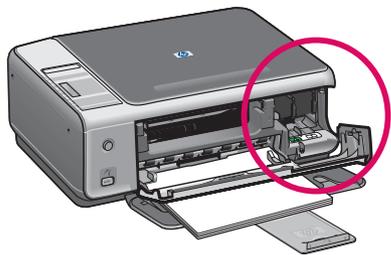


- a Hold the **tri-color** print cartridge with the blue HP logo on top.
- b Place the **tri-color** print cartridge in front of the **left** slot.
- c Push the cartridge firmly into the slot until it snaps into place.

- a 握住三色墨盒，使蓝色 HP 徽标朝上。
- b 将三色墨盒放在左侧插槽的前方。
- c 用力将墨盒推入该插槽中，将其紧紧卡住。

11

Insert the black print cartridge

放入黑色墨盒

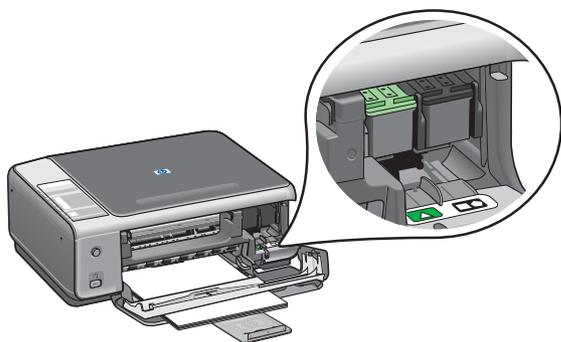


- a Hold the **black** print cartridge with the blue HP logo on top.
- b Place the **black** print cartridge in front of the **right** slot.
- c Push the cartridge firmly into the slot until it snaps into place.
- d Close the access door.

- a 握住黑色墨盒，使蓝色 HP 徽标朝上。
- b 将黑色墨盒放在右侧插槽的前方。
- c 用力将墨盒推入该插槽中，将其紧紧卡住。
- d 关闭检修门。

12

Align the print cartridges

校准墨盒

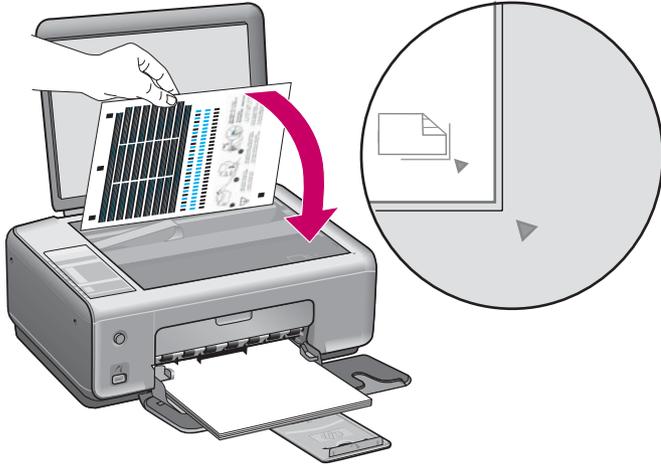


After you insert the cartridges, a print cartridge alignment page prints. (This may take a few minutes.)

- a Lift the lid. Place the top of alignment page face down in the right front corner of the glass. Close the lid.
- b Press the **Start Scan** button.

After the **On** light stops blinking, alignment is complete.

Recycle or discard the alignment page.

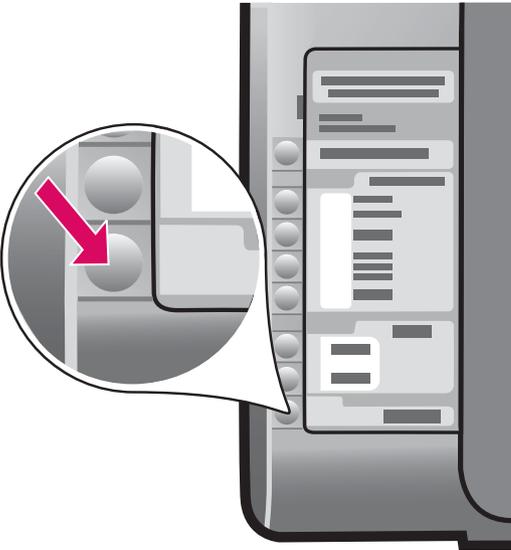

装入墨盒后，将会打印墨盒校准页。（这可能需要几分钟的时间。）

- a 抬起盖子。将校准页顶部面朝下放在玻璃板右前角。关闭盖子。
- b 按下“开始扫描”按钮。

在“开/关机”指示灯停止闪烁后，校准过程便已完成。

请回收或丢弃校准页。

13


Turn on your computer

启动计算机



- a Turn on your computer, login if necessary, and then wait for the desktop to appear.
- b Close any open programs.

- a 启动计算机，根据需要进行登录，然后等待桌面出现。
- b 关闭任何已打开的程序。

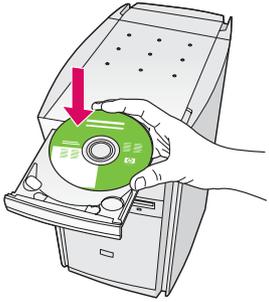**Windows Users:**

- a Insert the HP All-in-One **Windows** CD.
- b Follow the onscreen instructions.

Windows 用户:

- a 放入 HP All-in-One **Windows** CD。
- b 按照屏幕上的说明执行操作。

If the startup screen does not appear, double-click **My Computer**, double-click the **CD-ROM** icon, and then double-click **setup.exe**.

如果没有出现启动屏幕，请依次双击“我的电脑”、“CD-ROM”图标和“setup.exe”。

**Macintosh Users:**

- a Locate the HP All-in-One **Macintosh** CD.
- b Continue to the next step.

Macintosh 用户:

- a 找到 HP All-in-One **Macintosh** CD。
- b 继续执行下一步操作。

Windows Users:



You may have to wait several minutes before you see the onscreen prompt to connect the USB cable.

Once the prompt appears, connect the USB cable to the port on the back of the HP All-in-One, and then to any USB port on your computer.

Windows 用户:

您可能需要等待几分钟，才能在屏幕上看到连接 USB 电缆的提示。


当出现上述提示后，请将 USB 电缆的一端连接到 HP All-in-One 背面的端口中，然后再将电缆的另一端连接到计算机上任意的 USB 端口中。

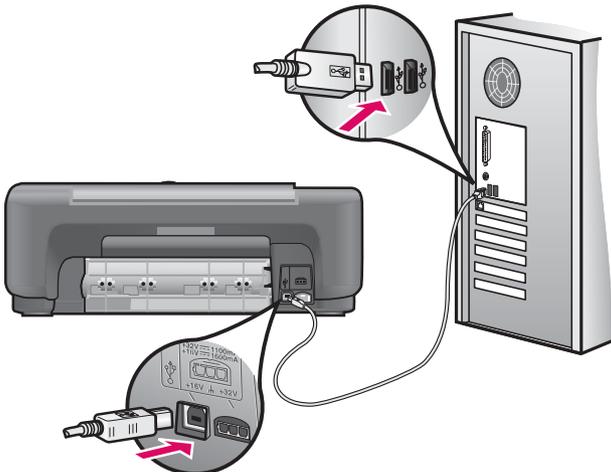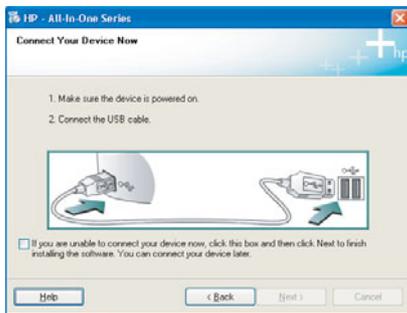**Macintosh Users:**

Connect the USB cable to the port on the back of the HP All-in-One, and then to any USB port on your computer.

Macintosh 用户:

将 USB 电缆的一端连接到 HP All-in-One 背面的端口中，然后再将电缆的另一端连接到计算机上任意的 USB 端口中。

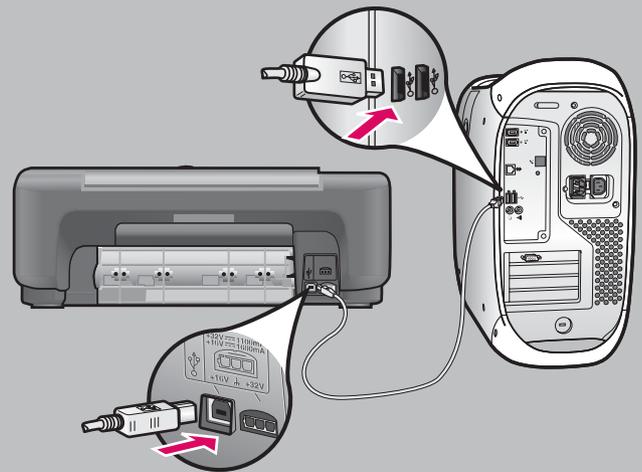


Windows Users:

Follow the onscreen instructions. Complete the **Sign up now** screen. Congratulations!

Windows 用户:

按照屏幕上的说明进行操作。在“**Sign up now**（立即注册）”屏幕上完成相应的操作。祝贺您！

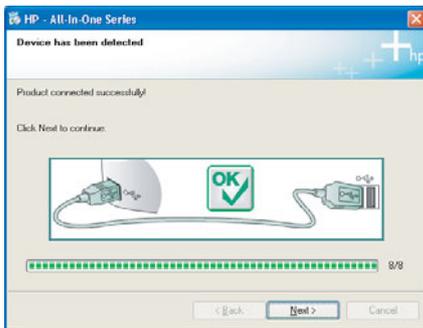

If you do not see these screens, see **Troubleshooting** in the last section.


如果没有看到这些屏幕，请参阅最后一节中的**疑难排解**。

Macintosh Users:

- a Insert the HP All-in-One **Macintosh** CD.
- b Double-click the **HP All-in-One Installer** icon.
- c Make sure you complete all screens, including the Setup Assistant. Congratulations!

Macintosh 用户:

- a 放入 HP All-in-One **Macintosh** CD。
- b 双击“**HP All-in-One installer**”图标。
- c 确保完成所有屏幕上的操作，其中包括 Setup Assistant（安装帮助）。祝贺您！

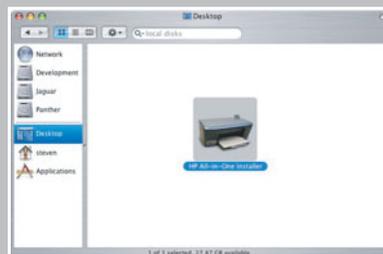

Troubleshooting Software




Problem: (Windows only) You did not see the screen telling you when to connect the USB cable.

Action: Remove, and then re-insert the HP All-in-One **Windows** CD. Refer to Step 14.



Problem: (Windows only) The **Microsoft Add Hardware** screen appears.

Action: Click **Cancel**. Unplug the USB cable, and then insert the HP All-in-One **Windows** CD. Refer to Steps 14 and 15.

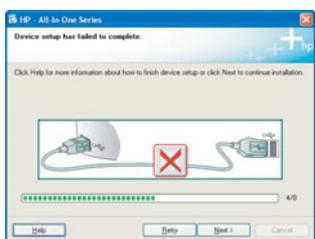

Problem: (Windows only) The **Device Setup Has Failed To Complete** screen appears.

Action: Verify that the control panel overlay is firmly attached. Unplug the device and plug it in again. Check all connections. Make sure the USB cable is plugged into the computer. Do not plug the USB cable into a keyboard or non-powered hub. Refer to Steps 3 and 15.

软件疑难排解




问题: (仅限于 Windows) 没有看见告诉您何时连接 USB 电缆的屏幕。

解决办法: 取出并重新放入 HP All-in-One **Windows** CD。请参阅第 14 步。



问题: (仅限于 Windows) 出现“Microsoft 添加硬件”屏幕。

解决办法: 单击“取消”。拔掉 USB 电缆，然后放入 HP All-in-One **Windows** CD。请参阅第 14 步和第 15 步。

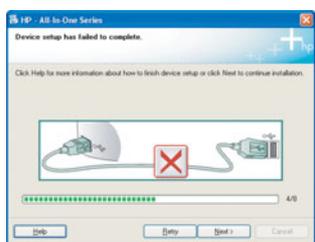

问题: (仅限于 Windows) 出现“设备安装失败”屏幕。

解决办法: 检查控制面板盖是否已安装牢固。断开设备连接后，再重新连接设备。检查所有的连接。确保 USB 电缆已插在计算机上。不要将 USB 电缆插在键盘或无源集线器上。请参阅第 3 步和第 15 步。

Troubleshooting - Control Panel

The first image shows how the control panel overlay looks after a successful setup. The second image shows possible problems. See below for more information.

Correct:




Alerts:

1
2

3

4

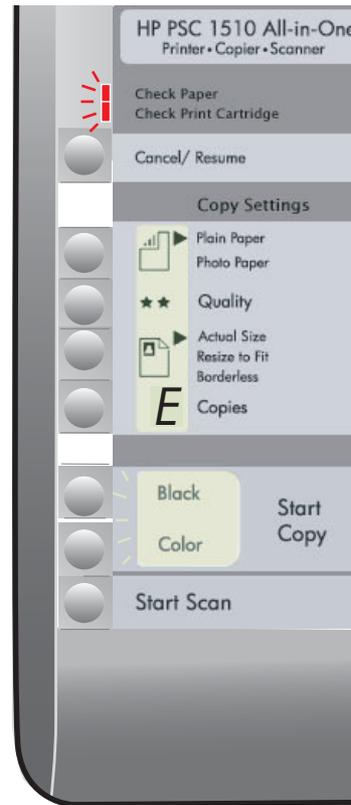

Alerts:

- 1 The **Check Paper** light is flashing.
- 2 The **Check Print Cartridge** light is flashing.
- 3 **E** An **E** in the Copies area.
- 4 The **Check Paper**, **Check Print Cartridge**, **Start Copy** areas are flashing.

Action:

- 1 Check the input tray. The paper was not loaded correctly. Reload the paper, and then press the **Cancel/Resume** button.
- 2 Make sure the tape was removed from the cartridges. Re-insert the cartridge and then, close the door. Press the **Cancel/Resume** button to continue.
- 3 Check for other lights to determine the problem. See the User Guide for more information.
- 4 The overlay is not attached correctly. Refer to step 4. After attaching, press the **Cancel/Resume** button to continue.



Q5888-90254

第一幅图像显示了控制面板盖在成功安装后的外观。第二幅图像则显示了可能会出现的问题。有关详细信息，请参阅以下内容。

正确：



警告：

1
2



3

4

警告：

1 “检查纸张”指示灯正在闪烁。

2 “检查墨盒”指示灯正在闪烁。

3 **E** 复印区域出现 **E**。

4 “检查纸张”、“检查墨盒”和“开始复印”区域正在闪烁。

解决办法：

检查进纸盒。纸张未装好。请重新装入纸张，然后按下“取消/重新开始”按钮。

确保已取下墨盒上的胶带。重新放入墨盒，然后关闭检修门。按下“取消/重新开始”按钮以继续。

检查其它指示灯以确定问题。有关详细信息，请参阅《使用手册》。

控制面板盖安装不正确。请参阅第 4 步。安装之后，按下“取消/重新开始”按钮以继续。

使用至少 50% 完全再生纤维（至少具有 10% 消费后纸张）印刷。

欲寻求帮助，请访问 www.hp.com/support。

© Copyright 2005 Hewlett-Packard Development Company, L.P. Printed in [].

Printed in [].

