

HP Color LaserJet 4730mfp

HP Embedded Web Server User Guide



HP Embedded Web Server

User Guide



Copyright and Warranty

© 2005 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

EWS V10.0

Trademarks and credits

Adobe® and PostScript® are trademarks of Adobe Systems Incorporated.

Microsoft® and Windows® are U.S. registered trademarks of Microsoft Corp.

Edition 1, 2/2005

Table of contents

1 Overview

What is an embedded Web server?	1
Features	1
Additional features with a permanent storage device	2
HP Web Jetadmin and the HP Embedded Web Server.....	2
System requirements.....	3
Opening the HP Embedded Web Server.....	3
Login and logoff.....	4
To log in as an administrator.....	4
To log off as an administrator	4
Navigating through the HP Embedded Web Server.....	5

2 Viewing product status from the HP EWS Information screens

Device Status	10
Configuration Page.....	12
Supplies Status.....	14
Event Log.....	16
Usage Page.....	18
Diagnostics Page.....	20
Device Information.....	22
Control Panel.....	23
Print.....	24
Printing a file from the Print screen.....	25

3 Configuring the product from the Settings screens

Configure Device.....	27
Using the menus on the Configure Device screen.....	28
E-mail Server.....	29
Configuring outgoing e-mail.....	30
Configuring incoming e-mail.....	30
Alerts.....	31
Using the Alerts screen with a product	33
Sending e-mail commands to the product.....	36
To request information pages by using an e-mail message.....	36
AutoSend.....	37
To turn on the AutoSend feature.....	39
Security.....	40
Edit Other Links.....	42
Adding a link.....	43

Removing a link.....	43
Device Information.....	44
Language.....	45
Date & Time.....	47
Date/Time Format.....	48
Clock Drift Correction.....	48
Wake Time.....	50

4 Setting the digital sending options

Using the HP DSS software.....	51
General.....	52
Send to E-mail.....	53
Advanced E-mail Settings.....	55
Send to Fax.....	56
Advanced Fax Settings	58
Addressing.....	61
Advanced Addressing Settings.....	64
Address Book.....	65
Log.....	66
Preferences.....	68

5 Managing network operation from the Networking screens

Overview.....	71
---------------	----

6 Using the Other Links as a resource

hp instant support	76
How hp instant support works.....	76
Information you can get from hp instant support.....	76
Order Supplies.....	76
Product Support	77
My Service Provider and My Service Contract.....	77

Index.....	79
-------------------	-----------

List of tables

Table 1-1	HP Embedded Web Server.....	6
Table 2-1	Device Status.....	10
Table 2-2	Configuration Page.....	13
Table 2-3	Supplies Status.....	15
Table 2-4	Event Log.....	16
Table 2-5	Usage Page.....	19
Table 2-6	Diagnostics Page.....	20
Table 2-7	Print page.....	25
Table 3-1	Configure Device.....	28
Table 3-2	E-mail Server.....	29
Table 3-3	Alerts.....	32
Table 3-4	Requesting information pages using an e-mail message.....	36
Table 3-5	AutoSend.....	38
Table 3-6	Security.....	40
Table 3-7	Edit Other Links.....	42
Table 3-8	Language.....	46
Table 3-9	Date & Time.....	47
Table 3-10	Wake Time.....	50
Table 4-1	General Settings.....	52
Table 4-2	E-mail Settings.....	53
Table 4-3	Advanced E-mail Settings.....	55
Table 4-4	Send to Fax.....	56
Table 4-5	Advanced Fax Settings.....	58
Table 4-6	Addressing Settings.....	61
Table 4-7	Advanced Addressing Settings.....	64
Table 4-8	Address Book.....	65
Table 4-9	Log.....	66
Table 4-10	Preferences Settings.....	68
Table 5-1	Network Settings.....	72

List of figures

Figure 1-1	Enter Network Password.....	4
Figure 1-2	Sample HP EWS screen.....	5
Figure 2-1	Device Status screen.....	10
Figure 2-2	Configuration Page screen.....	12
Figure 2-3	Supplies Status screen.....	14
Figure 2-4	Event Log screen.....	16
Figure 2-5	Usage Page screen.....	18
Figure 2-6	Diagnostics Page screen.....	20
Figure 2-7	Device Information screen.....	22
Figure 2-8	Control Panel screen.....	23
Figure 2-9	Print screen.....	24
Figure 3-1	Configure Device screen.....	27
Figure 3-2	E-mail Server screen.....	29
Figure 3-3	Alerts screen.....	32
Figure 3-4	Alerts – setup screen.....	33
Figure 3-5	Alerts – test screen.....	35
Figure 3-6	AutoSend screen.....	38
Figure 3-7	Security screen.....	40
Figure 3-8	Edit Other Links screen.....	42
Figure 3-9	Device Information screen.....	44
Figure 3-10	Language screen.....	45
Figure 3-11	Date & Time screen.....	47
Figure 3-12	Wake Time screen.....	50
Figure 4-1	General Settings screen.....	52
Figure 4-2	E-mail Settings screen.....	53
Figure 4-3	Advanced E-mail Settings screen.....	55
Figure 4-4	Fax Settings screen.....	56
Figure 4-5	Advanced Fax Settings screen.....	58
Figure 4-6	Establish PIN Number screen.....	59
Figure 4-7	Modem Diagnostics screen.....	60
Figure 4-8	Addressing Settings screen.....	61
Figure 4-9	Advanced Addressing Settings screen.....	64
Figure 4-10	Address Book screen.....	65
Figure 4-11	Log screen.....	66
Figure 4-12	Preferences Settings screen.....	68
Figure 5-1	Network Settings screen.....	72
Figure 6-1	Device Information screen.....	75
Figure 6-2	Other Links.....	77

1 Overview

What is an embedded Web server?

A Web server provides an environment in which Web programs can run, in much the same way that an operating system, such as Microsoft® Windows®, provides an environment in which programs can run on your computer. A Web browser, such as Microsoft Internet Explorer, Apple Safari, or Mozilla, can show output from a Web server.

An *embedded* Web server resides on a hardware product (such as a printer) in the firmware, rather than as software that is loaded on a network server.

The advantage of an embedded Web server is that it provides an interface to the product that anyone who has a network-connected computer and a standard Web browser can open and use. No special software needs to be installed or configured.

With the HP Embedded Web Server (HP EWS), you can view product status information, change settings, and manage the product at your computer.



NOTE In this guide, the terms "product" and "device" are used interchangeably. When products or devices are discussed in this guide, the information pertains to HP LaserJet printers or multifunction peripherals (MFPs), or HP Digital Senders. For specific information about the features that your printer, MFP, or digital sender supports, see the documentation that came with your product.

Features

You can use the HP EWS to view product and network status and to manage printing functions from your computer, rather than at the product control panel. With the HP EWS, you can perform these tasks:

- View control-panel messages and product-status information.
- Determine the remaining life for all supplies and configure specific ordering information for supplies.
- Gain access to the product's technical support page.
- Gain access to specific support for recent product events.
- Add or customize links to other Web sites.
- View and change product configuration, such as tray configurations.
- View and change network configuration.

- View and print information pages, such as the Configuration page.
- Receive alerts about product events, such as when the product is low on supplies, through e-mail.
- Select the language in which to display the HP EWS screens.
- Print to an HP product without having to install the product print driver.
- Conserve energy by scheduling the product sleep delay so that the product will go into sleep mode after a period of time of not being used.
- Schedule wakeup times for each day so that the product has finished initializing and calibrating by the time it is to be used.
- Send product configuration and supplies usage information periodically to your service provider.

Additional features with a permanent storage device

If you have a permanent storage device installed in your product, such as a hard disk, you can view, set up, and retain additional information.

- **Alerts.** Set up four different destination lists for each user (admin and service), with up to 20 recipients on each of the four lists. (Without the permanent storage device, each user can send alerts to only four e-mail addresses.)
- **Other Links.** Add up to five additional links to the Web sites of your choice. (Without the extra storage, you can add one additional link.)

A hard disk might be installed in your product, depending on the product model. If your product does not have a hard disk, you might be able to order one. For more information, see the user guide that came with your product, or go to: www.hp.com/country/us/eng/othercountriesbuy.htm

HP Web Jetadmin and the HP Embedded Web Server

HP Web Jetadmin is a Web-based system management tool that you can use with a Web browser. The HP EWS and HP Web Jetadmin work together to meet all of your product-management needs. You can use the software to install and manage networked products effectively. Network administrators can manage networked products remotely, from practically anywhere.

The HP EWS provides a simple, easy-to-use solution for one-to-one product management in environments that have a limited number of products. However, in environments that have several products, you might want to use HP Web Jetadmin to manage groups of products. With HP Web Jetadmin you can discover, manage, and configure multiple products simultaneously.

HP Web Jetadmin is available from HP online support (HP Web Jetadmin www.hp.com/go/webjetadmin).

System requirements

In order to use the HP EWS, you must have the following components:

- A supported Web browser. Browsers that support embedded Web servers include (but are not limited to) the following:
 - Konqueror 3.0 or later
 - Microsoft Internet Explorer 6.0 or later
 - Mozilla 1.0 (and Mozilla derivatives)
 - Netscape Navigator 6.2 or later
 - Opera 7.0 or later
 - Safari 1.0 or later
- A transmission control protocol/Internet protocol- (TCP/IP-) based network connection.
- An HP Jetdirect print server (embedded or enhanced input/output [EIO]) installed in the product.

Opening the HP Embedded Web Server

Use the following procedure to open the HP EWS.



NOTE You cannot view the HP EWS screens from outside of a firewall.

- 1 Open a supported Web browser.
- 2 In the **Address** or **Go to** field, type the TCP/IP address that is assigned to the product (for example, `http://192.168.1.1`) or the host name (for example, `npi[XXXXXX]` or a configured host name such as `http://www.[your_server].com`).

If you do not know the TCP/IP address for the product, you can find it by using the control-panel menu or by printing a configuration page. For instructions, see the user guide that came with your product.

Login and logoff

The HP EWS has screens that can be used to view product information and change configuration options. The screens that appear, and the settings on them, vary according to how you gain access to the HP EWS: as a general user, an information technology (IT) administrator, or a service provider. These passwords can be customized by an IT administrator or a service provider.

In a password-protected HP EWS, only the **Information** tab is available to users who do not log in by using the password. If no password has been set (which is the default), all of the tabs are visible.

If a password has been set, you must log on as an IT administrator or a service provider to gain access to the protected HP EWS tabs (**Settings**, **Digital Sending**, and **Networking**).



NOTE For information about changing passwords as an IT administrator, see [Security](#). If you are a service provider, see your product service guide.

To log in as an administrator

Use the following procedure to log in to the HP EWS as an administrator.

- 1 After you open the EWS, click the **Log In** link in the upper-right corner of the screen.

The **Enter Network Password** dialog box appears, as shown in the following illustration. The appearance of the login screen might vary, depending on your operating system and browser.

Figure 1-1 Enter Network Password

- 2 Type admin for the user name, type your password, and then click **OK**.

To log off as an administrator

Use the following procedure to log off.

- 1 Click the **Log Off** link.
- 2 To complete the logoff, close the browser.



CAUTION If you do not close the browser, the connection to the product HP EWS continues to run and could pose security risks.

Navigating through the HP Embedded Web Server

To navigate through the HP EWS screens, click one of the tabs (such as **Information** or **Settings**), and then click one of the menus on the navigation bar that is located on the left side of the screen.

The following illustration and table provide information about the HP EWS screens.



NOTE The appearance of the HP EWS screens might differ from the illustrations in this user guide, depending on the product features and the settings that your IT administrator has established.

HP Color LaserJet XXXXmfp / 192.168.0.10
HP Color LaserJet XXXXmfp Series

Information Settings Digital Sending Networking [Log Off](#)

Device Status

Ready

Pause/Resume Continue

Supplies

Toners: (% remaining)

Black Cartridge 100%	Cyan Cartridge 100%	Magenta Cartridge 100%	Yellow Cartridge 100%
----------------------	---------------------	------------------------	-----------------------

Image Transfer Kit 100% Image Fuser Kit 100%

[Supplies Details](#)

Media

Input/Output	Status	Capacity	Size	Type
Tray 1	Empty	100 Sheets	EXECUTIVE	LETTERHEAD
Tray 2	OK	500 Sheets	LETTER	PLAIN
Tray 3	OK	500 Sheets	LETTER	PLAIN
Tray 4	OK	500 Sheets	LETTER	PLAIN
STANDARD TOP BIN	OK	N/A	N/A	

[Change Settings](#)

Capabilities

```

Device Serial Number: XXXXXXXXXX
Firmware Datecode: 20050107 20050107
Duplex: OFF
ADF Yes
Optical Resolution 600
Color Scanning Yes
E-mail Yes
    
```

Figure 1-2 Sample HP EWS screen

Table 1-1 HP Embedded Web Server


Callout	HP EWS screen feature	Description	More information
1	Product name and TCP/IP address	View the product name and Internet protocol (IP) address.	
2	Tabs	Information tab	View information about the product. You cannot configure the product using the screens on this tab. See Viewing product status from the HP EWS Information screens.
		Settings tab	Use the features on this tab to configure the product. See Configuring the product from the Settings screens.
		Digital Sending tab	Use the features on this tab to configure the digital sending capabilities. See Setting the digital sending options.
		 NOTE If the Digital Sending Software (HP DSS) has been installed, the digital sending options must be configured by using the HP MFP DSS Configuration Utility.	
3	Menus	Networking tab	View network status and configure the network settings. See Managing network operation from the Networking screens.
		Different on each tab	Click a tab to show the menus.
4	Other Links	hp instant support	Connect to a set of Web resources that help solve problems and describe the additional services that are available for your HP product. <ul style="list-style-type: none"> ■ See Using the Other Links as a resource. ■ See hp instant support. ■ See Product Support.
		Order Supplies	Use the Internet to order genuine HP supplies for your HP product. <ul style="list-style-type: none"> ■ See My Service Provider and My Service Contract.
		Product Support	Use product-specific help from the HP Web site to solve a problem.

Table 1-1 HP Embedded Web Server (continued)

Callout	HP EWS screen feature	Description		More information
5	Log In/Log Off	Different for each type of user	Log in as an IT administrator or service provider.	See Login and logoff .
6	Screen	Different for each menu item	Click a menu item to show a screen.	<ul style="list-style-type: none">■ See Viewing product status from the HP EWS Information screens.■ See Configuring the product from the Settings screens.■ See Managing network operation from the Networking screens.

2 Viewing product status from the HP EWS Information screens

The screens available from the **Information** tab are for informational purposes only; you cannot configure the product from these screens. To configure the product through the HP EWS, see [Configuring the product from the Settings screens](#).



NOTE Some products do not support all of these screens.

Device Status

Use the **Device Status** screen to view the current status of the product. The following illustration and table describe how to use this screen.

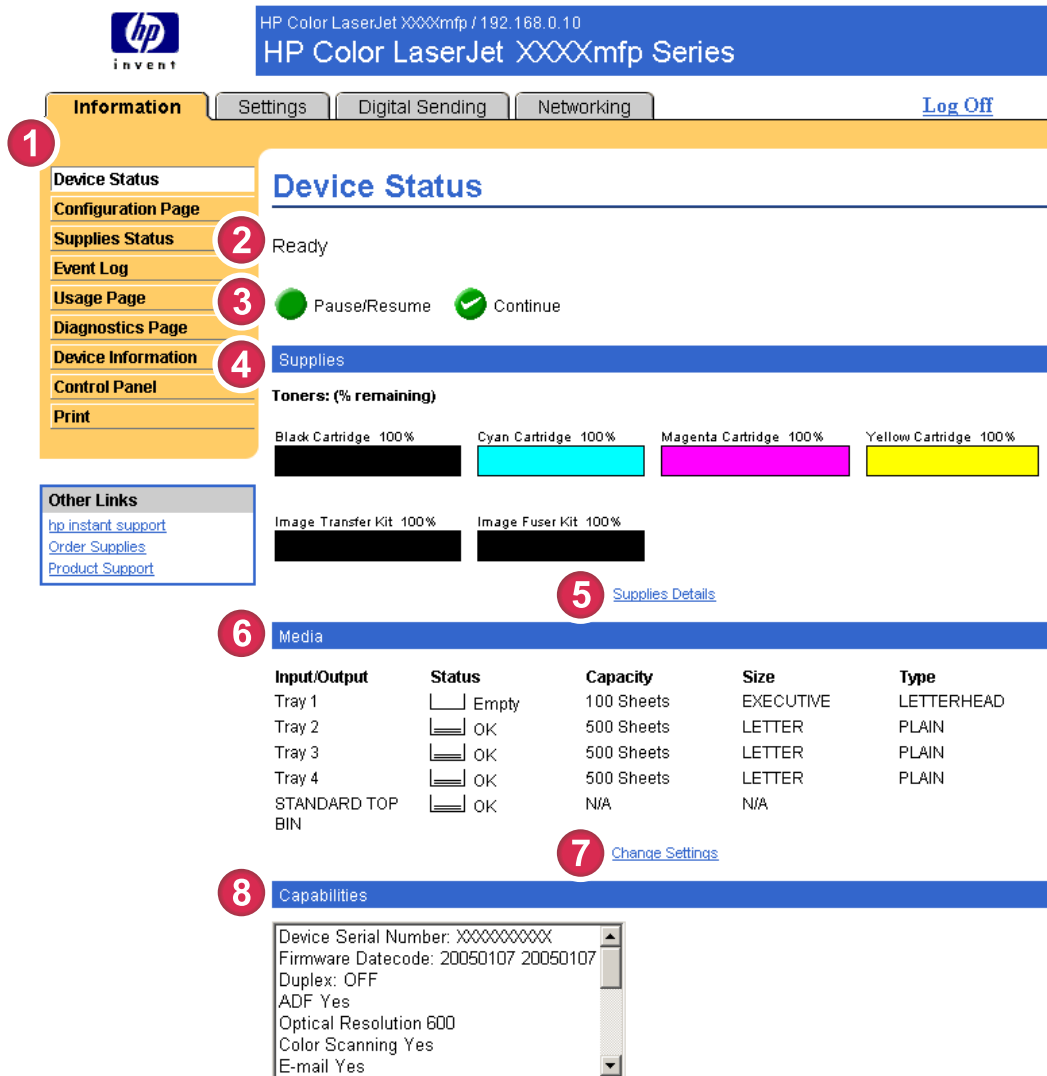


Figure 2-1 Device Status screen

Table 2-1 Device Status

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Status	Shows the device status (the same information that appears on the control-panel display).
3	Control-panel buttons	Use these control-panel buttons just as you would at the product. To select which control-panel buttons appear on this screen, go to the Security screen on the Settings tab.
4	Supplies	Shows the percentage of life remaining for each supply.

Table 2-1 Device Status (continued)

Callout	Area on the screen	Information or capability that the area provides
5	Supplies Details	Opens the Supplies Status screen, where you can view information about product supplies.
6	Media	Shows the status and configuration information for the input trays and output bins. The media status is OK until the tray is completely empty. When the tray is empty, the status is Out .
7	Change Settings	Opens the Other Settings screen, where you can change the paper-type settings.
8	Capabilities	Lists components that are installed in the product.

Configuration Page

Use the **Configuration Page** screen to view current product settings, help troubleshoot problems, and verify the installation of optional accessories such as dual inline memory modules (DIMMs). The following illustration and table describe how to use this screen.

1 Information Settings Digital Sending Networking Log Off

2 Configuration Page

3 Device Information

Product Name:	HP Color LaserJet XXXXmfp
Device Name:	HP Color LaserJet XXXXmfp
DC Controller:	A4
Model Number:	CXXXXA
Device Serial Number:	XXXXXXXXXX
Firmware Number:	S4BXXXXXXXX
CPB:	1.004 (2.0)
SCB:	EM1PSL99
Firmware Datecode:	20050107 20050107
Service ID:	00000
PS Wait Time-out:	300 seconds
Engine Cycles:	390
Color Cycle Count:	292
Document Feeder Kit Interval:	90000
Pages Since Last Doc Feeder Maintenance:	0

4 Installed Personalities and Options

PCL	(20010402)
PCLXL	(20010402)
POSTSCRIPT	(20010402)
PDF	(20050131)
DIMM Slot 1:	Empty
DIMM Slot 2:	256 MB DDR
Card Slot 1:	64 MB FW FLASH: 2 MB
Card Slot 2:	Empty
Card Slot 3:	Empty
EIO 1:	HP JetDirect J7934A 192.168.0.10
EIO 2:	Empty
Internal Disk:	ST380013AS: 74 GB
DISK Storage:	76319 MB Capacity
CARD SLOT Storage:	2 MB Capacity
LDAP Gateway	Not Configured
SMTF Gateway	Not Configured
hp MFP Digital Sending Server	Not Configured

5 Memory

Installed DIMM Memory:	256 MB
On Board Memory:	64 MB
Total RAM:	320 MB
DWS:	6.00

Automatic Resource Saving Enabled

6 Security

Control Panel Lock:	NONE
Control Panel Password:	DISABLED
Device Type: DISK:	Write Protect: DISABLED
Device Type: CARD SLOT:	Write Protect: DISABLED
File System Access:	
PUL:	ENABLED
PML:	ENABLED
NFS:	ENABLED
PostScript:	ENABLED
Direct Ports (USB/IEEE 1284):	ENABLED

7 Paper Trays and Options

Default Paper Size:	LETTER
Tray 1 Size:	EXECUTIVE
Tray 1 Type:	LETTERHEAD
Tray 2 Size:	LETTER
Tray 3 Size:	LETTER
Tray 4 Size:	LETTER

Duplex Unit

8 Internal

Input Trays:

- TRAY 1, 100 Sheets
- TRAY 2, 500 Sheets
- TRAY 3, 500 Sheets
- TRAY 4, 500 Sheets

Output Bins:

- STANDARD TOP BIN, 250 Sheets, Face Down

9 Calibration Information

Last CPR (Engine Cycles): 390
 Last CPR: 13 Jan 2005/08:25
 Last DMxDHalf (Engine Cycles): 0

10 Color Density

	C	M	Y	K
HIGHLIGHTS	0	0	0	0
MIDTONES	0	0	0	0
SHADOWS	0	0	0	0

Figure 2-2 Configuration Page screen

Table 2-2 Configuration Page

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Device Information	Lists the serial number, version numbers, and other information for the device.
3	Installed Personalities and Options	Lists: <ul style="list-style-type: none"> ■ Version and TCP/IP address for all network devices connected to the product (Jetdirect or internal Jetdirect) ■ All of the printer languages that are installed (such as printer command language [PCL] and PostScript® [PS]) ■ Options that are installed in each DIMM slot and EIO slot ■ USB devices that can be connected to a printer used as a host USB controller, such as mass storage devices, card swipes, or keypads
4	Memory	Lists the memory information, PCL Driver Work Space (DWS), and resource saving information.
5	Security	Lists the status of the control-panel lock, disk write-protect options, and direct-connect (USB or parallel) ports. You can change the status of the Direct Connect ports on the Security screen under the Settings tab by selecting or clearing the Disable Direct Ports check box.
6	Paper Trays and Options	Lists the size and type of media that is specified for each of the trays in the product. If a duplexing unit or any paper-handling accessories are installed on the product, information about those devices is also listed here.
7	Calibration Information	Lists the last color-plane registration (CPR) page count, the last CPR page-count date, the last page count (in engine cycles) for DMAX/DHALF, and the last DMAX/DHALF page-count date. Color plane registration occurs when new print cartridges are installed to compensate for any slight variations that might occur in cartridge circumference. DMAX is a density calibration of each print cartridge color at 100% coverage; DHALF is also a density calibration of each print cartridge color, but as a halftone instead of a full color. During halftone printing, the dots of toner are spread out, and coverage of the toner is less than 100%. This information also appears on the Diagnostics screen under the Digital Sending Settings tab.
8	Color Density	Lists the cyan, magenta, yellow, and black (CMYK) values for highlights, midtones, and shadows. This information also appears on the Diagnostics screen under the Digital Sending Settings tab.

Supplies Status

The **Supplies Status** screen shows more detailed supplies information and provides part numbers for genuine HP supplies. (It is helpful to have the part numbers available when ordering supplies.) The following illustration and table describe how to use this screen.

HP Color LaserJet XXXXmfp / 192.168.0.10
HP Color LaserJet XXXXmfp Series

Information | Settings | Digital Sending | Networking

1 Information

- Device Status
- Configuration Page
- Supplies Status**
- Event Log
- Usage Page
- Diagnostics Page
- Device Information
- Control Panel
- Print

2 Other Links

- [hp instant support](#)
- [Order Supplies](#)
- [Product Support](#)

Supplies Status

Ordering Information

Hewlett-Packard supplies can be ordered on the Internet, on-line through your device software, or by calling an authorized **3** Refer to your User Guide for instructions. **4**

Supply Type	Order HP Part	Level	Estimated Pages Remaining	Low Reached	Serial Number	Pages printed with this supply	First Install Date	Last Used Date
Black Cartridge	Q5950A	76%	10033	NO	33554451	967	20041216	20050120
Cyan Cartridge	Q5951A	49%	3833	NO	33554663	3990	20040203	20050120
Magenta Cartridge	Q5953A	52%	4322	NO	33554591	3990	20040203	20050120
Yellow Cartridge	Q5952A	95%	8714	NO	33554692	1286	20041214	20050120
Image Transfer Kit	Q7504A	100%	-	-	-	-	-	-
Image Fuser Kit	110V-Q7502A, 220V-Q7503A	99%	-	-	-	-	-	-

Staples


OK

Return & Recycling

Please return your genuine HP supplies for recycling to Hewlett-Packard. For more information, please visit us at <http://www.hp.com/go/recycle>

Figure 2-3 Supplies Status screen

Table 2-3 Supplies Status

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Order Supplies link	Use this feature to connect to a Web page that facilitates online ordering of supplies from a reseller of your choice.
3	Print Cartridge Information	<p>If available, this lists the percent of life remaining and the estimated number of pages remaining before the supply is empty; the total number of pages that have been processed with the supply; the supply serial number and HP part number; and an indication of whether or not the supply has reached the low status.</p> <p>If the Override at Out option has been enabled at the product control panel, a message appears, when the supply is exhausted, stating that the cartridge was used with the override setting.</p> <p> NOTE If a non-HP supply is used, information about the device might not be available. In addition, a warning message about the risks associated with using non-HP supplies could appear on the screen. No further information about the status of the supply will be available.</p>
4	Long-Life Supplies Information	If available, this lists the percent of life remaining and the estimated number of pages remaining with the supply.

Event Log

The **Event Log** screen shows the most recent product events, including jams, service errors, and other printer errors. The following illustration and table describe how to use this screen.

Figure 2-4 Event Log screen

Table 2-4 Event Log

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Number	Lists the order in which the errors occurred. The last error to occur has the highest number.
3	Date and Time	Lists the date and time for each event logged.
4	Engine Cycles	Shows the number of engine cycles that the product had completed when the error occurred. The product completes one engine cycle for every Letter/A4-size page side that it prints or copies.
5	Current Engine Cycles	Shows the number of engine cycles that the product has completed to date.
6	Event	Shows the internal event code for each event.

Table 2-4 Event Log (continued)

Callout	Area on the screen	Information or capability that the area provides
7	Description or Personality	Shows a brief description of some events.
8	Product Support link	Provides access to the HP support Web site for product-specific troubleshooting information.

Usage Page

The **Usage Page** screen gives a page count for each size of media that has passed through the product, as well as the number of duplexed pages. The total is calculated by multiplying the sum of the print count values by the Units value.

The information on this screen can be used to determine how much toner or paper to keep on hand. The following illustration and table describe how to use this screen.

1 Information menu

2 Usage Page menu item

3 Usage Totals (equivalent)

4 PRINTED COPY & FAX table

5 Print Modes & Paper Path Usage (actual)

6 Historical Device Coverage

Page Size	MONO		COLOR		Units	DUPLX		1-BRIDGE		2-BRIDGE	
	Count	Units	Count	Units		Count	Units	Count	Units	Count	Units
LETTER	70	152	1.0	14	70	2.0	88.0	292.0	390.0	14	0
LEGAL	0	0	1.3	0	0	2.6	0.0	0.0	0.0	0	0
A4	0	0	1.0	0	0	2.0	0.0	0.0	0.0	0	0
EXECUTIVE	0	0	0.8	0	0	1.6	0.0	0.0	0.0	0	0
ENVELOPE #10	0	0	0.4	**	**	**	0.0	0.0	0.0	**	**
ENVELOPE MONARCH	0	0	0.3	**	**	**	0.0	0.0	0.0	**	**
ENVELOPE CS	0	0	0.6	**	**	**	0.0	0.0	0.0	**	**
ENVELOPE DL	0	0	0.4	**	**	**	0.0	0.0	0.0	**	**
ENVELOPE B5(JIS)	0	0	0.7	0	0	1.4	0.0	0.0	0.0	0	0
ENVELOPE B6	0	0	0.7	**	**	**	0.0	0.0	0.0	**	**
CUSTOM	0	0	1.0	**	**	**	0.0	0.0	0.0	**	**
DPOSTCARD (S)	0	0	1.0	**	**	**	0.0	0.0	0.0	**	**
A5	0	0	0.5	**	**	**	0.0	0.0	0.0	**	**
18K	0	0	0.8	**	**	**	0.0	0.0	0.0	**	**
EXECUTIVE (S)	0	0	1.1	**	**	**	0.0	0.0	0.0	**	**
8.5x13	0	0	1.1	**	**	**	0.0	0.0	0.0	**	**
STATEMENT	0	0	0.5	**	**	**	0.0	0.0	0.0	**	**
TOTAL						98.0	292.0	390.0			

Page Size	SIMPLEX Count	SIMPLEX Units	DUPLX Count	DUPLX Units	Total
LETTER	0	1.0	0	2.0	0.0
LEGAL	0	1.3	0	2.6	0.0
A4	0	1.0	0	2.0	0.0
EXECUTIVE	0	0.8	0	1.6	0.0
B5(JIS)	0	0.7	0	1.4	0.0
A5	0	0.5	0	1.0	0.0
8.5x13	0	1.1	**	**	0.0
STATEMENT	0	0.5	**	**	0.0
Total Scanner Usage					0.0

Print Mode	Mono	Color	Total
AUTO SENSE MODE	99	292	390
NORMAL MODE	0	0	0
LIGHT MODE	0	0	0
HEAVY MODE	0	0	0
CARDSTOCK MODE	0	0	0
TRANSPARENCY MODE	0	0	0
ENVELOPE MODE	0	0	0
LABEL MODE	0	0	0
TOUGH PAPER MODE	0	0	0
XRESISTIVE MODE	0	0	0
EXTRA-HEAVY MODE	0	0	0
HUMID TRNS MODE	0	0	0
HUMID TOUGH MODE	0	0	0
GLOSSY MODE	0	0	0
HEAVYGLOSSY MODE	0	0	0
INTERMEDIATE MODE	0	0	0
ROUGH MODE	0	0	0
XHYGLOSSY MODE	0	0	0
4MM TRNS MODE	0	0	0
LT TROUGH MODE 1	0	0	0
LT TROUGH MODE 2	0	0	0
Total			390

Source	Count	Destination	Count
Envelope Feeder	0	Face Up	0
Manual Feed Tray	0	Face Down	390
Tray 1	0	External Bin	0
Tray 2	126	Other	0
Tray 3	0	Total	390
External Tray	0		
Other	264		
Total	390		

Color	Percentage
Black	4.9%
Cyan	5.4%
Magenta	3.6%
Yellow	2.7%

Figure 2-5 Usage Page screen

Table 2-5 Usage Page

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Usage Totals (equivalent)	Indicates the types of pages that have been printed, the number of single-sided pages that have been printed, the number of duplexed pages that have been printed, and the total number of pages that have been printed.
3	Units	A unit is equal to a standard A4-size (letter-size) page. All other page sizes are referenced in relation to this standard size. An A4-size (letter-size) page printed on both sides counts as 2 units.
4	Duplex 1 Image	“Duplex 1 image” refers to pages that are printed as part of a duplexed print job, but which are blank on the second side.
5	Print Modes & Paper Path Usage (actual)	Indicates the different print modes that have been used for color and monochrome (black-and-white) print jobs.
6	Historical Printer Coverage	Indicates the average amount of toner that is used on each printed page.

Diagnostics Page

The **Diagnostics Page** screen provides information about calibration, color density, and parameters.

HP Color LaserJet XXXXmfp / 192.168.0.10
HP Color LaserJet XXXXmfp Series

Information Settings Digital Sending Networking Log Off

1 Information

Device Status
Configuration Page
Supplies Status **2**
Event Log
Usage Page
Diagnostics Page **3**
Device Information
Control Panel
Print

Other Links
[hp instant support](#)
[Order Supplies](#)
[Product Support](#) **4**

Diagnostics Page

Calibration Information

Last CPR (Engine Cycles): 390
Last CPR: 13 Jan 2005/08:25
Last DMax/DHalf (Engine Cycles): 0

Color Density

	C	M	Y	K
HIGHLIGHTS	0	0	0	0
MIDTONES	0	0	0	0
SHADOWS	0	0	0	0

Parameters

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z	AABB			
1	00	00	00	00	04	0C	10	13	17	18	1D	22	28	2C	30	35	3A	3F	3F	43	45	45	48	49	4C	4E	54	5A	
2	5F	62	63	68	86	9C	A8	B1	B3	BB	68	AE	6A	6F	76	8B	97	9A	A0	A5	AE	B5	B7	B9	6A	B1	00	00	
3	00	00	00	00	00	00	00	00	16	14	10	14	14	12	17	1A	1F	1F	27	28	2C	34	36	34	37	3D	43	47	
4	47	4B	49	4A	4E	50	56	5F	63	64	64	65	89	AA	B8	C4	C6	CB	68	C1	72	75	7E	91	A5	A5	A9	AD	
5	BB	C4	C8	C9	6A	C2	00	00	00	00	00	00	00	00	00	01	02	07	0A	0B	05	04	0A	16	18	1E			
6	22	20	1F	25	27	2C	2D	2E	30	34	36	3B	3E	41	42	44	45	46	46	47	64	7C	90	9F	AC	B9	4D	9D	
7	54	59	60	6E	76	7D	86	8C	97	A7	B1	B7	50	A1	00	00	00	00	00	00	00	00	00	00	00	00	02	08	
8	0B	0B	0E	08	09	0D	0F	17	1B	1E	24	26	2A	2C	2C	30	34	38	3E	3F	43	46	49	47	4B	4E	4F	4F	
9	84	AB	C8	D7	DE	DF	5A	D2	68	6E	76	8A	9D	AD	B6	BB	CC	DD	DF	DF	5F	DB	00	00	00	00	00	00	
10	00	00	00	00	00	00	00	00	04	0C	10	13	17	18	1D	22	28	2C	30	35	3A	3F	3F	43	45	45	48	49	
11	4C	4E	54	5A	5F	62	63	68	86	9C	A8	B1	B3	BB	68	AE	6A	6F	76	8B	97	9A	A0	A5	AE	B5	B7	B9	
12	6A	B1	00	00	00	00	00	00	00	00	00	00	16	14	10	14	14	12	17	1A	1F	1F	27	28	2C	34	36	34	
13	B7	3D	43	47	47	4B	49	4A	4E	50	56	5F	63	64	64	65	89	AA	B8	C4	C6	CB	68	C1	72	75	7E	91	
14	A5	A5	A9	AD	BB	C4	C8	C9	6A	C2	00	00	00	00	00	00	00	00	00	00	01	02	07	0A	0B	05	04		
15	0A	16	18	1E	22	20	1F	25	27	2C	2D	2E	30	34	36	3B	3E	41	42	44	45	46	46	47	64	7C	90	9F	
16	AC	B9	4D	9D	54	59	60	6E	76	7D	86	8C	97	A7	B1	B7	50	A1	00	00	00	00	00	00	00	00	00	00	
17	00	00	02	08	0B	0B	0E	08	09	0D	0F	17	1B	1E	24	26	2A	2C	2C	30	34	38	3E	3F	43	46	49	47	
18	4B	4E	4E	4F	84	AB	C8	D7	DE	DF	5A	D2	68	6E	76	8A	9D	AD	B6	BB	CC	DD	DF	DF	5F	DB	00	00	
19	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	
20	FD	E4	FE	70	02	1C	FD	E4	FF	F1	FF	FB	FF	E7	00	00	FF	E7	FF	F6	FF	D8	00	00	00	00	00	00	
21	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	
22	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	
23	00	00	00	00	00	C8	00	00	00	00	00	00	00	00	3C	00	00	8C	00	8C	00	8C	00	8C	02	54	02	02	
24	06	90	0E	BC	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	20	F4	0E	
25	02	24	02	24	20	2E	00	20	00	00	00	00	42	44	48	40	0C	0D	10	11	1A	1B	1E	1F	26	27	2E	2F	
26	3A	3B	40	43	46	47	58	59	60	61	6A	6B	78	79	7C	7D	84	85	94	9F	A4	A5	AA	B1	B4	B5	C1	C9	
27	CC	CF	D6	D7	DC	EF	F2	F7	0E	0F	18	19	1E	1F	40	5D	6C	6F	7C	7D	80	87	90	57	00	01	06	0D	
28	22	25	2A	2B	2E	2F	32	38	44	49	4E	7F	80	FF	00	FF	00	FF	01	FF	00	FF	00	FF	00	FF	00	FF	00
29	00	FF	00	13	00	FF	00	FF	C9	AF	60	66	73	59	64	2F	CA	CB	6C	CC	CD	68	CE	CF	00	00	64	0A	
30	00	00	2F	54	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	
31	00	00	00	00	00	00	00	00	00	00	00	00	7F	7F	7F	7F	64	64	64	64	64	64	64	64	00	00	00	08	00
32	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
33	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
34	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
35	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00
36	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00	00

Figure 2-6 Diagnostics Page screen

Table 2-6 Diagnostics Page

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .

Table 2-6 Diagnostics Page (continued)

Callout	Area on the screen	Information or capability that the area provides
2	Calibration Information	<p>Lists the last color-plane registration (CPR) page count, the last CPR page-count date, the last page count (in engine cycles) for DMAX/DHALF, and the last DMAX/DHALF page-count date.</p> <p>Color plane registration occurs when new print cartridges are installed to compensate for any slight variations that might occur in cartridge circumference.</p> <p>DMAX is a density calibration of each print cartridge color at 100% coverage; DHALF is also a density calibration of each print cartridge color, but as a halftone instead of a full color. During halftone printing, the dots of toner are spread out, and coverage of the toner is less than 100%.</p>
3	Color Density	<p>Lists the cyan, magenta, yellow, and black (CMYK) values for highlights, midtones, and shadows.</p>
4	Parameters	<p>For color devices, specific engine settings related to the printing or electrophotographic process are critical in identifying device status and function. The electrophotographic parameters, which are used to detect, diagnose, and track print-quality defects, appear in a 272-cell binary array that contains the settings registered by the device engine. These registers also appear at the bottom of the Diagnostics Page screen.</p>

Device Information

The **Device Information** screen shows the device name, asset number, company name, contact person, device location, and the device's TCP/IP address, name, model, and serial number.

The device name, asset number, company name, contact person, and device location can be configured from the **Device Information** screen, which is located on the **Settings** tab.

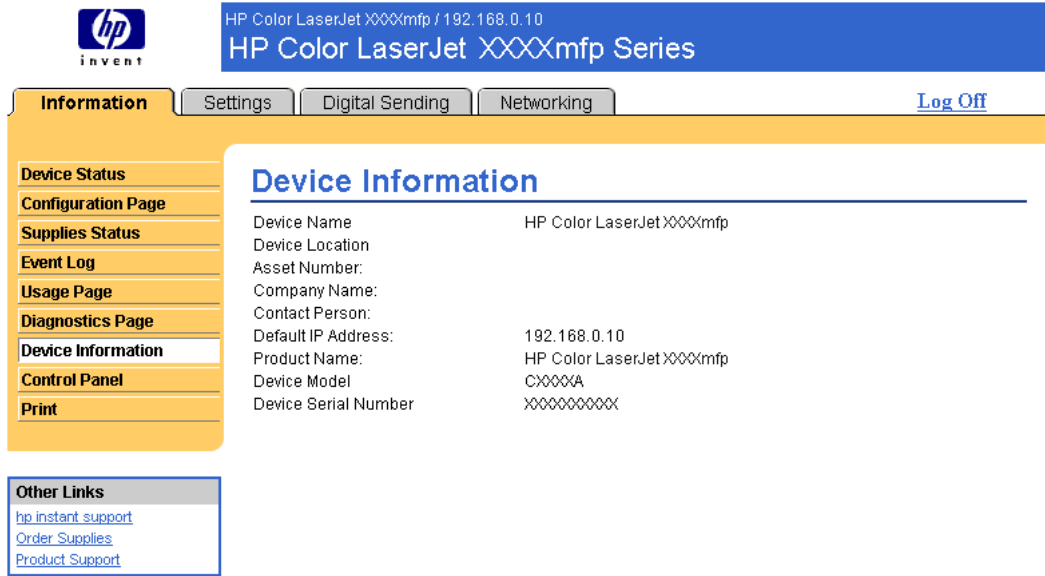


Figure 2-7 Device Information screen

Control Panel

For products that have a control panel, the **Control Panel** screen shows the product control-panel display as if you were standing at the product. Because this view shows the product status, it can help you troubleshoot problems with the product.



NOTE The appearance of the screen might vary, depending on your product.



Information

Figure 2-8 Control Panel screen

Print

You can use the **Print** screen to print one file at a time from a product that supports the HP EWS. This feature is especially useful if you are a mobile user, because you do not have to install the product's print driver in order to print; you can print anywhere at any time.

You can print print-ready files, such as documents that have been generated by using a "print to file" driver option. Print-ready files commonly have file name extensions such as .PRN (Windows print-ready File), .PCL (printer control language), .PS (postscript), .PDF (Adobe Portable Document Format), and .TXT (text).

The following illustration and table describe how to use this screen.



NOTE The **Print** screen (and the **Print** menu on the left) is available only if it has been configured to appear on the **Security** screen under the **Settings** tab. For more information, see [Security](#).

HP Color LaserJet XXXXmfp / 192.168.0.10
HP Color LaserJet XXXXmfp Series

Information Settings Digital Sending Networking Log Off

1 Information

Device Status
Configuration Page
Supplies Status **2** Device Status **Ready**
Event Log
Usage Page
Diagnostics Page
Device Information **3** Option 1
Control Panel
Print

Print

Identify the document you want to print by using either option shown below, then select the Apply button
Note: To print 'print-ready' documents (e.g.: .ps, .pdf, .pcl, .txt), enter the document file name.

3 Option 1

Select the document to download from your hard disk or network file server.
Choose File Browse...

4 Option 2

Input the address of the document to access via the web. Type the address in a form such as:
http://www.(your_server).com/somefile.ps
Address

Apply Cancel

Figure 2-9 Print screen

Table 2-7 Print page

Callout	Area on screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Device Status	Shows the device status (the same information that appears on the Device Status screen and the control-panel display).
3	Option 1	Prints a file that is located on your laptop, computer, or a network file server.
4	Option 2	Prints a file that you can gain access to on your network.

Printing a file from the Print screen

Use the following procedure to print a file from the **Print** screen.

- 1 Select a file that resides on your machine or on your network by using one of the following options:
 - Click the button under **Option 1** to browse to a file that you want to print.
 - or-
 - Type the uniform resource locator (URL; beginning with "http://") in the **Address** field (under **Option 2**) to print a file that is available over your network.
- 2 Click **Apply**.

3 Configuring the product from the Settings screens

Use the screens on the **Settings** tab to configure the product from your computer.



NOTE Some products do not support all of these screens.

Configure Device

You can use the **Configure Device** screen to print device information pages and configure the device remotely. The following illustration, table, and example procedure describe how to use this screen.

If your device has a control-panel display, these menus are similar to the menus that are available at your device control panel. Some of the device control-panel menus are not available from the HP EWS. See the documentation that came with your device for more information about the different menus that your device supports.

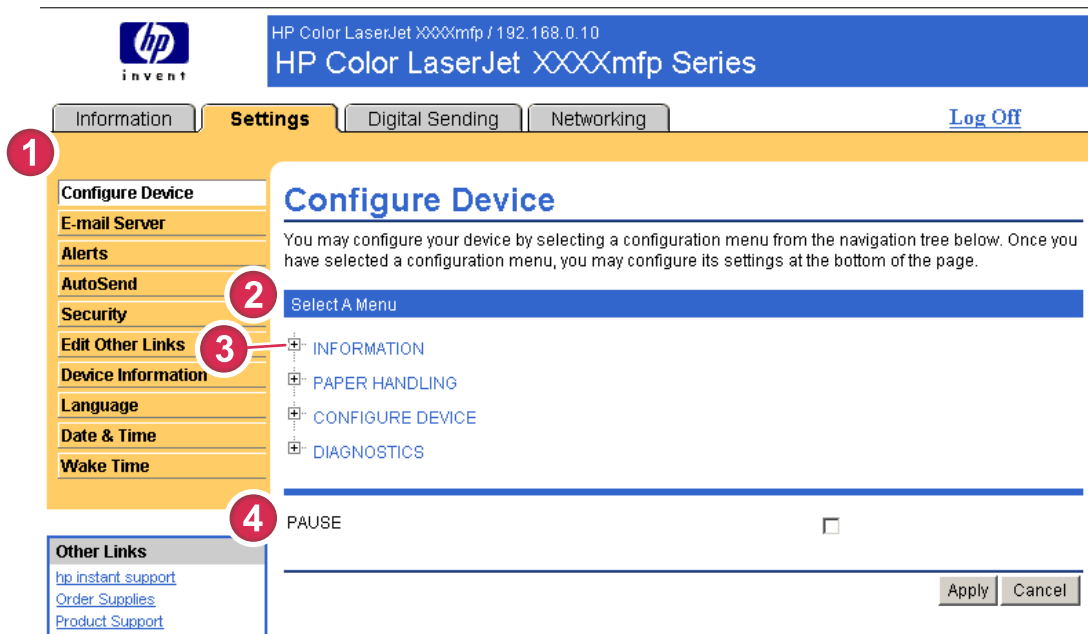


Figure 3-1 Configure Device screen

Table 3-1 Configure Device

Callout	Area on the screen	Information or capability that the area provides	
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .	
2	Select A Menu	INFORMATION menu	Print device information pages, which provide details about the device and its configuration.
		PAPER HANDLING menu	Set the type of media that is in each tray.
		CONFIGURE DEVICE menu	Configure the device to affect the device behavior. For example, you can configure device personality settings from this menu, such as print-quality settings or destination bins.
		DIAGNOSTICS menu	Get information about the device that you can use to troubleshoot problems.
3	Plus sign (+)	Click the plus sign next to a menu, or click the menu itself, to see the submenus or subentries.	
4	PAUSE	Select this check box to pause the device.	

Using the menus on the Configure Device screen

The following procedure is provided *only* as an example. Similar procedures can be used to set other menu items.

Follow these steps to print a configuration page (example procedure).

- 1 Click **INFORMATION**.
- 2 Select the check box for the information page that you want to view or print, and then click **Apply**.



NOTE Print drivers and software programs frequently override selections that are made on the **Printing** menu and the **Paper Handling** menu. For more information, see the user guide that came with your product. Any changes are reflected on the **Device Status** screen, the **Configuration Page** screen, and the **Paper Handling** menu.

E-mail Server

Use the **E-mail Server** screen to configure e-mail settings for outgoing and incoming e-mail. Use the settings on this screen to send and receive e-mail messages, including product alerts. The following illustration, table, and procedures describe how to use this screen.

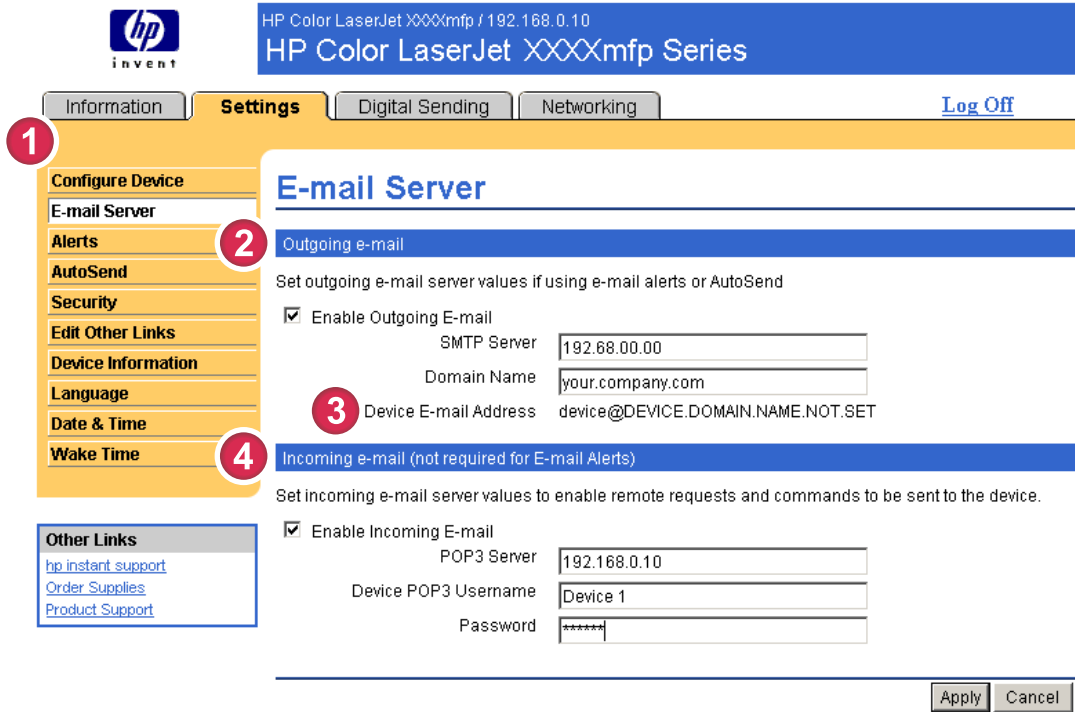


Figure 3-2 E-mail Server screen

Table 3-2 E-mail Server

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Outgoing e-mail	Configure outgoing e-mail if you intend to use the Alerts or AutoSend features. For more information, see Using the Alerts screen with a product .
3	Device E-mail Address	This is the device's e-mail address that appears in device alerts. This is <i>not</i> the e-mail address that you want to use when sending commands to the device. For more information, see Sending e-mail commands to the product .
4	Incoming e-mail (not required for E-mail Alerts)	Configure incoming e-mail if you intend to request information pages from the device by using e-mail messages. For more information, see Sending e-mail commands to the product .

Configuring outgoing e-mail

You must configure outgoing e-mail if you intend to use the Alerts or AutoSend features.

- 1 Gather the following information. (Your organization's network or e-mail administrator typically provides the information that is required to configure outgoing mail.)
 - The TCP/IP address of the simple mail transfer protocol (SMTP) mail server on your network. The EWS uses the SMTP server TCP/IP address to relay e-mail messages to other computers.
 - The e-mail domain name suffix that is used to address e-mail messages within your organization.
- 2 Select the **Enable Outgoing E-mail** check box.
- 3 Type the SMTP server TCP/IP address in the **SMTP Server** text box.
- 4 Type the domain name in the **Domain Name** text box.
- 5 Click **Apply** to save the changes.

Configuring incoming e-mail

You should configure incoming e-mail if you intend to request information pages from the product by using e-mail messages. For more information, see [Sending e-mail commands to the product](#).

- 1 Establish a Post Office Protocol 3 (POP3) mailbox account for the product on a mail server within your organization's network.

Each POP3 account requires a user name and a password. The user name combined with the product's domain name (which is specified in the outgoing mail configuration) is the e-mail address for the product. For example, if the POP3 mailbox account user name is "product" and the POP3 server is "hp.com", the product's e-mail address is "product@hp.com".



NOTE Each product that is configured for incoming mail must have its own POP3 mailbox account on your network's e-mail server. The POP3 mailbox accounts are typically configured by your organization's network or e-mail administrator.



CAUTION Make sure that you do not use your personal e-mail account. Doing so could cause all of your e-mail to be deleted. You would receive no notification that this deletion had taken place.

- 2 Select the **Enable Incoming E-mail** check box.
- 3 Type the TCP/IP address of the POP3 mail server in the **POP3 Server** text box.
- 4 Type the user name and password for the product's mailbox account, and then click **Apply** to save the changes.

Alerts

From the **Alerts** screen, IT administrators can set up the product to send problem and status alerts to anyone through e-mail messages. When this function is configured, alerts are automatically triggered about supplies, paper-path status, and other service and advisory information. More than one individual can receive alerts, with each person receiving only specific alerts. For example, an administrative assistant might be responsible for ordering print cartridges or fixing jams, and could receive advanced warning when toner is low or a jam occurs. Similarly, the long-life supplies might be handled by an external service provider, who could receive alerts about performing product maintenance, loading the front or rear stapler, and similar needs.

With a permanent storage device installed, such as a hard disk, a user can create up to four different destination lists, with up to 20 recipients on each list. (Without the permanent storage device, a user can send alerts to only four e-mail addresses.)

By selecting the **Remove Control Panel Supplies Status Messages** option (available on the **Alerts - setup** screen that appears when you press the **New Destination List** button), you can suppress the **Cartridge low** or **Cartridge out** supplies status messages on the control panel. (This applies only to the black print cartridge.) The message is suppressed at the control panel only if one or both of these alerts has first been selected to be received.

The following illustration, table, and procedures describe how to use this screen to edit, test, and delete destinations and destination lists.



NOTE In order for alerts to function, outgoing e-mail must be enabled. To enable outgoing mail, see [Configuring outgoing e-mail](#).



Information

Settings

Digital Sending

Networking

Log Off

1

- Configure Device
- E-mail Server
- Alerts
- AutoSend
- Security
- Edit Other Links
- Device Information
- Language
- Date & Time
- Wake Time

- Other Links
- [hp instant support](#)
 - [Order Supplies](#)
 - [Product Support](#)

Alerts

Alerts are currently configured for the following destination lists. To make changes, click the appropriate button next to the list. Move the pointer over a button for more information.

Note: In order for alerts to function, outgoing mail must be configured on the E-mail Server page.

List Name	Alert Destinations	Selected Alerts	Attachments (optional)
anyone@your.company.com		Order Cartridge Order Fuser Kit Order Transfer Kit Order Document Feeder Kit Replace Cartridge Replace Fuser Kit Replace Transfer Kit Replace Document Feeder Kit Non-HP Supply Installed Device Error 55 DC Controller Error Internal Clock Error Bad Duplexer Connection Duplex Error, Check Duplexer Digital Send LDAP Server Error Digital Send SMTP Server Error Digital Send Server Error Scanner Component Error Copy Processor Communications Error Close Drawers, Doors And Covers Manually Feed 20 Insufficient Memory 41.3 Unexpected Paper Size	

3 Edit
 4 Test
 5 Delete

6 New Destination List

Figure 3-3 Alerts screen

Table 3-3 Alerts

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Destination list summary	Lists the current selections for each destination.
3	Edit	Click this button to make changes to the destination or destination list.
4	Test	Click this button to send a test alert to the destination or destination list.
5	Delete	Click this button to delete the destination or destination list.
6	New Destination List	Click this button to define the settings for a new destination list for alerts.

Using the Alerts screen with a product

With a permanent storage device installed, you can set up four different lists, with up to 20 recipients on each list. Without a permanent storage device, you have room for only four e-mail addresses.

If a permanent storage device is installed, the **Alerts – setup** screen that appears when you click either **Edit** or **New Destination List** looks similar to the following illustration.

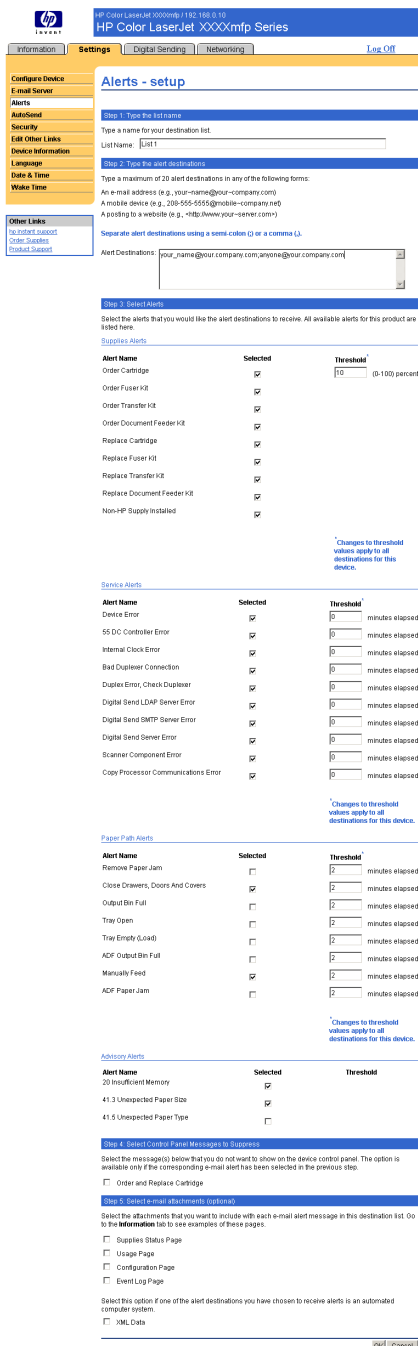


Figure 3-4 Alerts – setup screen

To configure alerts

1 Do one of the following:

- To create a new destination list, click **New Destination List**.

-Or-

- To modify an existing destination list, click **Edit** next to the list that you want to modify.

The **Alerts – setup** screen appears.

2 For products that have permanent storage devices installed, type a name in the **List Name** field, such as Service or Supplies. (If you do *not* have a permanent storage device, continue to step 3.)

3 Type the e-mail addresses for people who you want to receive alerts. In large environments, system administrators can route e-mail addresses to list servers, URLs, and mobile devices for expanded alerts. Add multiple destinations by separating each destination with a comma or semicolon.

4 Select the check box for the alerts that you want to be sent with this destination list. (To see all of the alerts that are available for the product, click **Show All Alerts**.)

5 Where applicable, set the threshold value for the individual alerts.

The threshold value for service alerts and for the paper-path alerts is a user-specified number of minutes. This is the amount of time that an event will be ignored before an e-mail alert message is sent. For example, you might want to set the threshold value for the "Tray Open" alert to 10 minutes to allow someone to close the tray after loading the tray or clearing a jam.

6 Under **Select Control Panel Messages to Suppress**, select messages that you do not want to appear on the product control panel. This step applies only to messages that were selected to be received as alerts.



NOTE If the browser does not accept JavaScript, then the check box for message suppression will be always enabled. The check-box selection is validated when you submit the page by pressing the **Apply** button. If the alerts corresponding to the alerts selected for suppression have not been selected, the **Alerts – setup** screen is reloaded with a warning message, informing you that you must first select the corresponding alerts in order to suppress their appearance on the control panel.

7 Select the attachments that you want to be included with your e-mail alert messages. These attachments can include Supplies Status Page, Usage Page, Configuration Page, Event Log Page, and XML Data. (Go to the **Information** tab to see examples of the pages.) The **XML Data** option should be selected if one of the destinations you have chosen to receive alerts is an automated computer system. Each item that you select will be attached to the e-mail. For example, if you select **Usage Page** and **Event Log Page**, you will receive one e-mail message with two attachments, one for each selection. If you also select the **XML Data** option, you will receive one e-mail message with three attachments: one attachment for the Usage Page in HTML, one for the Event Log in HTML, and a third consisting of instant support information in a text file attachment that has an .XML extension.

8 Click **Apply** to save the information.

9 Repeat steps 1 through 7 for each additional list or destination.

Use the following procedure to test the destination list configuration.

To test the configuration of a destination list

- 1 Click the **Test** button next to the destination list that you want to test. (If no permanent storage device is installed, only one destination can be tested from this window.)

The following window appears.

HP Color LaserJet XXXXmfp / 192.168.0.10
HP Color LaserJet XXXXmfp Series

Information **Settings** Digital Sending Networking [Log Off](#)

Configure Device
E-mail Server
Alerts
AutoSend
Security
Edit Other Links
Device Information
Language
Date & Time
Wake Time

Other Links
[hp.instant.support](#)
[Order Supplies](#)
[Product Support](#)

Alerts - test

You are about to send a test alert to the selected alert destinations. Click **OK** to send the test, or click **Cancel** to return to the main Alerts page without sending the test.

Alert Destinations: anyone@your.company.com

By default, the return address on the test alert is the product's e-mail address. To receive any response that is generated from this test, type your own e-mail address in the following box.

Return Address: Device 1@your.company.com

Message Text:

This is a test alert. You have received this alert because you have been selected to receive information about the following product.

The product does not need attention at this time.

Product:
HP Color LaserJet XXXXmfp

Currently selected alerts:

- Order Cartridge
- Order Fuser Kit
- Order Transfer Kit
- Order Document Feeder Kit
- Replace Cartridge
- Replace Fuser Kit
- Replace Transfer Kit
- Replace Document Feeder Kit
- Non-HP Supply Installed
- Device Error
- 55 DC Controller Error
- Internal Clock Error
- Bad Duplexer Connection
- Duplex Error, Check Duplexer
- Digital Send LDAP Server Error
- Digital Send SMTP Server Error
- Digital Send Server Error
- Scanner Component Error
- Copy Processor Communications Error
- Close Drawers, Doors And Covers
- Manually Feed
- 20 Insufficient Memory
- 41.3 Unexpected Paper Size

Currently selected attachments:

Thank you for using Hewlett-Packard products!

If you want additional notes to appear at the beginning of the test alert, type the information in the following box.

Your Notes (optional):

OK Cancel

Figure 3-5 Alerts – test screen

- 2 If you have a permanent storage device installed, select the destinations that you want to test.

- 3 The return address is the product's e-mail address. Type your e-mail address in the **Return Address** box if you would like to receive messages about any errors that are generated from the test alert (for example, to be notified of an incorrect destination address).
- 4 If applicable, type additional information that you would like to appear at the beginning of the e-mail alert message in the **Your Notes (optional)** text field.
- 5 Click **OK**.

To delete destinations and destination lists

If you have multiple destinations configured, you can delete a destination or destination list by clicking the **Delete** button next to the destination or destination list that you want to delete. Click **OK** to confirm the deletion.

Sending e-mail commands to the product

Another method for receiving information pages is by requesting them from the product. When outgoing and incoming mail are configured, the product can attach information pages, such as the Supplies Status page or the Configuration page, to e-mail messages. You can use this feature to solve a problem or check the status of supplies.

To request information pages by using an e-mail message

When composing a message to the product, you must format the **To**, **From**, and **Subject** fields correctly in your e-mail program.

- 1 Make outgoing and incoming e-mail functions available by following the instructions that are listed in this chapter. (For more information, see [E-mail Server](#))
- 2 From your e-mail program, compose a message to the product by completing the following steps:
 - a In the **To** field, type the product's e-mail address. The user name combined with the product's domain name (which is specified in the outgoing mail configuration) is the e-mail address for the product. For example, if the POP3 mailbox account user name is "product" and the POP3 server is "hp.com", the product's e-mail address is "product@hp.com".
 - b Your e-mail program should automatically complete the **From** field with your return e-mail address.
 - c In the **Subject** field, type the appropriate text for the format and page that you would like to attach. You can request a Configuration page, a Supplies Status page, or an AutoSend page. For example, if you would like to attach the Configuration page in .HTML file format, type `this.configpage?configpage=email&format=html`.

Table 3-4 Requesting information pages using an e-mail message

Page	HTML format	XML format
Configuration page	<code>this.configpage? configPage=email&format=html</code>	<code>this.configpage? configPage=email&format=xml</code>
Supplies Status page	<code>this.configpage? suppliesPage=email&format=html</code>	<code>this.configpage? suppliesPage=email&format=xml</code>

Table 3-4 Requesting information pages using an e-mail message (continued)

Page	HTML format	XML format
AutoSend page ¹	not applicable	this.configpage? autosend=email&format=xml

¹ The AutoSend page is not sent to the sender of the e-mail (as indicated in Step 2b, above). It is sent to the e-mail address specified in the **AutoSend** screen of the **Settings** tab.

3 Click **Send**.

The product checks for new e-mail messages once every 3 minutes. When the product receives the e-mail message, it generates a reply and sends the requested information back to the sender's e-mail address (as specified in the **From** field of the original e-mail message).



NOTE Depending on delays in the network and your organization's mail server, a response might take from 1 minute to several hours to arrive in your e-mail program's inbox. If the **To**, **From**, and **Subject** fields are not correctly formatted in your e-mail message, the product does not send a message in response.

AutoSend

Use the **AutoSend** screen to send product-configuration and supplies-usage information periodically to e-mail destinations of your choice, such as service providers. This feature establishes a relationship with Hewlett-Packard Company or another service provider to provide you with services that include, but are not limited to, print-cartridge replacement, pay-per-page contracts, support agreements, and usage tracking. The following illustration, table, and procedure describe how to use this screen.

With a permanent storage device installed, such as a hard disk, you can add up to twenty AutoSend destinations. (Without the permanent storage device, you can add one e-mail address.) The following example is for a product that does have a permanent storage device installed.

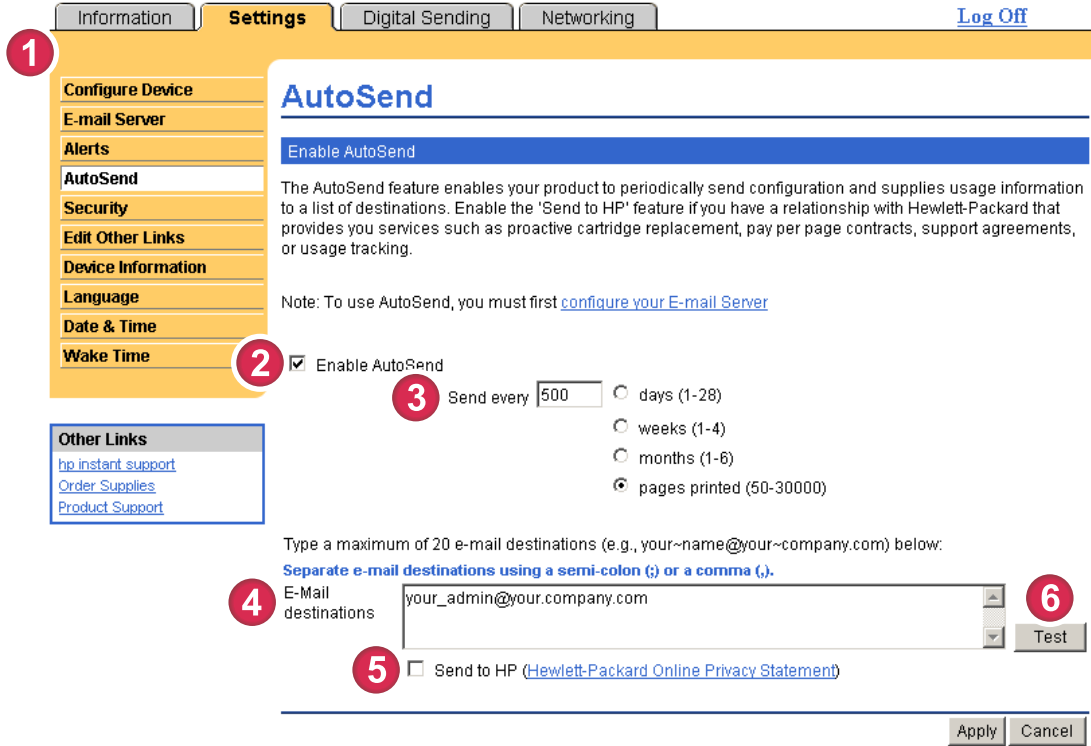


Figure 3-6 AutoSend screen

Table 3-5 AutoSend

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Enable AutoSend	Select this check box to turn on the AutoSend feature.
3	Send every [interval]	Select the interval at which you want the product to send the product configuration and supplies usage information to the destinations that are configured in the E-Mail destinations field.
4	E-Mail destinations	Save a list of up to 20 e-mail addresses to receive the product-configuration information. The first e-mail address can be no more than 50 characters long.
5	Send to HP	Select this check box to send device configuration and supplies status information to HP on a regular basis. The information will be sent to an HP e-mail address (for example, myproduct@hp.com) in a text-based file with an .XML file extension. This file will be created in English. To view more information about how HP treats the information that is sent by AutoSend, click Hewlett-Packard Online Privacy Statement .
6	Test	Click this button to save your settings and to send the information immediately, so that you can make sure that the recipient receives the messages.

To turn on the AutoSend feature

Use the following procedure to make the AutoSend feature available.

- 1 Make outgoing e-mail functions available by following the instructions that are listed in this chapter. (For more information, see [E-mail Server](#).)
- 2 Select the **Enable AutoSend** check box.
- 3 Click an option to specify the interval at which you want the product to send the product-configuration and supplies-usage information to the e-mail recipients (determined in the next step), and then type the number of days, weeks, months, or pages printed.
- 4 For products with permanent storage devices installed, configure up to 20 destinations using the format that appears on the screen. (If you do not have a permanent storage device, you can configure one e-mail address.)
- 5 To send device configuration and supplies status information to HP, select the **Send to HP** check box.
- 6 Click **Apply**.

Security

The following illustration and table describe how to use the **Security** screen.

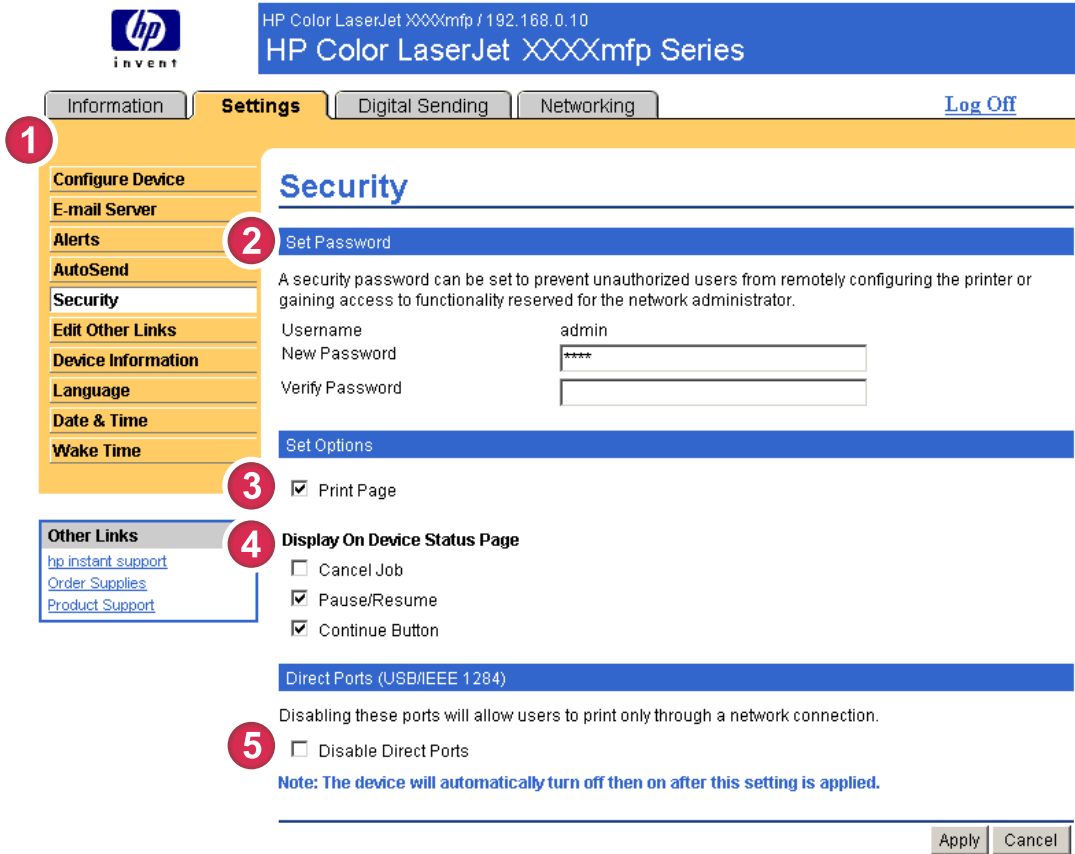



Figure 3-7 Security screen

Table 3-6 Security

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Set Password	Set an administrator password to control who can gain access to the EWS Settings , Digital Sending , and Networking tabs. After the password has been set, users are prompted to type a password when they click the Log In link. For more information, see Login and logoff . To clear a password, remove the characters from the New Password field, leave the Verify Password field empty, and click the Apply button.
3	Print Page	Select to make the Print screen available in the Information tab.
4	Display On Device Status Page	Select the control-panel buttons that you want to appear on the Device Status screen (on the Information tab).
5	Direct Ports	Select Disable Direct Ports

Table 3-6 Security (continued)

Callout	Area on the screen	Information or capability that the area provides
		to block walk-up printing and system access. When the setting is selected and applied, USB and IEEE 1284 ports are disabled.
		 NOTE The Disable Ports section of the Security screen does not appear on the screen when direct-connect devices are not supported or if the HP EWS is currently running over a direct connection.

Edit Other Links

Use the **Edit Other Links** screen to add or customize up to five links to the Web sites of your choice (see the following note). These links appear throughout the HP EWS screens in the **Other Links** box beneath the left navigational bar. Three permanent links (**hp instant support**, **Order Supplies**, and **Product Support**) have already been established. The following illustration, table, and procedures describe how to use this screen.



NOTE With a permanent storage device installed, you can add up to five additional links; without the extra storage, you can add one additional link.

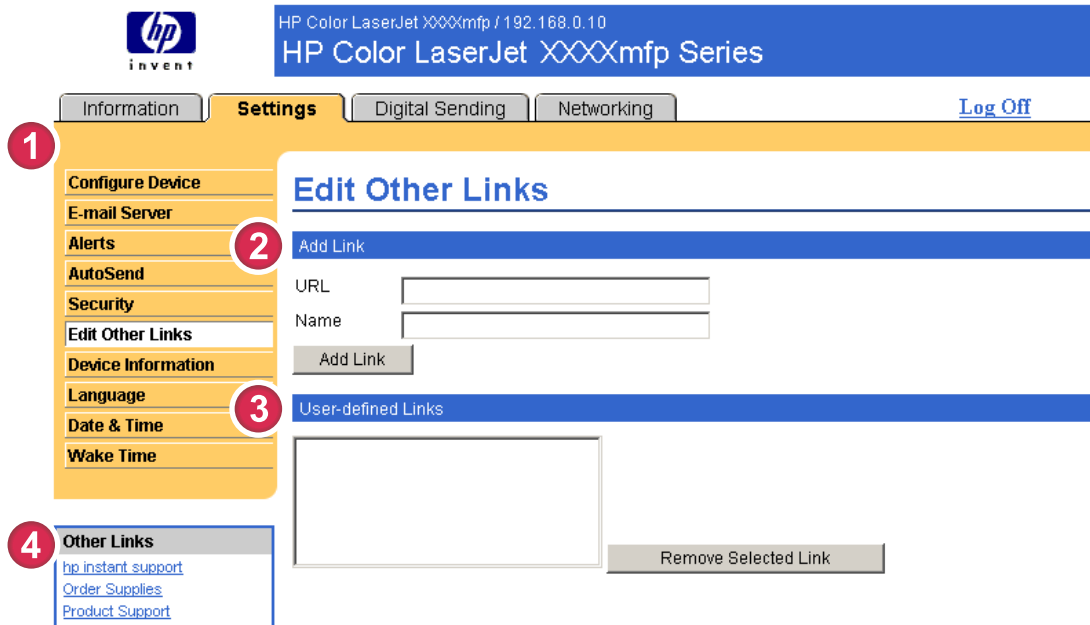


Figure 3-8 Edit Other Links screen

Table 3-7 Edit Other Links

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Add Link	Add a user-defined link.
3	User-defined Links	Lists the user-defined links that have been added. Use this area to delete links.
4	Other Links	<p>hp instant support Connect to Web resources that help you to solve specific problems and determine what additional services are available for your product. (Detailed information, including serial number, error conditions, and status, is forwarded to HP Customer Care. Hewlett-Packard Company treats this information as confidential.)</p> <p>Order Supplies Connect to a Web page that facilitates online ordering of supplies from a reseller of your choice.</p>

Table 3-7 Edit Other Links (continued)

Callout	Area on the screen	Information or capability that the area provides
	Product Support	Gain access to specific product help from the HP Web site.
	My Service Provider	Connect to the home page of your service provider. This link appears only if the service provider has configured it.
	My Service Contract	Connect to a page that shows the terms and limits of your service contract. This link appears only if the service provider has configured it.

Adding a link

Use this procedure to add a link.

- 1 Under **Add Link**, type the URL and the name of the link as you would like it to appear in the HP EWS.
- 2 Click **Add Link**.

Removing a link

Use this procedure to remove a link.

- 1 Under **User-defined Links**, select the link or links that you would like to remove.
- 2 Click **Remove Selected Link**.

Device Information

Use the **Device Information** screen to provide a name of your choice for the device, assign an asset number, and configure the company name, the person to contact about the device, and the physical location of the device. The device TCP/IP address, device name, device model, and serial number are also available on this screen.

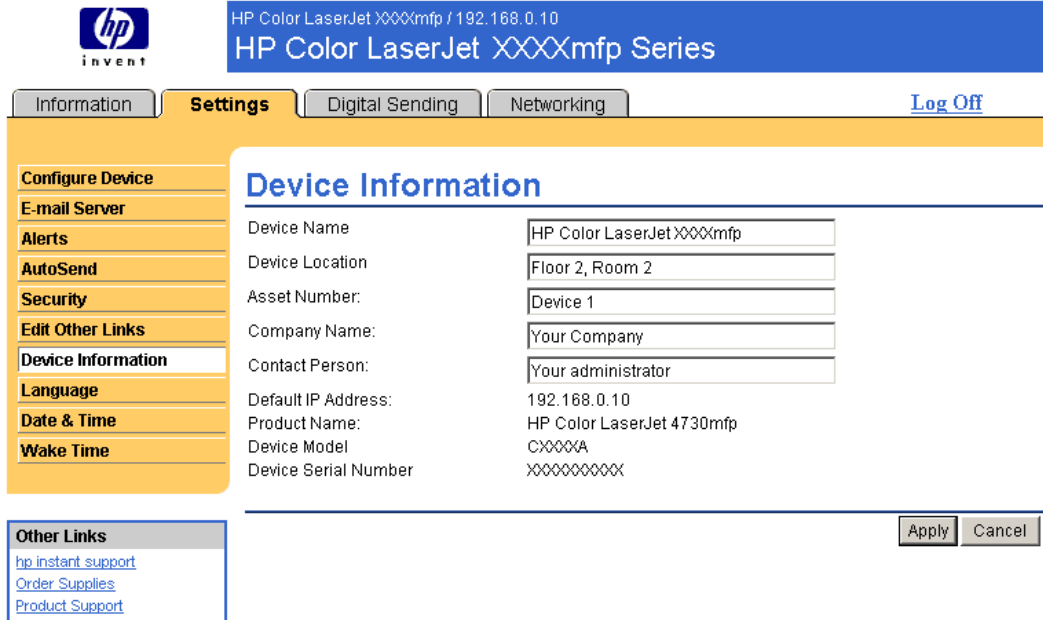


Figure 3-9 Device Information screen



NOTE If you make any changes on the Device Information screen, click **Apply** to save the changes.

The information that is typed here appears on the Device Information screen that can be opened from the **Information** tab. It also appears in e-mail messages that are sent from the product. This might be useful if you need to locate the product to replace supplies or fix a problem.

Language

Use the **Language** screen to select the language in which the HP EWS screens appear. The following illustration and table describe how to use this screen.

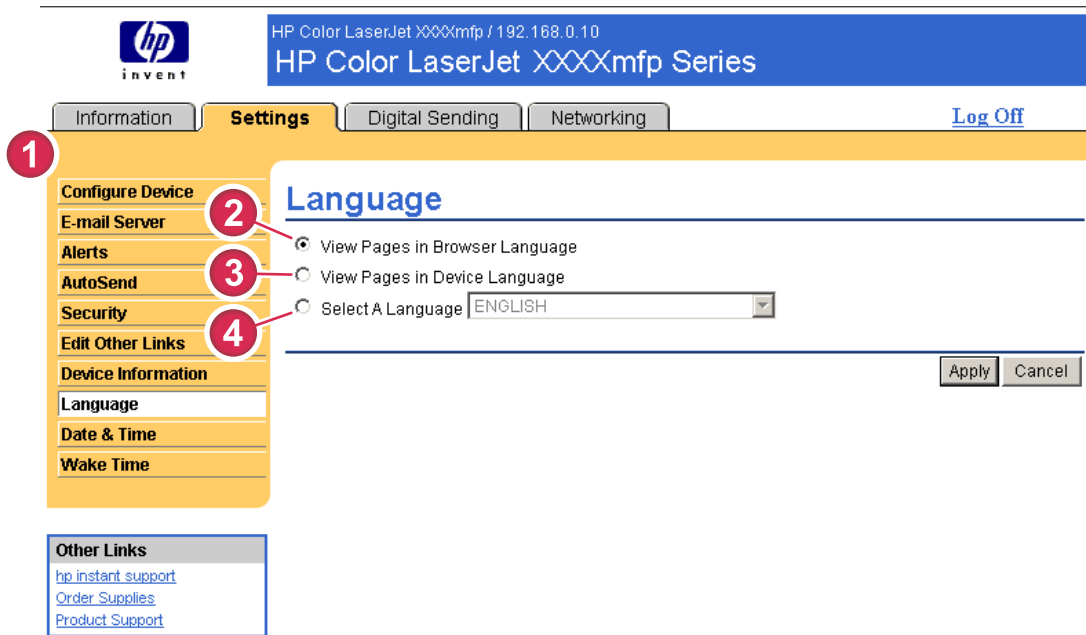


Figure 3-10 Language screen



CAUTION Selecting **View Pages in Device Language** or **Select A Language** changes the language for everyone who uses the HP EWS.

Table 3-8 Language

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	View Pages in Browser Language (this is the default)	Use this feature to detect which language is selected for your Web browser. The HP EWS screens appear in the same language.
3	View Pages in Device Language	Use this feature to detect which language is selected for the device control panel. The HP EWS screen appear in the same language.
4	Select A Language	Select the language for the HP EWS screens from these choices: <ul style="list-style-type: none">■ English■ Français (French)■ Deutsch (German)■ Italiano (Italian)■ Español (Spanish)■ Svenska (Swedish)■ Dansk (Danish)■ Norsk (Norwegian)■ Nederlands (Dutch)■ Suomi (Finnish)■ Português (Portuguese)



NOTE The default language is the language that the Web browser is currently using. If your browser and control panel both use a language that is not available for the HP EWS, English is selected as the default. If you make any changes on the Language screen, click **Apply** to save your changes.

Date & Time

Use the **Date & Time** screen to update the product time. The following illustration and table describe how to use this screen.

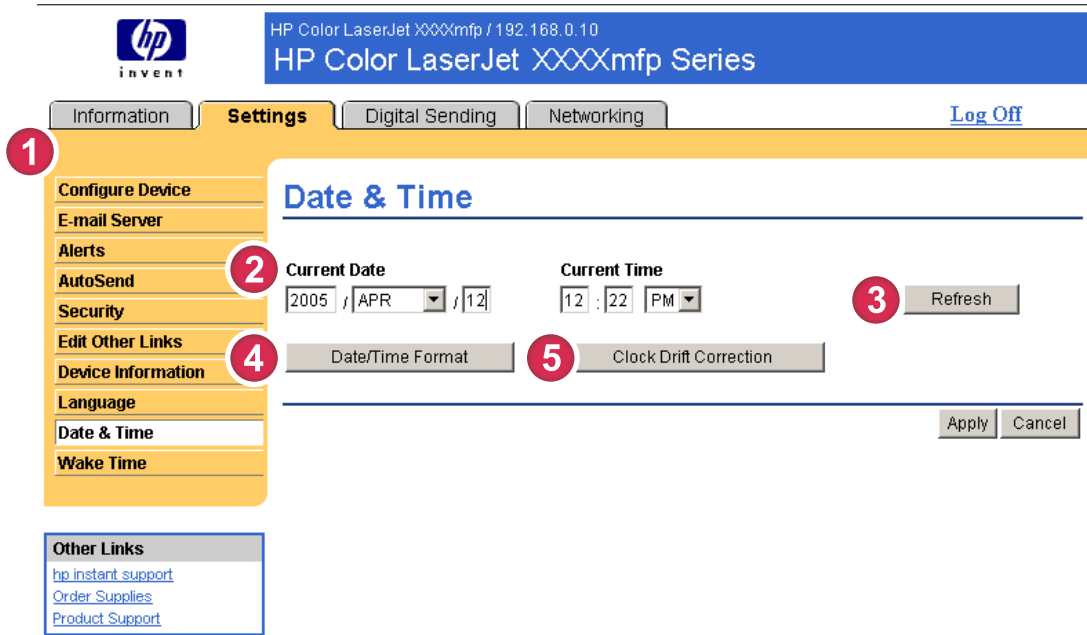


Figure 3-11 Date & Time screen

Table 3-9 Date & Time

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Current Date and Current Time	Shows the product date and time when the EWS was opened. If either is incorrect, an IT administrator can change the information at the product control panel or through this HP EWS page.
3	Refresh	Click this button to update the product date and time on the screen. For more information, see Date/Time Format .
4	Date/Time Format	Click this button to open a screen where you can select the date and time format.
5	Clock Drift Correction	Click this button to configure a network time server. This corrects clock drift by using a network time server of your choice. For more information, see Clock Drift Correction .

Date/Time Format

Use the **Date/Time Format** screen to select the formats you prefer for displaying the date (under **Date Format**) and time (under **Time Format**). The following illustration shows the **Date/Time Format** screen.

The screenshot shows the HP Color LaserJet XXXXmfp Series Settings screen. The top navigation bar includes 'Information', 'Settings', 'Digital Sending', and 'Networking', with a 'Log Off' link on the right. The left sidebar lists various settings categories, with 'Date & Time' selected. The main content area is titled 'Date/Time Format' and is divided into two sections: 'Date Format' and 'Time Format'. Under 'Date Format', three radio button options are listed: 'MMM DD YYYY', 'DD MMM YYYY', and 'YYYY MMM DD', with the third option selected. Under 'Time Format', two radio button options are listed: '12 hours' (selected) and '24 hours'. At the bottom right of the main content area are 'OK' and 'Cancel' buttons. Below the main content area is an 'Other Links' section with three links: 'hp instant support', 'Order Supplies', and 'Product Support'.

Clock Drift Correction

Use the **Date & Time – clock drift correction** screen to enable clock drift correction. The following illustration shows the screen.

The screenshot shows the HP Color LaserJet XXXXmfp Series Settings screen for 'Date & Time - clock drift correction'. The top navigation bar is identical to the previous screen. The left sidebar shows 'Date & Time' selected. The main content area is titled 'Date & Time - clock drift correction' and contains a 'Clock Drift Correction' section. Below this section is a descriptive paragraph: 'When enabled, this feature will find a Network Time Server (NTS), if available, and automatically correct the clock drift. If another server is preferred, enter that servers IP address.' Below the text is a checked checkbox labeled 'Enable Clock Drift Correction'. Underneath are three input fields: 'Network Time Server Address' with the value '192.168.0.10', 'Local Port to Receive Time from Server' with the value '1230' and a '(1100-1900)' range indicator to its right, and 'Time Server Status' with the text 'The server has been configured and is responding'. Below these fields is a button labeled 'Automatically Find Server'. At the bottom of the main content area is a note: 'Note: This feature corrects the clock drift; it does not set the clock.' At the bottom right of the main content area are 'OK' and 'Cancel' buttons. Below the main content area is an 'Other Links' section with three links: 'hp instant support', 'Order Supplies', and 'Product Support'.

To configure a network time server to correct the product clock drift, use the following procedure.



NOTE This process keeps the clock from drifting (losing or gaining time), but does **not** synchronize the clock with the network time server clock.

- 1 Select the **Enable Clock Drift Correction** check box.
- 2 In the **Network Time Server Address** field, type the TCP/IP address of the clock which you want to use for correction of the product clock drift.



NOTE Alternatively, you can click the **Automatically Find Server** button to find a time server on your network and automatically fill in this field.

- 3 In the **Local Port to Receive Time from Server** field, type the name of the appropriate port.
- 4 Click **OK**.



NOTE Use this screen only to configure the time server for clock drift correction, not to set the clock. To set the clock, use the main **Date & Time** screen. For further information, see [Date & Time](#).

Wake Time

An IT administrator can use the **Wake Time** screen to schedule product wakeups on a daily basis. For example, the product can be set to wake up at 07:30, so the product has finished initializing and calibrating and is ready to use by 08:00. The administrator sets only one wakeup setting per day; however, each day can have a different wakeup setting. Additionally, to save energy, the sleep delay can be set to turn the product off after a specific period of inactivity.

The screenshot shows the HP Color LaserJet Embedded Web Server interface. At the top, there's a header with the HP logo and 'invent' text, and a blue bar with the product name 'HP Color LaserJet XXXXmfp Series'. Below this are tabs for 'Information', 'Settings', 'Digital Sending', and 'Networking', with 'Settings' being the active tab. A 'Log Off' link is in the top right. On the left, a vertical menu lists various settings: 'Configure Device', 'E-mail Server', 'Alerts', 'AutoSend', 'Security', 'Edit Other Links', 'Device Information', 'Language', 'Date & Time', and 'Wake Time'. Below this is an 'Other Links' section with links to 'hp instant support', 'Order Supplies', and 'Product Support'. The main content area is titled 'Wake Time' and contains the following text: 'Setting a Wake Time is useful for ensuring the product is Ready at a certain time and not in Sleep Mode. For example, to make sure the product is Ready at 7:45, set the Wake Time for 7:30, then set a Sleep Delay of 30 minutes or longer so people have time to use the product before it re-enters Sleep Mode.' Below this is a section for selecting days and times, with a table:

Week Day	Wake Time
<input type="checkbox"/> Sunday	07 : 30 AM
<input checked="" type="checkbox"/> Monday	07 : 30 AM
<input checked="" type="checkbox"/> Tuesday	07 : 30 AM
<input checked="" type="checkbox"/> Wednesday	07 : 30 AM
<input checked="" type="checkbox"/> Thursday	07 : 30 AM
<input checked="" type="checkbox"/> Friday	07 : 30 AM
<input type="checkbox"/> Saturday	07 : 30 AM

Below the table is a 'Sleep Delay' section with the text: 'The product will enter Sleep Mode to save energy if not in use for the period of time set below.' and a dropdown menu set to '4 HOURS'. A note states: 'Note: Once a Sleep Delay is applied, Sleep Mode will be automatically enabled. It may take a while for the product to return to Ready once it is in Sleep Mode.' At the bottom right, there are 'Apply' and 'Cancel' buttons.

Figure 3-12 Wake Time screen

Table 3-10 Wake Time

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Wake Time	Select one or more days on which to use the wakeup setting, and then set the time the product is turned on each day.
3	Sleep Delay	Set the amount of time the product is idle before it goes into Sleep Mode. When the product is in Sleep Mode, it uses less energy.

4 Setting the digital sending options

Administrators can use the screens available from the **Digital Sending** tab to control the digital-sending features that some products offer.



NOTE Some products do not support all of these screens.

Using the HP DSS software

The product includes the Digital Sending Software (HP DSS) which can be used to carry out its digital-sending tasks. If the HP DSS has been installed, all HP DSS screens are available for read-only access. However, if you try to apply changes in any of the HP EWS **Digital Sending** screens, the following message appears:

The device is being serviced by the Digital Sending Software at <IP address>. Please use Windows Configuration Utility to configure the device.

In this case, the digital sending options must be configured by using the HP MFP DSS Configuration Utility. This centralizes the configuration tasks and helps control security.

General

Use the **General** screen to set digital-sending administrator information. The following illustration and table describe how to use this screen.

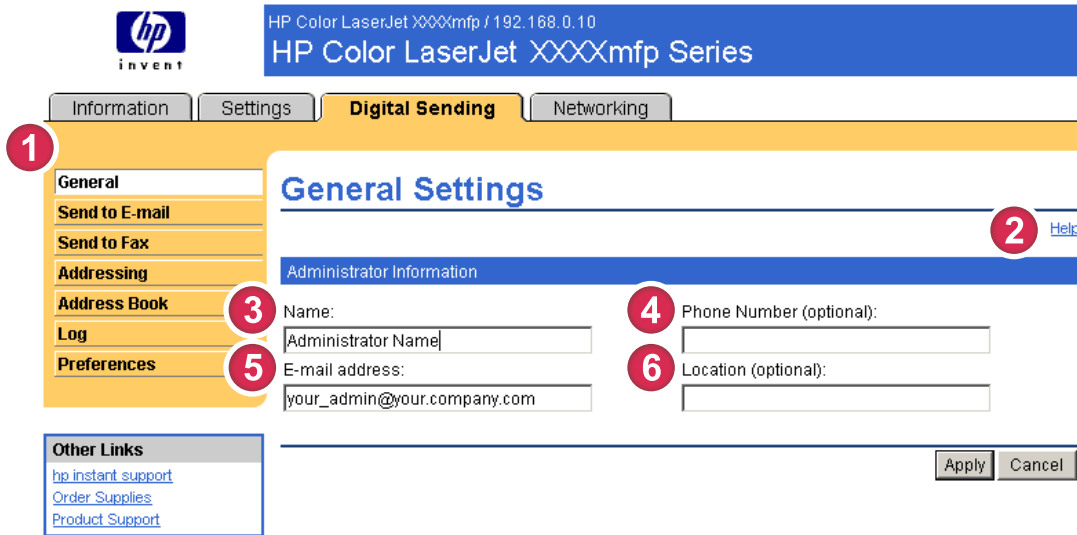


Figure 4-1 General Settings screen

Table 4-1 General Settings

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Help	Click to open a help file that contains information about the screens on the Digital Sending tab.
3	Name	Type the administrator's name.
4	Phone Number (optional)	Type the administrator's phone number (optional).
5	E-mail address	Type the administrator's e-mail address. The device does not accept e-mail addresses that are not properly formatted.
6	Location (optional)	Type the administrator's location (optional).

Send to E-mail

The product requires a Simple Mail Transfer Protocol (SMTP) gateway server to forward e-mail messages to a destination. If the SMTP gateway is not responding or has not been configured, the following message appears on the screen:

'0.0.0.0' is not responding or is not a valid SMTP Gateway Server.

Use the **E-mail Settings** screen to configure SMTP settings, set the maximum e-mail attachment size, and set the default e-mail address for the product. You can also set a default subject for all e-mail messages that the product sends. The following illustration and table describe how to use this screen.

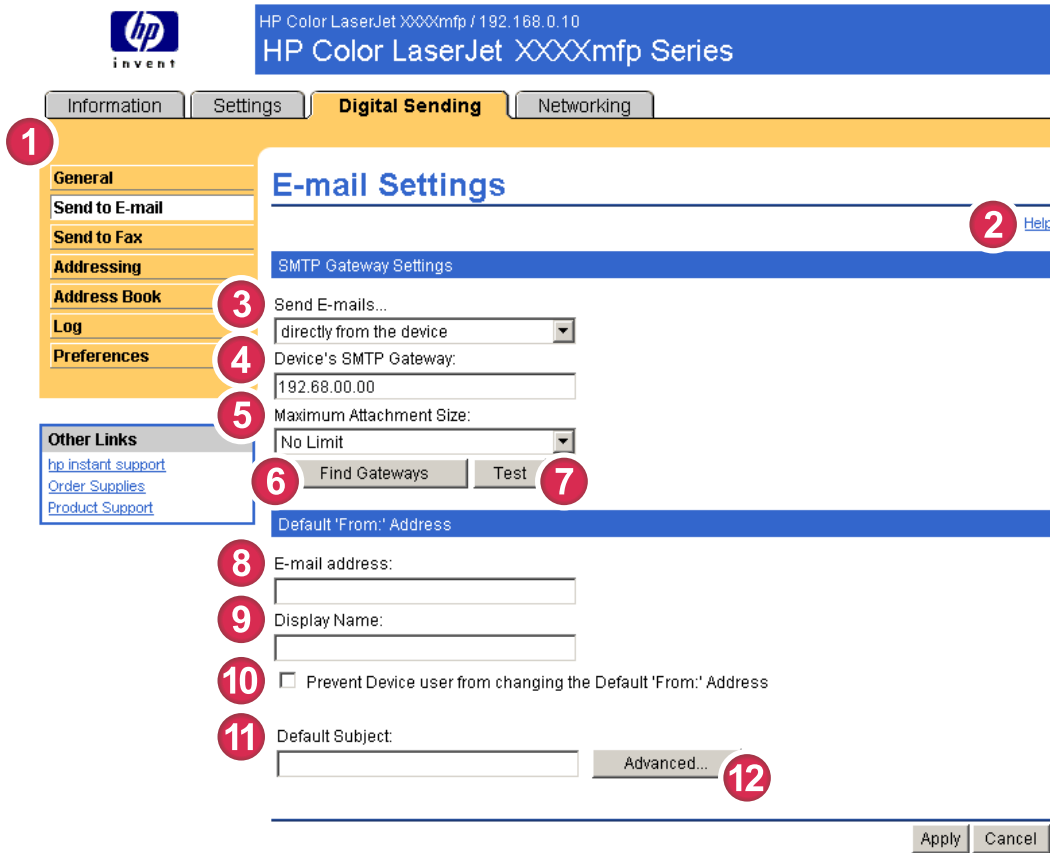




Figure 4-2 E-mail Settings screen

Table 4-2 E-mail Settings

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Help	Click to open a help file that contains information about the screens on the Digital Sending tab.
3	Send E-mails	Send e-mail messages to the SMTP Gateway server directly from the product.
4	Device's SMTP Gateway	Type the TCP/IP address or the host name of the SMTP Gateway server that will manage the e-mail requests from the device. If you do not know the TCP/

Table 4-2 E-mail Settings (continued)

Callout	Area on the screen	Information or capability that the area provides
		IP address or the host name of the SMTP Gateway, click the Find Gateways button to search the network for a suitable SMTP Gateway server.  NOTE Some devices recognize only TCP/IP addresses. In such cases, host names will be converted to the equivalent TCP/IP address.
5	Maximum Attachment Size	Select the maximum size of e-mail attachments that the SMTP Gateway server can transmit. If the product needs to send an e-mail attachment that is larger than the maximum size that is specified, the attachment is broken into smaller files, which are sent in multiple e-mail messages.
6	Find Gateways	If you do not know the TCP/IP address or the host name of the SMTP Gateway, click this button to search the network for a suitable SMTP Gateway server.
7	Test	Click this button to verify that the specified SMTP Gateway server is valid and operational.
8	E-mail address	Type the e-mail address of the person who will act as the default sender.
9	Display Name	Type the name that you want to appear in the "From" field for the e-mail messages that are sent from the product. You can also use this field to include instructions, such as "Please type your e-mail address here."  NOTE If a name is not provided, the e-mail address that was typed in the E-mail Address field will appear in the "From" field of outgoing e-mail messages.
10	Prevent Device user from changing the Default 'From:' Address	Select this check box to ensure that general users cannot change the e-mail address that the administrator set.
11	Default Subject	If you want to, type the subject that will appear on all e-mail messages the product sends. You can also use this field to include instructions, such as "Please type a subject for your message."
12	Advanced	Click this button to open a new screen that you can use to set message text and attachment settings for e-mail messages that the product sends. For more information, see Advanced E-mail Settings .

Advanced E-mail Settings

The following illustration and table describe how to use the **Advanced E-Mail Settings** screen.

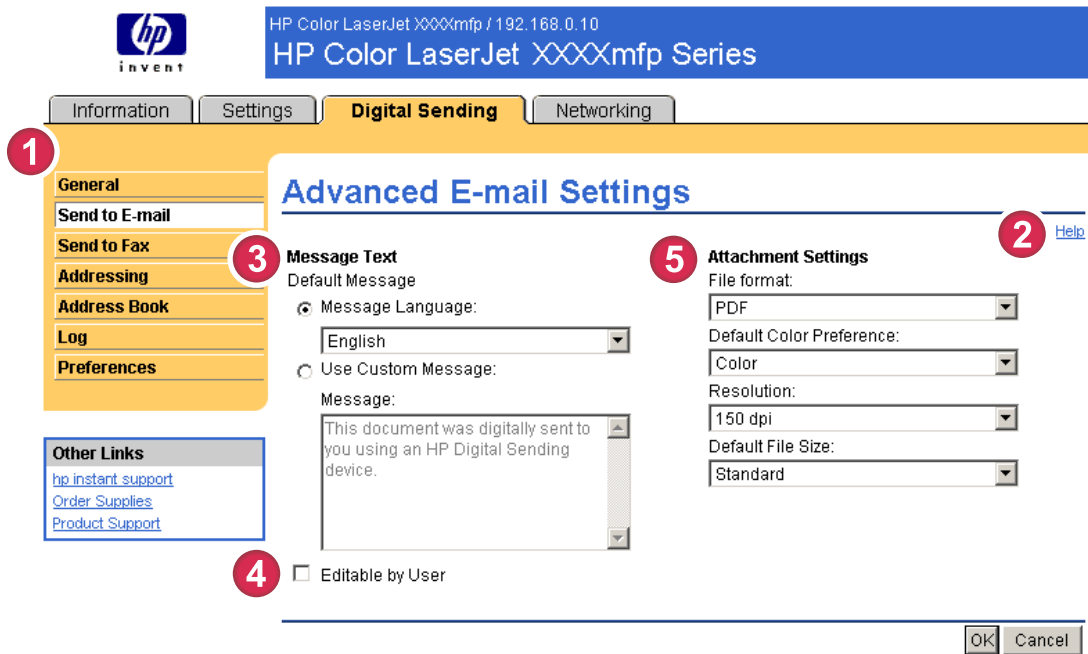


Figure 4-3 Advanced E-mail Settings screen

Table 4-3 Advanced E-mail Settings

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Help	Click to open a help file that contains information about the screens on the Digital Sending tab.
3	Message Text	Modify how the message text will appear in the body of all e-mail messages that are sent from the product. Select the language for the message text. The languages that are available are the same languages that are available on the Language screen of the Settings tab.
4	Editable by User	Select this check box to allow the user to add text to the e-mail message text.
5	Attachment Settings	Select the default settings for attachments sent in e-mail messages that are sent from the product.

Send to Fax

The product can send scanned documents to a fax number to simulate the sending capabilities of a fax machine. If the product is equipped with a fax modem, it can also be set up to process incoming faxes.



NOTE The **Fax Settings** screen (and the **Send to Fax** menu on the left) is available only if your product is equipped with a fax modem board.

Use the **Send to Fax** screen to configure the send-to-fax features for the product. The following illustration and table describe how to use this screen.

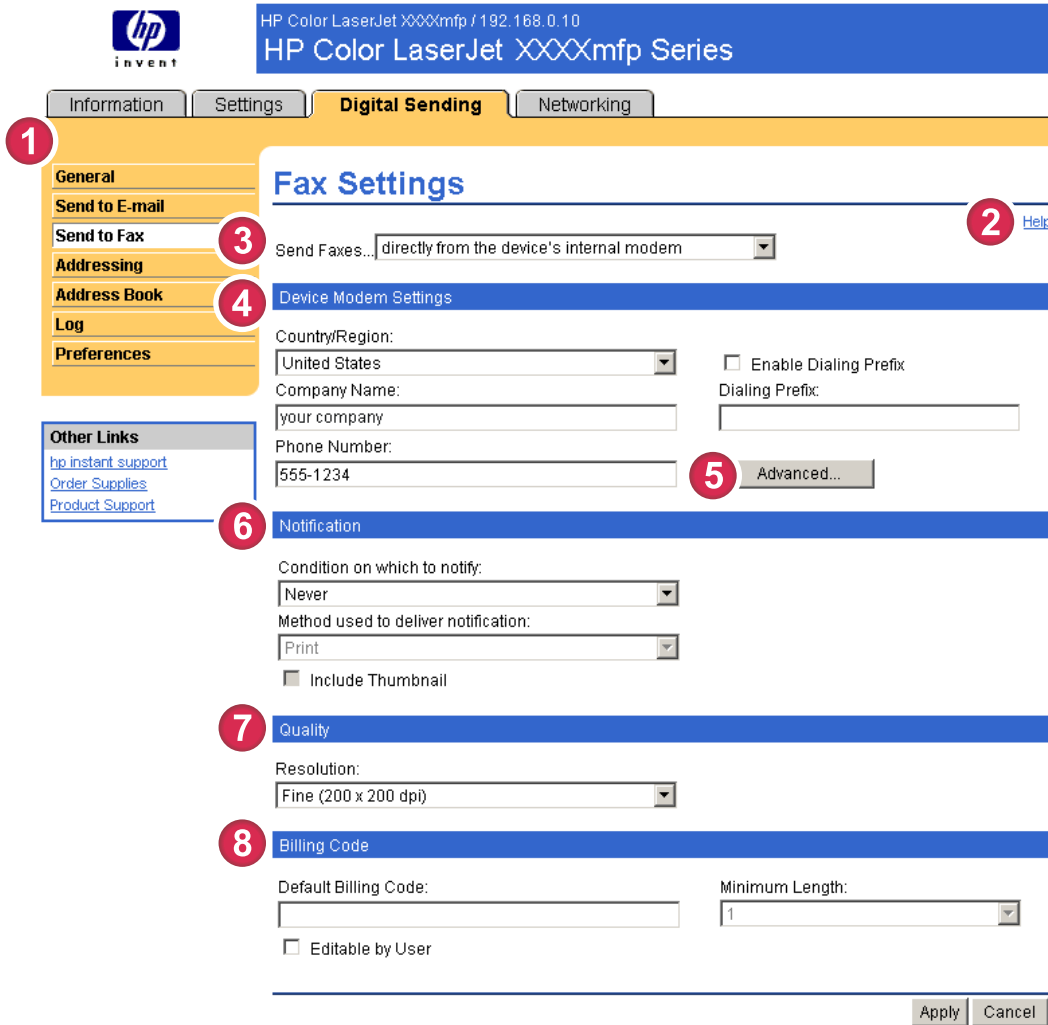


Figure 4-4 Fax Settings screen

Table 4-4 Send to Fax

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .

Table 4-4 Send to Fax (continued)

Callout	Area on the screen	Information or capability that the area provides
2	Help	Click to open a help file that contains information about the screens on the Digital Sending tab.
3	Send Faxes	<p>directly from the device's internal modem</p> <p>Send faxes directly from the device. When this option is selected, you must select or type the following information:</p> <ul style="list-style-type: none"> ■ The country/region ■ The company name ■ The phone number to which the internal modem of the device is connected ■ If applicable, any prefix number that your phone system requires <p>via the Digital Sending service</p> <p>Send faxes by using the digital sending software service.</p>
4	Device Modem Settings	Type these settings if directly from the MFP's internal modem is selected from the Send Faxes list.
5	Advanced	Click this button to open a new screen where you can set advanced product modem settings, such as modem and ringer volume, and send and receive settings. From this screen, you can also print a fax activity log and gain access to security and diagnostics settings. For more information, see Advanced Fax Settings .
6	Notification	Set the notification options, such as whether a fax success or failure notification will be sent, whether the notification will be printed, or whether the sender should receive a notification report. Select the Include Thumbnail Image check box to include a scaled-down image of the scanned document in the notification report.
7	Quality	Select the resolution for the outgoing faxes.
8	Billing Code	Type the billing code, if applicable. If you want to, you can select the Editable by User check box to allow the user to change the code. Use the Minimum Length field to set the minimum length of the billing code. The billing code can be a value between 1 and 16.

Advanced Fax Settings

The following illustration and table describe how to use the **Advanced Fax Settings** screen.

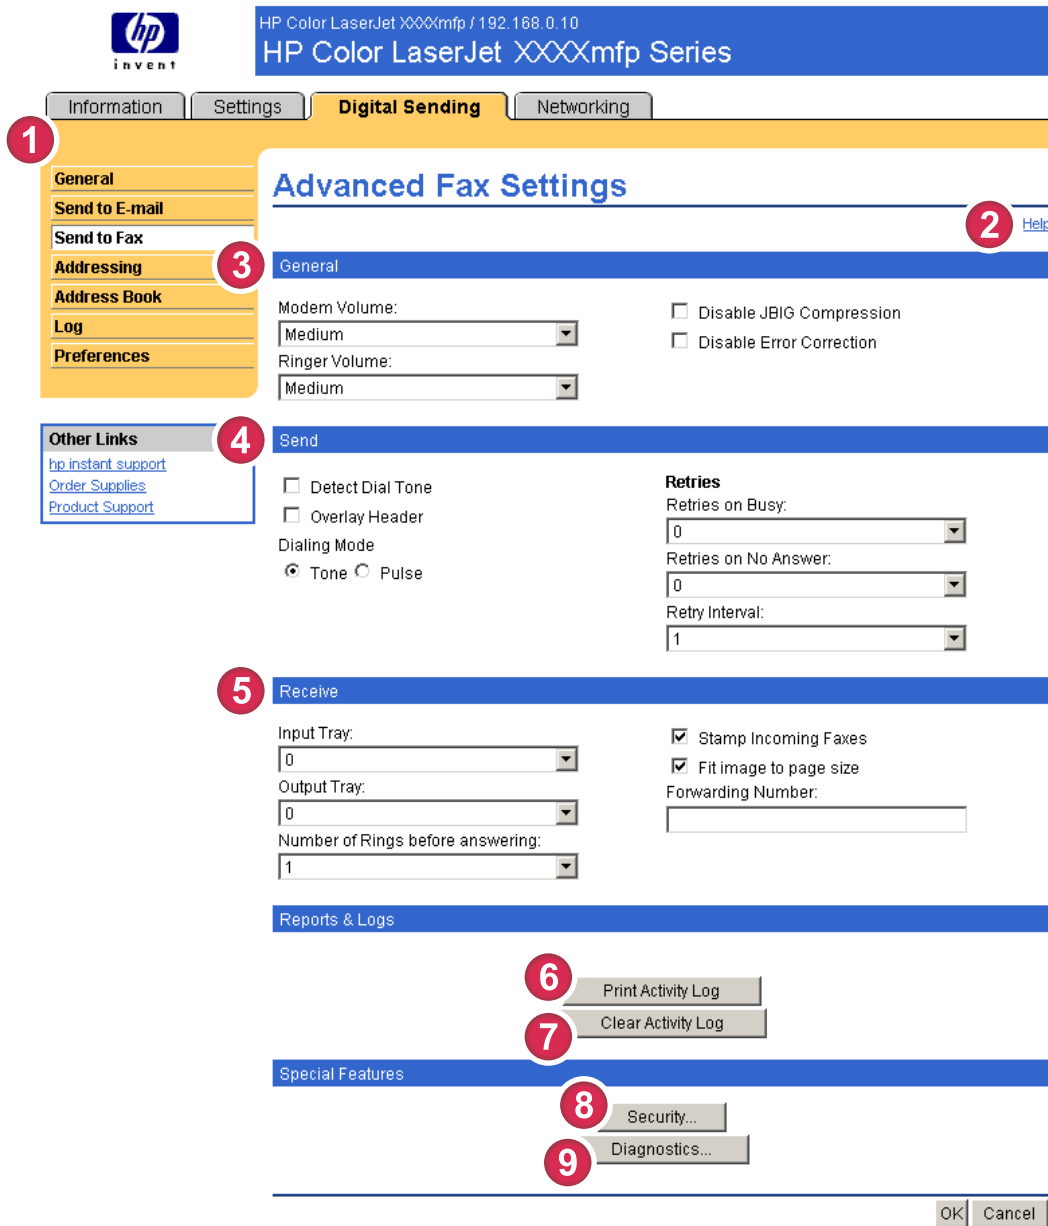


Figure 4-5 Advanced Fax Settings screen

Table 4-5 Advanced Fax Settings

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Help	Click to open a help file that contains information about the screens on the Digital Sending tab.

Table 4-5 Advanced Fax Settings (continued)

Callout	Area on the screen	Information or capability that the area provides
3	General	Select the general settings, such as modem and ringer volume and whether to turn JBIG compression and Error Correction on or off.
4	Send	Select the settings for faxes that are sent from the product, such as whether to check for a dial tone before sending, whether the header should appear at the top of the fax, or how many times you want the product to retry if the receiving fax line is busy or does not answer.
5	Receive	Select the settings for received faxes, such as which output bin the faxes are to be delivered, if you want incoming faxes to be scaled to the size of paper in the input tray, and the number of another fax product to which incoming faxes can be forwarded.
6	Print Activity Log	Click this button to print the internal modem's fax activity log. The activity log lists all incoming and outgoing fax calls since the log was last cleared and is printed to the product.
7	Clear Activity Log	Click this button to clear all entries in the fax activity log. HP recommends printing the fax activity log periodically for record-keeping purposes, and then clearing the fax activity log to keep its size to a minimum.
8	Security	Click this button to set the security features for the internal modem. The first time you configure the security features, you are asked to type (and confirm) a Security PIN. Thereafter, you will need that PIN to view and reconfigure the security features.
9	Diagnostics	Click this button to set the diagnostic features of the internal modem.

When you click the **Security** button, the **Establish PIN Number** screen appears. You can use this screen to establish a user-specific personal identification number (PIN) to control access to the Send to Fax feature.

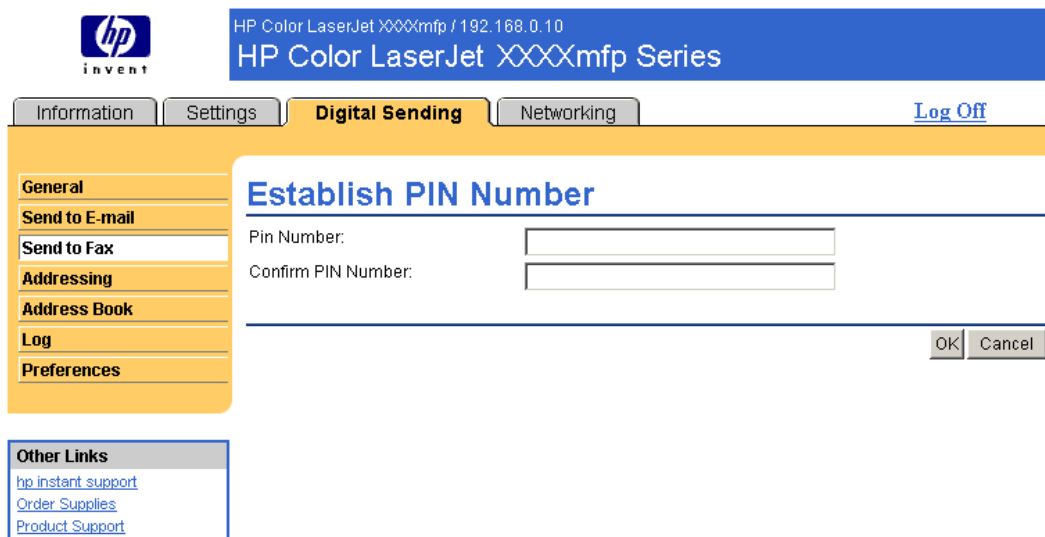


Figure 4-6 Establish PIN Number screen

When you click the **Diagnostics** button on the **Advanced Fax Settings** screen, the **Modem Diagnostics** screen appears, as shown in the following illustration.

In the **Print T30 Reports** field, you can set the frequency with which T30 reports are printed. T30 reports are detailed reports about the fax communication that occurs during the most recent fax transaction. The reports are useful when diagnosing failed fax sessions and may be requested by a service technician should a support call be necessary. The report will be printed at the MFP either on request or in accordance with the setting you choose.

In the **Signal Strength** field, you can adjust the fax signal strength used to communicate on the phone line.

CAUTION The **Signal Strength** setting should not be adjusted unless you are advised to do so by a qualified service technician in order to correct malfunctioning fax communications.

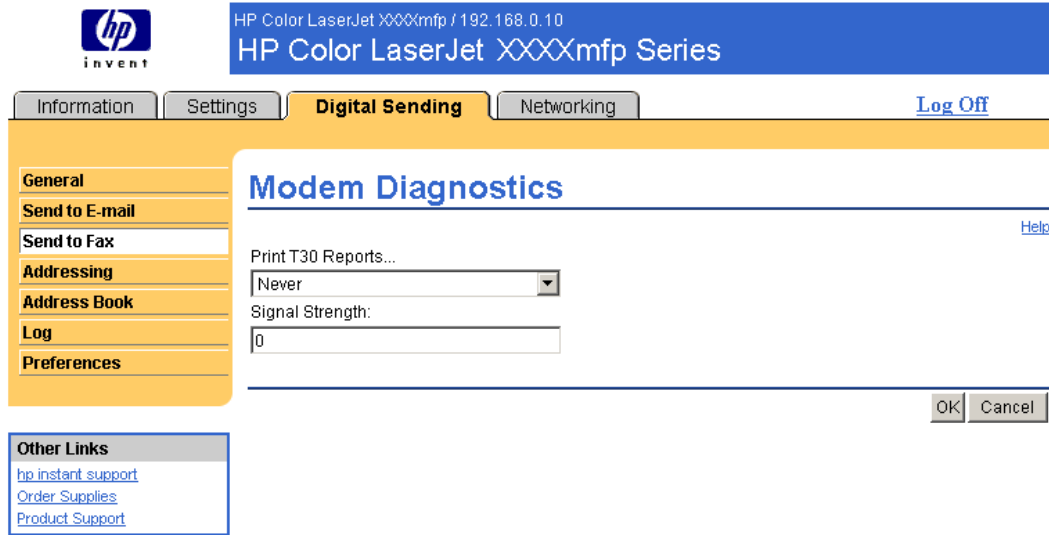


Figure 4-7 Modem Diagnostics screen

Addressing

In order for the product to send scanned documents, you must provide one or more destination address. The product addressing feature simplifies this process by accessing the network LDAP server.

Use the **Addressing** screen to set features that allow the product to get addresses directly from the database of a Lightweight Directory Access Protocol (LDAP) server instead of from a replicated LDAP Address Book. Using the LDAP Address Book directly guarantees that the latest addresses are used. A message appears on the screen if the LDAP server settings are invalid or cannot be detected automatically. The following illustration and table describe how to use this screen.

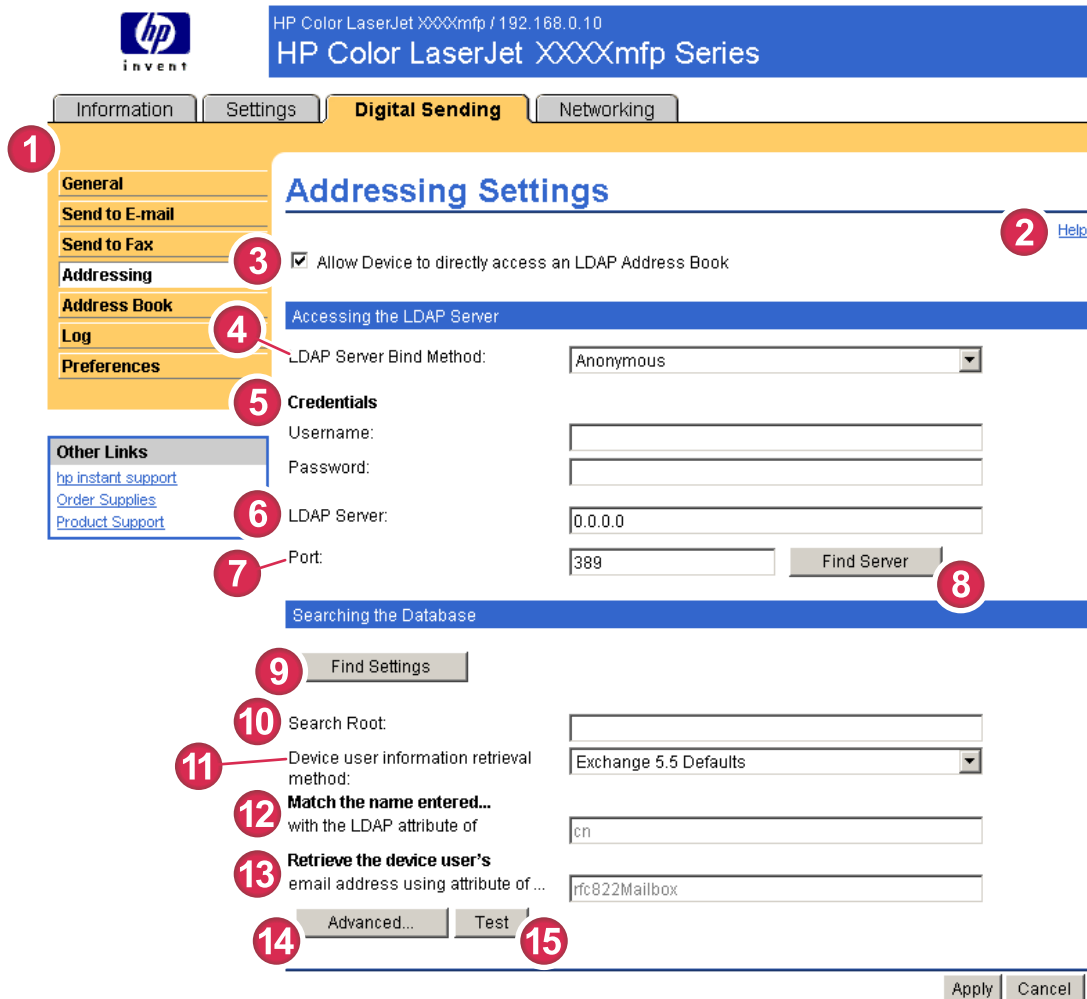


Figure 4-8 Addressing Settings screen

Table 4-6 Addressing Settings

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Help	Click to open a help file that contains information about the screens on the Digital Sending tab.

Table 4-6 Addressing Settings (continued)




Callout	Area on the screen	Information or capability that the area provides
3	Allow Device to directly access an LDAP Address Book	Select this check box to provide the device direct access to an LDAP Address Book.
4	LDAP Server Bind Method	<p>Anonymous</p> <p>Select this option to connect to the LDAP server if the LDAP server does not require user credentials to access the LDAP database.</p>
		<p>Simple</p> <p>Select this option to connect to the LDAP server if the LDAP server requires user credentials to use the LDAP database.</p> <p>When this option is selected, you must enter the user, password, and domain. Note that the password will be sent across the network unencrypted.</p>
		<p>NTLM</p> <p>Select this option to connect to the LDAP server if the LDAP server requires user credentials to use the LDAP database. This option supports NT Challenge Response.</p> <p>When this option is selected, you must enter the user, password, and domain.</p>
		<p> NOTE This option is not available for all products.</p>
5	Credentials	Specify these settings if Simple or NTLM is selected from the LDAP Server Bind Method list.
6	LDAP Server	Type the host name or TCP/IP address of the LDAP server whose database contains the centralized address book.
		<p> NOTE Some products recognize only TCP/IP addresses. In such cases, host names are converted to the equivalent TCP/IP address.</p>
7	Port	Type the TCP/IP port number on which the server is processing LDAP requests. This is typically port 389.
8	Find Server	Click this button to search for available LDAP servers.
9	Find Settings	Click this button to have the product attempt to determine the best settings for the specified server when searching the LDAP database.
10	Search Root	Type the Distinguished Name (DN) of the entry in the LDAP directory structure where address searching is to begin. A DN is made up of "attribute=value" pairs, separated by commas. For example:
		<code>ou=departmentname,o=companyname</code>
		<code>ou=marketing,o=Hewlett Packard,c=US</code>
		<code>o=hp.com</code>
		<code>ou=engineering,cn=users,dc=hp,dc=com</code>

Table 4-6 Addressing Settings (continued)

Callout	Area on the screen	Information or capability that the area provides
		 <p>NOTE For some LDAP servers, the search root can be left blank (in which case its root node will be assumed).</p>
11	Device user information retrieval method	<p>Exchange 5.5 Defaults Select this option if you are connecting to a Microsoft Exchange 5.5 server that is running LDAP. The LDAP attribute values are automatically set.</p> <hr/> <p>Active Directory Defaults Select this option if you are connecting to a Microsoft Exchange Server 2000 server that is running LDAP. The LDAP attribute values are automatically set.</p> <hr/> <p>Custom Select this option if you need to manually configure the LDAP attribute values.</p>
12	Match the name entered with the LDAP attribute of	<p>Type the attribute in the LDAP database that identifies a person in the address book. The value of this attribute will be compared to the name that the user types in order to retrieve the person's e-mail address. The following are a few possible LDAP attributes:</p> <ul style="list-style-type: none"> ■ uid: User Identifier ■ cn: Common Name ■ sn: Surname (Last Name) ■ givenName: First Name
13	Retrieval the device user's e-mail address using attribute of	<p>Type the LDAP attribute that contains the person's e-mail address. The following are two of the possible LDAP attributes:</p> <ul style="list-style-type: none"> ■ rfc822Mailbox ■ mail
14	Advanced	Click this button to open a new screen where you can set advanced LDAP server features. For more information, see Advanced Addressing Settings .
15	Test	Click this button to test the settings that you specified.

Advanced Addressing Settings

The following illustration and table describe how to use the **Advanced Addressing Settings** screen.

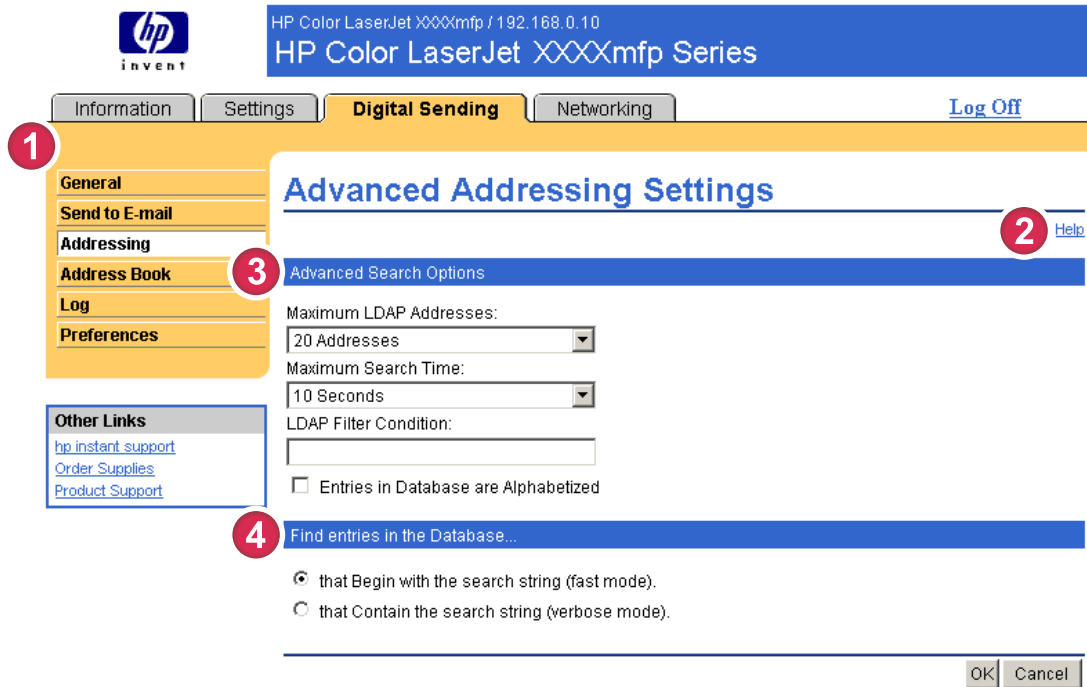


Figure 4-9 Advanced Addressing Settings screen

Table 4-7 Advanced Addressing Settings

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Help	Click to open a help file that contains information about the screens on the Digital Sending tab.
3	Advanced Search Options	Select the advanced LDAP server search settings.
4	Find entries in the Database	Select whether the LDAP search queries include entries that begin with the partial name or all entries that contain the partial name anywhere within the entry's name.

Address Book

Use the **Address Book** screen to add a predefined list of destination addresses, in the form of a comma-separated value (.CSV) file, to be imported into the product internal address book. The .CSV file is a plain-text file (in UTF-8 encoding) that contains each e-mail address entry on a separate line. An entry consists of an alias, which is the name that appears, followed by a comma and an e-mail address. The aliases and the e-mail addresses cannot contain any commas. The following are examples.

name1, name1@your.company.com

name2, name2@your.company.com

At the product, the user uses the alias name to search for a destination address.

The following illustration and table describe how to use this screen.

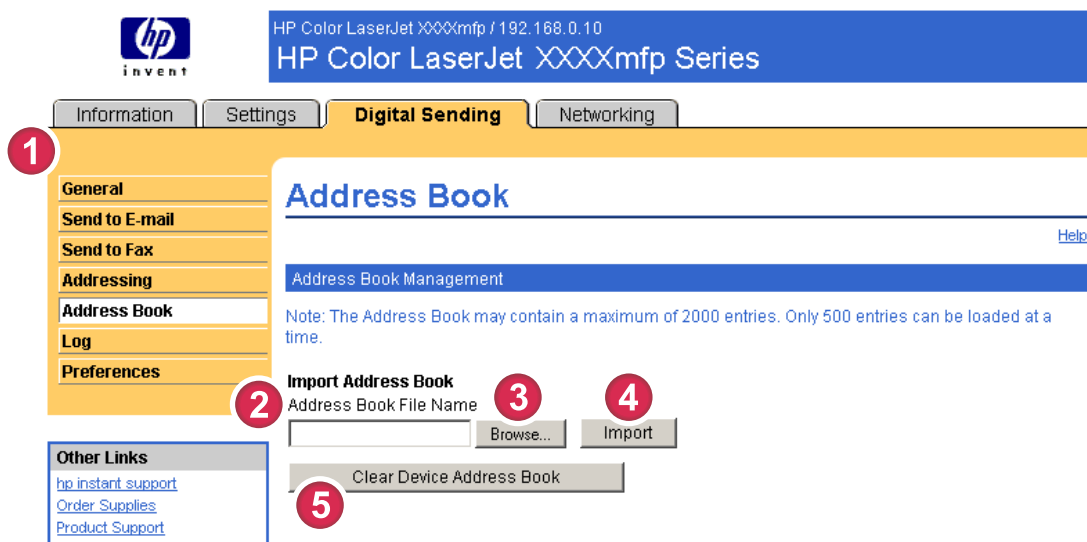


Figure 4-10 Address Book screen

Table 4-8 Address Book

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Address Book File Name	Use this field for the path of the .CSV address book file.
3	Browse	Click this button to find the .CSV address book file.
4	Import	After the path of the .CSV file appears in the Address Book File Name field, click this button to import the address book into the product internal address book.
5	Clear Device Address Book	Click this button to clear the contents of the device's internal address book.

Log

Use the **Log** screen to view digital sending job information, including any errors that occur. The following illustration and table describe how to use this screen.



NOTE If the HP DSS has been installed, digital-sending activities are logged in the HP DSS instead of in the HP EWS. To view the log, open the HP MFP DSS Configuration Utility, and then click the **Log** tab. The entries visible in HP EWS are only those related to activities configured either at the control panel or through HP EWS screens.

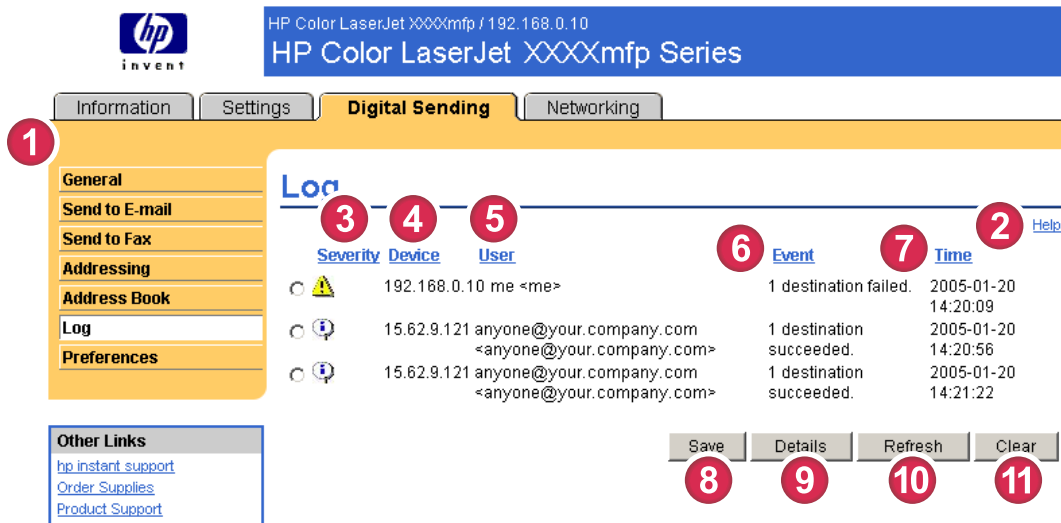



Figure 4-11 Log screen


Table 4-9 Log

Callout	Area on the screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Help	Click to open a help file that contains information about the screens on the Digital Sending tab.
3	Severity	Lists the severity of the error, if applicable, for each log entry.
4	Device	Lists the TCP/IP address of the device.
5	User	Lists the user that initiated the event.
6	Event	Describes if the event was successful or if an error occurred.
7	Time	Shows the time for each log entry.
8	Save	Click this button to save the log information to a file.
9	Details	Select the log entry and then click the Details button to view the log entry details.
10	Refresh	Click this button to update the view to include the latest log information.
11	Clear	Click this button to clear the information from the log.


Table 4-9 Log (continued)

Callout	Area on the screen	Information or capability that the area provides
		NOTE Clicking the Clear button merely clears the log that appears onscreen. The log entries remain on the product for job-accounting purposes.

When you click the **Details** button on the **Log** screen, the **Details** screen appears. This screen shows information about digital sending jobs, such as job ID, the time the job was sent, the sender name, and other details.

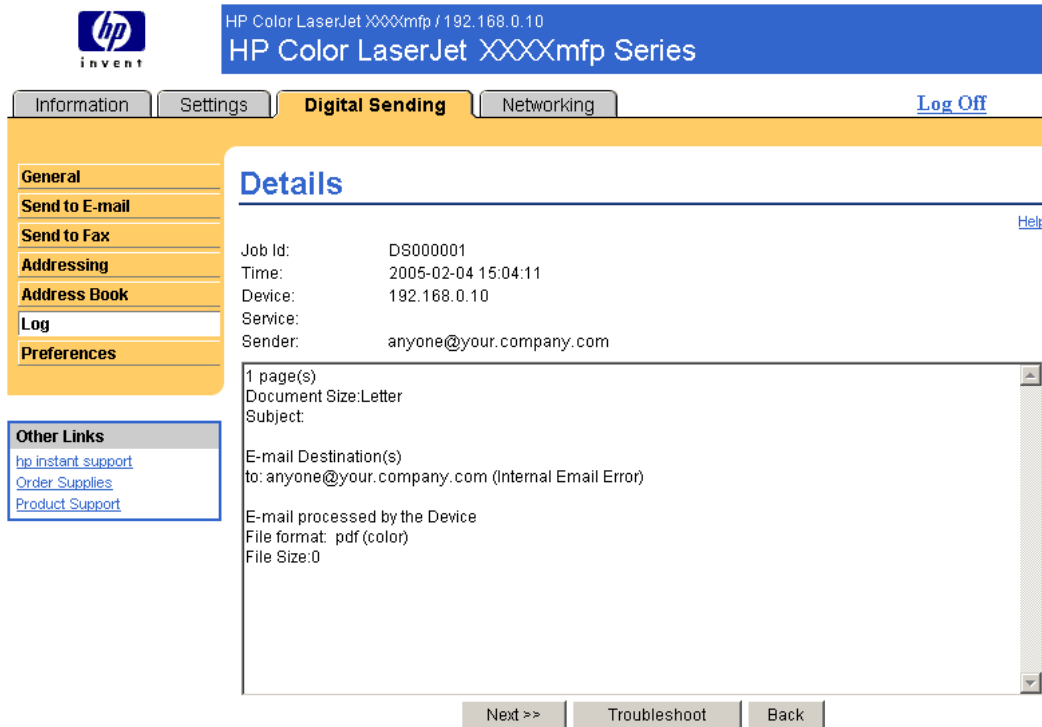

When you click the **Troubleshoot** button on the **Details** screen, the **Troubleshoot** screen appears. Click the underlined link that appears below the details (**Internal Email Error** in the example below) to open a screen that can help you troubleshoot the problem.

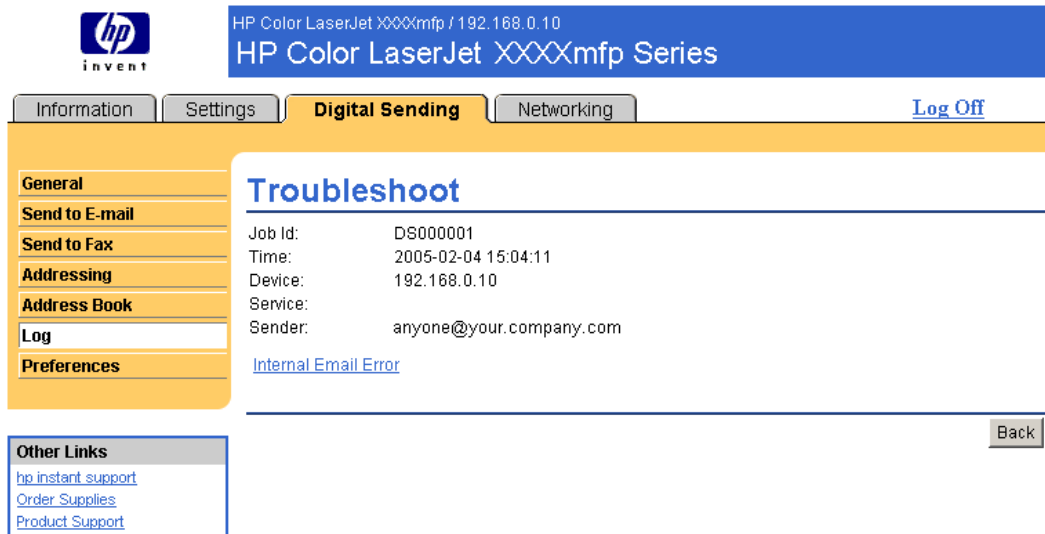

Preferences

Use the **Preferences Settings** screen to configure general settings for the digital-sending features. The following illustration and table describe how to use this screen.

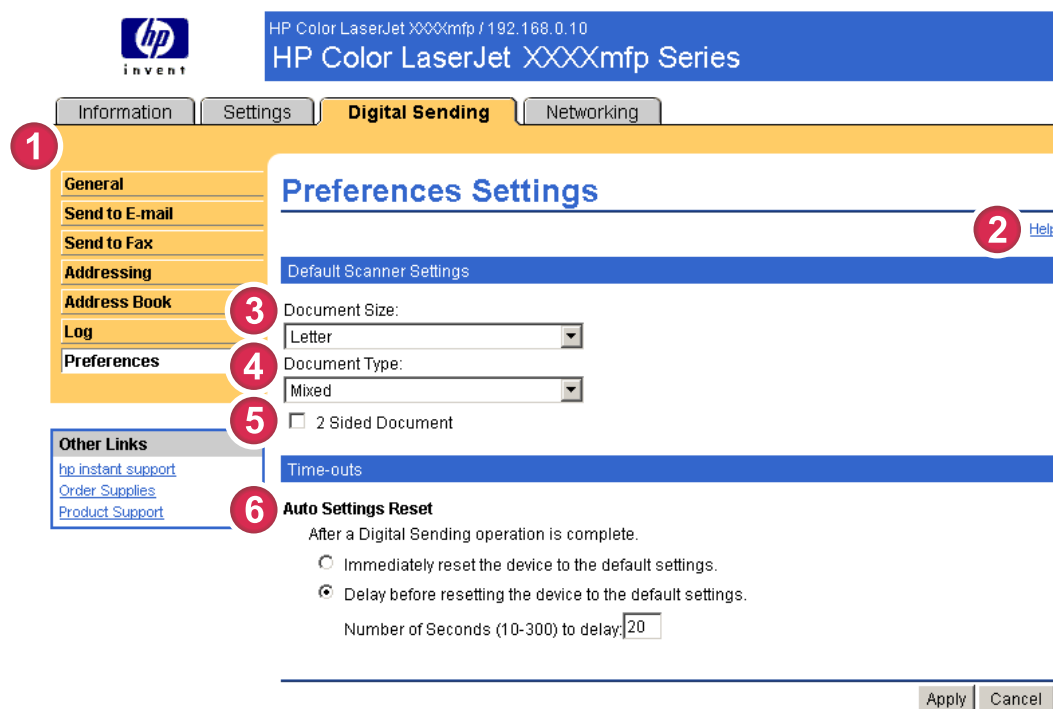


Figure 4-12 Preferences Settings screen

Table 4-10 Preferences Settings

Callout	Area on screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .

Table 4-10 Preferences Settings (continued)

Callout	Area on screen	Information or capability that the area provides
2	Help	Click to open a help file that contains information about the screens on the Digital Sending tab.
3	Document Size	Select the default media size that you want the product scanner to use when scanning a document.
4	Document Type	Select the default media type that you want the product image processor to use when scanning a document. <ul style="list-style-type: none">■ Text■ Graphics■ Mixed
5	2 Sided Document	Select this check box to have the product scan both sides of a document.
6	Auto Settings Reset	Use the time-outs options to reset all digital sending settings that are associated with a job to the product default settings. You can have the settings reset immediately after a digital-send operation in which the settings have been changed by a user, or to delay the reset for any interval from 10 to 300 seconds.

5 Managing network operation from the Networking screens

Overview

Use the Networking screens to configure and manage your product on your network. The appearance and features of the screens available from the **Networking** tab differ, depending on the model and version of your HP Jetdirect print server. The following screen is similar to what you might see when you click **Networking**. From the left navigational bar, click the **Networking** menu for the screen that you want to view.



Information Settings Digital Sending **Networking**

1 CONFIGURATION
 Network Settings
 Other Settings
 Privacy Settings
2 Select Language

SECURITY
 Settings
 Authorization
 Mgmt. Protocols

DIAGNOSTICS
 Network Statistics
 Protocol Info
 Configuration Page

3 Other Links
 Help
 Support
 HP Home

Network Settings

TCP/IP IPX/SPX AppleTalk DLC/LLC SNMP

IP Configuration Method: DHCP

Note: A change in IP Address will result in loss of connectivity to the browser.

Host Name: host name

IP Address: 192.168.0.10

Subnet Mask: 255.255.255.0

Default Gateway: 192.00.00.00

Domain Name: boi.hp.com

Primary WINS Server:

Secondary WINS Server:

Syslog Server:

Syslog Maximum Messages: 10

Syslog Priority: 7

Idle Timeout: 270 Seconds

TTL/SLP: 4

System Contact:

System Location:

LPD Banner Page: Enable

Default IP: Legacy Default IP (when BOOTP/DHCP/RARP servers are not available)

Send DHCP requests if IP address is Auto IP (169.254.x.x) or Legacy Default IP

Apply Cancel

Figure 5-1 Network Settings screen

Table 5-1 Network Settings

Callout	Area on screen	Information or capability that the area provides
1	HP EWS tabs and menus	For more information, see Navigating through the HP Embedded Web Server .
2	Select Language	Select the language for the Networking tab. The list of languages that are available in the Networking tab is <i>not</i> identical to the list of languages that are available in the Settings tab.
3	Help	Click Help for more information about the options on the Networking tab.

Depending on your HP Jetdirect print server model and operating version, the following are some tasks that you can perform from the Networking screens:

- Change network configuration settings for various types of network connections.
- Turn on or turn off printing protocols.
- Set up a support contact and support URLs.
- Set a password to control access to the product and network configuration settings. This password is synchronized with the password that you set on the **Security** screen under the **Settings** tab, so you may set or reset it from either screen.
- Configure the security of your product through the use of passwords, access lists, and management protocols.
- View general network status information, including network statistics that are stored on the print server, for network troubleshooting or optimization.
- View protocol information for all supported network connections.
- Open the HP Jetdirect Configuration page.
- Set the frequency at which the HP EWS checks the network status.

For more information about the Networking screens, see the following sources:

- **Help.** On each Networking screen, a **Help** link under **Other Links** provides a description of the networking features. Also, from the Help screen you can gain access to additional help from the HP Web site.
- **HP Jetdirect Administrator's Guide.** This guide is normally available on the software CD that came with your product and can be downloaded from the hp.com support pages for your product: www.hp.com/support/clj4730mfp for the HP Color LaserJet 4730d mfp.

6 Using the Other Links as a resource

The **Other Links** box contains three permanent links that provide quick access to product-specific information, such as interactive troubleshooting and ordering information for genuine HP supplies.

The screenshot displays the HP Color LaserJet XXXXmfp Series Device Information screen. The top navigation bar includes 'Information', 'Settings', 'Digital Sending', and 'Networking', with a 'Log Off' link on the right. The left sidebar contains a list of menu items: 'Device Status', 'Configuration Page', 'Supplies Status', 'Event Log', 'Usage Page', 'Diagnostics Page', 'Device Information', 'Control Panel', and 'Print'. The 'Other Links' section is highlighted with a red arrow and contains three links: 'hp instant support', 'Order Supplies', and 'Product Support'.

The main content area is titled 'Device Status' and shows the device is 'Ready'. There are two status indicators: a green circle for 'Pause/Resume' and a green checkmark for 'Continue'. Below this is the 'Supplies' section, which shows the status of various toners and kits:

Toners: (% remaining)			
Black Cartridge 100%	Cyan Cartridge 100%	Magenta Cartridge 100%	Yellow Cartridge 100%
Image Transfer Kit 100%	Image Fuser Kit 100%		

Below the supplies section is the 'Media' section, which contains a table of input/output trays:

Input/Output	Status	Capacity	Size	Type
Tray 1	Empty	100 Sheets	EXECUTIVE	LETTERHEAD
Tray 2	OK	500 Sheets	LETTER	PLAIN
Tray 3	OK	500 Sheets	LETTER	PLAIN
Tray 4	OK	500 Sheets	LETTER	PLAIN
STANDARD TOP BIN	OK	N/A	N/A	

At the bottom of the screen is the 'Capabilities' section, which lists various device features:

- Device Serial Number: XXXXXXXXXX
- Firmware Datecode: 20050107 20050107
- Duplex: OFF
- ADF Yes
- Optical Resolution 600
- Color Scanning Yes
- E-mail Yes

Figure 6-1 Device Information screen



NOTE You can use the **Edit Other Links** screen on the **Settings** tab to add up to five customized links to the Web sites of your choice. (With a permanent storage device installed, you can add up to five additional links; without the extra storage, you can add one additional link.) These links appear throughout the EWS screens, in the **Other Links** box beneath the left navigational bar. For more information, see [Edit Other Links](#).

The following sections describe each of the links that appear by default in the **Other Links** box.

hp instant support

Hewlett-Packard Company offers hp instant support, an Internet-based support system that collects diagnostic information from your product and matches it with the HP information database. At hp instant support, you can find intelligent solutions that help you resolve problems quickly and easily.

How hp instant support works

Information is gathered from your product and securely transmitted to Hewlett-Packard Company when you click **hp instant support**. The hp instant support Web site reads the product data to analyze the product's current status. The Web site creates a customized Web page that appears in the browser window and contains easy-to-follow text and visual aids. The hp instant support Web site also directs you to additional services that are available for your product.

Before any of the product data is sent to Hewlett-Packard for analysis, you can view all of the information (for example, the serial number, error conditions, and product status) that will be forwarded. Hewlett-Packard treats this information as confidential.

Information you can get from hp instant support

The hp instant support Web site provides these tools for troubleshooting and for maintenance:

- Firmware and software updates.
- Troubleshooting for recent events that are listed on the Event Log. For example, the product might show a jam as the most recent event listed in the event Log. The hp instant support Web site detects the event and provides troubleshooting information for the jam.
- Support packs.
- Product documentation, such as user guides and getting started guides.

Order Supplies

The **Order Supplies** link connects you to a Web page that facilitates your online ordering of supplies from a reseller of your choice. The supplies that you need are preselected. You can change quantities or select additional items. Your items are added to the shopping cart, ready for checkout, ensuring that the correct supplies are ordered through your selected reseller.

Product Support

The **Product Support** link connects you to a Web page that brings together a comprehensive menu of support resources that business people need. From this Web page, you can accomplish these tasks and more:

- Find a list of HP products at one site: computers, workstations, servers, storage devices, printer, scanners, digital imaging, and mobile devices.
- Obtain technical support. Solve a problem; find information to set up, install, and configure your product; discover and use a product; maintain your product; upgrade and migrate your product software and driver; and recycle products or dispose of them correctly.
- Gain access to self-solve resources such as FAQs, user documentation, features and specifications, and product-compatibility information.
- Collaborate with HP and with your peers through discussion groups, e-mail support, and phone support.
- Use task-based navigation to identify the task area that you want to work on and quickly discover related topics and tools.

In addition, you can find these features: hot topics, a subscription center, product rebate offers and other announcements, and training and education opportunities.

My Service Provider and My Service Contract

The **My Service Provider** and the **My Service Contract** links appear only if they have been created (and perhaps renamed) by the service provider in the Other Links screen on the **Settings** tab. The link can then be clicked by any user to get information about the service provider and the service contract. The information, which can be up to 50 characters long, is stored in the permanent storage of the product.

When these links have been created, the appearance of the **Other Links** box changes to include the new links, as shown in the following illustration.



Figure 6-2 Other Links

Index

A

- accessing the HP Embedded Web Server 3
- accessories, verifying installed 12
- activity logs
 - digital sending 66
 - fax 59
- Address Book screen 65
- addressing e-mail 61, 65
- administrators
 - alerts, setting up 31
 - Digital Sending settings 52
 - logging off 4
 - logging on 4
 - wake time settings 50
- Advanced E-mail Settings screen 55
- Advanced Fax Settings 58
- alerts
 - configuring 33
 - destination lists, testing 35
 - e-mail configuration 30
 - e-mailing information pages 36
 - features 2, 31
- asset number 22
- attachments, e-mail 54, 55
- AutoSend 37

B

- billing codes, fax 57
- browsers
 - closing after logging off 4
 - defined 1
 - supported 3
- buttons, control panel 10

C

- cartridge
 - ordering 42, 76
 - status 14

- usage information 18
- clock drift correction 48
- clock settings 47
- Configuration Page screen 12
- Configure Device menu 28
- Configure Device screen 27
- consumables. See supplies
- control panel
 - buttons 10
 - menus 27
 - viewing 23
- Control Panel screen 23
- counts, page 18
- customer support
 - instant 76
 - product 77

D

- Date & Time screen 47
- Date/Time Format, setting 48
- default paper size, setting 28
- destination lists
 - creating 33
 - testing 35
- Device Information screen 22, 44
- device location 22
- Device Status screen 10
- devices, defined 1
- diagnostics
 - fax 59
 - trays 28
- Diagnostics menu 28
- Digital Sending screens
 - about 51
 - Addressing 61
 - Advanced E-mail Settings 55
 - Advanced Fax Settings 58
 - General 52
 - Log 66
 - Preferences 68

- Send to E-mail 53
- Send to Fax 56
- DIMMs, verifying installed 12

E

- e-mail
 - addressing 61, 65
 - advanced settings 55
 - alerts 31
 - attachments, size settings 54, 55
 - incoming, configuring 30
 - information pages 36
 - outgoing, configuring 30
 - settings 29
 - SMTP gateway settings 53
 - support 77
- E-mail Server screen 29
- Edit Other Links screen 42, 76
- embedded Web server
 - defined 1
 - features 1
- error messages 16
- Event Log 16
- Explorer, versions supported 3

F

- FAQs 77
- fax settings 56, 58
- features 1
- firewalls 3

G

- gateway settings, SMTP 53
- General screen, Digital Sending 52
- group product management 2

- H**
 - hard disks, features available with 2
 - help
 - instant support 76
 - product support 77
 - HP Embedded Web Server
 - features 1
 - hp instant support 76
 - HP Jetdirect print server 73
 - HP Web Jetadmin 2
 - I**
 - incoming e-mail configuration 30
 - information pages, e-mailing 36
 - Information screens 9
 - Information tab
 - locating 28
 - password protection 4
 - ink cartridge. *See* print cartridge
 - Internet Explorer, versions supported 3
 - IT administrators
 - alerts, setting up 31
 - Digital Sending settings 52
 - logging off 4
 - logging on 4
 - wake time settings 50
 - J**
 - Jetadmin, HP Web 2
 - Jetdirect print server 73
 - Job Cancel button 40
 - K**
 - keys, control panel 10
 - Konqueror, versions supported 3
 - L**
 - Language screen 45
 - LDAP servers 61
 - Lightweight Directory Access Protocol (LDAP) servers 61
 - links 42, 75
 - log, event 16
 - logging off 4
 - logging on 4
 - logs
 - digital sending 66
 - M**
 - mailbox configuration 30
 - media usage 18
 - memory, verifying installed 12
 - menus
 - control panel 27
 - HP Embedded Web Server 5
 - messages, error 16
 - Microsoft Internet Explorer, versions supported 3
 - mobile devices, printing from 24
 - Mozilla, versions supported 3
 - My Service Contract link 77
 - My Service Provider link 77
 - N**
 - navigating 5
 - Netscape Navigator, versions supported 3
 - Networking screens 71
 - Networking tab 6
 - networks
 - configuring 71
 - types supported 3
 - Web Jetadmin 2
 - O**
 - ON/OFF schedule 50
 - online help
 - instant support 76
 - product support 77
 - opening the HP Embedded Web Server 3
 - Opera, versions supported 3
 - ordering
 - hard disks 2
 - supplies 42, 76
 - Other Links area 42, 75
 - outgoing mail configuration 30
 - P**
 - page counts 18
 - paper
 - default size, setting 28
 - usage 18
 - Paper Handling menu 28
 - paper path tests 28
 - passwords 4, 40
 - PCL documents 24
 - PDF files, printing 24
 - phone support 77
 - POP3 configuration 30
 - power, setting wake time 50
 - print cartridge
 - ordering 42, 76
 - status 14
 - usage information 18
 - Print screen 24
 - print server, HP Jetdirect 73
 - printing files 24, 25
 - PRN files 24
 - product support 77
 - products, defined 1
 - PS files, printing 24
- R**
 - receiving faxes 59
 - recycle supplies 77
 - remote configuration 27
 - S**
 - Safari, versions supported 3
 - Security screen 40
 - security settings
 - fax modem 59
 - general 40
 - Send to E-mail screen 53
 - Send to Fax screen 56
 - sending faxes 57, 59
 - serial number 22
 - server, HP Jetdirect 73
 - service contract link 77
 - service providers
 - alerts, setting up 31
 - links to 77
 - logging off 4
 - logging on as 4
 - Settings tab 6, 27
 - shutdown, setting wake time 50
 - SMTP gateway settings 53
 - status
 - alerts 31
 - e-mailing information pages 36
 - network 71
 - supplies 14
 - supplies
 - AutoSend feature 37
 - ordering 42, 76
 - status page 14
 - usage information 18
 - Supplies Status screen 14

- support
 - instant 76
 - product 77
- system requirements 3

T

- TCP/IP address
 - e-mail configuration 30
 - locating 3, 22
- TCP/IP-based network 3
- technical support
 - instant 76
 - product 77
- tests, paper path 28
- text files, printing 24
- time settings 47
- toner cartridge. See print cartridge
- trays, diagnostics 28
- troubleshooting
 - Configuration Page screen 12
 - instant support 76
 - product support 77

U

- usage information, AutoSend 37
- Usage screen 18
- user name 40

W

- Web browsers
 - closing after logging off 4
 - defined 1
 - supported 3
- Web Jetadmin 2
- Web server, embedded
 - defined 1
 - features 1
- Web sites, support
 - instant 76
 - product 77

© 2005 Hewlett-Packard Development Company, L.P.

www.hp.com

