

# Speaker Setup for the Creative Sound Blaster Audigy 2 ZS Card

Your PC comes set up to produce sound through two speakers and, depending on the speakers you have, a subwoofer too. Some models may come set up for 5.1 channel mode.

If you have a 4, 6 (5.1 channel), 7 (6.1 channel), or 8 (7.1 channel) speaker system, follow these steps to get proper sound from all speakers.

Connect all speakers to the correct audio connectors on the subwoofer and the PC.

Refer to the manufacturer's documentation included with your speakers.

## Speaker Setup in Sound Blaster Audigy 2 ZS

- 1 Click **Start** on the taskbar.
- 2 Choose **All Programs, Creative, Sound Blaster Audigy 2 ZS**, and then click **Creative Speaker Settings**.
- 3 Select either **4/4.1 Speakers, 5.1 Speakers, 6.1 Speakers**, or **7.1 Speakers** from the Speaker/Headphone Selection drop-down menu.
- 4 Check the **Digital Output Only** box when using digital speakers (optional).
- 5 Close the Speaker Settings window.

## Speaker Setup in InterVideo WinDVD

You must complete the "Speaker Setup in Sound Blaster Audigy 2 ZS" procedure above before proceeding.

- 1 Insert a DVD movie into the DVD-ROM drive. If the DVD starts playing automatically, skip to step 4.
- 2 Click **Start** on the taskbar.
- 3 Choose **All Programs, InterVideo WinDVD, InterVideo WinDVD Player**, and then click **InterVideo WinDVD**.
- 4 Right-click in the video window, and then click **Setup**.

5 Select the **Audio** tab.

6 Under Audio Speaker Configuration, if you have analog speakers, select either:

- **channel (Front L/R or headphones)**
- **4 channel (Front L/R and Surround L/R)**
- **6 channel (5.1 Home Theater)**
- **7 channel (6.1 Home Theater)**
- **8 channel (7.1 Home Theater)**

Or

- For digital speakers, select **Digital (S/PDIF) out to External Processor**.

---

**NOTE:** If your system does not include a subwoofer, selecting the *Send 0.1 (LFE subwoofer) to speaker/headphones* box may enhance the low frequency range of sound.

---

7 Click **Apply**, and then click **OK**.

Now sound can be heard properly from all available speakers.

## Speaker Setup After System Recovery

Refer to the section "System Recovery" of the printed documentation included with your PC. After a system recovery, you must reselect your speaker mode in the Sound Blaster Audigy 2 ZS program and in the InterVideo WinDVD program.

Keep this information with your printed documentation for future reference.

Copyright © 2005 Hewlett-Packard Development Company, L.P.

Printed in



5 9 9 1 - 3 0 3 5