 


從此處開始

Start Here

1



重要：在本指南指示您之前，請勿連接 USB 纜線，否則軟體可能無法正確安裝。

Important: Do not connect the USB cable until this guide instructs you to or the software may not install properly.

 
如果您在安裝時發生任何問題，請參閱本指南稍後的「疑難排解」。

If you have problems during setup, see **Troubleshooting** later in the guide.

2

撕掉所有膠帶並掀起顯示器

Remove all tape and lift display

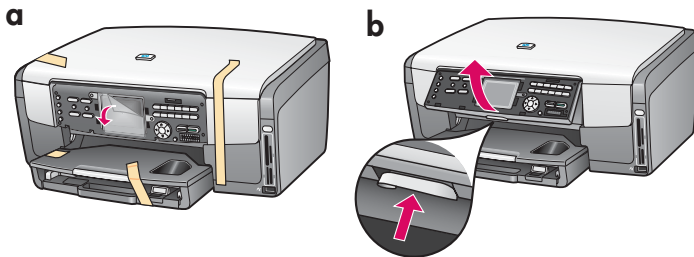

a 撕掉所有膠帶。爲了獲得最佳顯示效果，請撕掉彩色圖形顯示器上的保護膜。

b 掀起顯示器。

 
a Remove all tape. For best viewing, remove the protective film from the color graphics display.

b Lift the display.

3

找出零件

Locate components

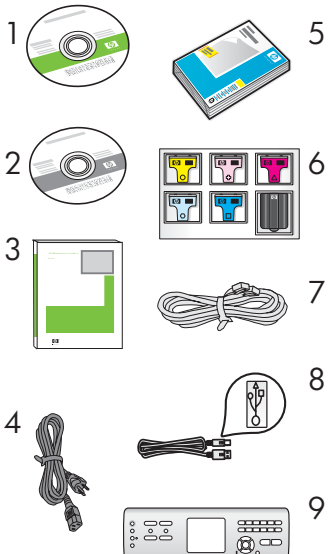


- 1 Windows CD
 - 2 Macintosh CD
 - 3 使用者指南
 - 4 電源線
 - 5 4 x 6 英吋 (10 x 15 公分) 相片紙
 - 6 墨水匣
 - 7 電話線
 - 8 USB 纜線
 - 9 控制台面板 (可能已預先裝好)
- 包裝盒內容可能有所差異。

- 1 Windows CD
 - 2 Macintosh CD
 - 3 User Guide
 - 4 power cord
 - 5 4 x 6 in (10 x 15 cm) photo paper
 - 6 ink cartridges
 - 7 phone cord
 - 8 USB cable
 - 9 control panel faceplate (may be pre-attached)
- The contents of your box may differ.


4

裝上控制台面板（若尚未裝上）

 
Attach the control panel faceplate (if not attached)

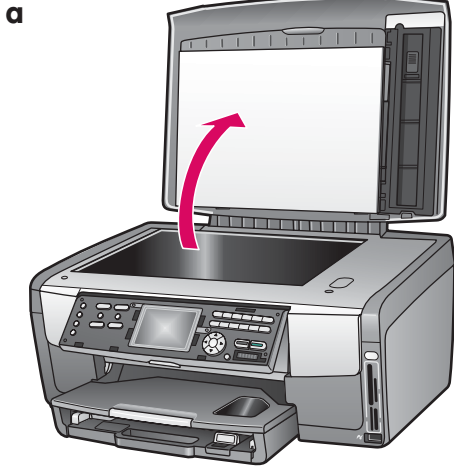

 - a 掀起蓋子。
- b 將控制台面板放在裝置的按鈕上。
- c 在蓋片的所有邊緣上均勻用力按下以裝上它。確定可以看見所有按鈕且沒有被擋住。

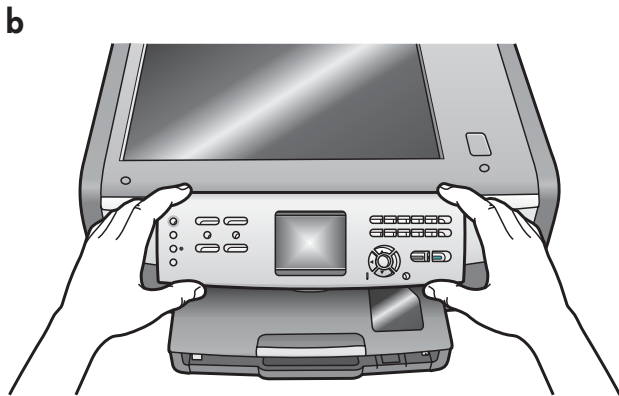

 - a Lift the lid.
- b Position the control panel faceplate over the buttons on the device.
- c Press down firmly on all edges of the overlay to secure it. Make sure all buttons are visible and not blocked.

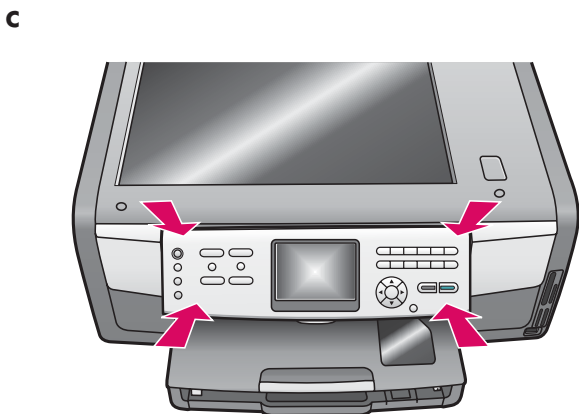

HP All-in-One 必須裝上控制台面板才能運作！

The control panel faceplate must be attached for the HP All-in-One to work!

 
 
 
 
5

放入紙匣

Load paper trays

主紙匣：

Main tray:

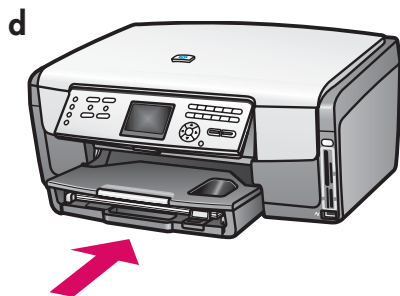
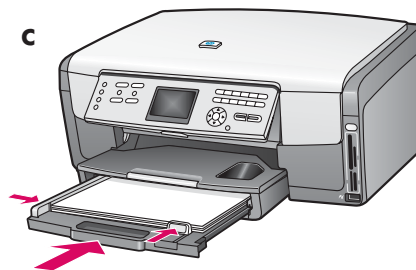
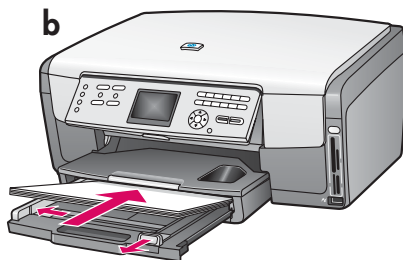
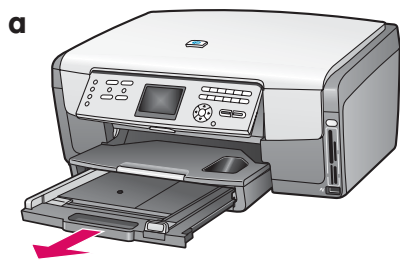


在底部紙匣內放入普通白紙。校正過程需要使用普通紙。

Load plain white paper in the bottom paper tray. Plain paper is needed for alignment.


相片紙匣：

    Photo paper tray:

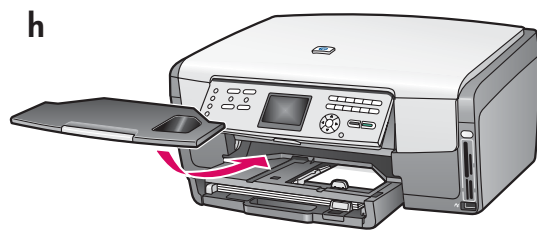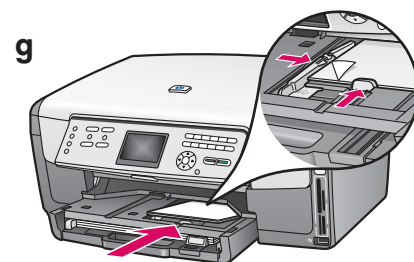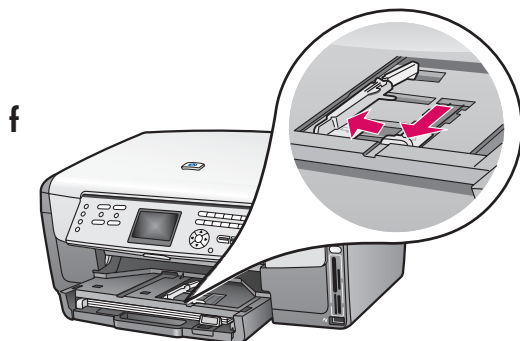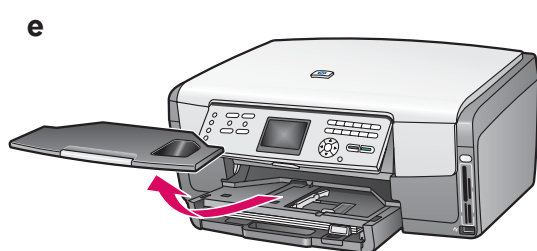

在出紙匣下方的相片匣中放入 4 x 6 英吋 (10 x 15 公分) 的相片紙，光面朝下。(如果紙張有標籤，請確定標籤是朝向您)。

 Load the 4 x 6 in (10 x 15 cm) photo paper with the glossy side down in the photo tray located underneath the output tray. (If paper is tabbed, make sure the tab is towards you.)

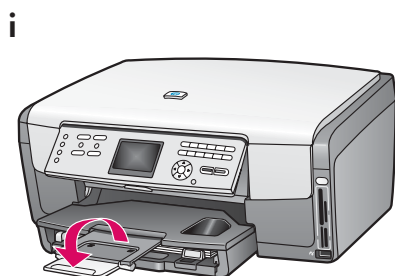


秘訣：拉出紙匣延伸架然後翻轉以夾住頁面。

Tip: Pull out, and then flip the paper tray extender to catch pages.

6

接上電源線

 Connect the power cord

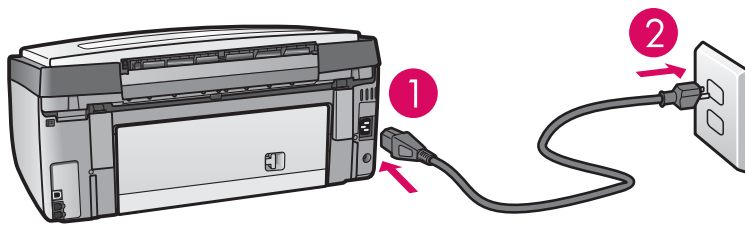


重要：在本指南稍後指示之前，不要連接 USB 纜線。

Important: Do not connect the USB cable until instructed later in this guide.

7

連接提供的電話線

 Connect the supplied phone cord

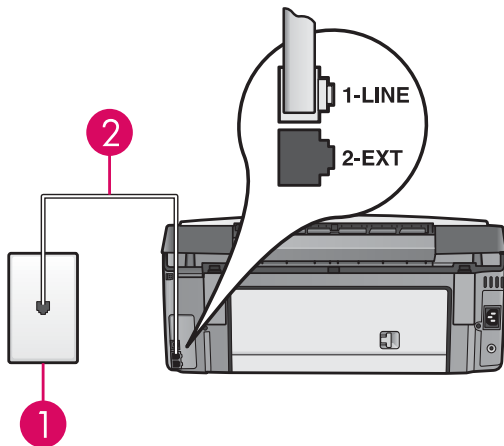

將提供的電話線一頭連接到左側 **(1-LINE)** 的電話埠，另一頭連接到牆上的插座。

若要連接答錄機或使用您自己的電話線，請參閱《使用者指南》。

 
Connect one end of the supplied phone cord to the phone port on the left **(1-LINE)** and the other to a wall jack.

To connect an answering machine or use your own phone cord, see the User Guide.

8

按下「開啟」按鈕並設定

Press the On button and configure

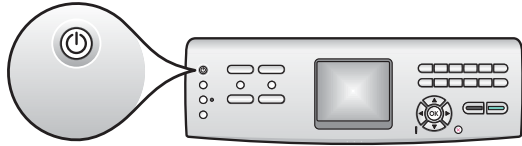開啟
/On

- a 您按下「開啟」按鈕之後，藍燈會閃爍，然後變成持續亮藍燈。此過程可能要花一分鐘的時間。
- b 繼續之前請等候語言提示。使用方向鍵選擇語言，按下「OK」，然後確認。使用方向鍵選擇您的國家/地區，按下「OK」，然後確認。

 
- a After you press the **On** button, the blue light flashes, and then becomes solid. This may take up to a minute.
- b Wait for the language prompt before continuing. Use the arrow keys to select a language, press **OK**, and then confirm. Use the arrow keys to select your country/region, press **OK**, and then confirm.

9


開啟檔門

Open the access door

a

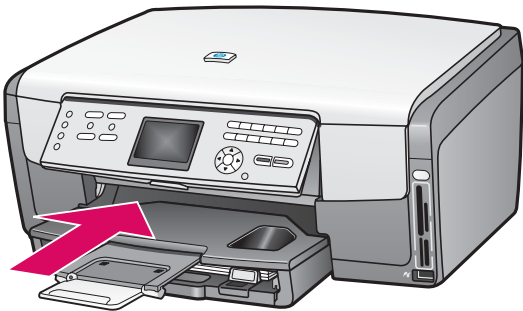


b

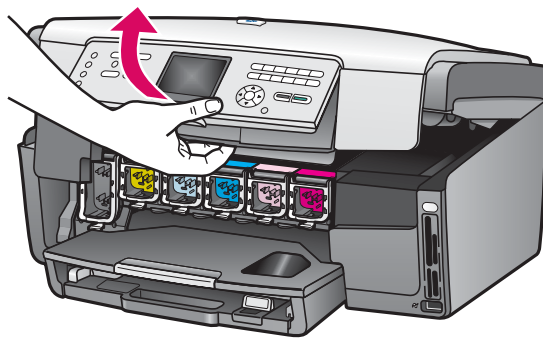 

10

掀起裝置內部的卡榫

 Lift latches inside of the device

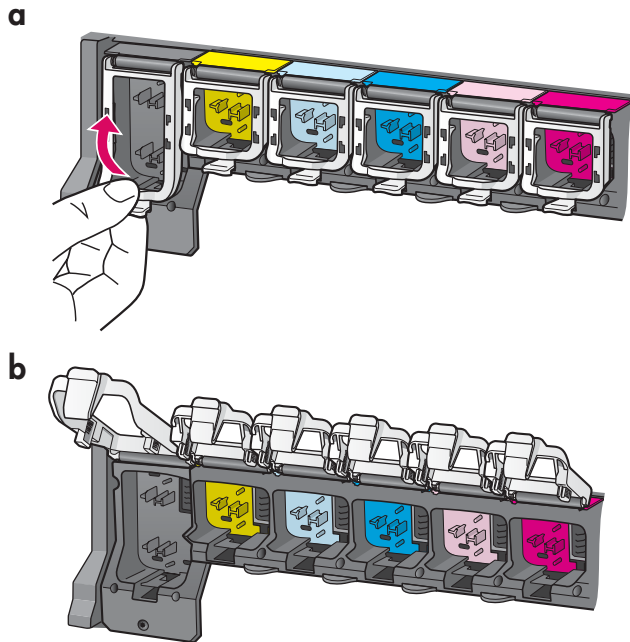


- a 壓下每個卡榫的底部以放開，然後掀起卡榫。
- b 掀起六個卡榫。

- a Squeeze the bottom of each latch to release it, and then lift the latch.
- b Lift all six latches.

11

插入六個墨水匣

 Insert all six ink cartridges

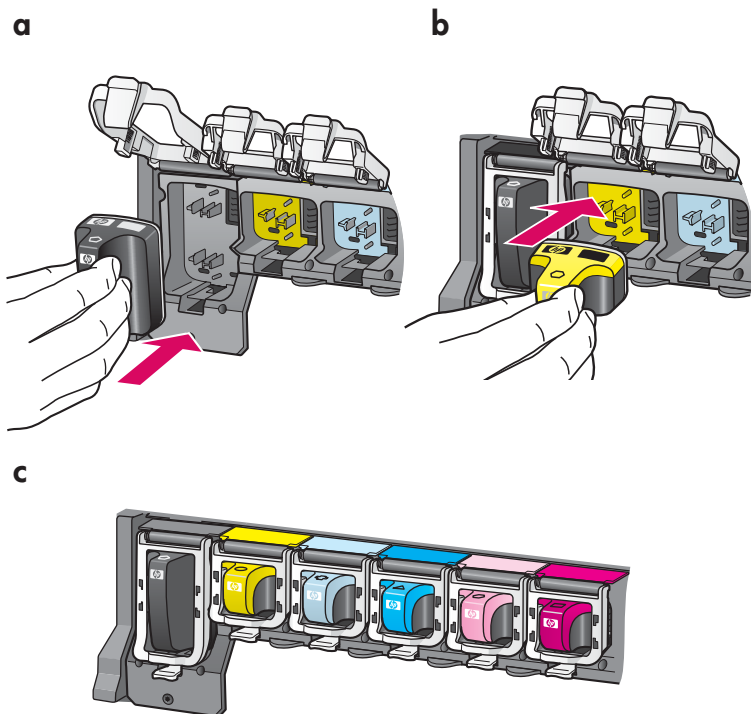

墨水匣的顏色和圖案需配合列印滑動架上的顏色和圖案。

- a 將黑色墨水匣推入左邊第一個插槽。關上卡榫。
- b 重複動作，裝入每個彩色墨水匣。
- c 確定每個卡榫都有固定好。

Match the color and pattern of the ink cartridge to the color and pattern on the print carriage.

 
- a Push the black ink cartridge into the first slot on the left. Close the latch.
- b Repeat with each of the color ink cartridges.
- c Make sure each latch is secure.

12


關上檔門並按照提示


Close the access door and follow the prompts


a

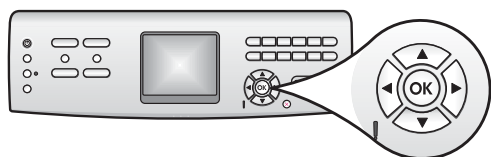

b

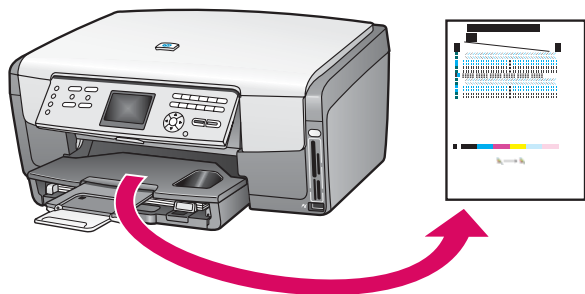 

 在這段期間內不要中斷連接或關閉 HP All-in-One。您可能聽到裝置發出較大的聲音。

 Do not disconnect or turn off the HP All-in-One during this time. You may hear the device making noises.

- a 關上檔門之後，會出現訊息提示您放入普通白紙。確定已放入紙張，然後按下「OK」開始進行。
裝置會初始化墨水匣並校正印表機。這大概會花費 5 分鐘的時間。
- b 列印頁面之後，印表機就已校正完成。檢視彩色圖形顯示器以查看狀態，然後按「OK」。
回收或丟棄該校正頁。

- a After you close the access door, a prompt appears to load plain white paper. Make sure paper is loaded, and then press **OK** to start the process.
The device initializes the ink cartridges and aligns the printer. This takes approximately 5 minutes.
- b After the page prints, the printer is aligned. Check the color graphics display for the status, and then press **OK**.
Recycle or discard the alignment page.

13

 
 
打開電腦的電源

Turn on your computer



- a 打開電腦的電源，必要時請登入，接著等候桌面出現。
- b 關閉任何開啓的程式。

- a Turn on your computer, login if necessary, and then wait for the desktop to appear.
- b Close any open programs.

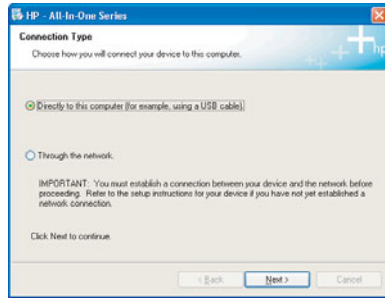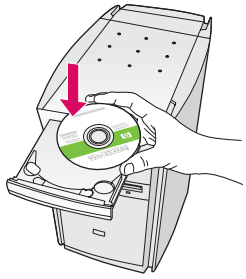

Windows 使用者：

- a 插入 HP All-in-One **Windows** CD。
- b 依照螢幕上的指示安裝軟體。
- c 在「連線類型」畫面，請確定選取「直接連接至電腦」。

Windows Users:

- a Insert the HP All-in-One **Windows** CD.
- b Follow the onscreen instructions to install the software.
- c On the **Connection Type** screen, make sure to select **directly to this computer**.

注意：如果插入 CD 後沒有顯示啟動畫面，請連接兩下「我的電腦」、連接兩下 **CD-ROM** 圖示，然後連接兩下 **setup.exe**。

Note: If the startup screen does not appear after you insert the CD, double-click **My Computer**, double-click the **CD-ROM** icon, and then double-click **setup.exe**.



 
 
Macintosh 使用者：

- a 找出 HP All-in-One **Macintosh** CD。
- b 繼續到下一頁。

Macintosh Users:

- a Locate the HP All-in-One **Macintosh** CD.
- b Continue to the next page.

Connect the USB cable

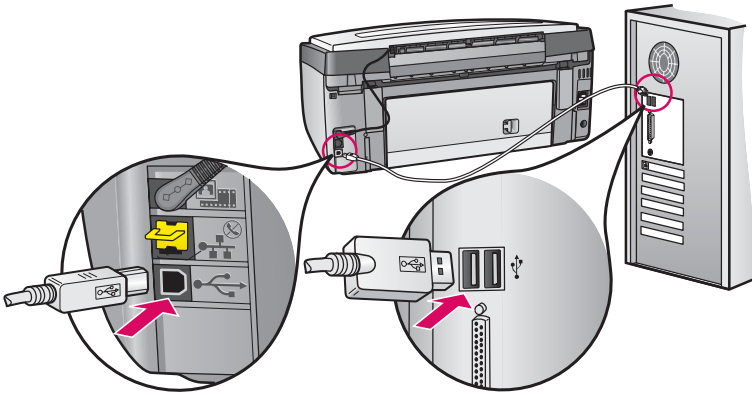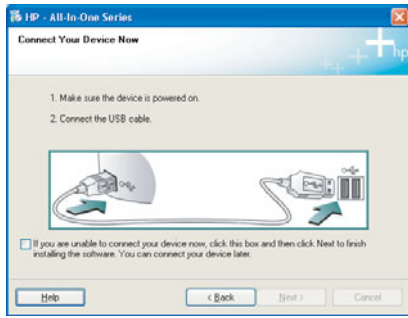

Windows 使用者：

- a 依照螢幕上的指示進行，直到您看到提示連接 USB 纜線。（這可能會花幾分鐘的時間）。出現提示時，將 USB 纜線一頭連接到 HP All-in-One 後方的連接埠上，然後將另一頭連接到您電腦上的任何一個 **USB** 埠。

Windows Users:

 
- a Follow the onscreen instructions until you see the prompt to connect the USB cable. (This may take several minutes.) Once the prompt appears, connect the USB cable to the port on the back of the HP All-in-One, and then to **any USB port** on your computer.

Macintosh 使用者：


- a 將 USB 纜線從電腦連接到裝置後方的 USB 連接埠上。

Macintosh Users:

- a Connect the USB cable from your computer to the USB port on the back of the device.

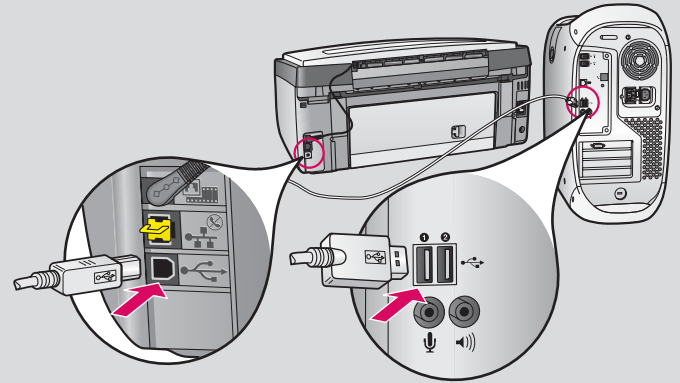

Connect the USB cable continued

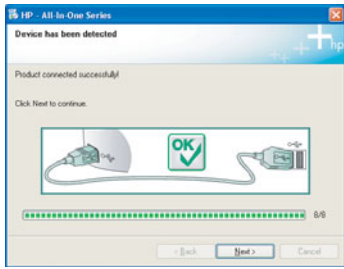 

如果您沒有看到此畫面，請參閱最後部份的「疑難排解」。

If you do not see this screen, see **Troubleshooting** in the last section.

Windows 使用者：

- b 依照螢幕上的指示進行。完成「傳真設定精靈」與「立即註冊」畫面。

Windows Users:

 
- b Follow the onscreen instructions. Complete the **Fax Setup Wizard** and the **Sign up now** screens.

Macintosh 使用者：


- b 連接兩下 **HP All-in-One Installer** 圖示。
- c 確定您完成所有畫面，包括「Setup Assistant (設定協助)」。

Macintosh Users:

- b Double-click the **HP All-in-One Installer** icon.
- c Make sure you complete all screens, including the Setup Assistant.

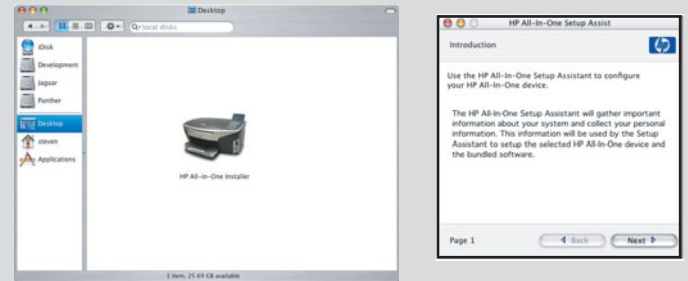

Congratulations!

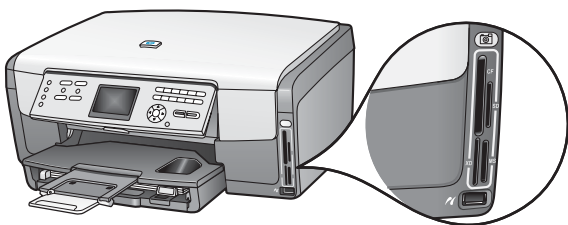 


安裝好軟體之後，就算完成。

若要瞭解從記憶卡列印相片和其他功能，請參閱《使用者指南》和線上說明。如需其他說明，請瀏覽 www.hp.com/support。

After you complete software installation, you are finished.


To learn about printing photos from memory cards and other features, see the User Guide and online help. For additional help, see www.hp.com/support.

 疑難排解

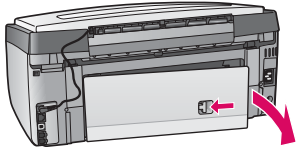

問題：出現「夾紙」訊息。

 動作：移除後方檔門，然後輕輕拉出任何紙張。關閉裝置的電源，然後再開啓。再次放入紙張。

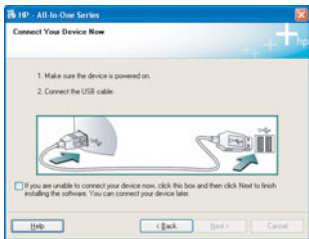


問題：沒有看見螢幕提示您連接 USB 纜線。

動作：拿出 HP All-in-One **Windows** CD，再重新插入。參閱步驟 14 和 15。



問題：出現「歡迎使用新增硬體精靈」畫面。

 動作：按一下「取消」。拔掉 USB 纜線，再插入 HP All-in-One **Windows** CD。參閱步驟 14 和 15。

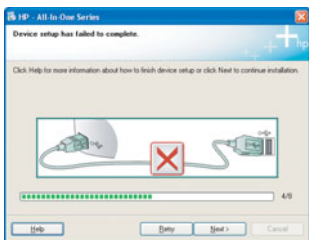

問題：出現「裝置安裝無法順利完成」畫面。

 
動作：檢查控制台面板是否有穩固裝好。拔下 HP All-in-One 的插頭，然後再將它插上。檢查所有連線。確定 USB 纜線已插到電腦。請勿將 USB 纜線插到鍵盤或是電源未開啓的集線器。參閱步驟 14 和 15。



Troubleshooting




Q5831-90173

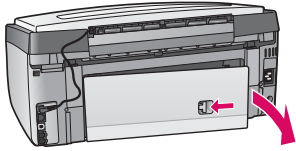


Problem: A **Paper Jam** message appears.

 Action: Remove the back access door, and then gently pull out any paper. Turn the device off, and then on. Load the paper again.

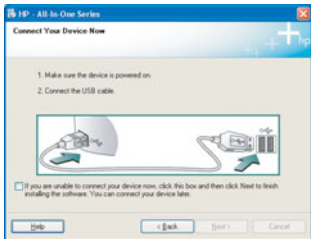


Problem: You did not see the screen prompting you to connect the USB cable.

 Action: Remove, and then re-insert the HP All-in-One **Windows** CD. Refer to Steps 14 and 15.

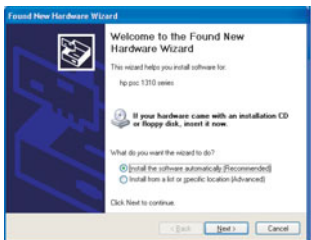

Problem: The Microsoft **Add Hardware** screen appears.

 Action: Click **Cancel**. Unplug the USB cable, and then insert the HP All-in-One **Windows** CD. Refer to Steps 14 and 15.

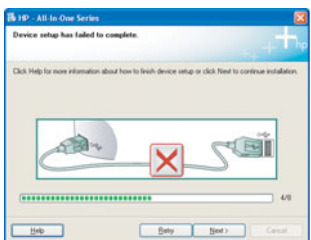

Problem: The **Device Setup Has Failed To Complete** screen appears.

Action: Verify that the control panel faceplate is firmly attached. Unplug the HP All-in-One and plug it in again. Check all connections. Make sure the USB cable is plugged into the computer. Do not plug the USB cable into a keyboard or non-powered hub. Refer to Steps 14 and 15.

