

# HP Media Center PC Software Guide



i n v e n t

The only warranties for Hewlett-Packard products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

HP assumes no responsibility for the use or reliability of its software on equipment that is not furnished by HP.

This document contains proprietary information that is protected by copyright. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of HP.

Hewlett-Packard Company  
P.O. Box 4010  
Cupertino, CA 95015-4010  
USA

Copyright © 2005 Hewlett-Packard Development Company, L.P.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited. Apparatus Claims of U.S. Patent Nos. 4,631,603, 4,577,216, 4,819,098, and 4,907,093 licensed for limited viewing uses only.

Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation.

Apple, iTunes, FireWire, and iPod are trademarks of Apple Computer, Inc., registered in the U.S. and other countries/regions. The FireWire logo is a trademark of Apple Computer.

HP supports lawful use of technology and does not endorse or encourage the use of our products for purposes other than those permitted by copyright law.

The information in this document is subject to change without notice.

# Table of Contents

<b>Welcome .....</b>	<b>1</b>	Copying recorded TV programs to DVD or CD .....	30
Experience the Fun of Media Center .....	1	Media Copy Protection .....	31
Watch and record live TV .....	1	Playing Recorded TV Programs .....	31
The right music for the moment .....	1	<b>Playing Music Files .....</b>	<b>33</b>
Share your digital memories .....	1	HP Tunes .....	33
Transform your living space into a theater .....	1	My Music .....	33
Using Media Center Features .....	2	Using HP Tunes with Media Center .....	34
<b>Using Media Center .....</b>	<b>3</b>	Completing the iTunes Setup Assistant wizard .....	34
Setting Up Media Center .....	3	Delays with HP Tunes .....	34
Opening Media Center using a mouse .....	3	Selecting a default audio player .....	35
Opening Media Center using the remote control .....	4	Adding Music to the iTunes Music Library .....	35
Media Center menu bars .....	4	Adding music files from a CD in iTunes .....	35
Navigating Media Center .....	5	Adding music files from the Internet .....	36
Media Center control menu .....	5	Adding music files from your hard disk drive .....	36
Using Media Center Away mode .....	6	Using supported music file types .....	37
Completing the setup wizard steps .....	7	Changing song title, genre, artist, or album in iTunes .....	37
Media Center Start Menu .....	8	Playing CDs with HP Tunes .....	37
Media Center Start menu items .....	8	Creating a Playlist with iTunes .....	38
Online Spotlight .....	9	Creating and Editing a Now Playing List with HP Tunes .....	38
Using Instant Messaging in Media Center .....	9	Creating Music CDs with iTunes .....	39
Logging in to your Messenger account .....	9	Troubleshooting HP Tunes .....	39
Changing Media Center Settings .....	10	Resetting HP Tunes .....	40
Media Center Settings categories .....	10	Using My Music with Media Center .....	41
Finding Additional Media Center Information .....	11	Adding Music to My Music Library .....	41
<b>Using the Remote Control .....</b>	<b>13</b>	Adding music files from your hard disk drive .....	42
Remote Control Buttons Overview .....	14	Adding music files from a CD .....	43
Teletext access buttons .....	16	Deleting music files from the My Music library .....	43
<b>Watching and Recording TV Programs .....</b>	<b>17</b>	Using supported music file types .....	44
Navigating My TV .....	17	Playing Music Files in My Music .....	44
Watching TV .....	18	Playing an album in My Music .....	45
Watching live TV .....	18	Playing a song in My Music .....	45
Controlling TV playback .....	19	Creating a Queue List in My Music .....	46
Using the remote control in My TV .....	20	Finding and Playing an Album in My Music .....	46
Using the Television Program Guide .....	21	Creating a Playlist in My Music .....	47
Using Media Center without the Guide .....	21	Copying Music Files to CD in My Music .....	47
Television Program Guide errors .....	22	<b>Working with Pictures .....</b>	<b>49</b>
Viewing the Television Program Guide .....	22	HP Image Zone .....	49
Setting up how Media Center downloads the Guide .....	23	My Pictures .....	49
Manually downloading the Guide .....	24	Working with Digital Images .....	50
Adding a postal code to receive the correct Guide .....	24	Using HP Image Zone in Media Center .....	50
Adding missing channels to the Guide .....	24	Creating your picture catalog in HP Image Zone .....	50
Editing channels in the Guide .....	25	Creating albums .....	52
Removing channels from the Guide .....	25	Modifying a date assigned to your pictures .....	52
Searching for TV Programs .....	26	Assigning a keyword to your pictures .....	53
Searching for TV programs using categories .....	27	Assigning a place to your pictures .....	53
Recording TV Programs .....	28	Searching for pictures in Media Center .....	54
Recording TV from the Guide .....	28	Viewing Pictures in HP Image Zone .....	54
Recording programs manually without using the Guide .....	29	Viewing a slideshow in HP Image Zone .....	54
Recording quality and hard disk drive storage space .....	30	Viewing a slideshow with music in HP Image Zone .....	55
		Editing Pictures in HP Image Zone .....	55

Editing pictures in HP Image Zone from the desktop .....	55
Editing pictures in HP Image Zone in Media Center .....	56
Sharing Pictures in HP Image Zone .....	57
Using supported file types with HP Image Zone .....	59
Printing Pictures in HP Image Zone .....	60
Creating a Backup Disc of Your Pictures .....	60
Using My Pictures in Media Center .....	61
Adding Pictures to My Pictures .....	62
Adding picture files from your hard disk drive .....	62
Viewing Pictures in My Pictures .....	63
Viewing pictures as a slideshow .....	64
Viewing a slideshow with music in My Pictures .....	64
Using supported picture file types in My Pictures .....	65
Editing Pictures in My Pictures .....	65
Fixing red eye or contrast .....	65
Cropping pictures in My Pictures .....	66
Rotating pictures .....	67
Printing Pictures in My Pictures .....	67
Copying Pictures to CDs and DVDs .....	68
<b>Playing Videos..... 69</b>	
Playing Digital Videos in Media Center .....	69
Using Supported Video File Types .....	70
Transferring and Recording Video Files .....	70
Recording an analog video file .....	70
Recording a digital video file .....	70
Creating a CD/DVD from Video Files .....	71
<b>Playing DVDs ..... 73</b>	
Playing DVD Movies in Media Center .....	73
Changing the DVD Movie Language .....	74
Changing DVD Audio Settings .....	74
<b>Listening to FM Radio ..... 75</b>	
Playing FM Radio Stations .....	76
Organizing Radio Station Presets .....	77
Using the FM Radio and the TV Signal at the Same Time .....	77
<b>Creating Audio and Data Discs ..... 79</b>	
Erasing Rewritable Discs Before Recording .....	79
Working with Audio CDs .....	80
Verifying audio disc recorded without errors .....	80
Audio CD tips .....	81
Creating audio CDs .....	81
Creating jukebox discs .....	82
Working with Data DVDs and CDs .....	82
Verifying data disc recorded without errors .....	82
Data disc tips .....	83
Creating data discs .....	83
Copying a DVD or CD .....	84
Archiving Files on a CD or DVD .....	84
Archiving files using Media Center .....	85

Working with Image Files .....	85
Creating an image file .....	85
Burning from an image file .....	85
Disc Labeling with LightScribe .....	86
LightScribe requirements .....	86
Burning a LightScribe label with Sonic Express Labeler .....	87
Burning a LightScribe label after burning with iTunes .....	87
Using adhesive disc labels .....	88
Compatibility Information .....	88
Disc Features and Compatibility Table .....	89
Optical Drive Quick Reference Table .....	90
Software Quick Reference Table .....	91

## **Creating Video Discs and Movies.....93**

Before You Begin Capturing Video .....	93
Sonic MyDVD Video Projects .....	93
Creating a Video Project .....	94
Adding files to a video project .....	94
Capturing video to a video project .....	95
Adding slideshows to a video project .....	95
Adding submenus to a video project .....	96
Editing the style of a video project .....	96
Editing movie files .....	96
Burning a video project to disc .....	97
Creating a Video Project with Direct-to-Disc Wizard .....	98
Video Quality and Disc Size .....	99
DVD Recording Time .....	100

## **Creating Movies Using muvee autoProducer.....101**

Basic Steps to Make a Movie .....	101
Locating the two versions of muvee autoProducer .....	102
Using muvee autoProducer on the Desktop .....	103
Getting started on the desktop .....	103
Capturing video from a DV camcorder .....	104
Adding videos .....	105
Adding pictures .....	106
Adding music .....	107
Selecting the style .....	107
Changing the settings .....	107
Adding an opening title and closing credits .....	108
Making the movie .....	109
Saving the movie project .....	109
Recording the movie project to disc .....	110
Using muvee autoProducer unPlugged in Media Center .....	110
Selecting videos .....	112
Selecting pictures .....	112
Selecting music .....	113
Setting the style .....	113
Adjusting audio and video settings .....	114
Making the movie .....	114
Upgrading muvee autoProducer .....	115

**Using an HP Personal Media Drive ..... 117**

- Setting Up the HP Personal Media Drive to Work
  - with Media Center ..... 117
- Locating the Drive After Installation ..... 118
- Assigning a Drive Letter to the HP Personal Media Drive..... 118
- Viewing and Storing Files ..... 118
- Playing Media Files ..... 119
- Playing Music Files ..... 119
- Viewing Picture Files ..... 119
- Playing Video Files ..... 120
- Watching TV Programs Stored on the HP Personal Media Drive ..... 120
- About Recording TV to the HP Personal Media Drive ..... 121
- Recording TV programs to the HP Personal Media Drive ..... 122
- Changing the TV recording path to the HP Personal Media Drive ..... 122
- Changing the TV recording path to the local hard disk drive ..... 123
- Disconnecting the HP Personal Media Drive Safely ..... 123
- Changing Disk Allocation ..... 124
- Updating Recorded TV List After Removing the HP Personal Media Drive ..... 124
- System Requirements to View Recorded TV Programs on Other PCs ..... 124

**Index ..... 125**



# Welcome

## Experience the Fun of Media Center

Microsoft® Windows® XP Media Center Edition 2005 with Update Rollup 2 lets you do amazing things with your PC. With a full range of easy-to-use digital entertainment features, you can experience movies, music, and photos like never before.

Media Center is simple and convenient to use. You can easily find and choose your media. You can play movies, listen to music, and view photos with a single remote control (select models only). Combine the powerful features of your PC with a home theater receiver to enjoy an even more dynamic entertainment experience.



---

### Watch and record live TV

With Media Center you can pause, advance frame by frame, skip ahead, or use instant replay to catch every moment of live TV. Use fast-forward to bypass unwanted content. When you are not able to watch your favorite show, you can use Media Center to record it.

Record TV with ease by using the Television (Electronic) Program Guide (Internet service required) to select the shows you want to record. You can record one show or an entire series and watch it when it is convenient for you. You will never miss a moment of your favorite shows.

---

### The right music for the moment

Browse your entire music library by artist, genre, and song. Select a playlist or a single album, or do a random shuffle from your music collection. You can even play songs from your iTunes music library.

### Share your digital memories

Create personalized slideshows with music for viewing on your PC. View professional-looking home videos from the comfort of your couch with the remote control.

---

### Transform your living space into a theater

Whether you are watching a DVD movie or your own home videos, Media Center delivers a rich viewing experience with a high-quality digital sound system. Sit back and enjoy the show.



**If your PC came with a rewritable DVD drive, the drive is able to read and record to DVD+/-R/RW media.**



**Some of the Media Center features listed are for select models only. Some of the components listed in the PC documentation, such as speakers and TV tuners are optional or sold separately.**



**The Television Program Guide (Internet service required) is not available in all countries/regions.**

## Using Media Center Features

You can control the Media Center functions and navigate Media Center windows by using the remote control (select models only), the keyboard, or the mouse. You can easily switch back and forth between them by moving the mouse or by pressing a button on the remote control or the keyboard.

With Media Center, you can:

- Watch, record, and play back television programs.
- Pause, rewind, and fast-forward TV programs.
- Watch an instant replay.
- Play back your digital videos.
- View your digital pictures or play them as a slideshow with music. Easily print your photos.
- Browse, select, and play music CD files with full-screen visualizations.
- Record CD tracks to your media library.
- Play DVD movies. Resume playing your DVDs where you left off.
- Listen to FM radio stations.
- Access streaming music and video subscription services. Some music and video subscription services may not be available in all countries/regions.
- Record your TV shows automatically while you are doing something else.
- Open specific windows in Media Center by using the shortcut buttons on the remote control.
- Communicate with your friends and family by using instant messaging. Instant messaging (Internet service required) may not be supported in all countries/regions.
- Easily back up your media files to CD, DVD, or another hard disk drive such as the HP Personal Media Drive (sold separately).
- Use the Optimization setting to keep your computer running smoothly.
- Use Away mode to save power when the computer is not in use, and then you can display the computer desktop instantly by touching a keyboard key or a remote control button.

You can run Media Center side-by-side with other Windows software programs. It is possible to browse through your pictures, watch videos, and play music while using other Windows programs.



# Using Media Center

## Setting Up Media Center

The first time you start Media Center on your PC, a Media Center setup wizard opens. It is recommended to complete each step in the setup wizard to be able to use all the features in Media Center. The Media Center setup wizard may take

several minutes to complete. If there are steps you still need to complete, you can go to the Settings menu to do so. See “Completing the setup wizard steps” on page 7.





**For more information about setting up your PC, refer to the setup poster or the Start Here guide.**

## Opening Media Center using a mouse

You can use either your remote control or your mouse to open and navigate Media Center.

To use your mouse:



- 1 Click **Start**  on the taskbar, and then click **Media Center**.
- 2 Move your mouse over the Media Center Start menu items, and click an item to open it. Select an option by clicking it. To scroll the list of Start menu items, move the mouse pointer over the list until an item is selected, then continue moving the pointer down the list to see the items that are not displayed.
- 3 Move the mouse to display the Media Center toolbar, and then click the back arrow at the top of the window to go to a previous window.
- 4 Click the **?** icon at the top of the window to open the Media Center Help.
- 5 Click the Media Center **Start** icon  at the top of the Media Center window to return to the Media Center Start menu.

 


## Opening Media Center using the remote control

You can use either your remote control or your mouse to open and navigate within Media Center.

To use your remote control:

- 1 Press the Media Center Start button  on the remote control.
- 2 Use the arrow buttons on the remote control to select a Media Center menu.
- 3 Press the OK button to enter your selection and open that window. To scroll the list of Start menu items, use the arrow buttons until the item is highlighted, and then continue moving the arrow buttons down the list to see the items that are not displayed.
- 4 Press the Back button on the remote control to go to a previous window.
- 5 Use the arrow buttons to select the ? icon at the top of the window to open the Media Center Help.
- 6 Press the Media Center Start button  to return to the Media Center Start menu.

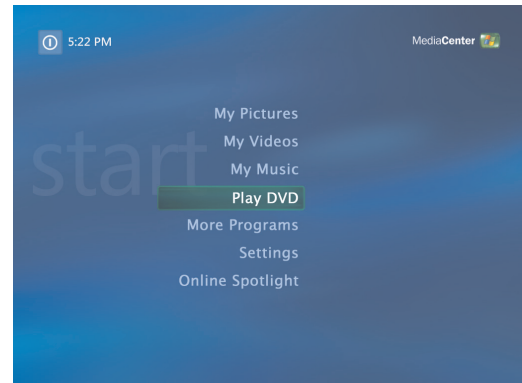

---

## Media Center menu bars

When you move the mouse, the Media Center menu bars appear. These menu bars allow you to access media controls, Media Center Help, the back arrow, window control icons, and the Media Center icon that takes you to the main Media Center menu. If you use the remote control, or if you stop using the mouse (after 5 seconds), the Media Center menu bars become hidden.



**You can use the Minimize and Resize buttons to switch to the desktop or to run Media Center side-by-side with another program.**

## Navigating Media Center

In the Media Center windows, a selected item such as a folder, file, or menu item is outlined with a green border.

You can control the Media Center functions and navigate Media Center windows by using the remote control, the keyboard, or a mouse.

To select items in Media Center, use the arrow keys on the keyboard or use the arrow buttons on the remote control, and then press the Enter key on the keyboard or the OK button on the remote control to enter your selection.

If you have media playing, such as music or a slideshow, it appears in an inset window in the lower-left corner. To switch from watching your media in the inset window to watching it in full-screen mode, use the arrow buttons on the remote

control or use the arrow keys on the keyboard to select it, and then press OK on the remote control or the Enter key on the keyboard.







## Media Center control menu



To access the control menu in Media Center, move the mouse to display the menu bars. Select the **Shut Down** icon on the main Media Center window.

From this control menu, you can select icons to perform various actions.



Icon	Action
	Log off and end your Media Center session and switch users
	Shut down the PC
	Restart the PC
	Put the PC in a power-reduced state — standby mode



- If you are recording a TV program and then put the PC into standby, the recording will stop.
- If the PC is in standby and a recording is about to begin, the PC wakes from standby and records the program.



**The audio or video of TV recordings are not affected when the PC is in Away mode.**

## Using Media Center Away mode


When your computer is in Away mode it appears off, but you can actually still perform tasks such as recording TV programs or music files. Away mode turns off the display and mutes the audio.

 


After you have enabled Away mode in the Control Panel, you can activate it by pressing the sleep button on your computer, keyboard, or remote control.

You can return to your desktop almost instantly by pressing any sleep button again, by pressing any key on the keyboard, by moving the mouse, or by pressing any button on the remote control if you select the *Return the computer from Away mode on mouse or keyboard activity* option in the Power Options Properties window. See the following procedure.



To enable your HP Media Center PC for Away mode:

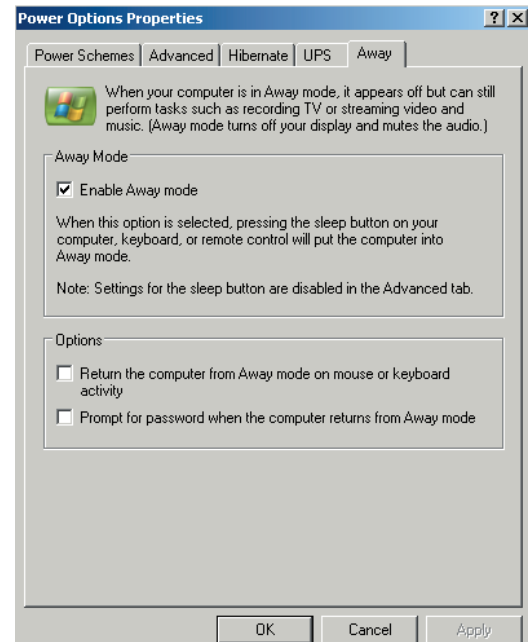- 1 Click **Start**  on the taskbar, and then click **Control Panel**.
- 2 Click **Performance and Maintenance**.
- 3 Click **Power Options**.
- 4 Select the **Away** tab.
- 5 Place a check mark in the **Enable Away mode** check box.
- 6 Under Options you can select to:  
**Return the computer from Away mode on mouse or keyboard activity**  
  
Or  
**Prompt for password when the computer returns from Away mode**
- 7 Click **OK**.



## Completing the setup wizard steps

If you did not complete the Media Center setup wizard steps the first time through, you can complete or change your selections by using the following procedure. You need to complete all of the required setup steps to access all of the Media Center features.

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **Settings**. You may need to use the arrow keys on the keyboard or the arrow buttons on the remote control to scroll down to see all the menu items.
- 3 Select **General, Media Center Setup**, and then **Run Media Center Setup Again**. Follow the onscreen instructions to complete the wizard.



**You must select either analog or digital TV signals in the setup wizard for your TV tuner to work properly (select models only).**

 
Following are some of the items included in the setup wizard:

- **Check for your Internet connection.** An Internet connection allows Media Center to display information about your music CDs, DVDs, and other media.
- **Optimize how Media Center looks on your display.** You can change display settings such as brightness, contrast, color, and centering.
- **Set up your speakers.** Select how many speakers you have and test them. Speakers are sold separately for some models.
- **Configure your TV tuner, TV signal source, and Television Program Guide.** You need to provide information about your TV signal source and your TV signal equipment (set-top box, cable, and so on). This step makes sure your HP Media Center PC receives the correct TV signal and Television Program Guide information. If you have a cable box or satellite receiver, the setup wizard programs your Media Center remote control to work with them.
- **Display Calibration.** You can test and adjust the display settings of your monitor, TV, or other display. You can use the Media Center video to help you change onscreen centering, sizing, aspect ratio (shape), brightness, contrast, color, and sharpness of the display with your TV remote control or your monitor controls.



**You must subscribe with an Internet service provider (ISP) to have an Internet connection.**

## Media Center Start Menu

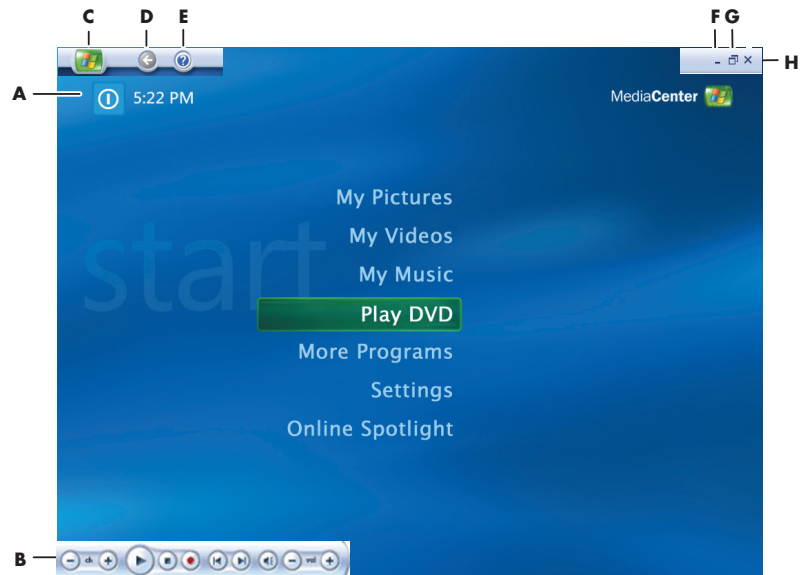

- A** Access a menu to exit Media Center, to shut down or to restart the PC, to log off to end your Media Center session, to put the PC into standby mode, or to switch users. See page 5.
- B** Use media playback controls: Play, Stop, Pause, Skip, Fast-Forward, Replay, Rewind, Record, Volume Up/Down, Mute, and Channel Up/Down. See page 19.
- C** Open the Media Center Start menu. See page 3.
- D** Go back one screen.
- E** Open the Media Center Help.
- F** Minimize the Media Center window.
- G** Resize the Media Center window.
- H** Close the Media Center window.

### Media Center Start menu items

**Play DVD** — Watch DVD movies. See page 73.

**\*Online Spotlight** — Go to the Media Center Web site for the latest Media Center information. See page 9.

**My Videos** — Watch your home videos. See page 69.

**My Pictures** — View digital pictures, play a slideshow, or print photos. See page 49.

**My Music** — Play music files or music CDs, create and edit playlists, and record music files to CD. See page 33.

**More Programs** — Find utilities and programs for communicating with instant messaging (see page 9), editing videos (see page 101), backing up files (see page 85), and creating CDs/DVDs (see page 30).

**Settings** — Change program settings. See page 10.

**My TV** — Watch, record, and play back TV shows. See page 17.

**Radio** — Play FM radio stations. See page 75.

**\*HP ImageZone** — View, edit, share, and print digital pictures, and play a slideshow. See page 49.

**\*HP Tunes** — Play music files or music CDs, play playlists that you create and edit in iTunes, and record music files to CD. See page 33.



**\*Some of the features listed are for select models only.**

## Online Spotlight

Online Spotlight is a link to the Microsoft Web site, where you can find the latest Media Center information and media offers and services. This site is periodically updated by Microsoft. Some of the services listed may not be available in certain countries/regions.

Your PC must be connected to the Internet to access the Online Spotlight Web site.

---

## Using Instant Messaging in Media Center

Instant messaging may not be supported in all countries/regions.

Media Center supports instant messaging (Internet service required) so you can communicate with your friends and family while you are doing something in Media Center. You always have the option to turn this feature on or off.

You can use your remote control to log in and type messages. You can even have multiple conversations.

 
---

## Logging in to your Messenger account

- 1 First, you must go to <http://www.msn.com> to set up your Messenger account. You will need a .NET passport to log in to Messenger. A .NET passport is an e-mail address, a login name, and a password. Make sure you verify the account with MSN before you try to log in from Media Center.
- 2 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 3 Select **More Programs**, and then select the **Messenger** icon.
- 4 Select **Sign In**.



- 5 Enter your .NET passport information, and then select **Sign In**.

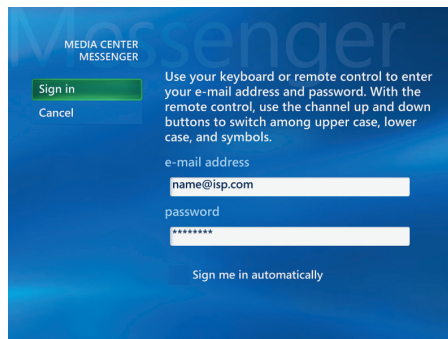




**From most areas in Media Center, you can select a media file and then press Ctrl+D on the keyboard or select a media file and press the *i* (More information) button on the remote control to access the Messenger login screen.**

## Changing Media Center Settings

In the Media Center Settings window, you can change settings for viewing your pictures and slideshows, and for controlling sound and the display of all the Media Center windows.

To change your Media Center settings:

 - 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **Settings**.
- 3 Select a category.
- 4 Select one of the settings listed. Then, use the arrow keys on the keyboard or the arrow buttons on the remote control to select an option or follow the onscreen instructions.
- 5 Select **Save** to save your changes.

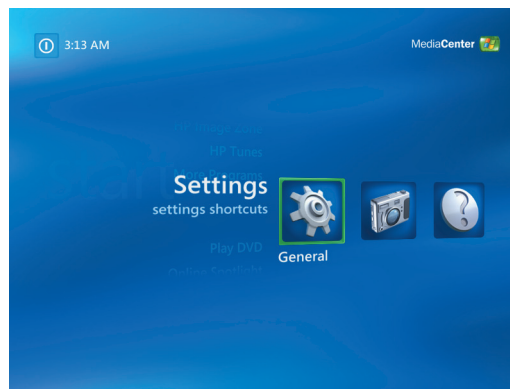

### Media Center Settings categories

- **General:**
  - **Startup and Window behavior.**
  - **Visual and Sound Effects** to set transition animations and sounds when navigating in Media Center.
  - **More Programs Options** to change settings for other programs on the PC.
  - **Media Center Setup** to configure your Internet connection and speakers, access Windows updates, run Media Center setup again, set up remote desktop, and reset Start Page defaults.
  - **Parental Controls** to block unwanted TV channels and block unwanted TV and movie ratings, change access code, and reset parental controls.
- **Automatic Downloads Options** to get media information about CDs, DVDs, and movies from the Internet.
- **Optimization** to keep your computer running smoothly by performing various tasks on a regularly scheduled basis. The Optimization setting restarts your computer at a specific time each day that you determine.
- **TV** to set up TV signal, audio, and closed captioning (not all channels support closed captioning). You can download or edit the Television Program Guide, view or clear recording history, set hard disk drive recorder storage space, configure your display, and set recording defaults.
- **Pictures** to set slideshow settings.
- **Music** to select visualizations or song information to display when playing a song.



The parental controls, captions display, radio, and TV settings listed in Media Center do not apply to PC models that do not include a TV tuner.



- **DVD** to select a language for subtitles, audio tracks, and menus of your DVDs, program the Skip and Replay buttons on the remote control for your DVDs, and select closed captioning. You can also access audio settings for your speakers.
- **Messenger** to allow instant messages within Media Center. Instant messaging may not be supported in all countries/regions.
- **Radio** to organize or delete preset radio stations.
- **Help** to find help about using Media Center and your hardware.

---

## Finding Additional Media Center Information.



To learn more about using Media Center, refer to the online and other Help files located in Media Center. Using your mouse, click the **Help** icon in the Media Center toolbar. You can select **Online Spotlight** from the main Media Center menu to go online for the latest Media Center tips and other information. Online Spotlight may not be available in all countries/regions.

You can also find guides and information for your PC using the Internet to access a Support Web site.

To view information for your PC, go to the Support Web address listed in the *Warranty and Support Guide*, and search for your model's name and number. The product model is on the lower front of the PC chassis.

To find the online documentation for your product, search for your model number, and then click **Manuals**.



**Information and guides are associated with specific PC model numbers. Some models do not have guides or manuals available on the Web site.**



# Using the Remote Control

## (Select models only)

The remote control is designed to work with Media Center. You can use your remote control with Media Center to play CDs and DVDs, view pictures, and much more.

 
This remote control helps you navigate the Media Center windows on your computer just as a TV remote control helps you navigate cable TV options or control the playback of a movie in a VCR or DVD player.

### The remote control can:

- Navigate and control all Media Center windows.
- Control the video display.
- Place the computer in and out of standby mode.
- Shut down or restart the PC.
- Log off from Media Center or switch users.
- Access Teletext menus while watching live TV.

### The remote control cannot:

- Navigate the Windows desktop or control other computer programs outside of Media Center.
- Be used as a VCR, DVD player, or stereo remote control.
- Turn on or off a TV that is connected to your PC (select models only).
- Turn on the PC.

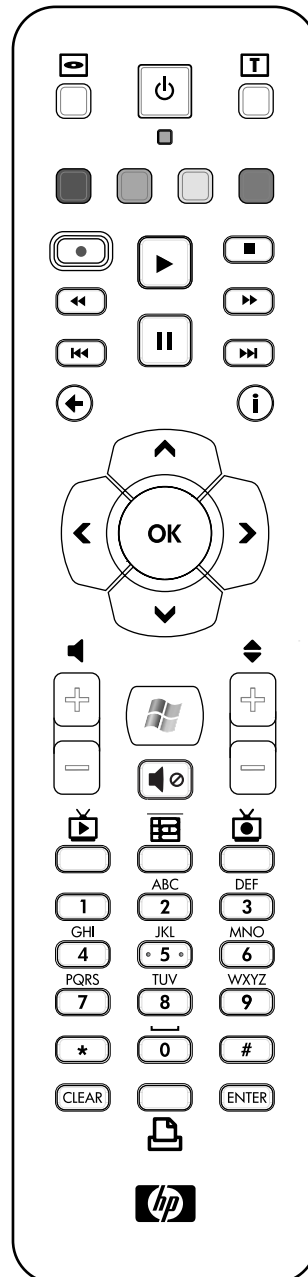

The remote control is included with select models only. Features and location may vary.



The remote control requires two AA batteries.

The remote control operates up to 7.9 meters (26 feet) away from the remote sensor.













 


Make sure there is nothing blocking the pathway between your remote control and the remote sensor.

 










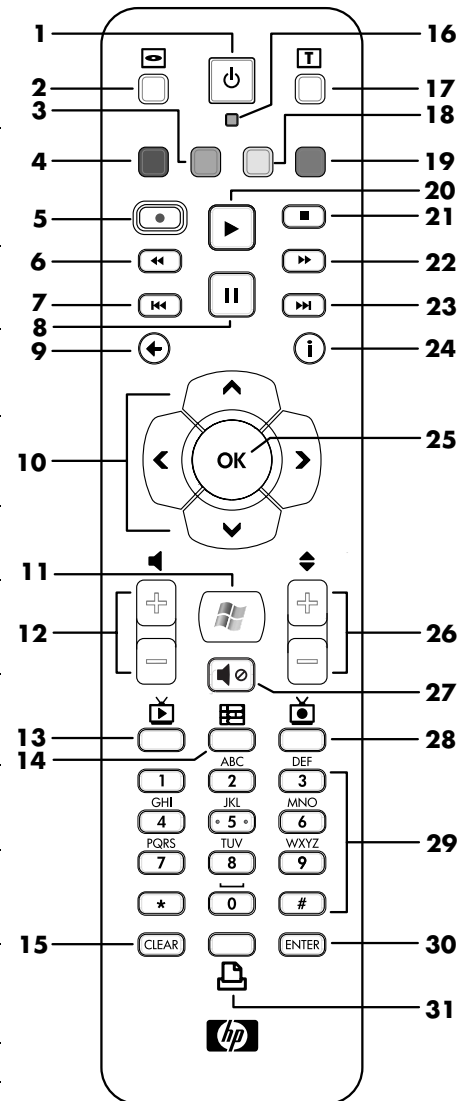







Make sure you turn off the monitor and turn down or mute the volume, for example, if you have a scheduled recording in the middle of the night and do not want to be disturbed.

The HP Media Center PC does not automatically go into standby mode if Media Center is open. It is recommended that you close Media Center before you manually place the PC in standby mode.

## Remote Control Buttons Overview

<b>1 Standby</b>		Puts the HP Media Center PC into and out of a power-reduced standby state. It does not turn the HP Media Center PC off.
<b>2 DVD Menu</b>		Opens the Play DVD window in Media Center or opens the main menu of a DVD movie, if available.
<b>3 Green</b>		Opens a Teletext menu.
<b>4 Red</b>		Opens a Teletext menu.
<b>5 Record</b>		Records a selected television program and stores it on the hard disk drive.
<b>6 Rew</b>		Moves the media backward for three speeds.
<b>7 Replay</b>		Moves media backward 7 seconds, or to the beginning of a music track or a DVD chapter.
<b>8 Pause</b>		Pauses audio and video tracks and live or recorded TV programs.
<b>9 Back</b>		Returns to the previous window within Media Center.
<b>10 Arrows</b>		Move the cursor to navigate and select actions within all Media Center windows.
<b>11 Start</b>		Opens the Media Center main menu.
<b>12 Volume</b>		Increases (+) and decreases (-) volume.
<b>13 Live TV</b>		Is a shortcut to the full-screen view of live TV. Moves a TV program forward to the end of the pause buffer and resumes playing live TV.
<b>14 Guide</b>		Opens the Television Program Guide.
<b>15 Clear</b>		Deletes the last character entered.



<b>16 LED</b>		Activity indicator light. The LED tells you that the remote control is emitting a signal when you press a button.
<b>17 Teletext</b>		Turns Teletext on or off while in Live TV mode. The Teletext page either replaces the live TV picture or is displayed over it. TV sound is still available.
<b>18 Yellow</b>		Opens a Teletext menu.
<b>19 Blue</b>		Opens a Teletext menu.
<b>20 Play</b>		Plays the selected media.
<b>21 Stop</b>		Stops the media currently playing.
<b>22 Fwd</b>		Moves media forward at three speeds.
<b>23 Skip</b>		Moves media forward 30 seconds in videos and live TV, one music track, or one DVD chapter.
<b>24 i (More information)</b>		Displays available information about a selected media file and displays other menus.
<b>25 OK</b>		Selects the desired action or window option and acts as the Enter key.
<b>26 CH/PG up (+) and down 9-)</b>		Changes the TV channels or moves pages up and down, depending on available options. Moves to the next DVD chapter.
<b>27 Mute</b>		Turns computer sound off. The word <i>Mute</i> is displayed when Mute is turned on.
<b>28 Recorded TV</b>		Opens the Recorded TV window where recorded TV programs are listed.
<b>29 0 to 9, #, *</b>		Use numeric keypad buttons to change channels or enter text into a Media Center search or text box. Each time you press a number button, a different character appears. Press the Enter button to select a character.
<b>30 Enter</b>		Selects the desired action, menu, or window option.
<b>31 Print</b>		Prints your pictures that you select in the My Pictures window of Media Center.



**If the PC model does not include a TV tuner, some remote control buttons are inactive.**

 
## Teletext access buttons (Select models only)

Although Teletext is broadcast free of charge, your TV set must be equipped with a Teletext decoder. Access to Teletext and all of its functions is available through your TV and the Media Center remote control.

Although the following information should describe the operation of Teletext for most TV sets, functions vary between manufacturers and models. For specific information about your particular TV model, see the documentation that came with your TV.

Teletext consists of pages of free information such as news, sports, financial information, recipes, entertainment listings, holiday advertisements, music and TV reviews, backup information for certain TV programs, and themes for television sets capable of viewing these pages.

The actual Teletext pages are broadcast in a hidden part of the television signal and decoded by the television. Teletext pages are accessed by a three-figure number; on most channels, the front page is on page 100.

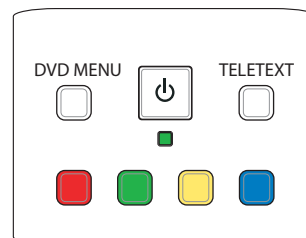

The Teletext access buttons listed below open the main Teletext pages. Each Teletext page has a unique three-digit page number. All pages can be accessed by typing in the number using the numeric keypad on the remote control.

Use the up and down arrows to navigate through the different Teletext pages.


Button	Function
<b>Teletext (Text)</b>	Toggle button to turn Teletext on and off. This button opens page 100, or the home page. The Teletext page completely replaces the TV or Media Center display; however, sound is still available. To return to the TV or Media Center display, press this button again. On some displays, Teletext can be viewed over the display picture.
<b>Red</b>	Opens the red Fasttext shortcut link when display is in Teletext mode.
<b>Green</b>	Opens the green Fasttext shortcut link when display is in Teletext mode.
<b>Yellow</b>	Opens the yellow Fasttext shortcut link when display is in Teletext mode.
<b>Blue</b>	Opens the blue Fasttext shortcut link when display is in Teletext mode.

# Watching and Recording TV Programs

Watch live TV or record your favorite shows for later playback. Use the Television Program Guide to find the show you want to watch or record. You can also record a show while watching another prerecorded show.

## Navigating My TV

From the My TV window you can search for and play your favorite TV shows. Use the following menu items to help you locate what you want to do:

- **Live TV:** Watch, pause, fast-forward, or rewind your favorite TV shows. You can watch recorded TV shows while recording another show. Use the *i* (More information) button on the remote control to display TV show information. 
- **Recorded TV:** View a list of recorded programs by date or title, view a list of programs scheduled to be recorded, play a recorded program, find out why a program wasn't recorded, or add a TV recording manually.
- **Search:** Quickly find a TV program or a series to watch or record by entering a descriptive word, program title, or program category.
- **Guide:** (Not available in all countries/regions.) Scroll through the Television Program Guide (Internet service required) to find programs to watch and record. You can record specific TV shows or a whole series to your hard disk drive or an HP Personal Media Drive.
- **Movies:** Go online to find movies to watch now or later. Get the latest information about movies on TV: read reviews, see cast lists, find other times the movie is broadcast, view the DVD cover, browse for related movies, and find other movies with the same cast members.



**Digital video recording features and the Television Program Guide are for select models only.**



**The Movies online information feature is available for some countries/regions.**





You can change the channel by using the remote control while in full-screen mode or when the inset window is selected.

You can go to live TV from anywhere in Windows Media Center by pressing the Live TV button on the remote control.

While in the Guide, you can select a channel to see upcoming programs for that channel by pressing the arrow buttons on the remote control.

## Watching TV

Before you can watch TV by using Media Center, make sure:

- The computer is set up correctly for your TV signal source. Refer to the setup poster and the *HP Media Center PC Getting Started Guide* for more information.
- You have completed the Media Center setup wizard. If you have not completed the setup wizard, refer to "Completing the setup wizard steps" on page 7.

### Watching live TV

- 1 Press the TV button on the remote control or select **My TV** from the main start menu. Use the arrow buttons on the remote control to select **Live TV**, and then press OK. The last channel selected or the first channel available begins playing.
- 2 Select a channel by using the CH/PG (+) or (-) buttons or the numeric keypad on the remote control, and then press OK on the remote control. The channel number and program information are displayed in the window.
- 3 Press the *i* (More information) button to open another menu with the following options and information:
  - Access to Messenger and Settings windows.



- Program information such as channel number and station, title and time period of program, actual time, and a brief summary of the program and TV rating, if available. Recording options are also shown.
- 4 To exit full-screen mode and return to the previous window, press Back on the remote control.



 
## Controlling TV playback

The digital video recording functionality lets you record single shows or capture entire series for later viewing.

When you open the My TV window and begin watching live TV, Media Center automatically begins recording and playing back the selected program in the background. This allows you to pause or review a live TV program for up to 30 minutes. To replay a program longer than the 30 minutes, you must select to record the program.

You can return to the live broadcast by pressing the Live TV button on the remote control.

When you change the channel, Media Center deletes the previously recorded portion and begins recording again after a short delay.

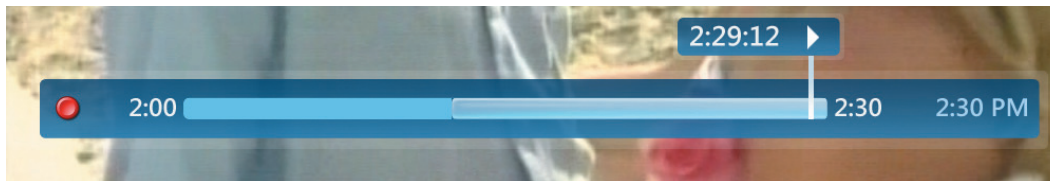

**The 30-minute pause buffer applies only when pausing, rewinding, and fast-forwarding live TV. Media Center allows you to record a program for longer than 30 minutes when you select to record the program.**














**You cannot pause a live TV program and then rewind to the beginning of the pause buffer and then begin recording. You can record a TV program only from live TV.**



**The digital video recording features are for select models only.**

## Using the remote control in My TV

Button	Action
	To freeze the live TV image, press Pause. While paused, My TV continues to record a pause buffer for up to 30 minutes. To resume watching TV where you left off, press Play.
	To stop live TV or a recorded program, press Stop once. To resume watching the program, press Play.
	To move forward in a live TV program that has been paused, or in a recorded program, press Fast-Forward (Fwd). To speed up the fast-forwarding, press Fwd two or three times. Fwd allows you to skip 3 hours in the Television Program Guide.
	To play a recorded TV program or to resume watching a program after pressing the Pause, Fast-Forward, Rewind, Replay, or Skip buttons, press Play.
	To advance in live TV or in a recorded program by 30 seconds, press Skip once. You can repeatedly skip forward, but only to the end of the pause buffer or the recorded program. Allows you to skip 12 hours in the Guide.
	To move backward in live TV or a recorded program, press Rewind (Rew). To speed up rewinding, press Rew three times. To resume watching the program, press Play. Rew allows you to move back 3 hours in the Guide.
	To move backward in live TV by 7 seconds, press Replay. You can repeatedly rewind with the instant replay option, but only to the beginning of the pause buffer or recorded program. Allows you to move back 12 hours in the Guide.
<b>Live TV (TV)</b> 	To maximize the TV viewing window to full-screen mode, press Live TV. Also, to advance to the end of the pause buffer and resume watching the live TV broadcast, press Live TV.
<b>i (More information)</b> 	To see the channel number, station identifier, title of program, time slot, and category of program, press the <i>i</i> (More information) button while in full-screen mode. If you select a recorded show and then press the <i>i</i> (More information) button, you can access more information about a program, stop or delete a program, change a recording setting, change the "Keep Until" setting, access the instant messaging dialog box, and access TV settings.
<b>CH/PG</b> 	To move to the next channel or page in the Television Program Guide, press the CH/PG (+) and (-) buttons.
<b>Guide</b> 	To open the Television Program Guide, press Guide. When in the Guide window, press Guide again to view a program categories menu. To filter your Guide to display only programs in a category, you can select a category, such as Movies.

## Using the Television Program Guide

The Television Program Guide (Internet service required) is a free service from Microsoft that provides TV listings information, such as channel, network, program title, program summary, and scheduled broadcast times. This service is currently not available in some countries/regions. You can go to <http://www.microsoft.com> to find out if the Guide is available in your country/region and for the terms and conditions of the Television Program Guide service.

In countries/regions where the Guide is not available, refer to "Using Media Center without the Guide" on page 21, and see "Recording programs manually without using the Guide" on page 29 for more information about recording TV programs.

Using the Guide, you can scroll through a list of the current and upcoming television programs and channels available from your television service provider. The Guide displays the channel and network, as well as the program title, scheduled time block, and a brief description of the program. The number of days displayed depends on your television service provider; most providers display up to 14 days. By selecting a program title, a detailed description of the program appears at the bottom of the window.



**Your HP Media Center PC requires a connection to the Internet to access the Guide.**



---

## Using Media Center without the Guide

Before using Media Center, it is important to complete the Media Center setup wizard. This takes you through steps to identify your TV signal source and scan for channels you are able to receive from your TV provider. By scanning for channels, you can manually select TV programs to watch and record, even if your country/region is unable to download the TV listings information of the Guide listed above.

The Television Program Guide data may not be available in your country/region. You can still record TV programs without a Guide; see "Recording programs manually without using the Guide" on page 29.

If you have already completed the setup wizard, but want to change your settings or scan for TV channels again:

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **Settings, General, Media Center Setup**, and then **Run Media Center Setup Again**.
- 3 Follow the onscreen instructions to scan for your channels.



**The Television Program Guide (Internet service required) is not available in all countries/regions.**



**Make sure the HP Media Center PC is connected to the Internet and Media Center is properly set up before you try to change the Guide settings.**



 
**When you select a channel and then press OK on the remote control, you can view up to two weeks of programming information. Use the scroll arrows at the bottom of the window.**

## Television Program Guide errors



If there is no Guide data available when you try to download or search for Guide information, the following messages may appear:

- *Download Incomplete:* We were unable to locate any Television Program Guide information for the following reason: Guide data is not available for the country or region setting you selected in the Control Panel Settings.
- *Search in My TV is unavailable because there is no Guide information.*
- *The current lineup and/or location selected for the Guide is not supported.*
- *The Guide information is either missing or corrupt.*
- *No data available.*
- *Channel information is currently not available.*

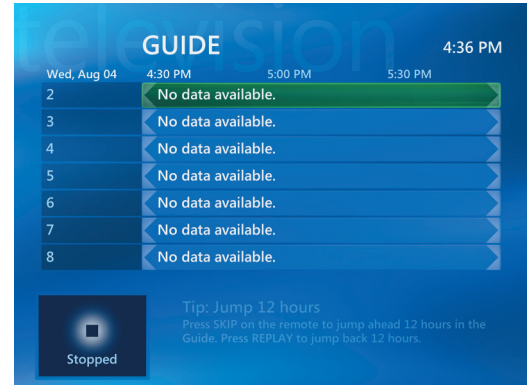If you receive any of these messages, then the Guide data is not available in your country/region, and you cannot use Television Program Guide features. Check back periodically to see if Guide data has been provided.




## Viewing the Television Program Guide

- 1** Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2** Select **My TV**, and then select **Guide**.
- 3** Use the arrow buttons to select a channel, and then use the arrow buttons to scroll through up to two weeks of programming for that channel.
- 4** Select a program, and then press OK to watch it. Press the Record button on the remote control to record the program.



If you press the Guide shortcut button on the remote control while you are already in the Guide, you can select one of the Guide filter categories, such as Movies, to search for a movie.



Press the *i* (More information) button on the remote control to access another menu for more options of searching the Guide. 

### Setting up how Media Center downloads the Guide

 
Your HP Media Center PC must have a connection to the Internet and you must select a TV listings provider in the Media Center setup wizard before you can use and download the Guide information. You can set up Media Center to download the Guide information when you connect to the Internet, or you can select to manually download the Guide.


- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **Settings, General, Automatic Download Options**, and then:

- **Download when connected:** Connect to the Internet, and Media Center automatically downloads the Guide.



Or

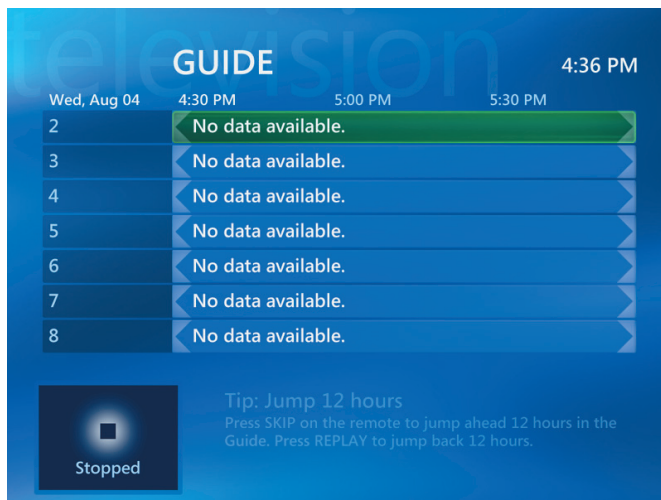
- **Manual download:** Connect to the Internet, and then manually download the Guide in Media Center TV Settings menu.
- 3 Follow the onscreen instructions. When the Television Program Guide starts downloading from the Internet, it can take between 1 and 30 minutes, depending on the amount of data to download and the speed of your Internet connection.



  
**No data available** appears next to each channel if the Guide has not been downloaded. This can occur if the HP Media Center PC does not have an Internet connection or if there is no service available in your country/region.



## Manually downloading the Guide

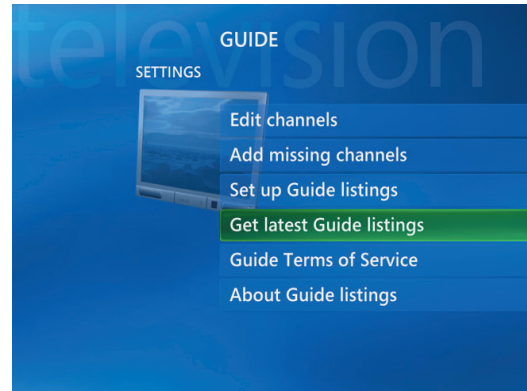 - 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **Settings, TV, Guide**, and **Get Latest Guide Listings**.
- 3 Follow the onscreen instructions. The Guide can take between 1 and 30 minutes to download, depending on the amount of data to download and the speed of your Internet connection.
- 4 Select **Yes**.



---



## Adding a postal code to receive the correct Guide

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **Settings, TV, Guide**, and **Set Up Guide Listings**.
- 3 Click **Next**.
- 4 Select **Yes** and then **Next**.
- 5 Select **I agree** and then select **Next**.
- 6 Enter your postal code, and then select **Next** for Media Center to determine which TV/Program Guide listings are available for your country/region.
- 7 Select **Next**.
- 8 Select TV signal provider and then **Next**.
- 9 Select **Next** and then **Finish**.

---

## Adding missing channels to the Guide

Some program channels may not appear in the Guide. To add the names and numbers of the channels that are missing or to change the association between channel numbers and lineups:

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **Settings, TV, Guide**, and then **Add Missing Channels** to add the names and numbers of the channels you are missing.
- 3 Click **Add Channel**.

**4** Use the numeric keypad on your keyboard to enter the number of the missing channel, and select **Next**.

**5** Enter the correct channel number, and select **Add**.

**6** Select **Assign channel** to assign a new channel number.

Or

Select **Share channel** to share the channel with another channel.

**7** Click **Save** to add the channel.



**8** Repeat steps 3 through 7 to add additional channels.

**9** Click **Done** when you have added all the channels.

---

### Editing channels in the Guide

Some program channels may not appear correctly in the Guide information. To edit the channel numbers that are incorrect for your TV provider information:

**1** Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.

**2** Select **Settings, TV, Guide**, and then **Edit Channels** to edit the channel numbers currently assigned by Media Center.

**3** Select **Edit Numbers**.

**4** Use the numeric keypad on your remote control or keyboard to enter the number of the correct channel, and then press OK on the remote control or press the Enter key on the keyboard.

**5** Select **Assign channel** to assign a new channel number.

Or



Select **Share channel** to share the channel with another channel.

**6** Click **Save** when you have edited all the channels.

**7** If you need to go back to the channel numbers automatically assigned by Media Center, select **Restore Default** and then select **Yes**.

---

### Removing channels from the Guide

**1** Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.

**2** Select **Settings, TV, Guide**, and then **Edit Channels** to remove the channels you do not want to appear in the Guide.

**3** Select the check next to a channel you want to remove, and then press the OK button on the remote control or the Enter key on the keyboard to remove the channel from the lineup.

**4** Select **Save** when you have selected all the channels to be removed from the Guide.



Using categories to search can help you find, for example, all football games. A title or keyword search displays every program that has "football" in the title or description.



The TV search results do not include previously recorded TV programs.



Guide filtering features, such as searching by keyword or category, are available for select models only.

## Searching for TV Programs

 
To find a TV program, you can enter a title or keyword or select a category in your Guide by using your remote control or your keyboard and mouse.

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My TV**, and then select **Search**.
- 3 Select **Title**. Use the numeric keypad on your remote control or your keyboard to enter a program title word, and then press OK on the remote control or press the Enter key on your keyboard.

Or

Select **Keyword**. Use the numeric keypad on your remote control or your keyboard to enter a descriptive word that would appear in a program title or program description, and then press OK on the remote control or press the Enter key on the keyboard.

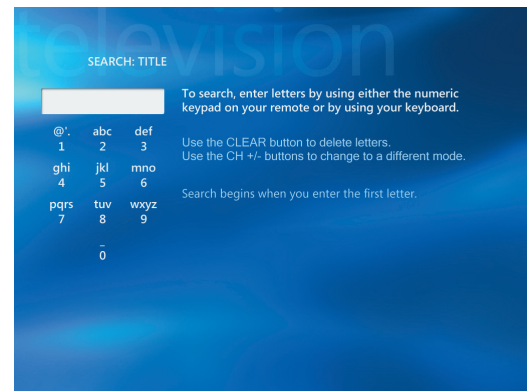

- 4 To scroll through search results, use the arrow buttons to select a program, and then press OK. If multiple times for the program are displayed, select a time and press OK.
- 5 To begin watching the program in full-screen mode, select the program, and then press OK. If the program is not currently playing, select **Record** or **Record Series**, and then press OK.






## Searching for TV programs using categories

 You can search the Guide to find a TV program by selecting a category. Some categories are not available in all countries/regions.

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My TV**, and then select **Search**.
- 3 Select **Categories**.
- 4 Select a category of program types, such as **Movies**.
- 5 Select an option such as **Genres** or **Top Rated**.
- 6 Select a sorting option, such as **By movie title**.
- 7 Use the arrow buttons to scroll through search results and to find a program. Then press OK on the remote control or the Enter key on the keyboard to select the program.
- 8 Select an option to find out more about the program, to watch it, to schedule a recording, or to view other showings of your program.

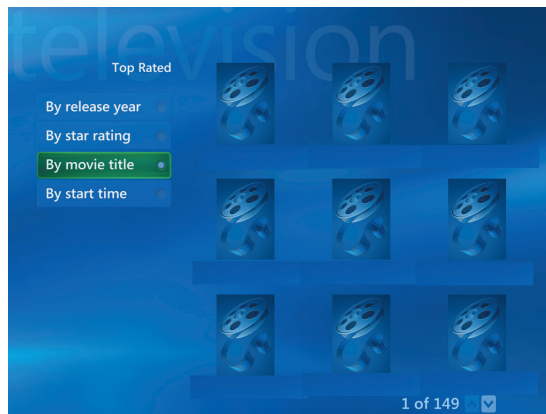

## Recording TV Programs

Media Center allows you to record TV programs so that you can watch them when it is convenient. You can record the program you are watching, or you can record a future program or series from the Guide, the Search, or the Recorded TV window in My TV. You can record two programs at the same time if your HP Media Center PC has two TV tuners that have the same type of TV signal input (select models only).

If a recording error occurs, the program will not be recorded unless the conflict is resolved. If you try to schedule a recording and another is already scheduled for the same time, a conflict window appears and gives you the option to record the new program or record the previously scheduled program.

To make sure your program is being recorded, select **My TV, Recorded TV**, and then **Scheduled**. The Record icon also appears next to the program in the Guide while you are recording. The Record icon disappears when the recording is complete.

---

### Recording icons

---



The Record icon appears in the Television Program Guide next to the program scheduled to record.



The Record Series icon appears in the Television Program Guide next to each occurrence of a program in a series that is scheduled to be recorded.







The Record Conflict/Error icon appears in the Television Program Guide and the taskbar if another program is scheduled to be recorded at the same time.

Record Series means that you select to record each episode of that program from one channel. Media Center won't record duplicate episodes. Media Center also looks for alternative times to record an episode if a recording conflict arises.

---

### Recording TV from the Guide


To record a current or future program or series from the Guide:

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My TV**, and then **Guide**.
- 3 To find the program you want to record, use the arrow buttons on the remote control, and then select the program. You can also use the numeric keypad on the remote control or the keyboard to enter a channel number. Press the right arrow button in the Guide to select a program that will be broadcast in the future.
- 4 Press the Record button on the remote control.  
  
The Record icon  appears next to the program in the Guide. Press Record twice to record a series.
- 5 The Record Series icon  is displayed to indicate a series. Press Record again to cancel the recording.
- 5 To return to the previous window, press Back on the remote control or the Backspace key on the keyboard.
- 6 If there is a recording conflict, Media Center displays a message and allows you to select which program you want to record.

## Recording programs manually without using the Guide

You do not need the Television Program Guide to record TV. You can record a TV program by pressing the Record button on the remote control while watching live TV, or you can select a specific date, channel, and recording time period in Media Center.

To record a program manually:

- 1 Press the Media Center Start button  on the remote control, press the Live TV button, and then press Record to begin recording your program.

Or

Click **Start** and then **Media Center**, or press the Media Center Start button on the remote control, select **My TV, Recorded TV**, and then select **Add Recording**.

- 2 Select **Channel and Time**.
- 3 Select the channel number box, and enter the channel number using the numeric keypad on the remote control or the keyboard.
- 4 Select the (+) or (-) buttons, and then press Enter on the keyboard or OK on the remote control to scroll through choices and enter the recording frequency, date, start and stop times, and storage and quality options.
- 5 To set the recording and return to the Recorded TV window, select **Record** in the window, and then press OK on the remote control or press Enter on the keyboard.
- 6 To return to the previous window, press the Back button on the remote control or press the Backspace key on the keyboard.

For some programs, you may want to begin recording before the scheduled beginning and after the scheduled ending of the program.



**Recorded TV programs that have been copied to a DVD can be played on your HP Media Center PC and on some DVD players.**

**Recorded TV programs can be backed up as part of a full system backup and restored to the same HP Media Center PC, but not to other PCs.**





Refer to Media Center Help for more information about recording errors, advanced recording features, and My TV settings.

## Recording quality and hard disk drive storage space

The space available for recording TV programs depends on your hard disk drive size, the percentage of hard disk drive space allocated to recorded TV, and the recording quality setting.

To get the maximum recording time, change the recording quality to Fair instead of the default setting of Best.

Quality of recording	Hard disk drive space used*
Best to optimal	2.7 GB/hour
Better	2.1 GB/hour
Good	1.4 GB/hour
Fair	1.2 GB/hour

\*This table shows approximate sizes of recorded TV program files. Some files may be smaller or larger.

1 GB = 1 billion bytes when referring to hard disk drive capacity. Actual formatted capacity is less.



TV programs that have been encrypted (protected) by the broadcaster cannot be copied and played back on any player other than the HP Media Center PC that recorded the program.

## Copying recorded TV programs to DVD or CD



You can record TV programs to DVD in Media Center to create a backup copy or to save space on your hard disk drive by using the following procedure. These DVDs can be played from an HP Media Center PC and from some set-top DVD players.

The HP Media Center PC includes several other recording software programs for you to create CDs and DVDs. You can use Sonic MyDVD to record the recorded TV program to a format that can be played from an HP Media Center PC and from some set-top DVD players. See "Sonic MyDVD Video Projects" on page 93.

For more detailed information about recording CDs and DVDs, refer to information on the HP Support Web site at:

<http://www.hp.com/support>

To copy a recorded TV program to CD or DVD:

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **More Programs**.
- 3 Insert a blank disc.
- 4 Select **Create CD/DVD**, and then select **Data**.
- 5 Enter a title for your DVD by using the numeric buttons on the remote control or the numeric keypad on the keyboard, and then select **OK**.
- 6 Select **Recorded TV**.

**7** Select the Recorded TV programs you want to copy to CD or DVD.

**8** Select **View DVD** or **View CD**.

**9** Select **Create DVD** or **Create CD**.

**10** Select **Yes**.

**11** Follow the onscreen instructions to complete burning your TV show to disc.

---

### Media Copy Protection



Media content, such as DVDs or TV programs, may place restrictions on rights to distribute or copy the content, depending on what is permitted by the copyright owner. Such restrictions protect copyrighted media files from being illegally copied and used. If you try to record a program that contains such restrictions, the following message is displayed: "Recording Canceled. Manual

Recording cannot be recorded. Restrictions set by the broadcaster and/or originator of the content prohibit recording of this program." When you record certain music or video files, they may retain copy protection that will prevent copying or distribution, including technology that encrypts media content and/or limits access to people who have a license to play the content.

---

### Playing Recorded TV Programs

Recorded TV is the storage place for all your recorded programs. In the Recorded TV window, you can sort your programs by name, date, or category. You can also delete a recorded program or series of programs and check for any recording errors.

**1** Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.

**2** Select **My TV**, and then select **Recorded TV**.

**3** To organize all of your previously recorded programs, select **Sort by Date** or **Sort by Title**.

**4** To begin watching the program, select the recorded program you want to watch, and then press OK on the remote control or the Enter key on the keyboard.

Media Center places recorded TV programs in the Recorded TV folder that is located in your Shared Documents folder on your hard disk drive.



**Refer to Media Center Help for more information about recording errors, advanced recording features, and My TV settings.**

 


# Playing Music Files

The HP Tunes and My Music areas in Media Center are great ways to play, organize, and back up your music files. HP Tunes is designed to work with the Apple iTunes program in your All Programs menu, and My Music is designed to work with the Windows Media Player program.

## HP Tunes

With HP Tunes, you can play your favorite music that you have added to your iTunes music library. For more information about using HP Tunes, see “Using HP Tunes with Media Center” on page 34.

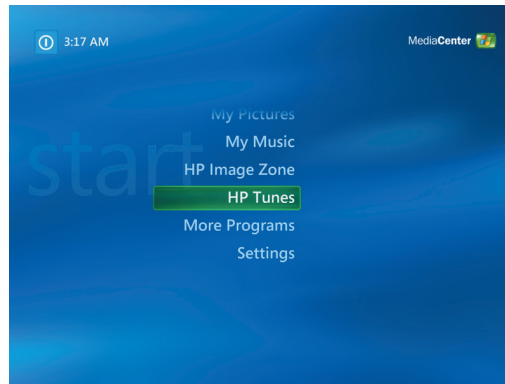

**HP Tunes is designed to work with Apple iTunes**

 


**When a CD is in your drive, it takes longer to open HP Tunes.**

---

## My Music

With My Music, you can find and play your favorite music files and CDs you have added to the Windows Media Player music library. For more information about using My Music, see “Using My Music with Media Center” on page 41.

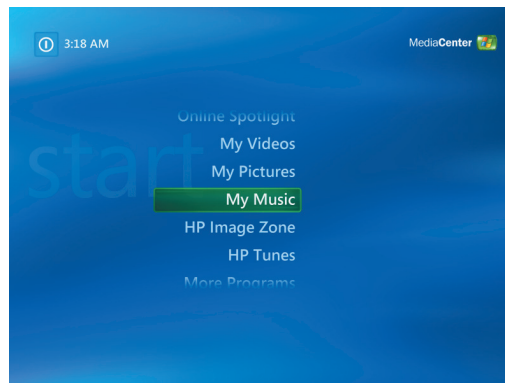

**My Music is designed to work with Windows Media Player**



For more information on using the iTunes program, refer to the HP Support Web site at: <http://www.hp.com/support>

## Using HP Tunes with Media Center

iTunes is a software program from Apple located in your All Programs menu that works together with the HP Tunes area in Media Center. HP Tunes is linked to your iTunes music library. Both programs work together to organize and play back your favorite music files, CDs, and created playlists.

Some tasks you must do in the iTunes program with your keyboard and mouse, and some tasks you can do from within Media Center with your remote control. For example, you must add music files to the iTunes music library before you can access them in HP Tunes in Media Center. Also, you can record your playlists to CDs in the iTunes program but not in Media Center.



**HP Tunes is designed to work with iTunes in Media Center**



If you do not complete these steps, an error message appears when HP Tunes is launched, which indicates that a problem has occurred in iTunes that is preventing this program from running.

### Completing the iTunes Setup Assistant wizard

To use HP Tunes and iTunes with Media Center, you need to:

- 1 Initialize iTunes by completing the setup wizard.
- 2 Add songs to the iTunes music library and create playlists. HP Tunes displays only the songs and playlists that are in iTunes.

To complete the iTunes Setup Assistant wizard:

- 1 Close Media Center, if open.
- 2 Double-click the **iTunes** shortcut icon on the desktop.
- 3 When the iTunes Setup Assistant wizard opens, follow the onscreen instructions.
- 4 Close iTunes.
- 5 Open Media Center, and then open HP Tunes.



### Delays with HP Tunes

When using HP Tunes, you may experience some delays, or HP Tunes may not function properly. These delays can occur because:

 
- There is an audio CD in the drive, and HP Tunes is attempting to connect to an Internet database to find music information, such as song titles.
- There is a large collection of songs in your music library.
- Windows Media Player or another music playback program is set as the default player. See the following procedure.



## Selecting a default audio player

If you have already set your default audio player to Windows Media Player, you may experience a delay when trying to open HP Tunes. To resolve this issue:

- 1 Close Media Center, if open.
- 2 Double-click the **iTunes** shortcut icon on the desktop.
- 3 When the iTunes default player for audio files message opens, place a check mark in the **Do not show this message again** check box, and then click **Yes** or **No**.
- 4 If you have not completed the iTunes Setup Assistant wizard, follow the onscreen instructions.
- 5 Open Media Center, and then open HP Tunes.

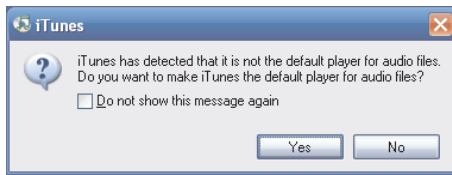


---

## Adding Music to the iTunes Music Library

To create your iTunes music library, you can import music files from a CD, download iTunes music files from the iTunes Music Store or the Internet, or import them from your hard disk drive.

### Adding music files from a CD in iTunes

- 1 With your mouse, click **Start**  on the taskbar, choose **All Programs, iTunes**, and then click **iTunes**.
- 2 Insert an audio CD.
- 3 Select your CD under the Source menu.
- 4 Make sure the songs you want to add to your music library are selected. A check mark appears next to the song when it is selected.
- 5 Click the **Import** icon in the toolbar to bring the songs into the music library.



**If your songs are listed as track numbers, make sure the PC is connected to the Internet so iTunes can find and display the song, album, and artist information.**



**If your songs don't appear in HP Tunes, make sure your songs are added to the iTunes music library. You may need to close and open Media Center to update your display. For more information about adding songs and creating playlists in iTunes, see the Help menu in iTunes.**

### Adding music files from the Internet

For more information about downloading music from the iTunes Music Store, refer to the Help menu in the iTunes program.

- 1** Connect to the Internet.
- 2** Go to a music Web site such as the iTunes Music Store.
- 3** Follow the online instructions to download your songs. If songs are downloaded from the iTunes Music Store, they appear in your iTunes music library.
- 4** If songs are downloaded to your desktop, drag them into the iTunes music library. If the files are in an unprotected .wma format, they are encoded into .aac files by default (or into the importing format you select from the Preferences menu) and placed into the library.
- 5** To change your import format:
  - a** Click the **Edit** menu, and then select **Preferences**.
  - b** Select the **Importing** tab.
  - c** Select the **Import Using** drop-down menu, and then select an import format.
  - d** Select **OK**.
- 6** Select **Library**. Songs are listed alphabetically or by the sort order of the library column heading you select.

---

### Adding music files from your hard disk drive

If the music files are in another format, iTunes will automatically convert most files to the .aac format before it adds them to your iTunes music library.

- 1** Click **Start**  on the taskbar, choose **All Programs, iTunes**, and then click **iTunes**.
  - 2** Click the **File** menu, and then select **Add File to Library**. Click the drop-down arrow to browse for your music files. Select your file, and then click **Open**.
-

## Using supported music file types

You can play the following types of digital audio files in iTunes. By default, iTunes converts several file types to .aac files when you import them into the iTunes music library.

Some file types, such as protected .wma files and other proprietary file types, cannot be played in iTunes. Go to the iTunes Help menu for more information about protected and proprietary file types.

Media Center cannot play .aac files from My Music.

With iTunes, you can share .mp3, .aiff, .wav, and .aac files between other computers on a local network.

File extension	File type
.aac	Advanced audio coding file
.aiff	Apple Interchange File Format
.wav	Windows audio file
.mp3	MP3 file

---



## Changing song title, genre, artist, or album in iTunes

For more information about changing title, genre, artist, or album information with iTunes, refer to the Help menu in iTunes. It is not possible to make these changes from within HP Tunes in Media Center.

---

## Playing CDs with HP Tunes

When you insert a CD that has not been added to your iTunes music library, it will be listed under Playlists or Albums. If it has been added to your library, it will be displayed under Songs, Albums, Artists, or Genres.

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **HP Tunes**.
- 3 Insert a CD.
- 4 Select **Playlists** or **Songs**.
- 5 Scroll through the displayed playlists or songs, and then select your CD title. If the songs on this CD weren't added to your iTunes music library, this playlist or song will disappear when you eject the CD.



**For more information about music file compatibility with iTunes, go to the iTunes Help menu.**


## Creating a Playlist with iTunes

A *playlist* is a customized list of songs that you saved together and can play later or record to CD. Using playlists, you can group various digital music files together and determine the order in which you want the files to play.

You can create a playlist that includes several tracks from various CDs or even a playlist that contains background music for a slideshow. You can use iTunes or HP Tunes in Media Center to create playlists.



**If your playlist doesn't appear in HP Tunes, make sure your songs are in your iTunes music library. You may need to close and open Media Center to update your display.**

- 1 Click **Start**  on the taskbar, choose **All Programs, iTunes**, and then click **iTunes** again.
- 2 Click **File**, and then select **New Playlist**.
- 3 Type a name for your playlist.
- 4 Select **Library**.
- 5 Drag your music files from the iTunes music library to your Playlist icon.
- 6 Select your **Playlist** icon to check whether your songs were added. Your playlist is now available in the HP Tunes area of Media Center.



---

## Creating and Editing a Now Playing List with HP Tunes

A *now playing list* is a temporary list of songs that are scheduled to be played in the order they were selected. A now playing list acts like a group of songs you select to play on a jukebox. You can continue to add songs, or you can delete songs from your now playing list. You also have the option of saving your now playing list as a playlist.





**Once you create a now playing list, you can save it as a playlist that you can play again and again.**

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
  - 2 Select **HP Tunes**.
  - 3 Select **Songs**.
  - 4 Use the arrow buttons on the remote control or the arrow keys on the keyboard to select a song, and then press OK on the remote control or press the Enter key on the keyboard.
  - 5 Select **Add to Now Playing**.
  - 6 Select **OK**.
  - 7 Press the Back button on the remote control or press the Backspace key on the keyboard to return to the song list. Select **View Now Playing** and then **Edit Now Playing** to select songs to move or delete.
- Or
- Repeat steps 2 through 5 to add more songs to your now playing list.

## Creating Music CDs with iTunes

To create a music CD using iTunes:

- 1 With your mouse, click **Start**  on the taskbar, choose **All Programs**, select **iTunes**, and then click **iTunes**.
- 2 Click the **Edit** menu, and select **Preferences**.
- 3 Click the **Burning** tab, and choose **Audio CD** as the disc format.
- 4 Click the **Use Sound Check** check box if you would like all songs on the CD to play at the same volume level, and click **OK**.
- 5 Click the **File** pull-down menu, and select **New Playlist**.
- 6 Enter a name for your new playlist, and an empty playlist window opens.
- 7 Drag and drop selected songs from your source to your new playlist.
- 8 Click the **Burn Disc** icon in the toolbar area. When the disc is finished recording, the Burn Disc icon disappears. 
- 9 Insert a blank CD-R disc into your drive.
- 10 Click **Burn Disc** to begin recording your playlist.

For more information about creating music CDs with iTunes, click the **Help** menu in the iTunes menu bar. For help online, go to:

<http://www.hp.com/support>

---

## Troubleshooting HP Tunes




If your HP Tunes window stops displaying album art and song titles, or if you cannot control the playback of your songs and playlists with the remote control, you may need to reset an important HP Tunes utility.

 
 
HP Tunes may not work properly if:

- Windows Media Player stops working unexpectedly.
- Windows Media Player was open when the PC was shut down improperly or if there is a power loss.
- Windows XP or Media Center is unresponsive and the PC needs to be restarted.
- You upgrade iTunes and go through the license agreement instructions. If you have upgraded iTunes, you must initialize iTunes again. See "Completing the iTunes Setup Assistant wizard" on page 34.

## Resetting HP Tunes

To reset the HP Tunes utility:

- 1 Close Media Center.
- 2 Click **Start**  on the taskbar, and then select **Windows Media Player**. Follow any onscreen instructions to set up Windows Media Player if you have not done so already.
- 3 Display the Windows Media Player menu bar by clicking the down arrow at the top of the window and then selecting **Show Menu Bar**.
- 4 Click the **Tools** menu, choose **Plug-ins**, and then select **HP Tunes Media Player plug-in**.
- 5 Make sure there is a check mark next to *HP Tunes Media Player plug-in*.
- 6 Close Windows Media Player.
- 7 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 8 Select **HP Tunes**.
- 9 Select **Songs**.
- 10 Use the arrow buttons on the remote control or the arrow keys on the keyboard to select a song, and then press OK on the remote control or the Enter key on the keyboard to play a song.
- 11 If you encounter issues and can't navigate to the HP Tunes Help window, you can click the **Reset** button. This will shut down Media Center and close HP Tunes and iTunes. After using this button, you may need to reset the HP Tunes utility by following the previous procedure.

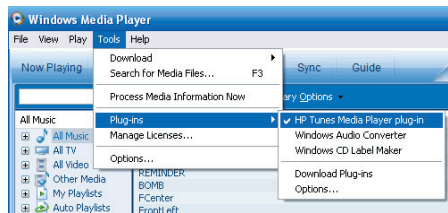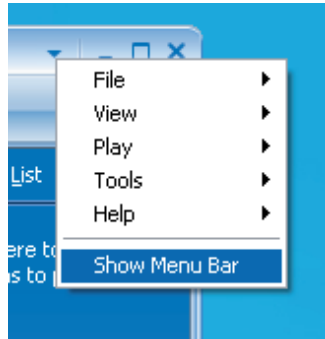


## Using My Music with Media Center

You can copy digital music files and organize a music library by using My Music in Media Center or by using the Windows Media Player program.

Music files that are added from within My Music in Media Center are copied into the Windows Media Player music library and are then accessible from within Media Center.

In My Music you can:

 - Play CDs or selected music tracks from your created Windows Media Player music library that you access in Media Center.
- Select and edit a personalized list of songs from your library.
- Delete songs from a music library or a queue list.
- Burn your favorite songs to CDs.
- Back up your music tracks to a DVD or to an HP Personal Media Drive.

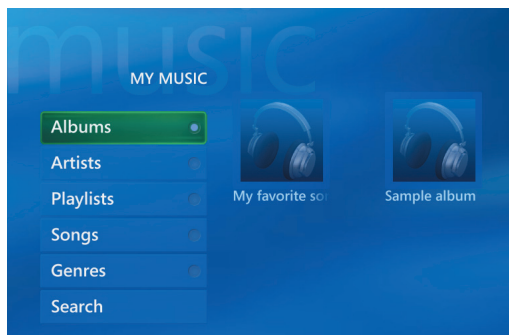

**My Music menu in Media Center**



**You can store your music files in the My Music folder or in other folders on your hard disk drive, but you need to add those files to the Windows Media Player music library for Media Center to be able to find and play them.**

---




## Adding Music to My Music Library

When you add music files to your My Music library, they are placed into the music library in Windows Media Player. The added music files can immediately be found and played back by using My Music in Media Center.

You can also add music files to your music library from within the Windows Media Player program. For more information about adding and deleting music files to the library, use the Windows Media Player Help menu.

---

## Adding music files from your hard disk drive


- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Music**.
- 3 Press Ctrl+D on the keyboard or press the *i* (More information) button on the remote control, and select **Add Music**. 
- 4 Select **Add folders**, and then select **Next**.
- 5 Select **Add folders on this computer**, and then select **Next**.
- 6 Use the arrow buttons on the keyboard or the remote control to select a location. Press the Enter key on the keyboard or press the OK button to expand a folder. When you find the folder that contains your music folder, select it by making sure an arrow appears next to the folder. Repeat this step to add additional folders, and select **Next** and then **Finish**.
- 7 Select **OK**.





## Adding music files from a CD

To add the CD tracks to your Media Center music library:



- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Music**.
- 3 Insert a CD into the CD drive.
- 4 Select **Albums**.
- 5 Select the Album CD you want to add to your music library.
- 6 Select **Copy CD**. The first time you copy a music CD you must select your copy-protection option and then follow any onscreen instructions.
- 7 Select **Yes** to begin copying tracks to your music library. This process may take several minutes, depending on the length of your music tracks.
- 8 Click **OK**.



**Each time you add music files outside of Windows Media Player, you must add these music files to your Windows Media Player music library for Media Center to find them. Select the **Tools** menu, and then select **Search for Media Files** to add new music files to your library.**

---

## Deleting music files from the My Music library

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
  - 2 Select **My Music**.
  - 3 Select **Songs**.
  - 4 Use the arrow buttons on your remote control or the keyboard to scroll through your songs. Select the song you want to delete.
  - 5 Select **Delete**, and then select **Yes**.
-



For more information about music file formats, use Windows Media Player Help and Media Center Help.

Only supported audio file types are displayed in the My Music window. Unsupported files won't play.

## Using supported music file types

You can play the following types of digital audio files in My Music. Refer to Windows Media Player Help for more information about supported file types.

File extension	File type
.cda	CD audio file
.au, .snd	Audio file
.aif, .aifc, .aiff	AIFF audio file
.wav	Windows audio file
.mp3, .m3u	MP3 file
.wax, .wma	Windows Media Audio file
.asf, .asx, .wm, .wma, .wmv, .wmp, .wmx, .wpl, .wm, .wmd, .wmz	Windows Media file

## Playing Music Files in My Music

 


You can place all your music files into the My Music folder or into other folders on your hard disk drive, but you need to add those files to the Windows Media Player music library for Media Center to be able to find and play them.



When you first open Media Center and open the My Music window, you may not find any music files listed unless there is a music CD in your CD drive or unless you have already added audio files to your Windows Media Player music library.


When you copy music files using Windows Media Player and your computer is connected to the Internet, the CD information is copied and displayed in Media Center and in the Windows Media Player music library.

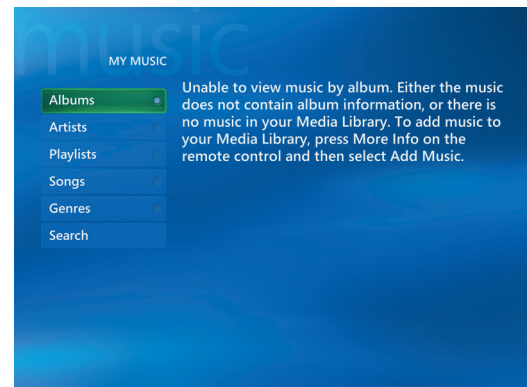If you insert a music CD when Media Center is not open, a message appears asking what you want to do. You can select Windows Media Player as your default audio player. If you have another program set as the default audio player, Windows opens the program and begins playing the CD.





## Playing an album in My Music

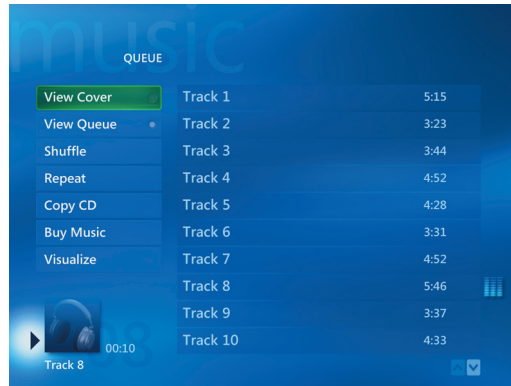 - 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Music**.
- 3 Insert a music CD into the CD drive.
- 4 Select **Albums**.
- 5 Select the album you want to play.
- 6 Select **Play**.



## Playing a song in My Music

You can play a song from anywhere in My Music. You can select it from the View Song list, or from the Album, Artist, and Genre lists. You can also play a single song from a playlist:

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Music**.
- 3 Select **Songs**. The list displays all the songs in your library.
- 4 Use the arrow buttons on the remote control or the arrow keys on the keyboard to select a song, and then press OK on the remote control or the Enter key on the keyboard to play it.



**You can select *Visualize* in the Now Playing window to see a visualization while you play a music track.**

## Creating a Queue List in My Music

A *queue list* is a temporary list of songs that is created in My Music as you select songs, albums, or playlists to play. You can continue to add songs or you can delete songs from your queue list.

You can create a queue list and save it as a playlist that you can access in Media Center.

- 1 From the My Music window:
  - Select **Songs**, use the arrow keys to select a song you want, and then select **Add to Queue**.

Or

  - Select **Albums** or **Playlists**, select an album or a playlist, and then select **Add to Queue** to add the entire album or playlist to the queue.
- 2 Select **OK**.
- 3 Use the Back button on the remote control or the Backspace key on the keyboard to go back to the Songs, Albums, or Playlists menus if you want to select more songs to add to your queue list. Repeat step 1.
- 4 After you add the last song for your queue list, select **Play**. All songs in your queue list are played in the order you have selected them.

---

## Finding and Playing an Album in My Music

- 1 In the Media Center Start menu, select **My Music**, and then select **Albums**.
- 2 Use the arrow buttons on the remote control or the arrow keys on the keyboard to select an album, and then press OK on the remote control or press the Enter key on the keyboard. Select Play to play the album. The Now Playing window opens, and the album starts playing.
- 3 In the Play window, you can also select:
  - **View Cover** to view cover art and play one track.
  - **View Queue** to view an ordered list of all tracks that will be played on the album.
  - **Shuffle** to rearrange the play order.
  - **Repeat** to play the album again.
  - **Copy CD** to copy an album into your Windows Media Player music library and your My Music library.
  - **Buy Music** to connect to the Internet, find CD information, and buy music CDs. To go back to Media Center, press Start on the remote control, or click **Start** on the taskbar and click **Media Center**.
  - **Visualize** to view a moving picture while listening to a song.
  - **Edit Queue** to save your queue list as a playlist, create a CD/DVD, or clear all the songs in the queue list.
- 4 To return to the previous window, press Back on the remote control or the Backspace key on the keyboard.

## Creating a Playlist in My Music

A *playlist* is a customized list of songs you can keep to play later or record to CD. Using playlists, you can group various digital music files together and determine the order in which you want the files to play.

You can create a playlist that includes several tracks from various CDs or even a playlist that contains background music for a slideshow.

You can create playlists in Windows Media Player or from within Media Center.

To create a playlist:

- 1 Select **My Music**, and then select either **Albums**, **Artists**, **Playlists**, **Songs**, or **Genres**.



- 2 Use the arrow buttons on the remote control or the arrow keys on the keyboard to navigate to the music you want to add to your playlist.
- 3 Press OK on the remote control or press the Enter key on the keyboard to select a song.
- 4 Select **Add To Queue**. A confirmation displays that the music was added to the list of music in the queue.
- 5 Select the inset window in the lower-left corner to go to the queue.
- 6 On the Queue screen, select **Edit Queue**, and then select **Save As Playlist**.
- 7 Use the alphanumeric keypad to enter a name for the playlist, and then select **Save**.

 


If your PC is connected to the Internet, the CD track titles and cover art appear in Media Center.

## Copying Music Files to CD in My Music

To copy your music files to CD:

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **More Programs**.
- 3 Insert a blank CD-R disc.
- 4 Select **Create CD/DVD**.
- 5 Select a disc format: **Audio CD** or **Data CD**, and then select **OK**.

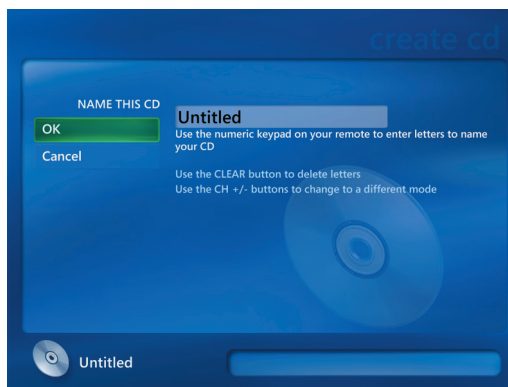



**IMPORTANT: HP supports the lawful use of technology and does not endorse or encourage the use of our products for purposes other than those permitted by copyright law.**



**For more information about writable media, refer to the other documentation that came with your PC.**

 
- 6** Use the arrow buttons on the remote control or the arrow keys on the keyboard to select the **Untitled** text box.
- 7** Use the alphanumeric keypad buttons on the remote control or the keyboard to enter a name for your CD, and then select **OK**.
- 8** Select **Music**.
- 9** Select the music files to record. A check mark appears next to the song when it is selected. Use the Back button on the remote control or the Backspace key on the keyboard to select more songs from different menus.
- 10** When you are finished adding songs, select **View CD** to see the songs you have selected. If you want to delete songs, use the arrow buttons on the remote control to select the **X** next to the song you want to delete. Press **OK** on the remote control or press the Enter key on the keyboard to delete the song from your list of songs to be recorded to CD. This does not delete the song from your music library.
- 11** Select **Create CD**.
- 12** Select **Yes**.
- 13** Select **OK**.
- 14** Follow the onscreen instructions.

# Working with Pictures

Use the HP Image Zone and My Pictures areas in Media Center to view, edit, print, and share your pictures.

## HP Image Zone

HP Image Zone is a software program located in your All Programs menu that works together with the HP Image Zone area in Media Center. Both programs work together to organize, search for, display, print, and share your digital images. It is designed to organize your photos, scanned images, and video clips by date, keyword, or place. For more information about using HP Image Zone, see “Using HP Image Zone in Media Center” on page 50.

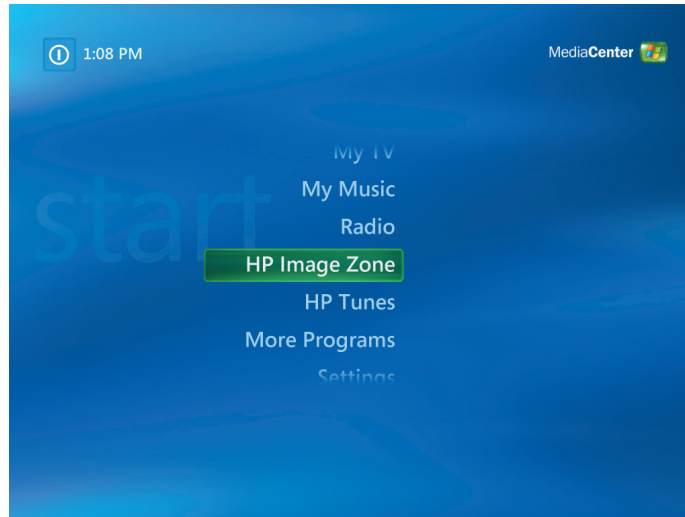

---

## My Pictures

With My Pictures, you can view, sort, edit, print, and create a CD or DVD of your pictures from the folders you create in the My Pictures directory in Windows Explorer. For more information about using My Pictures, see “Using My Pictures in Media Center” on page 61.





**When transferring pictures from a digital photo camera to the PC in HP Image Zone, set the camera's USB setting to disk drive instead of digital camera.**

## Working with Digital Images

You can connect a digital image source, such as a digital photo or video camera, directly to the PC or through a docking station. Most digital picture files you copy or download from the device appear in the My Pictures folder.

Windows XP and Media Center detect your external device and display a message asking if you want to view your images. You can display them from the desktop or from within Media Center.

You can copy digital picture files from the memory cards used by digital cameras and other digital imaging devices by using the memory card reader (select models only).

## Using HP Image Zone in Media Center

Most tasks, such as viewing a slideshow, sharing your pictures online, cropping, rotating, and printing your pictures, you can do in both the HP Image Zone program on your desktop, and from within Media Center. There are a few things, for example, like some editing functions and the Help files, that are only available in the HP Image Zone program on the desktop.



**HP Image Zone menu in Media Center**



**Media Center displays a message allowing you to add pictures to your My Pictures folder whenever Media Center detects any new pictures.**


## Creating your picture catalog in HP Image Zone

The first time you open the HP Image Zone program, a message appears asking if you want to create a catalog by indexing images in the My Pictures folder and its subfolders. This catalog allows you to search for your pictures by date, keyword, or place, by using HP Image Zone.

- 1 Using the mouse, double-click the **HP Image Zone** icon on your desktop.



Or

 
Click **Start**  on the taskbar, choose **All Programs, HP**, and then click **HP Image Zone**. The HP Image Zone window opens.

- 2 When the catalog message appears, click **OK** to index the images and place them in the HP Image Zone catalog.



**3** At the top of the gallery window, click the **View** tab, click the **Browse** tab, and then click the **Image Catalog** icon to see all of the images in the catalog. You can also select the **Search** tab to browse for images.

**4** Click **Help** at the top of the window for more information about creating your picture catalog in HP Image Zone.

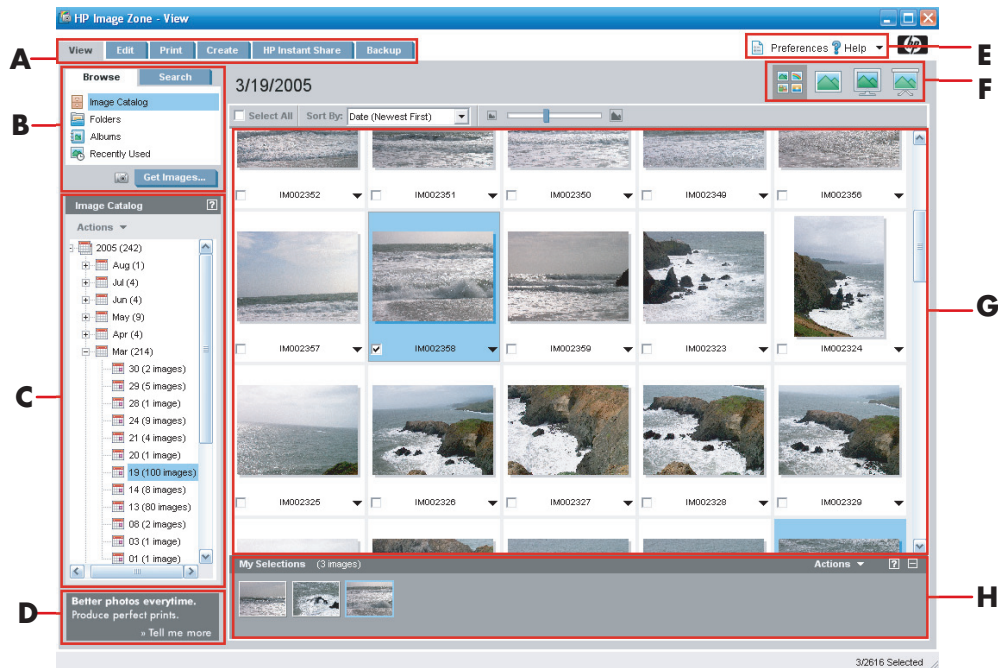

**A** The Mode tabs allow you to create an image project, view, edit, print, share and back up your images.

**B** The menu items and display options allow you to view images or perform various tasks.

**C** Various items, depending on the tab you select. The View tab includes a map of the folders on your hard disk drive.

**D** The Tips window displays helpful hints about using HP Image Zone.

**E** The Preferences button allows you to customize HP Image Zone. The Help menu gives you troubleshooting tips, instructional videos, and other information.

**F** The Image display icons let you view images in a group, one at a time, in full screen, or as a slideshow.

**G** Gallery of images.

**H** The Selection tray displays images that you have selected.



**After you create your picture albums in the HP Image Zone program, you can view them in Media Center.**

## Creating albums


You can organize your pictures into albums by using the HP Image Zone program. After you create your picture albums in HP Image Zone, you can then view them in Media Center.

To create an album:

- 1 Using the mouse, double-click the **HP Image Zone** icon on your desktop.



Or

Click **Start**  on the taskbar, choose **All Programs, HP**, and then click **HP Image Zone**. The HP Image Zone window opens.

- 2 Click the **View** tab.
- 3 Select the **Image Catalog** icon.

- 4 Select the pictures that you want to place into an album by placing a check in the check box under the image. The selected images appear in the My Selections area at the bottom of the window.
- 5 Select the **Albums** icon, and then select **Create a new album**.
- 6 Type a title using your keyboard, and then click **OK**. You can now view your albums in Media Center when you open Media Center, select **HP Image Zone**, and then select **Albums**.

---

## Modifying a date assigned to your pictures


Digital cameras and scanners assign a creation date to digital images. HP Image Zone automatically recognizes this creation date and organizes your pictures by date. The most recent images are listed first in your Image Catalog.

To change a date:

- 1 Using the mouse, double-click the **HP Image Zone** icon on your desktop.



Or

Click **Start**  on the taskbar, choose **All Programs, HP**, and then click **HP Image Zone**. The HP Image Zone window opens.

- 2 Click the **View** tab, and then click **Image Catalog** under the Browse tab. The most recent images are listed first in your Image Catalog.
  - 3 Select a picture or pictures to assign a new date.
  - 4 Right-click one of the images, and then select **Set Image Date and Time**.
  - 5 Select a date and time, and then click **OK**.
-

### Assigning a keyword to your pictures

- 1 Using your mouse, double-click the **HP Image Zone** icon on the desktop.
- 2 Click the **View** tab, and then click **Image Catalog** under the Browse tab. The most recent images are listed first in your Image Catalog.
- 3 Select a picture or pictures to assign a keyword.
- 4 Right-click one of the images, and then select **Keywords, Assign**, and then select a previously created keyword or (**New Keyword**).
- 5 Type the new keyword, and then click **OK**.
- 6 Click **OK** again.

---

### Assigning a place to your pictures



- 1 Using your mouse, double-click the **HP Image Zone** icon on the desktop.
- 2 Click the **View** tab, and then click **Image Catalog** under the Browse tab. The most recent images are listed first in your Image Catalog.
- 3 Select a picture or pictures to assign a place.
- 4 Select the **Search** tab, and then select **By Place**.
- 5 Under By Place, select **Assign**.
- 6 Click the map to find your location. Each time you click the map, it zooms in closer. Use the arrow buttons surrounding the map to move around on the map.
- 7 When your location is in the center of the cross symbol, click **Assign**.
- 8 Click **Assign** again.
- 9 Click **Close**.



 
**There are two ways to move around the HP Image Zone map: you can click and drag or point and click the small globe.**

## Searching for pictures in Media Center

You can search for pictures by date, keyword, and place by using your remote control or mouse in Media Center. HP Image Zone automatically organizes your pictures by date, based on the date assigned by the camera when the picture was taken or the date the picture was scanned.

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **HP Image Zone**.
- 3 Select the **Search** tab.
- 4 Select **By Date**. Select the **Year**, **Month**, and **Day** boxes and then use the number keypad on the remote or the numbers on the keyboard to enter the start and end date range. The date range of the pictures you selected is displayed in this window.

Or

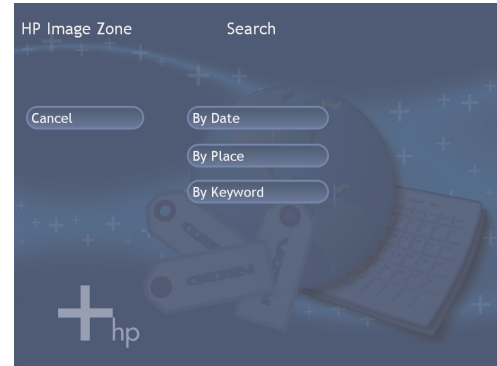

### HP Image Zone Search in Media Center

Select **By Place**. Select the arrow buttons under the globe to rotate the globe. Select the **magnifying glass** icon to zoom in and out. Select a location. Locations that have pictures assigned to them will have a colored dot on the map.

Or

Select **By Keyword**. Select a keyword.



- 5 Select **Search**.

---



## Viewing Pictures in HP Image Zone

### Viewing a slideshow in HP Image Zone

When viewing images, you can view a slideshow of all your images, individual albums, or pictures selected from a search.

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **HP Image Zone**.
- 3 Navigate to the group of pictures you want to view as a slideshow.
- 4 Select **Slide Show**. If you do not select the pictures you want to view as a slideshow, Media Center displays all pictures.
- 5 Use the media playback keys on the remote control, or move the mouse to display the media controls to control the playback of your slideshow.

## Viewing a slideshow with music in HP Image Zone

- 1 Select **HP Tunes** or **My Music** on the Media Center Start menu.
- 2 Select the music you want, and then press OK on the remote control. If the music doesn't start automatically, press the Play button on the remote control.
- 3 To go back to the Media Center Start menu, press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 4 Select **HP Image Zone**.
- 5 Select the pictures.
- 6 Select **Slide Show**. When Media Center switches to full-screen mode, the inset window disappears, but the music continues to play.

---


## Editing Pictures in HP Image Zone

### Editing pictures in HP Image Zone from the desktop

You can make changes to your pictures in HP Image Zone from the desktop. Some of the editing features include removing red eye, cropping, resizing, and rotating images.

- 1 Using the mouse, double-click the **HP Image Zone** icon on your desktop. 
- 2 Click the **Help** drop-down list at the top of the window, and then select **Edit Tab Help** for more information about editing your images.

Or



Click **Start**  on the taskbar, choose **All Programs, HP**, and then click **HP Image Zone**. The HP Image Zone window opens.



**You may need to refresh the window to view your edited picture in your HP Image Zone folders.**

## Editing pictures in HP Image Zone in Media Center

You can make changes to your pictures and video clips in HP Image Zone from Media Center. Some of the editing features include removing red eye, cropping or resizing images, rotating and flipping images, and adjusting the color, brightness, and sharpness of your images.

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **HP Image Zone**.
- 3 Select the picture you want to edit. The edit window appears when you select a picture file.
- 4 Select an editing option such as **Crop**.
- 5 Select the arrow buttons under the picture to crop your picture.
- 6 Select **Save As** when you are finished editing the picture.
- 7 Select **OK** to save your edited picture.



**HP Image Zone Crop in Media Center**

## Sharing Pictures in HP Image Zone

You can quickly share your photos with friends and family by first creating e-mail shortcuts and then sending thumbnails of your photos. The recipient then clicks on a link in the e-mail message to view the full-size photo on a secure Web page without downloading any attachments. The Web page is

automatically displayed in a language based on the recipient's Web browser settings. The photos can be viewed, printed, and saved to a computer.


Before you can share photos in Media Center, you must agree to the license agreement in the desktop version of Image Zone. See the following procedure.

To agree to the license agreement in Image Zone:

- 1 Using the mouse, double-click the **HP Image Zone** icon on your desktop.



Or



Click **Start**  on the taskbar, choose **All Programs**, **HP**, and then click **HP Image Zone**. The HP Image Zone window opens.

- 2 Select the **HP Instant Share** tab.
- 3 Select **E-mail**.
- 4 Select your region from the drop-down menu under Select your region.
- 5 Select the **I Agree** check box, and then select **Next**.



**For more information about the HP Instant Share tools, refer to the Help menu in the HP Image Zone program.**

To share photos in Media Center:

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **HP Image Zone**.
- 3 Select the group of pictures you want to share and then select **Share**.
- 4 Select the pictures you want to share by placing a check mark on each picture, and then select **Next**.
- 5 Select an e-mail shortcut.

Or

Use the remote control keypad or the keyboard to type an e-mail address into the text box. If you want to save this e-mail address, select **Save e-mail as a shortcut** by placing a check in the check box next to it. Enter a shortcut name for the address.

- 6 Select **Next**.
- 7 Select **Original** or **Compressed** image size.
- 8 Use the remote control keypad or the keyboard to type an e-mail subject in the text box, and then select **Send**.



**HP Image Zone Share in Media Center**

- 9 Select **OK** to have HP Instant Share send your e-mail.
- 10 To view the status of the e-mail, select **Outbox** in HP Image Zone.



## Using supported file types with HP Image Zone

HP Image Zone supports the following types of image, video, and audio files.

File extension	File type
<b>.jpg, .jpeg</b>	Joint Photographic Experts Group
<b>.tif, .tiff</b>	Tagged Image File Format
<b>.gif</b>	Graphics Interchange Format
<b>.mov, .qt</b>	QuickTime Movie file
<b>.mpeg-1</b>	Movie file
<b>.m1v</b>	Movie file
<b>.mpg</b>	Movie file, .mpeg animation
<b>.avi</b>	Audio Video Interleaved
<b>.bmp</b>	Bitmap
<b>.dcx</b>	Multipage .pcx file
<b>.fpx</b>	FlashPix Bitmap
<b>.pcx</b>	Bitmap Graphics
<b>.png</b>	Portable Network Graphics

- Only supported image file types are displayed in My Pictures. Unsupported files are skipped in a slideshow.
- Corrupted and unsupported image file types display a generic image icon but cannot be displayed in Media Center.
- Some file types are supported only if appropriate filters and software are installed.





**If the message *Image cannot be displayed* appears, the file may be corrupted, or it may be an unsupported file type. You may need to edit your image with a photo editor and save it in a supported file format.**



**You need to set up your printer before you can print from Media Center.**

## Printing Pictures in HP Image Zone


- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **HP Image Zone**.
- 3 Select **Albums**, **Months**, or **Folders** and then select the album, month, or folder where your picture is located.
- 4 Select **Print**.
- 5 Select the picture you want to print by placing a check mark on the picture, and then select **Next**.
- 6 Select the (+) or (-) to choose a printer, and then select **Print**.
- 7 Follow any onscreen instructions.



---

## Creating a Backup Disc of Your Pictures

 
To create a backup disc of images you have put into HP ImageZone:

- 1 Click **Start**  on the taskbar, choose **All Programs**, **HP**, **HP ImageZone**, and then click **HP ImageZone** again.
- 2 Select the **Backup** tab, and then click **Back Up Images** on the left side of the window.
- 3 Select your backup settings, and then click **Next**.
- 4 Insert a blank disc.
- 5 Select the drive and media type, and then click **Next**.
- 6 Click **Start Backup**.
- 7 Follow any onscreen instructions.

## Using My Pictures in Media Center

My Pictures is a folder on your hard disk drive in the My Documents folder, and it is a Media Center menu item that allows you to view and search for your digital images by using the remote control or the keyboard and mouse.

It provides all the tools you need for viewing, organizing, editing, printing, sharing, and protecting your digital images.

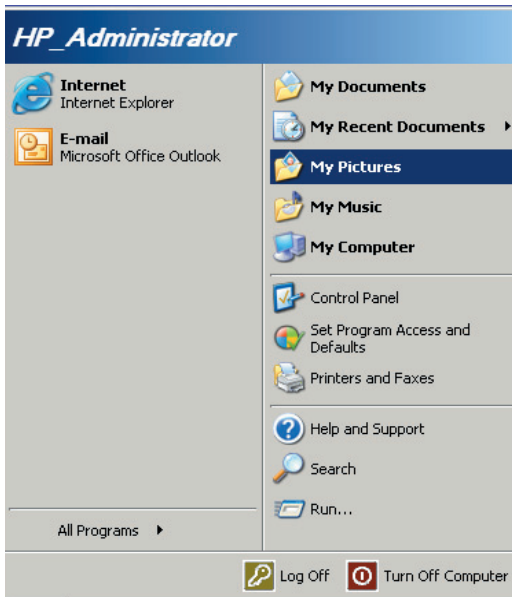



**My Pictures folder in Windows Explorer**



**My Pictures in Media Center**

## Adding Pictures to My Pictures

### Adding picture files from your hard disk drive

 
- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Pictures**.
- 3 Press Ctrl+D on the keyboard or press the *i* (More information) button on the remote control, and then select **Add Pictures**.
- 4 Select **Add folders**, and then select **Next**.
- 5 Select **Add folders on this computer**, and then select **Next**.
- 6 Use the arrow buttons on the remote control or the arrow keys on the keyboard to select a location. Press the OK button on the remote control or press the Enter key on the keyboard to expand a folder. When you find the folder that contains your picture folder, select it by making sure an arrow appears next to the folder. Repeat this step to add additional folders, and then select **Next**.
- 7 Select **Finish**.



## Viewing Pictures in My Pictures

After you organize your pictures in the My Pictures folder in Windows Explorer, open Media Center to view your pictures:

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Pictures**. The right side of the window shows a small picture image (thumbnail) and, if you've organized your pictures into folders, folder icons. The pictures are displayed just as you organized them in the My Pictures folder in Windows Explorer.
- 3 Use the arrow keys on the keyboard or the arrow buttons on the remote control to move through your picture files and folder files, and select a picture.
- 4 Press the Enter key on the keyboard or press the OK button on the remote control to select a picture or folder to view. The selected picture opens in full-screen mode.

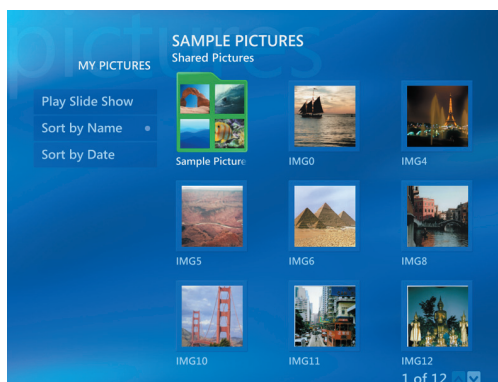




- 5 Press the Enter key on the keyboard or the OK button on the remote control again to zoom in 150 percent; press it again to zoom in 225 percent. Use the arrow keys or buttons to pan across a picture. To return the picture to the original size, press Enter or OK a third time.



**From the My Pictures menu, you can select Settings to:**

- Select a slide transition, a slide time delay, and a background color.
- Include picture folders you have created.
- Show captions.
- Display your pictures randomly.
- Show song information during a slideshow.



## Viewing pictures as a slideshow

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Pictures**.
- 3 Select the folder of pictures you want to view as a slideshow, and then press OK on the remote control or Enter on the keyboard.
- 4 Select **Play Slide Show**, and then press OK.
- 5 Press Ctrl+D on the keyboard or press the *i* (More information) button on the remote control, and then select **Picture Details**. The picture name, location, last modification date, and resolution appears, if available. 
- 6 Press the Backspace key on the keyboard or the Back button on the remote control to go to a previous screen. Use the arrow keys on the keyboard or arrow buttons on the remote control to display the next or previous pictures.

If you do not select the pictures you want to view as a slideshow, Media Center uses the first folder listed. If you have picture files that are not stored in folders you created, Media Center plays all files stored in the My Pictures folder.

---

## Viewing a slideshow with music in My Pictures

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Music**.
- 3 Select the music you want, and then press Enter on the keyboard or press OK on the remote control. If the music doesn't start automatically, move the mouse to display the media control toolbar, and then select the Play button or press the Play button on the remote control.
- 4 Press the Back button on the remote control or the Backspace key on the keyboard until you are back to the Media Center Start menu.
- 5 Select **My Pictures**.
- 6 Select the folder of pictures, and then press Enter on the keyboard or OK on the remote control.
- 7 Select **Play Slide Show**, and then press the Enter key on the keyboard or the OK button on the remote control. When Media Center switches to full-screen mode, the inset window disappears but the music continues to play.

## Using supported picture file types in My Pictures

You can view the following types of image files in Media Center.

File extension	File type
<b>.jpg, .jpeg</b>	Joint Photographic Experts Group
<b>.tif, .tiff</b>	Tagged Image File Format
<b>.gif</b>	Graphics Interchange Format
<b>.bmp</b>	Bitmap
<b>.wmf</b>	Windows MetaFile
<b>.png</b>	Portable Network Graphics

- Only supported image file types are displayed in My Pictures. Unsupported files are skipped in a slideshow.
- Folder icons appear even if the images inside them cannot be displayed.
- Corrupted and unsupported image file types display a generic image icon but cannot be displayed in Media Center.
- Some file types are supported only if appropriate filters and software are installed.

 


**If the message *Image cannot be displayed* appears, the file may be corrupted or it may be an unsupported file type. You may need to edit your image with a photo editor and save it in a supported file format.**

## Editing Pictures in My Pictures



### Fixing red eye or contrast

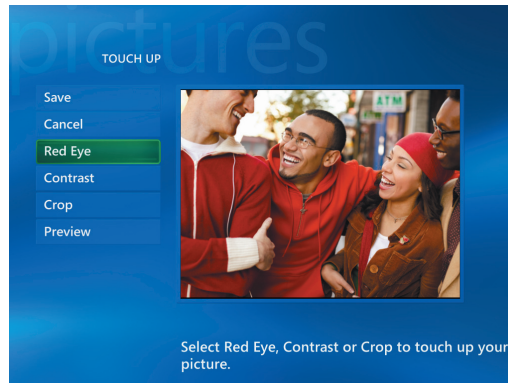- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Pictures**.
- 3 Select the picture you want to edit.
- 4 Right-click the picture or press the *i* (More information) button on the remote control, and then select **Picture Details**. 
- 5 Select **Touch Up**.
- 6 Select **Red Eye** or **Contrast**, and then press OK on the remote control or press the Enter key on the keyboard.
- 7 After you select the options you want to fix, select **Save**. The picture is displayed with the new settings.



- 8 Select **Yes** to save changes and replace the original picture file.

## Cropping pictures in My Pictures

- 1** Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2** Select **My Pictures**.
- 3** Select the picture you want to edit.
- 4** Right-click the picture or press the *i* (More information) button on the remote control, and then select **Picture Details**.
- 5** Select **Touch up**, and then select **Crop**.
- 6** For this step, you must use the mouse and keyboard. Select the arrows under the picture to move the picture side to side or up or down. Select the magnifying glass to move the cropping tool in or out. Select the rotate tool to move the cropping tool to a vertical or horizontal position.
- 7** After you select the options you want to fix, select **Save** or **Save As**. Once saved, you cannot revert to the original picture.



- 8** Select **Yes** to save changes and replace the original picture file if you selected **Save** in the previous step.



Or

Select **Yes** to create a different version of the original file if you selected **Save As** in the previous step.





## Rotating pictures

If your picture appears horizontally or vertically and you want to change the orientation, you can change it in Media Center:

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Pictures**.
- 3 Select the picture you want to rotate.
- 4 Right-click the picture or press the **i** (More information) button on the remote control, and then select **Picture Details**.
- 5 Select **Rotate**, and then press the Enter key on the keyboard or press the OK button on the remote control.

---

## Printing Pictures in My Pictures

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Pictures**.
- 3 Select the picture you want to print.
- 4 Press the Print button on the remote control.

Or

Press Ctrl+D on the keyboard or press the **i** (More information) button on the remote control, and then select **Picture Details**. Select **Print**, and then select **Print** again.

- 5 Follow any onscreen instructions.



**You need to set up your printer before you can print from Media Center, otherwise the file is saved to the My Documents folder by default when you select to print the picture.**





**In Media Center, all pictures are copied to CDs as .jpg files.**



**For more information about writable media, refer to the other documentation that came with your PC.**

## Copying Pictures to CDs and DVDs

You can copy your pictures to CDs and DVDs in Media Center or by using the Sonic Digital Media Projects program. You can also create a LightScribe label for your CD or DVD if you have a LightScribe optical drive and you use LightScribe media discs. Refer to the other documentation that came with your PC.

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **More Programs**.
- 3 Insert writable media (CD-R, CD-RW, DVD+/-R, or DVD+/-RW) into the drive.
- 4 Select **Create CD/DVD**.
- 5 Select the Untitled area, and enter the name of your disc by using the numeric keys on the keyboard or the remote control, and then select **OK**. Use the Backspace key on the keyboard or the Clear button on the remote control to delete letters.
- 6 Select **Pictures**.
- 7 Select the pictures you want to copy. A check mark appears next to a picture when you select it.
- 8 Select **View CD/View DVD**. From here you can delete a picture, add more pictures, or change the name of your disc.
- 9 After you have selected all of your pictures, select **Create CD/Create DVD**.
- 10 Select **Yes**. Media Center displays a message if you need to insert an additional disc to complete your recording. Media Center displays a message when your disc has been created.

# Playing Videos

The My Videos window in Media Center makes it easy to play home video files you created or video files you downloaded from the Internet.

In My Videos you can:

- Play videos that are stored anywhere on your hard disk drive.
- Create a CD or DVD of your video files.
- View your videos in full-screen mode or from an inset window in Media Center.
- View small image (thumbnail) and title of video file.

 


Each user has a separate My Videos folder that can be opened only by that person. You can share videos with others by storing them in the Shared Video folder.

## Playing Digital Videos in Media Center

After you organize your videos in the My Videos or Shared Video folder in Windows Explorer, open Media Center to watch your videos.

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Videos**.
- 3 Select the video folder you want. The video folder opens, displaying a list of video files. You may need to use the scroll arrows at the bottom of the window to display all videos.
- 4 Select the video file. The video plays in full-screen mode. Use the mouse to resize the window if you want to watch your video while doing something else on your desktop.
- 5 To exit full-screen mode and return to the previous window, press Back on the remote control or the Backspace key on the keyboard. Your video continues to play in the inset window.

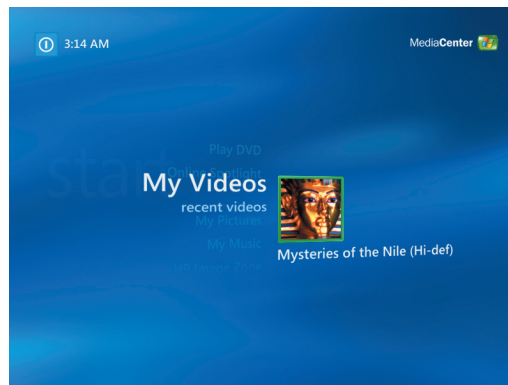

- 6 When the video is finished, select **Restart** to replay the video, or select **Done** to close the file and return to the My Videos window.



- Use the mouse to select the up arrows and down arrows at the bottom of the window, to scroll to other pages of video files and folders.
- You can maximize the media playing in the inset window by using the arrow buttons to select the inset window and then pressing OK on the remote control.



**For more information about supported video file types, refer to Media Center Help menu.**

## Using Supported Video File Types

You can view the following types of video files in Media Center. Other file types are supported if your PC has the correct software installed.

File extension	File type
<b>.avi</b>	Video file
<b>.dvr-ms</b>	Digital Video Recording — Microsoft (TV file format)
<b>.mpeg, .mpg, .mpe, .m1v, .mp2, .mpv2</b>	Movie file
<b>.wm, .asf</b>	Windows Media file
<b>.wmv</b>	Windows Media AV file

---

## Transferring and Recording Video Files

Once you capture your video by using video capture and editing software, you can use Media Center to find it and add it to your My Videos area.



### Recording an analog video file

Refer to the *Getting Started Guide* and the other documentation that came with your PC for more information about capturing and recording video files from an analog video camera.

### Recording a digital video file

Refer to the *Getting Started Guide* for more information about recording video files from a digital video camera.

## Creating a CD/DVD from Video Files



- 1** Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2** Select **More Programs**.
- 3** Insert a writable disc, and then select **OK**.
- 4** Select **Create CD/DVD**.
- 5** Select the Untitled area, enter the name of your disc by using the numeric keys on the remote control or the keyboard, and then select **OK**. Use the Clear button on the remote control or the Backspace key on the keyboard to delete letters.
- 6** Select **Video**, and then select **OK**.
- 7** Select the video file you want to copy, and then select **View CD/View DVD**.
- 8** Select **Add More** if you want to add additional video files to your disc.
- 9** Select **View CD/View DVD** to check the contents of your disc before recording them.
- 10** Select **Create CD/Create DVD** to begin recording the disc, and then select **Yes**.



# Playing DVDs

Watching DVDs in Media Center allows you to control the playback with your remote control. If you play your DVD in another program outside of Media Center, you will not be able to use the remote control.

 
## Playing DVD Movies in Media Center

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Insert the DVD into the drive. If you have other media playing, Media Center asks if you want to play the DVD. Select **Play DVD**. If you don't select an option, the DVD automatically plays in full-screen mode after a few seconds.

Or

If the DVD is already in the drive, select **Play DVD** from the Start menu. The DVD movie begins playing in full-screen mode.

- 3 If a DVD menu appears, use the remote control or the mouse to select the DVD menu items and control the DVD movie playback.
- 4 To stop playing the DVD, press Stop on the remote control or move the mouse to display the media controls, and then click the Stop button.

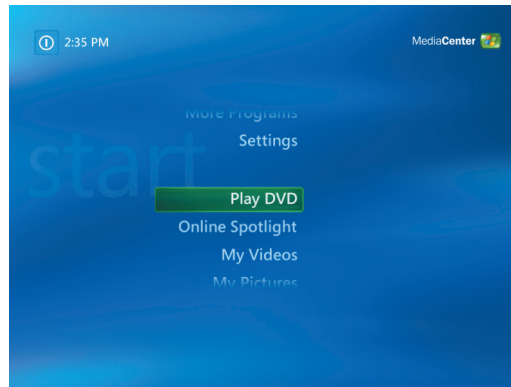



- 5 To change the window size while the DVD movie is playing, move the mouse for the Resize icon to appear.
- 6 Click the **Resize** icon on the taskbar to adjust the window size.




To view more information about a DVD that you are watching, such as the DVD title, chapter title, genre, parental rating, length, and current position, press the *i* (More information) button on the remote control.

## Changing the DVD Movie Language

 To select DVD language settings for subtitles, closed captioning, and viewing the DVD:

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **Settings**.
- 3 In the Settings window, select **DVD**.
- 4 In the DVD Settings window, select **DVD Language**.
- 5 Use the arrow buttons on the remote control or the arrow keys on the keyboard to select (+) or (-). Press OK on the remote control or press the Enter key on the keyboard to scroll through the languages available.
- 6 When you find the one you want, select **Save**, and then press OK on the remote control or the Enter key on the keyboard.

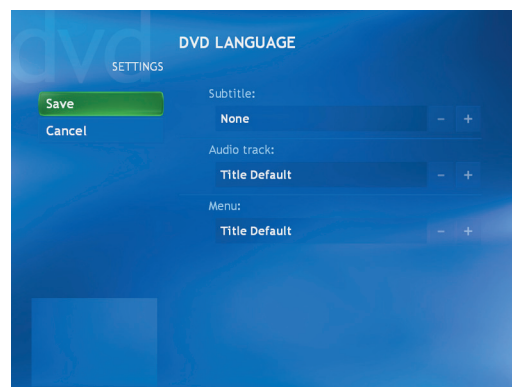



- 7 To return to the main Settings window, press the Backspace key on the keyboard or press the Back button on the remote control.

---

## Changing DVD Audio Settings

To select DVD audio settings for viewing the DVD:

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **Settings**.
- 3 Select **DVD**.
- 4 Select **Audio**. The Audio Properties window opens.
- 5 Select **Configuration**, and then select your speaker and sound options. Select your speaker output and your channel mode, if applicable. Select **Save**.
- 6 Select **OK**.



# Listening to FM Radio

If your HP Media Center PC is equipped with a radio tuner input (FM Tuner In), Media Center can play FM radio. The Radio window in Media Center makes it easy to play FM radio stations using your remote control.

In Radio you can:

- Listen to FM radio stations.
- Set up presets of your favorite radio stations.
- Delete or organize your radio station presets.
- Use the time-shifting features: pause, rewind, and fast-forward up to 30 minutes of radio programs.





**Make sure you connect the FM radio antenna to the back of the HP Media Center PC before selecting an FM radio station. This antenna is for select models only.**



**You must go through the TV tuner setup wizard before you can play your radio stations.**

## Playing FM Radio Stations

- 1 Connect the FM radio antenna to the back of the HP Media Center PC, to the connector labeled FM Antenna In.
- 2 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 3 Select **Radio**.
- 4 Enter a radio station number by using the numeric keypad on the remote control or your keyboard.

Or

Select the **Seek** (-) or (+) buttons for Media Center to find the next playable station.

Or

Select the **Tune** (-) or (+) buttons to manually find a station.

- 5 If you want, select **Save** to save it as one of your nine preset stations.





- 6 Select **Start FM** to begin playing that station.
- 7 Use the playback controls on the remote control, such as Pause, Rewind, and Fast-Forward to control radio playback. If you press the Pause button, Media Center continues to record the program for up to 30 minutes. Press Play to resume listening to the program where you left off.
- 8 Select **Back** to return to the previous window.

## Organizing Radio Station Presets


**1** Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.

**2** Select **Settings**.

**3** Select **Radio**.

**4** Select the up arrows and down arrows next to each preset station to move it to a different position.  

Or

Select the Delete icon (**X**) to delete a preset station. 

Or

Select **Auto Sort** to sort your preset stations in numeric ascending or descending order.

**5** Select **Save** to save your changes.

**6** Select **Back** to return to the previous window.



---

## Using the FM Radio and the TV Signal at the Same Time

The FM radio signal and My TV input signal share a single tuner card. This means that you are unable to watch or record TV and listen to FM radio at the same time unless you have two TV tuners. When Media Center is scheduled to start a recording, a warning appears that says FM radio stops when the TV recording starts. If you do not select **Cancel recording**, then Media Center automatically stops radio and begins recording TV.



# Creating Audio and Data Discs

## (Select models only)

This chapter contains the procedures you must perform to record (or *burn*) music and data files to recordable CD and DVD discs. It also includes information about labeling your discs using the LightScribe labeling technology included on select models.

For information about recording video files to DVDs, see “Sonic MyDVD Video Projects” on page 93.

Your HP Media Center PC may include one or more CD, DVD, or combination optical drives capable of recording. Additionally, your HP Media Center PC may include the following software programs for recording to CDs or DVDs:

- iTunes
- Windows Media Player

- Sonic MyDVD Plus (select models only)
- Sonic DigitalMedia Plus
- Windows XP

These programs include features that enable you to copy, archive, and manage music and data files and then record the files to CDs or DVDs. You can also use iTunes or Windows Media Player to download and copy music files to a portable device or memory card.

 
---

## Erasing Rewritable Discs Before Recording

Previously recorded files on rewritable discs must be erased before recording new files. CD-R, DVD+R, and DVD-R discs cannot be erased.

To erase a rewritable disc in Sonic DigitalMedia Plus:

- 1 Open the Sonic DigitalMedia Plus program by clicking **Start, All Programs, Sonic,** and then **DigitalMedia Home.**
- 2 Click **Tools** and then **Erase Disc.**
- 3 Insert the rewritable disc you want to erase.
- 4 Click the **Quick Erase** or **Full Erase** option, and then **Erase Disc.**

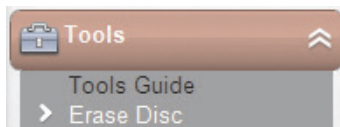

**IMPORTANT: HP supports the lawful use of technology and does not endorse or encourage the use of our products for purposes other than those permitted by copyright law.**



***Burn* is an industry term used to describe the recording of information onto a DVD or CD. Optical recording uses a laser beam to place information onto the disc, thus the term *burning*.**

**!**  
**IMPORTANT: HP supports the lawful use of technology and does not endorse or encourage the use of our products for purposes other than those permitted by copyright law.**

## Working with Audio CDs

Sonic DigitalMedia Plus enables you to create audio CDs that play in your car or home CD player, and on PCs. You can create two main types of music CDs:

- **Uncompressed** — Typical CD format like you would purchase on a commercial CD. This type of CD will hold 10 to 20 songs depending on their length.

Uncompressed files can be burned on CD-Rs (which play in most home and car stereos, DVD players, and computers) or CD-RWs (which play only in some stereos, DVD players, and computers).

The procedure for creating this type of CD is described in "Creating audio CDs" on page 81.

- **Compressed** — Files are burned to a disc using a compressed file format (MP3, WMA, or M4A). The smaller file format enables you to fit approximately ten times as many songs onto the disc (depending on length and format).

Compressed files can be burned to CD-Rs, CD-RWs, DVD+Rs, DVD+RWs, DVD-Rs and DVD-RWs (select models only). Compressed files

can only be played on computers, CD players, or DVD players that support the *file format* you use to create the disc (MP3 is most commonly supported). For file format compatibility, check the documentation for the device where you intend to play the disc. You may hear a slight loss of sound quality using compressed audio files.

The procedure for creating this type of CD is described in "Creating jukebox discs" on page 82.

For more compatibility information, see "Disc Features and Compatibility Table" on page 89.

Both Sonic programs create *closed-session* music CDs, which means you must record all music files on one CD in one recording session. Music files can be recorded repeatedly on a rewritable CD-RW disc, but all previously recorded files must be erased first. CD-R discs cannot be erased.

---

## Verifying audio disc recorded without errors

When copying or burning audio files to CD, it is recommended that you use Sonic DigitalMedia Plus because it includes a feature that confirms that your disc has been created without errors.

This write verification feature is enabled by default.

To check the status of the write verification feature in Sonic DigitalMedia Plus:

- 1 Open the Sonic DigitalMedia Plus program by clicking **Start, All Programs, Sonic**, and then **DigitalMedia Home**.
- 2 Click **Tools**, and then **Options**.
- 3 In the Options window, click **Copy**.
- 4 Ensure that the **Verify copied data discs (slower)** box is checked.
- 5 Click **OK**.



## Audio CD tips

When recording music files, it is important to note that:


- To play your music CD in a home or car stereo, it needs to be recorded as a music CD in CD audio (CDA) format, not as a data CD.
- As you add music files in the recording session, Sonic DigitalMedia Plus calculates and displays the amount of recording time available to record additional music files.
- You can't record song titles unless you make an exact copy of a music CD in your collection.
- If your recording fails, manually select a slower recording speed, if available, each time you make a recording. Refer to the Help menu in your selected software program for more information about selecting a slower recording speed.
- If you try to record more than a standard CD can hold, a message displays warning you that all the tracks may not fit on your disc.



---

## Creating audio CDs

To create uncompressed audio CDs using Sonic DigitalMedia Plus:


- 1** Open the Sonic DigitalMedia Plus program by clicking **Start, All Programs, Sonic**, and then **DigitalMedia Home**.
  - 2** Click the **Audio** tab and then **Audio CD**.
  - 3** Do one or more of the following:
    - Click **Add Music** and navigate to music stored on your HP Media Center PC.
    - In the Quick Find panel, click **Scan** to automatically search your HP Media Center PC for songs.
    - Insert a CD and add songs from it.
  - 4** Select the songs you want to record, and then click **Add**.
  - 5** Click the **Burn** icon when you have added all the audio files to your music CD project. 
  - 6** When prompted, insert a blank CD-R or CD-RW disc. If you want to play your music CD in your home or car stereo, use a CD-R disc. CD-RW discs may not play in some stereos.
  - 7** Click **OK**.
- You can get detailed online help by clicking the **Help** menu and then selecting **Help**.



DVD discs can store significantly more music files than a CD. Jukebox discs can only be played on computers, CD players, or DVD players that support the file format you use to create the disc (MP3 is most commonly supported).

## Creating jukebox discs

To create compressed (jukebox) music CDs or DVDs using Sonic DigitalMedia Plus:

- 1 Open the Sonic DigitalMedia Plus program by clicking **Start, All Programs, Sonic**, and then **DigitalMedia Home**.
- 2 Click the **Audio** tab, and then **Jukebox CD/DVD**.
- 3 Do one or more of the following:
  - Click **Add Music** and navigate to music stored on your HP Media Center PC.
  - In the Quick Find panel, click **Scan** to automatically search your HP Media Center PC for songs.
  - Insert a CD and add songs from it.
- 4 Select the songs you want to record, and then click **Add**.
- 5 Click the **Burn** icon when you have added all the audio files to your music CD project. 
- 6 When prompted, insert a blank CD-R or CD-RW disc. If you want to play your music CD in your home or car stereo, use a CD-R disc. CD-RW discs may not play in some stereos.
- 7 Click **OK**.

You can get detailed online help by clicking the **Help** menu, and then selecting **Help**.

---

## Working with Data DVDs and CDs

Unlike audio CDs and jukebox DVDs, data DVDs and CDs can be recorded in multiple sessions.

### Verifying data disc recorded without errors

When copying or burning data files to DVD or CD, it is recommended that you use Sonic DigitalMedia Plus because it includes a feature that confirms that your disc has been created without errors.

This write verification feature is enabled by default.

To check the status of the write verification feature in Sonic DigitalMedia Plus:


- 1 Open the Sonic DigitalMedia Plus program by clicking **Start, All Programs, Sonic**, and then **DigitalMedia Home**.
- 2 Click **Tools** and then **Options**.
- 3 In the Options window, click **Data**.
- 4 Ensure the **Verify data written to the disc after burning** box is checked.
- 5 Click **OK**.





## Data disc tips

When storing data files on a disc, it is important to note that:

- You can add new data files to a CD-R, DVD-R, or a DVD+R in a later recording session, until the disc is full. With DVD+R or DVD-R discs, insert your partially recorded DVD, click the  **Wrench** icon to display the Options window, click **Data**, select the first **Write-Once DVD Compatibility** option, and then click **OK**.
- When you record files that have the same name as previously recorded files, Sonic DigitalMedia Plus updates the file and the previous version is overwritten.


- Sonic DigitalMedia Plus allows you to change the names of files you want to record and the files that were previously recorded.
- As you select data files to record to your disc, Sonic DigitalMedia Plus calculates and displays the amount of recording space used on your disc.
- If your recording fails, manually select a slower recording speed, if available, each time you make a recording. Refer to the Help menu in your selected software program for more information about selecting a slower recording speed.



**An appendable disc can have additional files added to it, if there is disc space available. Recorded audio CDs are closed-session discs that are not appendable.**

## Creating data discs

To create data CDs or DVDs using Sonic DigitalMedia Plus:

- 1 Open the Sonic DigitalMedia Plus program by clicking **Start, All Programs, Sonic**, and then **DigitalMedia Home**.
- 2 Click the **Data** tab, and then click **Data Disc**.
- 3 Do one or more of the following:
  - Click **Add Data** and navigate to files stored on your HP Media Center PC.
  - In the Quick Scan panel, select a type of file to search for, and then click **Scan** to automatically search your HP Media Center PC for the selected file type.
  - Insert a CD or DVD that contains the file you want to add.
- 4 Select the files you want to record, and then click **Add**.
- 5 To name your disc, click **Volume Label**, and then type a name over it. Sonic DigitalMedia Plus assigns a name based on the recording date if you do not type a name.
- 6 Click the **Burn** icon when you have added all the files to your data project. 
- 7 When prompted, insert a blank or appendable disc (select models only).  
  
DVD discs can store significantly more files than a CD.
- 8 Click **OK**.



**You can rename your files in the file selection window by selecting and typing over the current name. This does not affect the original files on your hard disk drive.**



**DVD discs can store significantly more files than a CD.**

You can get detailed online help by clicking the **Help** menu and then selecting **Help**.



**Your DVD Writer or CD Writer drive will not copy commercially available DVD movies. Most commercial DVDs are encoded to prevent unauthorized duplication.**

## Copying a DVD or CD

Sonic DigitalMedia Plus enables you to make copies of an existing music or data disc. You can configure Sonic DigitalMedia Plus to verify that:

- Data files have been copied without errors by performing the procedure described in “Verifying data disc recorded without errors” on page 82.
- Music files have been copied without errors by performing the procedure described in “Verifying audio disc recorded without errors” on page 80.

To make a copy of an existing music or data disc using Sonic DigitalMedia Plus:

- 1 Open the Sonic DigitalMedia Plus program by clicking **Start, All Programs, Sonic**, and then **DigitalMedia Home**.
- 2 Click the **Copy** tab, and then click **Disc Copy**.
- 3 Insert the CD or DVD you want to copy.
- 4 Insert a blank DVD or CD into the drive.
- 5 Click the **Copy** icon.
- 6 Click **Done** when the recording is complete.

---

## Archiving Files on a CD or DVD

To make an archive file copy of files stored on your HP Media Center PC using Sonic DigitalMedia Plus:

- 1 Open the Sonic DigitalMedia Plus program by clicking **Start, All Programs, Sonic**, and then **DigitalMedia Home**.
- 2 Click the **Data** tab and then **Easy Archive**.
- 3 Select the path to the files that you want to archive (or click **Browse** to navigate to them).
- 4 Select the type of files you want to add to the archive, or select **All Files in the Selected Path**.
- 5 Place a check mark in the **Only Archive Files Changed Since** box, and select a date to limit the scan to files that have been changed since that date.
- 6 Click **Save**, enter a name for your archive, and then click **OK**.
- 7 Click the **Burn** icon.
- 8 When prompted, insert a recordable disc and then click **OK**.
- 9 Click **Done** when recording is complete.





If the files do not fit on one disc, you are prompted for additional discs.

For additional information about saving archives on your hard disk drive, or scheduling automatic archives, see the online help.

## Archiving files using Media Center

To archive your hard disk drive files:

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **More Programs**.
- 3 Select **Media Archive**.
- 4 Select the drive where your files are located by selecting (+) or (-).
- 5 Select the type of files to archive, by placing a check next to **Music**, **Pictures**, **Video**, and **Recorded TV**.
- 6 Select the drive where you want to archive your files by selecting (+) or (-).
- 7 Select **Archive**. Follow any onscreen instructions.



**Your DVD Writer or CD Writer drive will not copy commercially available DVD movies. Most commercial DVDs are encoded to prevent unauthorized duplication.**

---

## Working with Image Files

The Sonic recording programs can convert all the files from a CD or DVD into a single image file (.iso), or a series of Global-Image files (.gi), (none exceeding 2 GB). You can use the image file to

reproduce the original disc. Image files are typically used when you need to make multiple copies of the same disc.

### Creating an image file

To make an image file using Sonic DigitalMedia Plus:

- 1 Open the Sonic DigitalMedia Plus program by clicking **Start**, **All Programs**, **Sonic**, and then **DigitalMedia Home**.
- 2 Click **Copy**, select **.iso** or **.gif** (if prompted for file type), and then click **Save Image**.
- 3 Insert the CD or DVD from which you want to make a image file.
- 4 Click **Browse** to select the location where the image file will be created.
- 5 Click the **Save Image** icon to create the image file.

### Burning from an image file

The image file remains on your hard disk drive until you delete it. Since an image file is typically large, it

is recommended that you delete it if you do not intend to burn additional discs.

To burn a CD or DVD from an image file using Sonic DigitalMedia Plus:

- 1 Open the Sonic DigitalMedia Plus program by clicking **Start, All Programs, Sonic**, and then **DigitalMedia Home**.
- 2 Click **Copy** and then **Burn Image**.
- 3 Click **Browse** to select the image file.
- 4 Insert a recordable CD or DVD into the drive.
- 5 Click the **Burn Image** icon.
- 6 Click **Done** when recording is complete.



---

## Disc Labeling with LightScribe



LightScribe (select models only) is a direct disc-labeling technology providing you a simple way to burn precise, silk screen-quality labels. It combines the CD or DVD drive of your HP Media Center PC with specially coated discs (sold separately) and enhanced disc-labeling software.

A LightScribe-enabled CD or DVD disc drive uses the optical laser in the drive to record a label onto a thin dye coating on the label side of the disc. There is no ink to smear or paper to curl, and there are no adhesives to loosen.

LightScribe media is identified by the LightScribe logo on the retail packaging and on the inner hub area of the disc itself. Your HP Media Center PC may come ready to work with many versions of LightScribe media (select models only); however, as new media versions are introduced you will need to update the driver software for your LightScribe-enabled CD or DVD drive. Get driver updates from the HP Support Web site: <http://www.hp.com/support>

---

### LightScribe requirements

Burning a label with LightScribe requires three things:

- LightScribe-enabled DVD drive (select models only)
- Labeling software that supports LightScribe
- LightScribe discs (sold separately)

## Burning a LightScribe label with Sonic Express Labeler

- 1** Click **Start, All Programs, Sonic**, and then click **Express Labeler**.
- 2** In the Step 1: Select Project area, make sure that **Disc Label** is selected.
- 3** In the Step 2: Edit area:
  - a** Click **Disc Titles** to display the Edit Disc Title window. Enter text for the title and subtitle.
  - b** Click **Tracks** to display the Edit Track window. Click **New** to display the Track window. Enter text to identify the first track or file (you can optionally enter artist and date, or length), and then click **OK**.
  - c** Repeat the previous step for each track or file on the disc.
- d** Click the left or right arrows next to **Layout** and **Background** to select design elements for the disc. The selections you make are previewed in the disc window.
- 4** When you are satisfied with the appearance of your label, insert the LightScribe media disc (label side down) into the disc drive tray, and then click **Print**.
- 5** From the Disc Label menu, select **LightScribe 12cm disc**.
- 6** Click **OK** to begin burning the label.

The estimated time to complete the label displays, along with a progress bar to show you the time remaining. You can continue to work on your HP Media Center PC while LightScribe is burning the label.



You can open Express Labeler from within Sonic DigitalMedia Plus by clicking **Tools**, and then **Label Disc**.



LightScribe creates a grayscale (monochrome) image similar to a black-and-white photograph.

---

## Burning a LightScribe label after burning with iTunes

iTunes works with Sonic Express Labeler to allow you to burn labels on a LightScribe audio CD. The playlist you create in iTunes to burn a disc is automatically imported into Express Labeler so that this information is available for you to use on your LightScribe label. To use Express Labeler from iTunes, the music tracks in the playlist you are using must fit on a single CD.

- 1** Click **Start, All Programs, iTunes**, and then click **iTunes** again.
- 2** Burn an audio CD with iTunes. When the burning process is complete, click **Yes** on the Create LightScribe Label window.
- 3** In the Step 1: Select Project area, make sure that **Disc Label** is selected.



**LightScribe creates a grayscale image similar to a black-and-white photograph.**

- 4** In the Step 2: Edit area:
  - a** Click **Disc Titles** to display the Edit Text window. Enter text for the title and subtitle.
  - b** Click **Tracks** to display the Edit Track window. Click **New** to display the Track window. Enter text to identify the first track or file (you can optionally enter artist and date, or length), and then click **OK**.
  - c** Repeat the previous step for each track or file on the disc.
  - d** Click the left or right arrows next to **Layout** and **Background** to select design elements for the disc. The selections you make are previewed in the disc window.

When you are satisfied with the appearance of your label, insert the LightScribe media disc (label side down) into the disc drive tray, and then click **Print**.

- 5** From the Disc Label menu, select **LightScribe 12cm disc**.

- 6** Click **OK** to begin burning the label.

The estimated time to complete the label displays, along with a progress bar to show you the time remaining. You can continue to work on your HP Media Center PC while LightScribe is burning the label.

---

### Using adhesive disc labels



**WARNING: When labeling your CDs and DVDs, do not use sticky labels. They can cause the disc to play erratically. Instead, write on the disc with a felt-tip pen to label it.**

**Or, you can create a LightScribe label for your disc if you have a LightScribe optical drive and you use LightScribe media discs. Refer to “Disc Labeling with LightScribe” on page 86.**

---

### Compatibility Information

An important feature of a DVD Writer/CD Writer drive is its high level of compatibility with other optical drives and CD and DVD players:

- The CDs that you create play in most home and car stereos and in most computer DVD-ROM and CD-ROM drives.
- The DVDs that you create are compatible with some DVD video players and with most computer DVD-ROM drives.

- CD-R discs are compatible with more home and car stereos than CD-RW discs are.

Your DVD Writer/CD Writer drive is able to read from and record to almost every type of optical disc. Writing speed rates for the DVD Writer/CD Writer drive are fast, allowing quick recording times.



**CD-R discs are more compatible with home and car stereos than CD-RW discs.**

## Disc Features and Compatibility Table

Disc	File type	Can be recorded onto	Plays in PC	Plays in home or car stereo	Plays in home DVD player
<b>CD-ROM</b>	Data	No	Yes	No	No
	Music	No	Yes	Yes	Varies by model
<b>CD-R</b>	Data	Yes	Yes	No	No
	Music	Yes	Yes	Varies by model	Varies by model
<b>CD-RW</b>	Data	Yes	Yes	No	No
	Music	Yes	Yes	Varies by model	Varies by model
<b>DVD-ROM</b>	Data	No	Yes	No	No
	DVD movie	No	Yes	No	Yes
<b>DVD+R and DVD-R</b>	Data	Yes	Yes	No	No
	DVD movie	Yes	Yes	No	Varies by model
<b>Double-Layer DVD+R/ DVD-R</b>	Data	Yes	Varies by model	No	Varies by model
	DVD movie	Yes	Varies by model	No	Varies by model
<b>DVD+RW and DVD-RW</b>	Data	Yes	Yes	No	No
	DVD movie	Yes	Yes	No	Varies by model
<b>VCD</b>	DVD movie	No	Yes	No	Varies by model

**NOTE:** Some HP Media Center PCs come with the Double-layer DVD Writer. It supports single-layer and Double-layer DVD media. Double-layer technology gives you greater capacity and allows you to store up to 8 GB\* of data on double-layer DVD+R or DVD-R media.

Double-layer is a new technology. Double-layer media compatibility will vary widely with some home DVD players and DVD-ROM drives.

\* 1 GB is defined as 1 billion bytes when referring to hard disk drive capacity. Actual formatted capacity is less.

For the latest disc compatibility information for your HP Media Center PC, go to the HP Support Web site at: <http://www.hp.com/support>



**Double-layer DVD technology is supported by select models only.**



**The Sonic recording programs support the double-layer technology.**

## Optical Drive Quick Reference Table

<b>Optical drive can:</b>	<b>CD-ROM</b>	<b>CD-RW</b>	<b>DVD-ROM</b>	<b>DVD+RW/+R DVD-RW/-R</b>	<b>Double-Layer DVD</b>	<b>Combo CD-RW/DVD</b>
<b>Read CDs, CD-Rs, and CD-RWs</b>	Yes	Yes	Yes	Yes	Yes	Yes
<b>Read DVDs</b>	No	No	Yes	Yes	Yes	Yes
<b>Read data on a CD</b>	Yes	Yes	Yes	Yes	Yes	Yes
<b>Play music</b>	Yes	Yes	Yes	Yes	Yes	Yes
<b>Record data or music to disc for storage or backup</b>	No	Yes	No	Yes	Yes	Yes
<b>View DVD movies</b>	No	No	Yes	Yes	Yes	Yes
<b>Record DVD movies</b>	No	No	No	Yes	Yes	No
<b>Play games</b>	Yes	Yes	Yes	Yes	Yes	Yes



## Software Quick Reference Table

### (Select models only)





Your HP Media Center PC includes a number of software programs that:

- Record and play CDs.
- Record data CDs.
- Import and edit video files.
- Record video CDs and DVDs.
- Organize digital media files.

The following table describes the functionality specific to each of these programs. Use it to determine which program to use to perform a task.

Note that some programs listed may not be included with your model, and that this is not a complete list of all included software.

To open any of these programs, click **Start** on the taskbar, choose **All Programs**, select the program folder (for example, **Sonic**), and then click the program name to open the software.

With this program:	You can:
InterVideo WinDVD Player 	<ul style="list-style-type: none"><li>■ Play DVD movies and video CDs (VCDs).</li></ul>
iTunes 	<ul style="list-style-type: none"><li>■ Play music CDs, MP3s, and other audio files.</li><li>■ Record music files.</li><li>■ Record a copy of an existing music or data CD to use on the HP Media Center PC.</li><li>■ Organize digital files into a library for recording or listening.</li></ul>
muvee autoProducer (Select models only) 	<ul style="list-style-type: none"><li>■ Add your own style to your movies with music, pictures, titles, scene transitions, and captions.</li><li>■ Edit your home movies.</li></ul>
RealPlayer 	<ul style="list-style-type: none"><li>■ Play music CDs, MP3s, and other audio files.</li><li>■ Play DVD movies. (RealPlayer can play DVDs only if another DVD player program, such as InterVideo WinDVD, is installed.)</li><li>■ Play video CDs.</li><li>■ Record music files.</li><li>■ Organize digital files into a library for recording or listening.</li></ul>

**With this program:****You can:**

Sonic DigitalMedia Plus



- Record data and music files.
- Record a copy of an existing music or data CD to use on the HP Media Center PC.
- Create customized music CDs from CDs in your collection, or from .wav, .mp3, or .wma files. These CDs can be played in your home or car stereo.
- Copy and share data files.
- Create archive CDs or DVDs from files on your HP Media Center PC.
- Capture (copy) video files.
- Verify that the disc has been created without errors.

Sonic MyDVD Plus  
(Select models only)



- Record data and movie files.
- Record a copy of an existing DVD to use on the HP Media Center PC.
- Copy and share video files.
- Capture (copy) video files.

Windows Movie  
Maker 2.0



- Import audio, video, and other media files from a videotape, an audiotape, a Web camera, or a television broadcast.
- Record audio and video files to create a video project that becomes a Windows Media source file with a .wmv extension.
- Edit and preview files.
- Send a movie in an e-mail or upload it to a Web server.
- Add music files (.mp3).
- Import audio files such as .mp3, .asf, or .wma; video files such as .wmv, .asf, .avi, or .mpg; or image files such as .jpg or .gif.
- Create .avi and .wmv (Windows Media Video) files.

# Creating Video Discs and Movies

## (Select models only)

Your HP Media Center PC may come with the following movie making programs.

- Sonic MyDVD
- Sonic DigitalMedia Plus (which includes MyDVD)
- Windows Movie Maker
- muvee autoProducer

---

## Before You Begin Capturing Video

You can capture (copy) video files to your hard disk drive by using the Sonic MyDVD program. Among the devices supported by Sonic MyDVD are analog video devices, digital camcorders, and Web cameras. Use your composite or S-video inputs (input connectors vary by model) to capture video from a VCR or an analog video camera.

To capture video files, you need to:

- 1 Connect your video source device according to the device's instructions.

- 2 Turn your device on and set it to playback mode.
- 3 Make sure Sonic MyDVD can detect your digital or analog device.
- 4 If your HP Media Center PC has multiple video devices connected, they all appear on the Capture screen. You must select the video source you would like to use.

For more information, click **Start, All Programs, Sonic**, and then **DigitalMedia Home**. When the program displays, click **Help** and then **Help**.

---

## Sonic MyDVD Video Projects

A Sonic MyDVD *video project* is a way to group, organize, store, play, and burn related video and still digital files. For example, if you went on a family vacation, you might have digital still and video images, and prints from a film camera. You can transfer all these images onto your PC and organize them into a project. (A scanner is required to transfer printed photos and is not included.)

A project can remain on your PC for playback and as an archive, and a project can be burned to a DVD or VCD disc.

Sonic MyDVD enables you to create video projects using the following interfaces:

- Standard program interface (described beginning in "Creating a Video Project" on page 94).
- Direct-to-Disc Wizard (described beginning in "Creating a Video Project with Direct-to-Disc Wizard" on page 98).

Note that the Direct-to-Disc Wizard does not include the editing features that are available from the standard interface. You can edit a project created with a wizard before burning it to a disc as described in:

- "Editing the style of a video project" on page 96.
- "Editing movie files" on page 96.



**IMPORTANT: HP supports the lawful use of technology and does not endorse or encourage the use of our products for purposes other than those permitted by copyright law.**



**You may need to turn your digital video device off and on again for the program to detect it.**

## Creating a Video Project

To create a video project:

- 1 Click **Start**, choose **All Programs, Sonic**, and then **DigitalMedia Home**.
- 2 Click the **Video** tab to display the Video Guide.
- 3 Click **Create Project**, and then **DVD** or **VCD** depending on the type of project you want to create.

A project named Untitled DVD-Video or Untitled VCD-Video is created and displayed in the MyDVD project window.

- 4 Click **File** and then **Save** to change the name of your project from Untitled to a more descriptive name. After renaming your project, click **Save**.

Continue your project by performing the procedure described in one or more of the following sections:

- "Adding files to a video project" on page 94.
- "Capturing video to a video project" on page 95.
- "Adding slideshows to a video project" on page 95.
- "Adding submenus to a video project" on page 96.

---

### Adding files to a video project

You can add files to your DVD or VCD video project from:

- An existing DVD or VCD.
- Video files already stored on your PC.
- Video capture from a digital video camera (as described in the next section).

To add files from a DVD, VCD, or from your hard disk drive:


- 1 Click **File, Open**, and then select a video project that you created as described in "Creating a Video Project" on page 94.
- 2 Click **Add Files**.
- 3 Navigate to the folder that contains the video files you want to add or to the media drive that contains the DVD or VCD.
- 4 Select the files you want to add, and then click **Open**. The files are added to the current project and displayed in the project window.

## Capturing video to a video project

You can capture live video or still images by connecting a Web camera or digital video camera to your PC's front-panel USB connector (select models only). The video capture is added to your video project and stored in a file on your hard disk drive.

To add a video capture to a video project:

- 1 Click **File, Open**, and then select a video project that you created as described in "Creating a Video Project" on page 94.
- 2 Connect your digital video camera to the USB port.
- 3 Click **Capture Video** to display the Capture screen.  
  
Sonic MyDVD displays the name of the capture device (your camera), the default capture type (audio and video), and the default Quality setting (High Quality).
- 4 Click **Record Settings** to edit any of these default settings.

- 5 Optionally, set a capture length, chapter points, or scene detection. Click the corresponding **Help** icon to display the online help for each of these features. 

- 6 Click one of the following:
  - **Grab Frame** — The image currently displayed in the Capture window is stored as a picture file (.jpg, .bmp, .gif, .tif, or .png format).
  - **Start Capture** — Starts a video capture (.mpg format). Click **Stop Capture** to manually stop the capture if you did not set a capture length (step 5).
- 7 In the Save As dialog box, name the captured file and select the file format and the folder where you want to save it. Click **Save**.
- 8 Click **OK** to return to the project window.

The file is stored on your hard disk drive and added to the current project.

---

## Adding slideshows to a video project

You can create a *slideshow* (a series of still images displayed automatically) by adding existing still photos to your project or by capturing them with a connected digital video source.

To add a slideshow to a video project:

- 1 Click **File, Open**, and then select a video project that you created as described in "Creating a Video Project" on page 94.
- 2 Do one or more of the following:
  - Add existing picture files as described in "Adding files to a video project" on page 94.
  - Capture still images as described in "Capturing video to a video project" on page 95.
- 3 Click **New Slideshow** to add a slideshow to the video project.
- 4 Click **Options** to set the slide duration, or to add a background audio track. Online help is available for these features by clicking the **Help** icon.
- 5 Click **OK** to add the slideshow to the video project.

## Adding submenus to a video project

Each *project element* (video file, still picture file, and slideshow) that you add to the video project is represented in the main project window.

Each menu displays six items before a new menu is automatically created and linked to the previous menu by a **Next** button.



You can manually add submenus to a project and use them to organize topics associated with the theme of your project. For example, if the project is your child's soccer game, the video files of the game could be the main menu elements, and you could insert a submenu that contains interviews with your son and his teammates.

To add a submenu to a video project:

- 1 Click **File, Open**, and then select a video project that you created as described in "Creating a Video Project" on page 94.

- 2 Click **New Sub-Menu**. A submenu called **Untitled Menu 1** is added to the first menu that has less than six project elements.

- 3 Click the submenu name **Untitled Menu 1**, and type an appropriate name for the menu (for example, **Interviews**, using the previous example).

- 4 Double-click the new submenu, and do one or more of the following:

- Add existing picture files as described in "Adding files to a video project" on page 94.
- Capture still images as described in "Capturing video to a video project" on page 95.

---

## Editing the style of a video project

You can change the style of a number of elements within your video project. The elements include:

- Background color and graphics on the menus and submenus.
- Button styles.
- Background music.
- Text format (font, color, and size).
- Import custom styles.

To edit the look of a video project:

- 1 Click **File, Open**, and then select a video project that you created as described in "Creating a Video Project" on page 94.

- 2 Click **Edit Style**.

- 3 In the Edit Style dialog box, change any of the previously mentioned elements, and then click **Apply To All Menus** or **Apply To This Menu**.



---

## Editing movie files

After you capture or import video files, you can edit them using Sonic MyDVD to:

- Add additional files.
- Add background music.
- Search for specific scenes.
- Delete scenes.
- Add transition effects between scenes.
- Superimpose colors, themes, and effects over video scenes.
- Superimpose text effects over video scenes.

To edit your video files:

**1** If your project is already open, click **Edit Movie** and skip to step 4.



**2** Click **Start, All Programs, Sonic,** and then **DigitalMedia Home.**

**3** Click the **Video** tab, and then **File, New Project** or **Open Existing Project.**

**4** If you have already captured video files for this project, they appear along the bottom as a *storyboard*. If you have video files on your hard disk drive you would like to add to this project, click **Add Files.**

**5** In the Sonic MyDVD window, click **Edit Movie.**

**6** Click one of the four tabs (**Fades and dissolves, Filters, Text,** or **Themes and backgrounds**) next to the preview screen.



**7** Drag and drop any of the effects over scenes (or between them for transitions) in the storyboard.

**8** Click **OK** to save the edits.

For more information about any of the editing features, click **Help** and then **Sonic MyDVD Help** from within the Edit window.

---

## Burning a video project to disc

After you are satisfied with the contents and style of your video project, you can burn it to a DVD or VCD disc as follows:

**1** Click **File, Open,** and then select a video project that you created as described in "Creating a Video Project" on page 94.

**2** Save the file if you have made changes.

**3** In the Quality area, set the recording quality and the DVD or VCD type:

- The quality settings range from **HQ** (the highest quality, but uses the most disc space), to **EP** (lowest quality, but you can fit more files).

As you select different quality settings, the disc space remaining indicator displays how much blank space there is on the disc for this mode.

- The DVD formats include **2xDVD (8.5GB)** (Double-Layer), **DVD (4.7GB)** (the default setting), **DVD-RAM (2.6GB)**, and **DVD (1.4GB)**.

Some of these formats may not be supported by your model of PC.

**4** Insert the selected type of disc into the appropriate drive tray, close it, and click **Burn.**



For detailed information about DVD and VCD recording quality and time, see:

- "Video Quality and Disc Size" on page 99.
- "DVD Recording Time" on page 100.

## Creating a Video Project with Direct-to-Disc Wizard

Sonic MyDVD includes a Direct-to-Disc Wizard that helps you create a DVD or VCD *video project*. A video project is a way to group, organize, store, play, and burn related video and still digital files.

- 1 Connect your digital camcorder or Web camera to your HP Media Center PC.
- 2 Click **Start**, choose **All Programs**, **Sonic**, and then **DigitalMedia Home**.
- 3 Click the **Video** tab and then **Direct-to-Disc**.
- 4 Click **DVD** or **VCD** depending on the type of project you want to create. The Direct-to-VCD or Direct-to-DVD Wizard displays.
- 5 Click **Edit Style**, and edit any of the following elements:
  - Background color and graphics on the menus and submenus
  - Button styles
  - Background music
  - Text format (font, color, and size)
  - Custom stylesAlternately, you can click **No Menus** if you do not want to be able to select from multiple files in the project.
- 6 Type a name for your project in the project name field.
- 7 Click one of the following:
  - **Record to DVD** (or **Record to VCD** if you are creating a VCD project) — Select the device, number of copies, and write speed.

- **Record to hard disk** — The video capture is stored by default in the My DVDs folder. Click **Location** if you want to select a different folder.

- 8 Click **Next**. The Capture screen displays.

Make sure the output from your digital camcorder appears in the Preview window. If it does not, double-check your connections and make sure your camera is in playback mode.

- 9 Click **Record Settings** to edit any of the default settings.

- 10 Optionally, set a capture length, chapter points, or scene detection. Click the corresponding **Help** icon to display the online help for each of these features.



- 11 Click one of the following:

- **Grab Frame** — The image currently displayed in the Capture window is stored as a picture file (.jpg, .bmp, .gif, .tif, or .png format).
- **Start Capture** — Starts a video capture (.mpg format). Click **Stop Capturing** to manually stop the capture if you did not set a capture length (step 10).

- 12 A confirmation message displays stating the disc or file was created successfully. Click **OK**.

The Direct-to-Disc Wizard does not include the editing features that are available from the standard interface. You can edit a project created with a wizard before burning it to a disc as described in:

- “Editing the style of a video project” on page 96.
- “Editing movie files” on page 96.



## Video Quality and Disc Size

Sonic MyDVD includes four DVD video quality (bit rate) settings, and a Fit-to-DVD option that can be applied to a video project or to individual movie files. The DVD quality settings are:

- **HQ** (High Quality) — Best audio and video quality, but requires the most disc space per second of video. Good choice for video files that contain high-speed action (for example, motor sports).
- **SP** (Standard Play) — Good audio and video quality with most video sources.
- **LP** (Long Play) — Fits approximately twice as much video onto a DVD as HQ. Not recommended when the original video is low-quality or noisy.
- **EP** (Extended Play) — Fits the most video onto a DVD, but video quality is low. Not recommended unless the original video is very good quality.
- **Fit-to-DVD** — As you add more content to the project, MyDVD reduces the project quality automatically to fit the selected disc size. Fit-to-DVD is the default setting for new projects.



**You can record the same file on a disc at each of the different speeds to compare the results.**



**VCDs have a fixed bit rate that delivers one quality level. You can fit approximately one hour of video on a VCD (the recording time is reduced if you use animated menu buttons or backgrounds).**

## DVD Recording Time

The following table lists the approximate DVD-Video recording time for different disc sizes at different video quality settings (your DVD recorder may not support all these disc sizes).



**Dolby Digital encoding is available only with the Deluxe version of Sonic MyDVD.**

Video quality	Audio format	Estimated Time per disc size			
		8.5 GB	4.7 GB	2.6 GB	1.4 GB
HQ	Dolby Digital	130 min.	70 min.	40 min.	20 min.
	PCM	110 min.	60 min.	30 min.	15 min.
SP	Dolby Digital	210 min.	120 min.	65 min.	35 min.
	PCM	160 min.	95 min.	50 min.	25 min.
LP	Dolby Digital	310 min.	180 min.	100 min.	50 min.
	PCM	215 min.	125 min.	65 min.	35 min.
EP	Dolby Digital	415 min.	240 min.	130 min.	70 min.
	PCM	265 min.	150 min.	85 min.	45 min.

- The video quality depends on your PC's speed and graphics processing abilities. Some PCs may be unable to capture video at the HQ setting.
- These are estimated recording times. The maximum duration is reduced if you use animated menu buttons or backgrounds.
- Your version of MyDVD may not support Dolby Digital audio. See the online Help for details.

# Creating Movies Using muvee autoProducer

(Select models only)



Creating personalized and professional-looking video movies is simple with muvee autoProducer, a software program on your PC.

## Basic Steps to Make a Movie

The basic steps to produce a movie with muvee autoProducer are:

**1 Capture digital video:** Capture live or recorded video to your hard disk drive directly from a compatible digital video camcorder (only from the desktop muvee autoProducer version).

**2 Add videos and pictures:** Select video and picture files from your PC folders. You can easily add videos and still images to your movie production. You can use these video and still image file types in your movie project:

File extension	File type
.dv	Digital video
.avi	Audio Video Interleaved
.mpeg-1	Motion Picture Experts Group video playback
.mpeg-2	Motion Picture Experts Group DVD video playback
.mpeg-4	High-quality video format (for Web streaming, wireless devices, etc.)
.mov	QuickTime movie
.wmv	Windows Movie Video (only in the desktop version of muvee autoProducer)
.asf	Advanced Streaming Format
.jpg, .jpeg	Joint Photographic Experts Group, still image
.gif	Graphics Interchange Format, still image
.bmp	Bitmap, still image

**3 Add music:** Select music files on your PC to add to your movie soundtrack.

You can use these music file types in your movie project:

File extension	File type
.aac	Advanced audio coding
.mp3	MPEG Layer 3
.m4a	MPEG-4 audio layer
.wav	Windows audio
.wma	Windows Media audio

**4 Select a style:** Apply a movie style editing template for different effects and picture transitions in your movie.

**5 Add captions:** Personalize your movie with opening titles and closing credits.

**6 Make the movie:** Automatically analyze the videos, pictures, music, movie style, and captions you added to your movie and save your movie to your PC hard disk drive, CD, or DVD.

**7 Burn to disc:** You can burn a video to DVD, VCD, or SVCD only from the desktop muvee autoProducer version.

The following sections contain detailed instructions.


## Locating the two versions of muvee autoProducer

You can access two versions of muvee autoProducer (select models only):



To view Help files, press the F1 function key on the keyboard.

### Desktop

Click **Start**  on the taskbar, and then select **All Programs, muvee Technologies, muvee autoProducer**, and then **muvee autoProducer** to open muvee autoProducer. This version of muvee autoProducer has more features, such as video capture and disc recording.

See “Using muvee autoProducer on the Desktop” on page 103.




Or

### Media Center

 


To view Help files, select the ? and then press OK on the remote control.

Press the Media Center Start button  on the remote control, or, with your mouse, click

**Start**  on the taskbar, and then click **Media Center**. Select **More Programs** and then **Make muvee** to open the muvee autoProducer unPlugged program. Use your remote control from within Media Center to personalize your video files.

See “Using muvee autoProducer unPlugged in Media Center” on page 110.

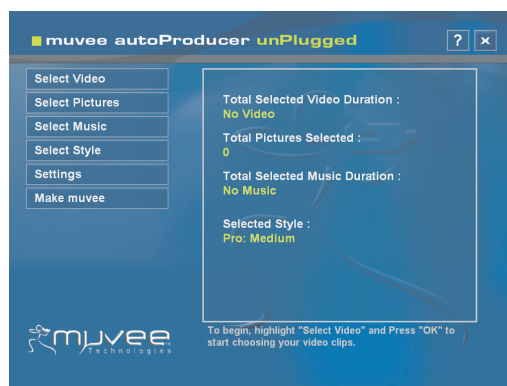

## Using muvee autoProducer on the Desktop










### Getting started on the desktop

To open muvee autoProducer (select models only):

- 1 Close or minimize Media Center.
- 2 Click **Start**  on the taskbar.
- 3 Select **All Programs, muvee Technologies, muvee autoProducer**, and then **muvee autoProducer** to open muvee autoProducer.
- 4 Open a project by selecting, from the File menu, either **New Project** or **Open Project**.
- 5 Select one of the button options:



**You can also launch the muvee autoProducer program from within Sonic DigitalMedia Plus: under the Video tab, select muvee autoProducer.**

Button	Allows you to	See
<b>Get Video from Camera</b> 	Open the muvee Video Capture window to capture (copy) live video or recorded video.	"Capturing video from a DV camcorder" on page 104.
<b>Add Video</b> 	Open the Add Video window to add existing video files to your project.	"Adding videos" on page 105.
<b>Add Pictures</b> 	Open the Add Pictures window to add existing still image files to your project.	"Adding pictures" on page 106.
<b>Add Music</b> 	Open the Add Music window to add existing music files to your project.	"Adding music" on page 107.
<b>Select Style</b>	Open the Select Style window to select an editing template for your movie.	"Selecting the style" on page 107.
<b>Change Settings</b> 	Open the muvee Settings window to adjust audio and video production settings for your movie.	"Changing the settings" on page 107.
<b>Title/Credits</b> 	Open the muvee Title and Credits window to type an opening title and closing credits for your movie.	"Adding an opening title and closing credits" on page 108.
<b>Make muvee</b> 	Open the Make muvee window to automatically create and preview the movie.	"Making the movie" on page 109.
<b>Save muvee</b> 	Open the Save muvee window to save the finished movie on your PC hard disk drive in .wmv or .mpeg formats.	"Saving the movie project" on page 109.
<b>Burn to Disc</b> 	Open the muvee Burner window to record the finished movie in DVD, VCD, or SVCD formats.	"Recording the movie project to disc" on page 110.

## Capturing video from a DV camcorder

You can capture (copy) digital video files to your hard disk drive by using muvee autoProducer either:

- **Live** (known as *camera mode*) using a compatible DV camcorder. See “Capturing live video from a DV camcorder” on page 104.

Or

- **Recorded** (known as *VCR mode*) using a recorded tape in your DV camcorder. See “Capturing recorded video from a DV camcorder” on page 105.

Captured video files are automatically added to your movie project. To remove the file from your movie project, select the video file in the list of Captured Video Files, and then click the **Trash Can** icon.


When capturing video, it is important to be aware of the amount of free space available on your PC hard disk drive. Capturing video can use a large amount of disk space. The amount of free disk space displays on the Capture Video window in muvee autoProducer while you are capturing video.

---

## Capturing live video from a DV camcorder

Capturing live video in camera mode allows you to create a video file without even having a tape in the camcorder.


To capture (copy) live video to your hard disk drive using muvee autoProducer:

- 1** Connect your DV camcorder to the FireWire (IEEE 1394) port on your PC.
- 2** Turn on the camcorder and set it to VCR mode. Refer to the instructions in the manufacturer’s documentation.
- 3** Click the **Get Video from Camera** button. 
- 4** Click the **Start Capture** button to begin capturing the live image directly to your hard disk drive.
- 5** Click the **Stop Capture** button to stop capturing.
- 6** Click **Capture Folder** to specify a folder for the captured video file.
- 7** Click **Filename** to specify a file name for the captured video file.
- 8** Click the **Done** button to automatically add captured video files to your movie project.

## Capturing recorded video from a DV camcorder

For best results with muvee autoProducer, capture only video footage that you are most interested in using in your movie project.

To capture camcorder (copy) recorded video to your hard disk drive:

- 1 Connect your DV camcorder to the FireWire (IEEE 1394) port on your PC.
- 2 Turn on the camcorder and set it to VCR mode. Refer to the instructions in the manufacturer's documentation.
- 3 Click the **Get Video from Camera** button. 
- 4 Click the **Play** button on the screen to begin viewing the video.
- 5 Click **Start Capture** when you see the start of the video footage you want to use in your movie project.
- 6 Click **Stop Capture** to stop capturing.
- 7 Repeat steps 5 and 6 to capture additional sections of video footage.
- 8 Click **Capture Folder** to specify a folder for the captured video file.
- 9 Click **Filename** to specify a file name for the captured video file.
- 10 Click the **Done** button to automatically add captured video files to your movie project.

---

## Adding videos

To add video files to your movie production:

- 1 Select the **Add Video** button in the video/pictures area. The Add Pictures window opens. 
- 2 Browse the folders on your hard disk drive to select existing video files for your movie:
  - Add up to three video files.
  - Select multiple video files by pressing and holding Ctrl on your keyboard while selecting the files.
- 3 Adjust the order of the video files by selecting and then dragging and dropping the file. Select the clip, and click the **Trash Can** icon to remove a video clip from the production.
- 4 You can mark specific scenes in a video clip to include or leave out of your final movie with the magicMoments feature in muvee autoProducer.

To select video scenes with magicMoments:

  - a Select a video file in the Select Video/Pictures window, and then click the **magicMoments** button. The magicMoments window opens. 
  - b Click the **Play** button to start viewing the video.

- c Use the magicMoment controls to mark video scenes to include and exclude:



- Click and hold down the **green thumbs-up** button to mark scenes that must be included in the movie.
- Click and hold down the **red thumbs-down** button to mark scenes that must be left out of the movie.
- Click or hold down the **gray thumb** button to undo 1 second of a selected scene. Press the Shift key on the keyboard, and then click the scene to undo scenes that were marked with the thumbs-up or thumbs-down buttons.

- Click or hold down the **arrow** buttons to navigate backward and forward through the video footage.

Video footage left unmarked is still analyzed when you make the movie and may be included in the final version of the movie.



For best results with the production of your movie:

- Keep each magicMoment to less than 10 seconds.
  - Keep the total duration of magicMoments to less than 50 percent of the duration of your movie. It is recommended to select only a few scenes.
- d Click **OK** when you finish marking scenes. The window closes. Note that the video clip is marked on the lower-left side.

---

## Adding pictures


To add still image files to your movie production:

- 1 Select the **Add Pictures** button in the Video/Pictures area. The Add Pictures window opens. 
- 2 Browse the folders on your hard disk drive to select existing still image files for your movie:
  - Add up to 50 .jpg, .gif, or .bmp picture files.
  - Select multiple picture files by pressing and holding Ctrl on your keyboard while selecting the files.
- 3 Adjust the order of the picture files by selecting and then dragging and dropping the picture file. Select the picture, and click the **Trash Can** icon to remove a picture from the production.
- 4 Select the **Rotate Image Clockwise** button to rotate still images. 



## Adding music

To add music files to your movie production soundtrack on the desktop:

- 1 Select the **Add Music** button in the music area. The Add Music window opens. 
- 2 Browse the folders, as required.
- 3 Select existing music files on your hard disk drive, if desired for your movie:
  - Add up to three .mp3, .m4a, .wav, or .wma files.
  - Select multiple music files by pressing and holding Ctrl on your keyboard while selecting the files.
- 4 Adjust the order of the music files by selecting and then dragging and dropping the file. Select the music, and click the **Trash Can** icon to remove a music clip from the production.

---

## Selecting the style

The muvee autoProducer program comes with a set of style templates for setting the pace, scene transition effects, and caption fonts. The style you use also affects how muvee autoProducer combines the video, picture, and music files in your movie project to produce the final movie.


For example, using the Cinema style results in a movie that is moderately paced, color enhanced, and in a wide-screen format.

To select a style, just click a style from the list. A sample of the style displays in the Preview window.

---

## Changing the settings

You can adjust audio and video production settings for your movie:

- 1 Select the **Change Settings** button. The muvee Settings window opens. 
- 2 Select the **Duration** tab to set the length of your video production and preferences. Click one of the following duration settings:
  - **Fit to music.** The produced version may reuse or drop some video and pictures.
  - **Best fit for videos and pictures.** The produced version may repeat or trim music.
  - **User Defined.** Select the duration in minutes and seconds:
    - If the duration of your music is longer than the duration of video and pictures, place a check in the **Allow video and pictures to repeat** check box to repeat video clips and pictures for the full duration of your music files.
    - If the total duration of your video and picture files is longer than the duration of your music, place a check in the **Allow Music to repeat** check box to repeat music for the duration of the video clips.

**3** Select the **Video** tab to set the video and still image preferences. Click one of the following settings:

- **Style default.** Select this style to sequence still images and video clips.
- **Keep shots in sequence.** Select this style to use the sequence of still images and video clips in the Add Video/Pictures window.
- **Shuffle shots.** Select this style to move the slider bar to determine the frequency of sequencing still images and video clips.
- Place a check in the **Interleave pictures** check box to blend pictures with video at intervals.

**4** Select the **Audio** tab to set the sound preferences. Click one of the following settings:

- **Use all music.** Select this style to use the sequence of sound files in the Add Music window.
- **smartJoin™ multiple music files.** Select this style to automatically remove silence between music tracks.
- **Normalize music.** Select this style to automatically adjust audio playback volume to the same level.
- Move the slider bar to adjust the sound mix level of the music and original soundtrack.

**5** Click **OK** when you are finished adjusting the settings for your movie project.

Or

Click **Cancel** to not change any settings.

---

## Adding an opening title and closing credits

You can personalize your movie project by adding an opening title and closing credits:

**1** Click the **Title/Credits** button. The muvee Title and Credits window opens.



**2** Click the **Title tab**:

- a** Select a title effect from the drop-down window.
- b** Type the text you want to appear at the start of your movie in the **Enter your title here** box.
- c** Click the **Use font** button to select the font, style, size, color, and effects from the Font window.
- d** Select a background image for the title.

**3** Click the **Credits tab**:

- a** Select a **Credits effect** from the drop-down window.
- b** Type the text you want to appear at the end of your movie in the **Enter your credits here** box.
- c** Click the **Use font** button to select the font, style, size, color, and effects from the Font window.
- d** Select a background image for the ending credits.

**4** Click **Apply**.

**5** Click **OK** to close the muvee Title and Credits window.

## Making the movie

After you have added at least one video or picture file to your movie project, you can have muvee autoProducer make the movie.

The muvee autoProducer program makes a movie by combining the video, picture, and music files you have selected, along with the style of movie, and puts together all of these pieces into a professional-looking movie with just a few steps.



To make a movie:


- 1 Click the **make muvee** button. Click **OK** as required.
- 2 After making a movie, you can preview the movie in the muvee autoProducer Preview window. Use the controls in the Preview window to play, pause, and stop the movie preview:
  - Each time you make a change to a movie project, you need to click the **make muvee** button again to add that change to your movie.
  - You can revise and preview the movie as often as you want to experiment with different styles and the content of the movie.

---

## Saving the movie project


Once you are satisfied with the look of your movie project, you are ready to save it.

You can save the movie to a file on your hard disk drive or create a VCD or DVD disc:

- 1 Click the **Save muvee** button. The Save muvee window opens. 
- 2 Choose the movie file type to save to your hard disk drive:
  - **Computer Playback**
  - **E-mail**
  - **DV (camcorder)**
  - **DVD**
  - **VCD (video CD)**
  - **SVCD**
  - **Web Streaming**
- 3 Click the **Save** button.
- 4 Enter a name for the output movie. Select a folder on your hard disk drive, as required. The movie is saved.
  - You can watch the preview as it is saved.
- 5 Click the **Save** button.
- 6 Click **Yes** to preview the movie file in Windows Media Player.

## Recording the movie project to disc

To create a DVD, VCD, or SVCD disc:

- 1 Click the **Burn to Disc** button. The muvee Burner window opens. 
- 2 Type the disc title.
- 3 Select the video(s) to burn to the disc.
  - Select the order of the chapters.
  - Add or delete videos, as required.
- 4 Select the disc menu theme from the drop-down list.
- 5 Select the **CD** or **DVD** recording drive.
- 6 Select type of disc you want to burn: **DVD**, **VCD**, or **SVCD**.
- 7 Click **Burn Now** to begin burning your movie to disc. To save the current settings for future, click **Burn Later**.
- 8 Click **OK** when the recording is complete. Close the muvee Burner window.

---

## Using muvee autoProducer unPlugged in Media Center

To open muvee autoProducer unPlugged in Media Center:

- 1 Click **Start**  on the taskbar, select **Media Center** to open Media Center, or press the Media Center Start button  on the remote control to open Media Center.

If you were working in muvee and closed the program, muvee will reload your previous session settings. Select a button to continue with the previous session, or select **New Session** to start a fresh session.
- 2 Select **More Programs**, and then select the **Make muvee** icon. The main window displays with video production information on the current project.

- 3** Select a button option to produce your video, and follow the onscreen instructions:

<b>Button</b>	<b>Allows you to</b>	<b>See</b>
<b>Select Video</b>	Browse video folders and add existing video files to your video production.	"Selecting videos" on page 112.
<b>Select Pictures</b>	Browse picture folders and add existing image files to your video production.	"Selecting pictures" on page 112.
<b>Select Music</b>	Browse music folders and add existing audio files to your video production soundtrack.	"Selecting music" on page 113.
<b>Select Style</b>	Browse the style list and select an editing template for your movie production.	"Setting the style" on page 113.
<b>Settings</b>	Adjust audio and production settings for your movie production.	"Adjusting audio and video settings" on page 114.
<b>Make muvee</b>	Begin media analysis and construct your movie production.	"Making the movie" on page 114.

- 4** When you have completed a task:

- Select **Next** to open the next button option.

Or

- Select **Back to Main** to open another button option.

If you want to capture (copy) video from a digital video camcorder or burn a disc, see "Using muvee autoProducer on the Desktop" on page 103.



Click **Select All** to choose all video files in a folder. Click **Clear All** to remove all video files from the Selected Videos column.

## Selecting videos

To add video files to your movie production:

- 1 Select the **Select Video** button to browse through video folders on your PC for video files to use in your movie production.
- 2 Select a folder with pictures in it, using the arrow buttons on the remote control:
  - Select the **My Videos** button to access the My Videos folder and subfolders.

Or

  - Select the **Shared Video** button to access the Shared videos folder and subfolders.

Or

  - Select the folder with the green up arrow to browse folders.
- 3 Navigate using the arrow buttons, and press OK on the remote control to add a video file to the Selected Videos list. You may select up to three video files in any .dv, .avi, .mpeg-1, or .mpeg-2 file format combination.
- 4 Adjust the order of the video clips by selecting and then using the **Move Up** and **Move Down** buttons. Select the **Delete** button to remove a video clip from the production.
- 5 Click **Next** to confirm your video selection and proceed to the next step.



Click **Select All** to choose all picture files in a folder. Click **Clear All** to remove all picture files from the Selected Pictures column.

---

## Selecting pictures

To add still image files to your movie production:

- 1 Select the **Select Pictures** button to browse through picture folders on your PC for video files to use in your movie production.
- 2 Select a folder with pictures in it using the arrow buttons on the remote control:
  - Select the **My Pictures** button to access the My pictures folder and subfolders.

Or

  - Select the **Shared Pictures** button to access the Shared Pictures folder and subfolders.

Or

  - Select the folder with the green up arrow to browse folders.
- 3 Navigate using the arrow buttons, and press OK on the remote control to add a picture file to the Selected Pictures list. You may select up to 50 still image files in any .jpg, .gif, or .bmp file format combination.
- 4 Adjust the order of the pictures by selecting and then using the **Move Up** and **Move Down** buttons. Select the **Delete** button to remove a picture from the production.
- 5 Click **Next** to confirm your picture selection and proceed to the next step.

## Selecting music

To add music to your movie soundtrack:

- 1 Select the **Select Music** button to browse through folders on your PC for music files to use in your movie production.
- 2 Select a folder with music in it, using the arrow buttons on the remote control:
  - Select the **My Music** button to access the My Music folder and subfolders.

Or

  - Select the **Shared Music** button to access the Shared music folder and subfolders.

Or

  - Select the folder with the green up arrow to browse folders.
- 3 Navigate using the arrow buttons on the remote control, and press OK to add a music file to the Selected Music list. You may select up to three music files in any .mp3, .wma, or .wav file format combination.
- 4 Adjust the order of the music clips by selecting and then using the **Move Up** and **Move Down** buttons. Select the **Delete** button to remove a music clip from the production.
- 5 Click **Next** to confirm your music selection and proceed to the next step.



**Click *Select All* to choose all music files in a folder. Click *Clear All* to remove all music files from the Selected music column.**

---

## Setting the style

The muvee autoProducer program comes with a set of style templates for setting the pace, scene transition effects, and caption fonts. The style you use also affects how muvee autoProducer combines the video, picture, and music files in your movie project to produce the final movie.

For example, using the Cinema style results in a movie that is moderately paced, color enhanced, and in a wide-screen format.

To select a style:

- 1 Select the **Select Style** button.
- 2 Select a style from the list, based on the description of the style displayed.
- 3 Click **Next** to confirm your style selection and proceed to the next step.

## Adjusting audio and video settings

You can adjust audio and video production settings for your movie:

- 1 Select the **Settings** button.
  - 2 Select **Audio** to adjust the sound mix level of the music and original soundtrack and check music clip preferences.
  - 3 Select **Production** to check production preference settings:
    - If the duration of your music is longer than the duration of video and pictures, place a check in the **Allow video and pictures to be repeated** check box to repeat video clips and pictures for the full duration of your music files.
    - If the total duration of your video and picture files is longer than the duration of your music, place a check in the **Allow Music to be repeated** check box to repeat music for the duration of the video clips.
    - Place a check in the **Keep video and pictures in sequence** check box to maintain the selected sequence.
  - 4 Click **Next** to confirm your settings and proceed to the next step.
- 

## Making the movie

After you have added at least one video or picture file to your movie production, muvee autoProducer can make the movie.

Each time you make a change to a movie project, you need to click the **make muvee** button again to add that change to your movie.

The muvee autoProducer program makes a movie by combining the video, picture, and music files you have selected along with the style of movie, and constructs a professional-looking movie with just a few steps.

To make a movie:

- 1 Click the **make muvee** button.
- 2 Select the duration for your movie by clicking:
  - **Automatic** to allow muvee autoProducer to set the movie duration.

Or

  - **Manual** to allow you to set the duration of the movie in minutes and seconds.
- 3 Click **Next** to start the process of creating your movie. Muvee analyzes your video and music.



**4** After making a movie, you can preview the movie in the muvee autoProducer Preview window. Use the controls in the Preview window to rewind, play, stop, and forward the movie.

You can revise and preview the movie as often as you want to experiment with different styles and the content of the movie.

**5** Click the **Save** button if you have completed all changes and if you are satisfied with the look of your movie project:

- a** Select a file type.
- b** Type the movie file name using your remote control or your keyboard.
- c** Click the **Continue** button to save the movie to your hard disk drive. The movie is saved on your hard disk drive.

To create a CD or DVD disc in muvee autoProducer unPlugged, copy the saved file using the Windows desktop.

---

## Upgrading muvee autoProducer

You can purchase an upgraded version of muvee autoProducer with the following enhancements:

- MPEG-4 and DivX video format support
- TIFF audio format support
- Ability to include up to 75 video and audio clips in your movie production



# Using an HP Personal Media Drive

 
The HP Personal Media Drive is sold separately. It can be used as an internal or external USB hard disk drive designed to quickly and easily increase your storage capacity and to transfer media files such as digital photos, music, videos, and other important files from one PC to another. You can also use the HP Personal Media Drive to back up other drives on your HP Media Center PC.

The HP Personal Media drive is designed to:

- Work with the HP Media Center PC and other PCs that have a USB port.
- Store large media files and personal files.
- Transfer files between PCs.
- Play media files.
- Back up your files.

For more information about using your HP Personal Media Drive with Media Center, refer to the documentation on the HP Support Web site at:

<http://www.hp.com/support>

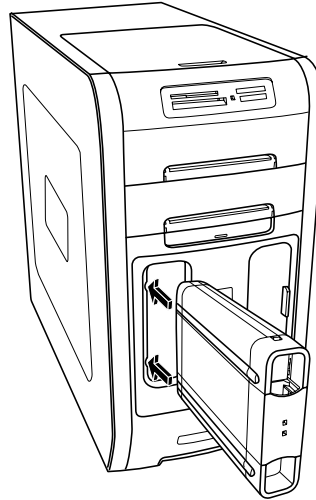

**The HP Personal Media Drive is sold separately.**

---

## Setting Up the HP Personal Media Drive to Work with Media Center

When you complete this setup procedure, you are able to easily access content — such as music, photos, videos, and recorded TV programs from customized folders — on your HP Personal Media Drive.

Once you complete the setup wizard, you can drag and drop your music, video, pictures, and recorded TV files from your primary hard disk drive to personalized folders in the HP Personal Media Drive for backup or storage. You can also use your remote control to access these files from within Media Center.

- 1** Insert the HP Personal Media Drive Installation CD that came with your HP Personal Media Drive.
- 2** When the menu of installation options appears, select the items you want to install by placing a check in the check box next to the choices. Make sure you place a check next to HP Media Center Setup Utility, and then click **Install**.
- 3** Insert your HP Personal Media Drive into the drive bay or connect it to a USB port, and then click **Continue**.
- 4** Follow the onscreen instructions to complete the setup wizard, and then restart the PC.

## Locating the Drive After Installation

After you install the HP Personal Media Drive into the HP Media Center PC, you can find the drive in My Computer. The HP Media Center PC automatically assigns a drive letter which may change unless you assign a drive letter. See "Assigning a Drive Letter to the HP Personal Media Drive" on page 118.

- 1 Click **Start** on the taskbar.
- 2 Click **My Computer**.
- 3 Select your drive under *Hard Disk Drives*. The default name is HP Personal Media Drive.

---

## Assigning a Drive Letter to the HP Personal Media Drive

You can permanently assign a drive letter to avoid the letter changing when you connect and disconnect this drive and other devices. Also, it is easier for a software program to locate files on the HP Personal Media Drive if a drive letter is assigned. Some programs may not be able to find files if the drive changes letters every time you connect it.

To assign a drive letter:

- 1 Click **Start**.
- 2 Right-click **My Computer**.
- 3 Select **Manage**, and then click **Disk Management**.
- 4 Right-click **HP Personal Media Drive**.
- 5 Select **Change Drive Letter and Paths**. HP recommends that you pick the drive letter **Z**.
- 6 Click **Change** and select a letter, and then apply the changes by clicking **OK**.



**To avoid multiple hard disk drives using the same drive letter when connecting and removing the drives, assign the letter Z.**

---

## Viewing and Storing Files

The recommended way to transfer files to the HP Personal Media Drive is to drag them from your local hard disk drive to your HP Personal Media Drive.

If you want the files that are stored on your HP Personal Media Drive to appear in Media Center, you must drag them to the correct media folders,

such as My Personal Videos and My Personal Pictures on your HP Personal Media Drive. These media folders appear after you complete the procedure, "Setting Up the HP Personal Media Drive to Work with Media Center" on page 117.

## Playing Media Files

You can play all kinds of media from an HP Personal Media Drive:

- 1 Click **Start** on the taskbar.
  - 2 Click **My Computer**.
  - 3 Double-click the **HP Personal Media Drive** icon to locate your media file.
  - 4 Double-click the file. Most media files open in Windows Media Player.
- 

## Playing Music Files

You can play all kinds of music stored on the HP Personal Media Drive. If you want the music files that are stored on your HP Personal Media Drive to appear in the Media Center *My Music* window, you must complete the procedure “Setting Up the HP Personal Media Drive to Work with Media Center” on page 117.

When you disconnect the drive, your music files may still appear in the Windows Media Player Library and Media Center *My Music* window. To refresh your HP Media Center PC, open and close Windows Media Player or Media Center. If that doesn’t work, restart the HP Media Center PC.

---

## Viewing Picture Files

You can view your pictures stored on an HP Personal Media Drive. If you want the picture files that are stored on your HP Personal Media Drive to appear in the Media Center *My Pictures* window, you must

complete the procedure “Setting Up the HP Personal Media Drive to Work with Media Center” on page 117.

---

## Playing Video Files

You can view your videos stored on an HP Personal Media Drive. If you want the video files that are stored on your HP Personal Media Drive to appear in the Media Center My Videos window, you must complete the procedure "Setting Up the HP Personal Media Drive to Work with Media Center" on page 117.

When you disconnect the drive, your video files may still appear in the Media Center My Videos window. To refresh your HP Media Center PC, open and close Media Center.

---

## Watching TV Programs Stored on the HP Personal Media Drive

To play back recorded TV files stored on your HP Personal Media Drive, you must:

- 1** Connect your HP Personal Media Drive to the HP Media Center PC with the power turned off.
- 2** Turn on the HP Media Center PC and open Media Center.
- 3** Click **Settings, TV, Recorder, Recorder storage**.
- 4** Under *Record on drive* select the **HP Personal Media Drive**, select **Save**, and then select **Yes**. A Recorded TV folder is created and placed in your HP Personal Media Drive. Recorded TV shows must be placed in this folder to access them with Media Center.
- 5** Under *Record on drive*, select your local hard disk drive, select **Save**, and then select **Yes**.
- 6** Move or copy your recorded TV programs to the Recorded TV folder on your HP Personal Media Drive. Now you can view your stored TV programs in Media Center, or you can double-click the file and view the show in Windows Media Player.
- 7** Close Media Center before disconnecting the drive.

When you connect your drive, stored TV files appear a few seconds after you open Media Center.



**You need to close Media Center before removing or before connecting your HP Personal Media Drive for the stored TV files to update properly.**

## About Recording TV to the HP Personal Media Drive

The HP Media Center PC was set up to record TV shows to your local hard disk drive when using Media Center. It is possible to change the recording pathway to an HP Personal Media Drive, but several errors can occur if the drive is unexpectedly or improperly removed.

It is recommended that you record TV shows to your local hard disk drive and then copy the files over to your HP Personal Media Drive.

If you decide to change your recording path to the HP Personal Media Drive, consider the following:

- The TV recording path does not default back to your local hard disk drive after the HP Personal Media drive is disconnected. This means scheduled recordings may not be recorded. The recording error *Low Disk Space* may occur, and then your program will not be recorded. See "Changing Disk Allocation" on page 124 for more information about fixing this error.
- When the drive is disconnected, the disk allocation for Recorded TV shows reverts to 10%, and your recorded programs can be lost if you have selected the "Keep until space is needed" setting in My TV. See "Changing Disk Allocation" on page 124 for more information about changing the allocation.

- If you disconnect the drive while live TV is active, a video error can occur.
- Recorded TV shows are not updated in Media Center when the drive is removed.
- The drive may be assigned a different drive letter which prevents Media Center from recognizing the recording path or the stored Recorded TV files.

When you set the TV recording pathway to your HP Personal Media Drive, Media Center stores the recording buffer data for pausing live TV on your drive. This means that if live TV is playing, you won't be able to remove the drive safely.

To avoid this scenario, change the recording pathway back to your local hard disk drive, and then restart the HP Media Center PC before disconnecting the HP Personal Media Drive.

## Recording TV programs to the HP Personal Media Drive

- 1 Change your recording pathway to your HP Personal Media Drive. See “Changing the TV recording path to the HP Personal Media Drive” on page 122.
- 2 Open Media Center.
- 3 Record TV programs. See “Recording TV from the Guide” on page 28. Your programs are recorded to the HP Personal Media Drive.
- 4 Before disconnecting the drive:
  - Make sure there are no scheduled recordings or recordings in progress to avoid losing data.
- 5 Close Media Center.
- 6 Restart your HP Media Center PC. You must perform this last step, or errors can result when recording to your drive.
- 7 Disconnect your HP Personal Media Drive safely. See “Disconnecting the HP Personal Media Drive Safely” on page 123.

---

## Changing the TV recording path to the HP Personal Media Drive

If you decide to change your recording path to record directly to your HP Personal Media Drive, Media Center creates a Recorded TV folder on your drive:



**HP recommends that you record TV programs directly to your local hard disk drive and then transfer your recorded programs to the HP Personal Media Drive, if desired.**

- 1 Assign a drive letter to your HP Personal Media Drive. See “Assigning a Drive Letter to the HP Personal Media Drive” on page 118.
- 2 Open Media Center.
- 3 Select **Settings, TV, Recorder**, and then **Recorder storage**.
- 4 Under *Record on Drive*, select (+) to select the **HP Personal Media Drive**. You can also set the disk allocation and recording quality settings in this window.

HP recommends that you know the drive letter assigned and the storage amount of your HP Personal Media Drive.

- 5 Click **Save**, and then click **Yes**.
- 6 Close Media Center.
- 7 Restart the HP Media Center PC.

To change the TV recording path back to your local hard disk drive, follow this procedure and select your hard disk drive in step 4.



## Changing the TV recording path to the local hard disk drive


To change the Media Center TV recording path to your local hard disk drive:

- 1 Open Media Center.
  - 2 Select **Settings, TV, Recorder**, and then **Recorder storage**. You can also set the disk allocation and recording quality settings in this window.
  - 3 Select your local hard disk drive (**C:**).
  - 4 Click **Save**, and then click **Yes**.
  - 5 Close Media Center.
  - 6 Restart the HP Media Center PC.
- 

## Disconnecting the HP Personal Media Drive Safely

You can safely remove the drive when it is not active. When the amber activity light is blinking, the drive is active, saving or transferring data. Removing the drive while the light is blinking may cause data loss or damaged files.

To disconnect your HP Personal Drive safely:

- 1 Close Media Center and all other programs that may be accessing your HP Personal Media Drive. Make sure the activity LED is off.
  - 2 Double-click the **Safely Remove Hardware** icon in the system tray at the bottom of the desktop. If this icon is hidden, click the arrows on the taskbar to display it. The Safely Remove Hardware window opens. 
  - 3 Double-click **USB Mass Storage Device** to locate your HP Personal Media Drive. USB Mass Storage Device may be listed twice. One may contain a memory card reader or other mass storage drives.
  - 4 Select your device that is labeled *HP Personal Media Drive*, and then click **OK**. This name of the drive may appear as *Generic Volume* followed by the assigned drive letter. A *Safe to Remove Hardware* message appears in the system tray at the bottom of your desktop, letting you know that your drive is safe to disconnect.
  - 5 Click **Close**.
  - 6 Disconnect the drive from the HP Media Center PC.
-

## Changing Disk Allocation

If you experience a *Low Disk Space* error message, and you want to change the disk allocation to a higher percentage for your HP Personal Media Drive:

- 1 Open Media Center.
  - 2 Select **Settings, TV, Recorder**, and then select **Recorder storage**.
  - 3 Change the disk allocation percentage setting by selecting (+) or (-).
- 

## Updating Recorded TV List After Removing the HP Personal Media Drive

If you want to update your Recorded TV list after removing the drive:

- 1 Close Media Center.
  - 2 Open Media Center.
  - 3 If this does not update the files, restart the HP Media Center PC.
- 

## System Requirements to View Recorded TV Programs on Other PCs

To play back recorded TV files (.dvr-ms files) that were recorded on your HP Media Center PC on another non-Media Center PC, the PC must have the following items installed:

- Windows XP operating system
- Windows XP Service Pack 1
- Windows Media Player 9 or later
- Software to play DVDs

- The audio and video codec file allows Windows Media Player to play recorded TV programs (.dvr-ms files). You can find this file in Windows Update. Click **Start**, choose **All Programs**, and then click **Windows Update**. You can also go to the Windows Web site and search for this code file (Q810243).

If you want more information about this file you can go to the Microsoft Web site at:

<http://www.microsoft.com>

## A

- adding
  - CD tracks to the music library 43
  - music files to the music library
    - from the hard disk drive 41
- adhesive disc labels 88
- appending discs 83
- archive files 84
- Away mode
  - enabling 6
  - power setting 2
  - using 6

## B

- bit rate
  - DVDs 99
  - VCDs 99
- burning
  - audio and data files 79
  - CDs
    - archive files 84
    - closed-session 80
    - copying 84
    - data files 83
    - image files 85, 86
    - jukebox 81
    - tips about 81
    - verifying no errors 80, 82
  - data discs 80, 82
  - DVDs
    - archive files 84
    - bit rate 99
    - Fit-to-DVD setting 99
    - image files 85, 86
    - overview 97
    - quality settings 99
    - verifying no errors 80, 82
    - video quality 99
  - labels, LightScribe 86

- multiple sessions
  - recording CDs and DVDs 82
- tips, data discs 83
- VCDs 97
- video projects to disc 97
- buttons
  - remote control 14

## C

- camcorder capture 104
- capturing video
  - in video projects 95
  - requirements 93
- CDs
  - archive files 84
  - burning tips
    - audio discs 81
    - data discs 83
  - closed-session 80
  - compressed 81
  - copying 84
  - creating a music CD in My Music 47
  - data 83
  - erasing rewritable 79
  - image files 85
  - jukebox 81
  - playing in My Music 45
  - verifying data integrity 80, 82
- closed-session burning 80
- compressed CDs 81
- copying CDs and DVDs 84
- creating
  - CDs 79, 86
  - compressed CDs 81
  - data CDs and DVDs 83
  - DVDs 86, 97
  - image files 85
  - jukebox CDs 81
  - music CDs 81
  - VCDs 97

## D

- data
  - burning in multiple sessions 82
  - CDs and DVDs 83
  - files
    - archiving 84
    - burning tips 83
    - verifying integrity 83
- desktop
  - switching from Media Center 4
- DigitalMedia Home
  - adding files, adding files, video projects 94
- Direct-to-Disc Wizard (MyDVD) 93, 98
- discs
  - drive compatibility 88
  - erasing rewritable 79
  - features and compatibility 89
  - labeling
    - adhesive 88
    - after burning with iTunes 87
    - with LightScribe 87
- driver updates, LightScribe 86
- DV camcorder capture 104
- DVD movies
  - changing
    - audio settings 74
    - language 74, 85
  - creating 110
  - playing
    - in Media Center 73
- DVDs
  - archive files 84
  - burning to disc 97
  - copying 84
  - data 83
  - data discs, burning tips 83
  - erasing rewritable 79
  - image files 85
  - quality settings 97
  - recording time 100
  - supported formats 96
  - verifying data integrity 80, 82

## E

- editing
  - pictures 65
  - video files (MyDVD) 96
- erasing rewritable discs 79
- error messages
  - Channel information is currently not available 22
  - common recording errors 31
  - Download Incomplete 22
  - Image cannot be displayed 59, 65
  - Low Disk Space 121, 124
  - No data available 22
  - Search in My TV is unavailable because there is no Guide information 22
  - The current lineup and/or location selected for the Guide is not supported 22
  - The Guide information is either missing or corrupt. 22
- errors
  - reducing recording speed 81
  - verifying data integrity of data discs 80, 82

## F

- file format
  - compressed audio 80
  - video 95
- file type
  - .aac 37, 101
  - .aiff 37
  - .asf 101
  - .avi 101
  - .bmp 101
  - .cda 44
  - .dv 101
  - .gif 101
  - .jpg 101
  - .m4a 101
  - .mov 101
  - .mov (QuickTime) 115
  - .mp3 37, 101

- .mpeg-1 101
- .mpeg-2 101
- .mpeg-4 101
- .wav 37, 101
- .wma 101
- .wmv 101
- M4A 80
- MP3 80
- MPEG-4 115
- SVCD 110
- TIFF 115
- WMA 80

files

- adding to partially recorded discs 83
- archive 84
- image 85, 86
- supported video formats 95
- verification of data 83
- verify integrity of backups 83

FireWire 104, 105

Fit-to-DVD setting (MyDVD) 99

FM radio, see radio

**G**

Guide, see Television Program Guide

**H**

HP Image Zone 50

- assigning a keyword to your pictures 53
- assigning a place to your pictures 53
- creating a backup disc 60
- creating albums 52
- creating your picture catalog 50
- modifying a date assigned to your picture 52
- printing pictures 60
- supported file types 59
- viewing a slideshow with music 55

HP Personal Media Drive 117

HP Tunes

- creating a queue list 38
- playing CDs 37
- troubleshooting 39
- using iTunes with Media Center 33, 34

**I**

image files 85, 86

Internet radio 75

iTunes 39

- adding music from a CD 35
- adding music from the Internet 36
- adding music from your hard disk drive 36
- adding music to the music library 35
- changing music information 37
- creating a playlist 38
- creating music CDs 39
- features 91
- labeling with LightScribe 87
- supported file types 37

**J**

jukebox CDs 81

**L**

labeling discs

- adhesive labels 88
- burnt with iTunes 87
- with LightScribe 86

LightScribe

- compatible media 86
- disc labeling 86
- driver updates 86
- labeling iTunes discs 87
- requirements 86

**M**

Media Center

- navigating 5
- playing DVDs 73
- resizing window 4
- Start menu 8
- toolbars 4
- using muvee autoProducer unplugged 110
- using with another program open 4
- viewing your pictures 63

- what you can do
      - in My Music 33
      - in My Pictures 50
      - in My TV 17
      - in My Videos 69
      - in Radio 75
  - memory card reader 50
  - movie making programs 93
  - music
    - burning CD 39
    - creating CD tips 81
  - music library
    - adding CD tracks 43
    - creating 41
  - muvee autoProducer
    - adding a title and credits 103
    - adding music 103
    - adding pictures 103, 106
    - adding still image files 112
    - adding video 103, 105
    - adjusting audio and video settings 114
    - adjusting production settings 114
    - allowing music to repeat 107
    - allowing video and pictures to repeat 107
    - basic steps to create a movie 101
    - burning a movie to disc 103
    - changing settings 107
    - features 91
    - getting started 103
    - getting video from a camera 103
    - keeping video and pictures in sequence 114
    - making a movie 109, 114
    - opening the desktop version 102
    - opening the Media Center version 102
    - previewing a movie 103, 109, 115
    - rotating images clockwise 106
    - saving movie 103, 109
    - selecting style 103, 107
    - setting the duration of video 107, 114
    - setting the style 113
    - upgrading 115
    - using muvee in Media Center 110
    - using settings 114
    - using the magicMoments feature 105
  - My Music 33, 113
    - copying music to CD 47
    - creating a queue list 46
    - deleting music from the My Music library 43
    - finding and playing an album 46
    - playing a song 45
    - playing an album 45, 46
    - playing music 44
    - supported file types 44
  - My Pictures 49, 112
    - editing pictures 65
    - printing pictures 65
    - rotating pictures 67
    - turning captions on or off 63
    - types of files it can display 65
    - viewing a slideshow with music 64
    - viewing pictures 63
    - viewing pictures as a slideshow 64
  - My TV 17
    - advanced recording options 28
    - icons 28
    - manually downloading the Guide 23, 24, 25
    - play recorded TV programs 31
    - recording TV from the Guide 28
    - recording TV manually 29
    - recording TV programs 28
    - searching for TV programs 26
    - sorting shows 31
    - Television Program Guide errors 22
    - time shifting 19
    - using the remote control 19
    - watching TV programs 18
  - My Videos 69
    - organizing and storing videos 69
    - playing digital videos 69
    - sorting videos 70, 71
  - MyDVD *see* Sonic MyDVD
- O**
- online Help
    - Sonic recording programs 95
  - optical drive quick reference 90
  - Optimization setting 2, 10

## P

### pictures

- copying pictures to CD 68
- editing 65
- image not displayed in My Pictures 65
- printing 65
- rotating 67
- troubleshooting
  - image not displayed in My Pictures 59

### playing

- digital music files 44
- digital videos 69
- DVDs in Media Center 73
- music CDs in Media Center 44
- songs in My Music 45

### playing songs

- Buy Music option 46
- Visualize option 46

### playlist

- creating in iTunes 38
- creating in My Music 47

### production settings, muvee 114

### Program Guide, see Television Program Guide

## Q

### quality settings, recording DVDs 97

### queue list

- creating in My Music 46

## R

### radio

- connecting antenna to PC 75
- getting reception 75
- organizing radio station presets 77

### Radio window 75

- organizing pre-set radio stations 77
- playing FM stations 75
- playing radio in Media Center 75
- recording radio programs 77

### RealPlayer, features 91

### recorded TV 31

### recording

CDs, VCDs, and DVDs see: burning

options in My TV 28

radio programs 77

time

DVDs 100

for each disc size 100

VCDs 99

TV shows 28

how to stop recording 28

### recording TV

standby mode 5

### recording TV shows

making sure a show is being recorded 28

manually 29

single shows or series, canceling 28

using the Guide 28

when two are scheduled for the same time 28

### remote control

buttons 14

using in My TV 20

### rewritable discs, erasing 79

### rotating pictures 67

## S

### searching for programs 26

### settings

background color 10

calibration settings 10

for phone call notification 10

for sound 10

general 10

Internet connections 10

remote control and remote sensor 10

### Shared Video folder 69

### slideshow

displaying information about pictures 64

HP Image Zone 54

viewing pictures 64

viewing with music 64

### slideshows in MyDVD 95

- software programs
  - iTunes 91
  - movie making 93
  - Sonic Digital Media Plus 93
  - Windows Movie Maker 2.0 92
  - WinDVD Player 91
- Sonic Digital Media Plus *see*: Sonic MyDVD
- Sonic MyDVD
  - default verify data setting 80, 82
  - Direct-to-Disc Wizard 93, 98
  - editing video files 96
  - erasing discs 79
  - online Help 95
  - verifying data feature 82
  - video
    - projects 93
    - quality 99
    - settings (quality) 100
- sorting TV shows
  - by category 31
  - by date 31
  - by name 31
- Start menu
  - Media Center 3
- storing data files 83
- submenus in video projects 96
- supported
  - DVD formats 96
  - video file formats 95

## T

- Teletext buttons, using 16
- Television Program Guide
  - filter categories 23
  - no data available 22
  - recording TV programs 28
  - searching for TV programs 26
  - setting up a download method 23
  - using the More information button 23
  - viewing 22
- troubleshooting
  - radio reception 76

## TV

- playing recorded TV shows 31
- searching for shows by category 27
- time shifting 19
- using digital video recorder while watching 19
- watching 18

## U

- updates, LightScribe drivers 86

## V

### VCDs

- bit rate 99
- burning 99
- recording time 99
- verify copied data setting 83

### video

- capturing 93, 95, 98
- DVD recording times 100
- editing
  - files (MyDVD) 96
- projects
  - background music 96
  - burning to disc 97
  - button styles 96
  - capture length 95
  - capturing video 95
  - chapter points 95
  - custom styles 96
  - Direct-to-Disc Wizard 98
  - editing 96
  - files (adding) 94
  - MyDVD 93
  - scene detection 95
  - searching for scenes 96
  - slideshowes 95
  - submenus 96
  - supported file formats 95
  - text formatting 96
  - transition effects 96
  - user interfaces 93
- quality settings (MyDVD) 100
- supported DVD formats 96



- video capture
  - live 104
  - recorded video 104
- video editing
  - getting started with muvee autoProducer 103
- video movies
  - recording movie to disc 110
  - sorting 70, 71

## **W**

- Windows Media Player
  - setting as default player 37, 44
  - types of files 37, 44
- Windows Movie Maker 2.0, features 92
- WinDVD Player, features 91

Part number: 5991-3517