


### English


#### 1. Check the Box Contents

- A. Scanner with built-in transparent materials adapter (TMA) in the scanner lid for scanning film
- B. USB cable
- C. Power supply and power cord
- D. User's Manual
- E. Setup Poster
- F. Warranty sheet
- G. One or more CDs (depending on your region)
- H. Model Number 4890 comes with 3 TMA templates for scanning film.

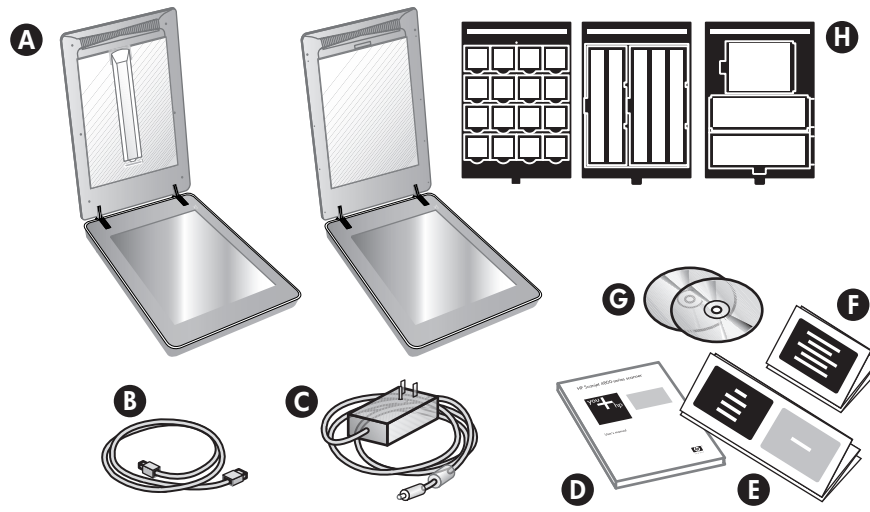

#### 2. Connect the Scanner in the Order Shown

1. Connect the TMA cable to its port on the back of the scanner.
2. Connect the power supply to the scanner and then plug it into a surge protector or grounded wall outlet.
3. Turn on the power switch.

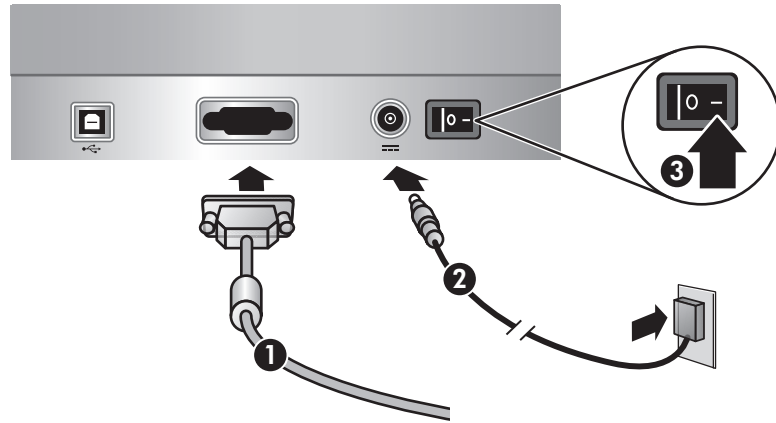


#### 3. Install the Software

1. Close all programs.
2. Insert the HP Image Zone CD that is appropriate for your language and operating system.
3. Connect the USB cable to the scanner and to your computer.
4. Follow the on-screen instructions to finish the installation.

**Windows:** If the installation does not start automatically: On the **Start** menu, click **Run** and type: **D:\setup.exe** (where D is the letter of the CD-ROM drive).

**Macintosh:** Double-click the CD icon on the desktop. Then double-click on the install icon in the window.

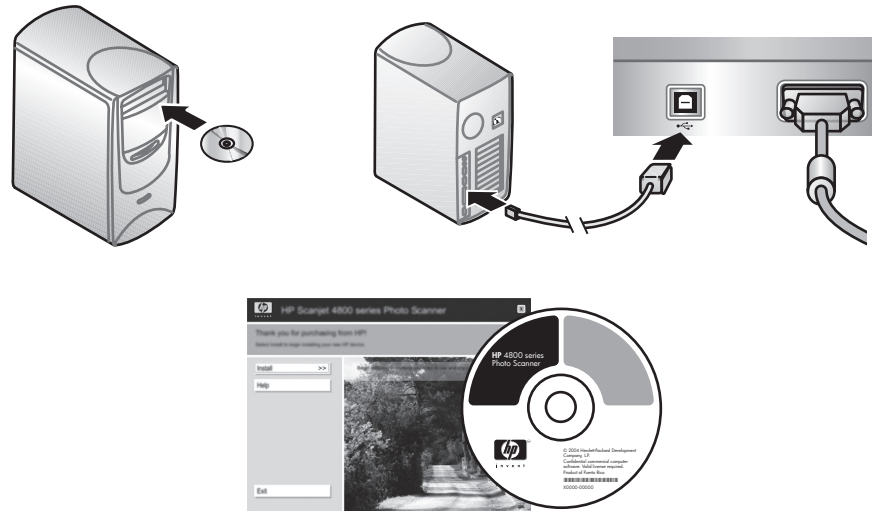


#### 4. To Scan

1. Place photos or documents on the scanner glass as indicated by the reference mark on the scanner . (To scan film, see the User's Manual.)
2. Press the scan button and follow the on-screen instructions.

##### Scanner Buttons

- Scan** – Scans pictures, graphics, documents, and objects.
- Scan Film** – Scans transparent positives, such as 35 mm slides, and negatives using the transparent materials adapter (TMA).
- Copy** – Scans the item and sends it to a printer to make a copy.
- Scan to Share** – Sends the scan to HP Instant Share or to your email program.

**For more information on how to scan** see the User's Manual (printed or on CD) or online help. To access the User's Manual on the CD, select your language directory and click on the PDF file.

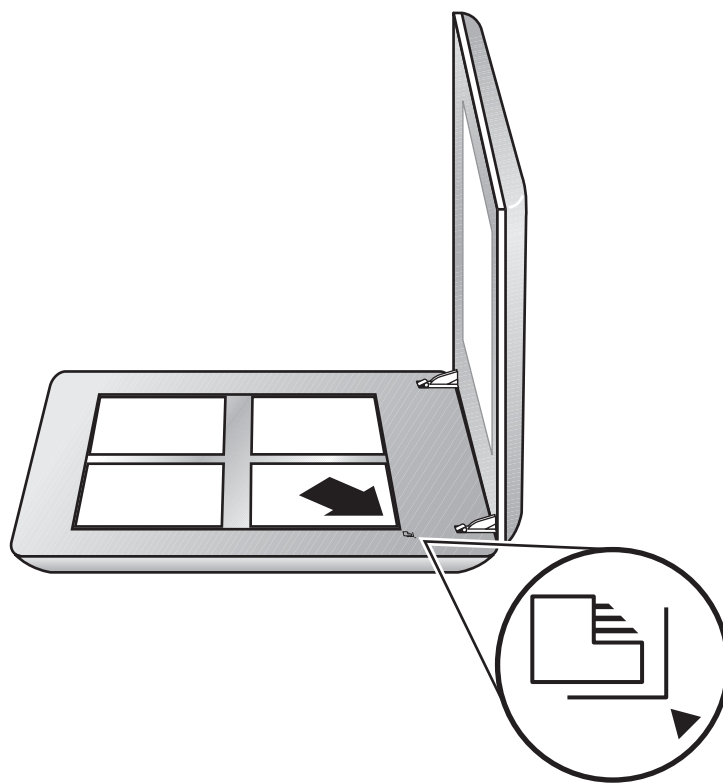

#### Product Support

- [www.hp.com/support](http://www.hp.com/support) for customer support
- [www.shopping.hp.com](http://www.shopping.hp.com) (U.S. only) or [www.hp.com](http://www.hp.com) (worldwide) for ordering HP accessories, supplies, and products

[www.hp.com/support](http://www.hp.com/support)  
[www.shopping.hp.com](http://www.shopping.hp.com) (U.S. only)  
[www.hp.com](http://www.hp.com) (worldwide)

### Suocirca

#### 1. Check the Box Contents

- A. Scanner with built-in transparent materials adapter (TMA) in the scanner lid for scanning film
- B. USB cable
- C. Power supply and power cord
- D. User's Manual
- E. Setup Poster
- F. Warranty sheet
- G. One or more CDs (depending on your region)
- H. Model Number 4890 comes with 3 TMA templates for scanning film.

#### 2. Connect the Scanner in the Order Shown

1. Connect the TMA cable to its port on the back of the scanner.
2. Connect the power supply to the scanner and then plug it into a surge protector or grounded wall outlet.
3. Turn on the power switch.

#### 3. Install the Software

1. Close all programs.
2. Insert the HP Image Zone CD that is appropriate for your language and operating system.
3. Connect the USB cable to the scanner and to your computer.
4. Follow the on-screen instructions to finish the installation.

**Windows:** If the installation does not start automatically: On the **Start** menu, click **Run** and type: **D:\setup.exe** (where D is the letter of the CD-ROM drive).

**Macintosh:** Double-click the CD icon on the desktop. Then double-click on the install icon in the window.

#### 4. To Scan

1. Place photos or documents on the scanner glass as indicated by the reference mark on the scanner . (To scan film, see the User's Manual.)
2. Press the scan button and follow the on-screen instructions.

##### Scanner Buttons

- Scan** – Scans pictures, graphics, documents, and objects.
- Scan Film** – Scans transparent positives, such as 35 mm slides, and negatives using the transparent materials adapter (TMA).
- Copy** – Scans the item and sends it to a printer to make a copy.
- Scan to Share** – Sends the scan to HP Instant Share or to your email program.

**For more information on how to scan** see the User's Manual (printed or on CD) or online help. To access the User's Manual on the CD, select your language directory and click on the PDF file.


#### Product Support

- [www.hp.com/support](http://www.hp.com/support) for customer support
- [www.shopping.hp.com](http://www.shopping.hp.com) (U.S. only) or [www.hp.com](http://www.hp.com) (worldwide) for ordering HP accessories, supplies, and products

## Dorum

### 1. Check the Box Contents

- |  |   |
|--|---|
| <b>A.</b> Scanner with built-in transparent materials adapter (TMA) in the scanner lid for scanning film | <b>E.</b> Setup Poster  |
| <b>B.</b> USB cable  | <b>F.</b> Warranty sheet  |
| <b>C.</b> Power supply and power cord  | <b>G.</b> One or more CDs (depending on your region)                      |
| <b>D.</b> User's Manual  | <b>H.</b> Model Number 4890 comes with 3 TMA templates for scanning film. |

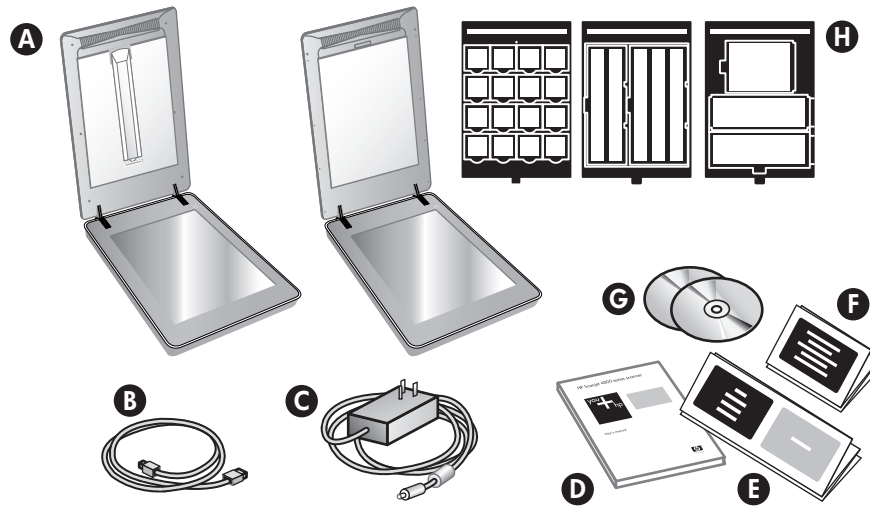


## Suocirca

### 1. Check the Box Contents

- |  |   |
|--|---|
| <b>A.</b> Scanner with buily-in transparent materials adapter (TMA) in the scanner lid for scanning film | <b>E.</b> Setup Poster  |
| <b>B.</b> USB cable  | <b>F.</b> Warranty sheet  |
| <b>C.</b> Power supply and power cord  | <b>G.</b> One or more CDs (depending on your region)                      |
| <b>D.</b> User's Manual  | <b>H.</b> Model Number 4890 comes with 3 TMA templates for scanning film. |

### 2. Connect the Scanner in the Order Shown

1. Connect the TMA cable to its port on the back of the scanner.
2. Connect the power supply to the scanner and then plug it into a surge protector or grounded wall outlet.
3. Turn on the power switch.

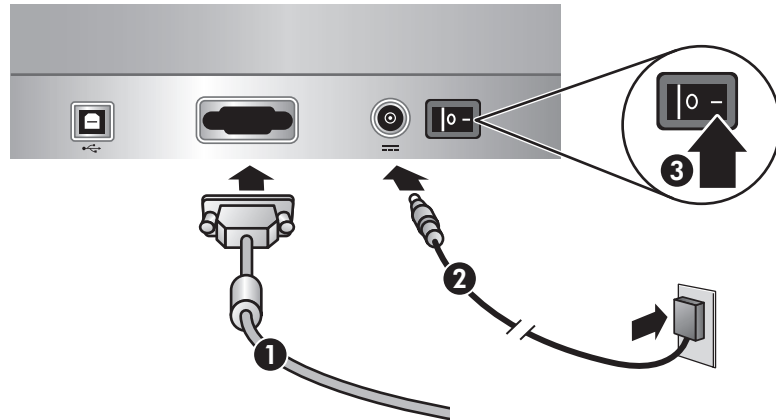


### 2. Connect the Scanner in the Order Shown

1. Connect the TMA cable to its port on the back of the scanner.
2. Connect the power supply to the scanner and then plug it into a surge protector or grounded wall outlet.
3. Turn on the power switch.

### 3. Install the Software

1. Close all programs.
2. Insert the HP Image Zone CD that is appropriate for your language and operating system.
3. Connect the USB cable to the scanner and to your computer.
4. Follow the on-screen instructions to finish the installation.

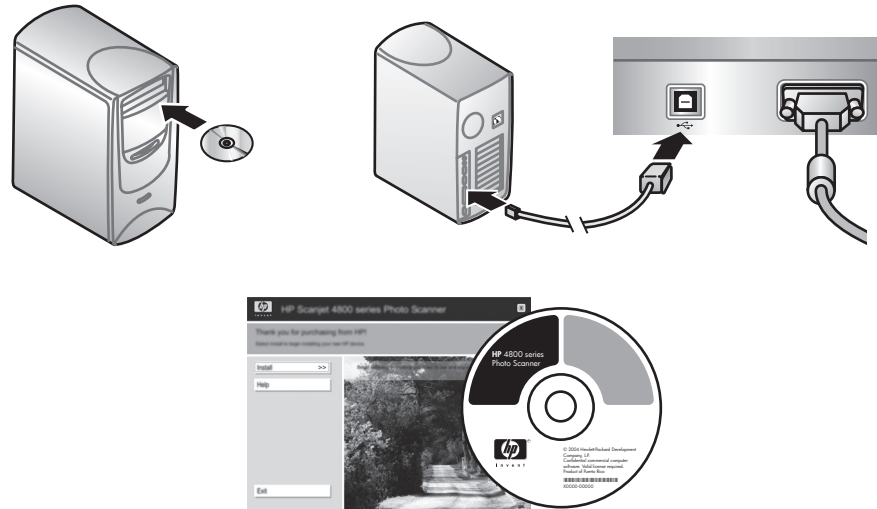

**Windows:** If the installation does not start automatically: On the **Start** menu, click **Run** and type: **D:\setup.exe** (where D is the letter of the CD-ROM drive).

**Macintosh:** Double-click the CD icon on the desktop. Then double-click on the install icon in the window.

### 3. Install the Software

1. Close all programs.
2. Insert the HP Image Zone CD that is appropriate for your language and operating system.
3. Connect the USB cable to the scanner and to your computer.
4. Follow the on-screen instructions to finish the installation.

**Windows:** If the installation does not start automatically: On the **Start** menu, click **Run** and type: **D:\setup.exe** (where D is the letter of the CD-ROM drive).

**Macintosh:** Double-click the CD icon on the desktop. Then double-click on the install icon in the window.


### 4. To Scan

1. Place photos or documents on the scanner glass as indicated by the reference mark on the scanner . (To scan film, see the User's Manual.)
2. Press the scan button and follow the on-screen instructions.

#### Scanner Buttons

- Scan** – Scans pictures, graphics, documents, and objects.
- Scan Film** – Scans transparent positives, such as 35 mm slides, and negatives using the transparent materials adapter (TMA).
- Copy** – Scans the item and sends it to a printer to make a copy.
- Scan to Share** – Sends the scan to HP Instant Share or to your email program.

**For more information on how to scan** see the User's Manual (printed or on CD) or online help. To access the User's Manual on the CD, select your language directory and click on the PDF file.

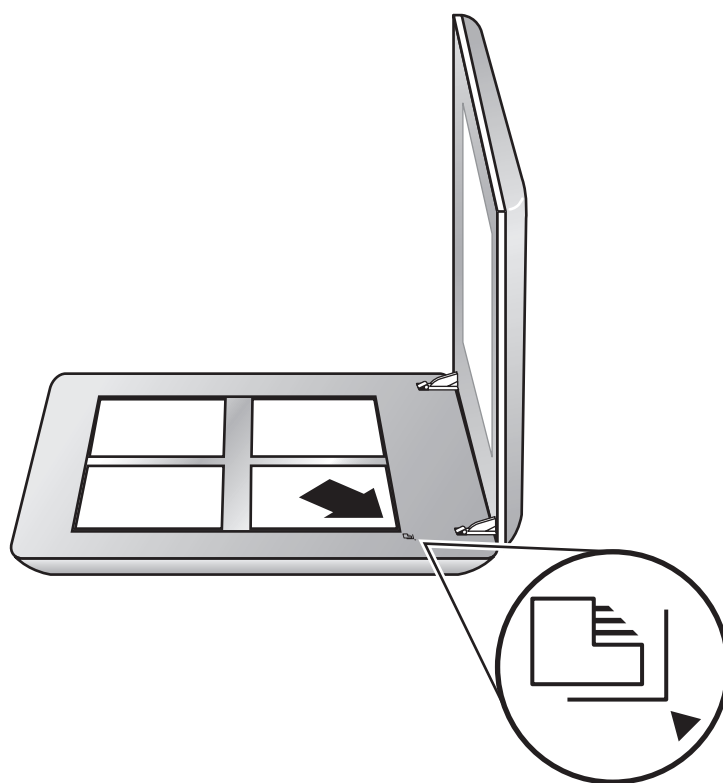

### 4. To Scan

1. Place photos or documents on the scanner glass as indicated by the reference mark on the scanner . (To scan film, see the User's Manual.)
2. Press the scan button and follow the on-screen instructions.

#### Scanner Buttons

- Scan** – Scans pictures, graphics, documents, and objects.
- Scan Film** – Scans transparent positives, such as 35 mm slides, and negatives using the transparent materials adapter (TMA).
- Copy** – Scans the item and sends it to a printer to make a copy.
- Scan to Share** – Sends the scan to HP Instant Share or to your email program.

**For more information on how to scan** see the User's Manual (printed or on CD) or online help. To access the User's Manual on the CD, select your language directory and click on the PDF file.

### Product Support

- [www.hp.com/support](http://www.hp.com/support) for customer support
- [www.shopping.hp.com](http://www.shopping.hp.com) (U.S. only) or [www.hp.com](http://www.hp.com) (worldwide) for ordering HP accessories, supplies, and products

[www.hp.com/support](http://www.hp.com/support)  
[www.shopping.hp.com](http://www.shopping.hp.com) (U.S. only)  
[www.hp.com](http://www.hp.com) (worldwide)

### Product Support

- [www.hp.com/support](http://www.hp.com/support) for customer support
- [www.shopping.hp.com](http://www.shopping.hp.com) (U.S. only) or [www.hp.com](http://www.hp.com) (worldwide) for ordering HP accessories, supplies, and products

