

HP Pavilion PC Media Center Software Guide



i n v e n t

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

HP assumes no responsibility for the use or reliability of its software on equipment that is not furnished by HP.

This document contains proprietary information that is protected by copyright. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of HP.

Hewlett-Packard Company
P.O. Box 4010
Cupertino, CA 95015-4010
USA

Copyright © 2001–2006 Hewlett-Packard Development Company, L.P.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited. Apparatus Claims of U.S. Patent Nos. 4,631,603, 4,577,216, 4,819,098, and 4,907,093 licensed for limited viewing uses only.

Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation.

HP supports lawful use of technology and does not endorse or encourage the use of our products for purposes other than those permitted by copyright law.

The information in this document is subject to change without notice.

Table of Contents

Welcome	1	Viewing pictures as a slideshow	29
Experience the Fun of Media Center	1	Viewing a slideshow with music in My Pictures	29
The right music for the moment	1	Using supported picture file types in My Pictures	30
Share your digital memories	1	Editing Pictures in My Pictures	30
Transform your living space into a theater	1	Fixing red eye or contrast	30
Using Media Center Features	1	Cropping pictures in My Pictures	31
Using Media Center	3	Rotating pictures	32
Setting Up Media Center	3	Printing Pictures in My Pictures	32
Opening Media Center using a mouse	3	Copying Pictures to CDs and DVDs	33
Opening Media Center using the remote control	4	Playing Videos	35
Media Center menu bars	4	Playing Digital Videos in Media Center	35
Navigating Media Center	5	Using Supported Video File Types	36
Media Center control menu	5	Transferring and Recording Video Files	36
Using Media Center Away mode	6	Recording an analog video file	36
Completing the setup wizard steps	7	Recording a digital video file	36
Media Center Start Menu	8	Creating a CD/DVD from Video Files	37
Media Center Start menu items	8	Playing DVDs	39
Online Spotlight	9	Playing DVD Movies in Media Center	39
Using Instant Messaging in Media Center	9	Changing the DVD Movie Language	40
Logging in to your Messenger account	9	Changing DVD Audio Settings	40
Changing Media Center Settings	10	Creating Movies Using	
Media Center Settings categories	11	 muvee autoProducer	41
Archiving files using Media Center	12	Basic Steps to Make a Movie	41
Finding Additional Media Center Information	12	Locating the two versions of muvee autoProducer	42
Using the Remote Control	13	Using muvee autoProducer on the Desktop	43
Remote Control Buttons Overview	14	Getting started on the desktop	43
Playing Music Files	17	Capturing video from a DV camcorder	44
My Music	17	Adding videos	45
Using My Music with Media Center	17	Adding pictures	46
Adding Music to My Music Library	18	Adding music	47
Adding music files from your hard disk drive	18	Selecting the style	47
Adding music files from a CD	19	Changing the settings	48
Deleting music files from the My Music library	19	Adding an opening title and closing credits	49
Using supported music file types	20	Making the movie	49
Playing Music Files in My Music	20	Saving the movie project	50
Playing an album in My Music	21	Recording the movie project to disc	50
Playing a song in My Music	21	Using muvee autoProducer unPlugged in Media Center	51
Creating a Queue List in My Music	22	Selecting videos	52
Finding and Playing an Album in My Music	22	Selecting pictures	52
Creating a Playlist in My Music	23	Selecting music	53
Copying Music Files to CD in My Music	24	Setting the style	53
Working with Pictures	25	Adjusting audio and video settings	54
My Pictures	25	Making the movie	55
Working with Digital Images	25	Upgrading muvee autoProducer	56
Using My Pictures in Media Center	26	Index	57
Adding Pictures to My Pictures	27		
Adding picture files from your hard disk drive	27		
Viewing Pictures in My Pictures	28		

Welcome

Experience the Fun of Media Center

Microsoft® Windows® XP Media Center Edition 2005 with Update Rollup 2 lets you do amazing things with your PC. With a full range of easy-to-use digital entertainment features, you can experience movies, music, and photos like never before.

Media Center is simple and convenient to use. You can easily find and choose your media. You can play movies, listen to music, and view photos with a single remote control (select models only). Combine the powerful features of your PC with a home theater receiver to enjoy an even more dynamic entertainment experience.



The right music for the moment

Browse your entire music library by artist, genre, and song. Select a playlist or a single album, or do a random shuffle from your music collection. You can even play songs from your Windows Media Player music library.

Share your digital memories

Create personalized slideshows with music for viewing on your PC. View professional-looking home videos from the comfort of your couch with the remote control.

Transform your living space into a theater

Whether you are watching a DVD movie or your own home videos, Media Center delivers a rich viewing experience with a high-quality digital sound system. Sit back and enjoy the show.



If your PC came with a rewritable DVD drive, the drive is able to read and record to DVD+/-R/RW media.



Some of the Media Center features listed are for select models only. Some of the components listed in the PC documentation, such as speakers and TV tuners are optional or sold separately.



The Television Program Guide (Internet service required) is not available in all countries/regions.

Using Media Center Features

You can control the Media Center functions and navigate Media Center windows by using the remote control (select models only), the keyboard, or the mouse. You can easily switch back and forth between them by moving the mouse or by pressing a button on the remote control or the keyboard.

With Media Center, you can:

- Play back your digital videos.
- View your digital pictures or play them as a slideshow with music. Easily print your photos.
- Browse, select, and play music CD files with full-screen visualizations.
- Record CD tracks to your media library.
- Play DVD movies. Resume playing your DVDs where you left off.
- Access streaming music and video subscription services. Some music and video subscription services may not be available in all countries/regions.
- Open specific windows in Media Center by using the shortcut buttons on the remote control.
- Communicate with your friends and family by using instant messaging. Instant messaging (Internet service required) may not be supported in all countries/regions.
- Easily back up your media files to CD, DVD, or another hard disk drive such as the HP Personal Media Drive (sold separately).
- Use the Optimization setting to keep your computer running smoothly.
- Use Away mode to save power when the computer is not in use, and then you can display the computer desktop instantly by touching a keyboard key or a remote control button.

You can run Media Center side-by-side with other Windows software programs. It is possible to browse through your pictures, watch videos, and play music while using other Windows programs.

Using Media Center

Setting Up Media Center

The first time you start Media Center on your PC, a Media Center setup wizard opens. It is recommended to complete each step in the setup wizard to be able to use all the features in Media Center. The Media Center setup wizard may take

several minutes to complete. If there are steps you still need to complete, you can go to the Settings menu to do so. See “Completing the setup wizard steps” on page 7.





For more information about setting up your PC, refer to the setup poster.

Opening Media Center using a mouse

You can use either your remote control or your mouse to open and navigate Media Center.

To use your mouse:



- 1** Click **Start**  on the taskbar, and then click **Media Center**.
- 2** Move your mouse over the Media Center Start menu items, and click an item to open it. Select an option by clicking it. To scroll the list of Start menu items, move the mouse pointer over the list until an item is selected, then continue moving the pointer down the list to see the items that are not displayed.
- 3** Move the mouse to display the Media Center toolbar, and then click the back arrow at the top of the window to go to a previous window.
- 4** Click the **?** icon at the top of the window to open the Media Center Help.
- 5** Click the Media Center **Start** icon  at the top of the Media Center window to return to the Media Center Start menu.



Opening Media Center using the remote control

You can use either your remote control or your mouse to open and navigate within Media Center.

To use your remote control:

- 1** Press the Media Center Start button  on the remote control.
- 2** Use the arrow buttons on the remote control to select a Media Center menu.
- 3** Press the OK button to enter your selection and open that window. To scroll the list of Start menu items, use the arrow buttons until the item is highlighted, and then continue moving the arrow buttons down the list to see the items that are not displayed.
- 4** Press the Back button on the remote control to go to a previous window.
- 5** Use the arrow buttons to select the ? icon at the top of the window to open the Media Center Help.
- 6** Press the Media Center Start button  to return to the Media Center Start menu.



Media Center menu bars

When you move the mouse, the Media Center menu bars appear. These menu bars allow you to access media controls, Media Center Help, the back arrow, window control icons, and the Media Center icon that takes you to the main Media Center menu. If you use the remote control, or if you stop using the mouse (after 5 seconds), the Media Center menu bars become hidden.



You can use the Minimize and Resize buttons to switch to the desktop or to run Media Center side-by-side with another program.

Navigating Media Center

In the Media Center windows, a selected item such as a folder, file, or menu item is outlined with a green border.

You can control the Media Center functions and navigate Media Center windows by using the remote control, the keyboard, or a mouse.

To select items in Media Center, use the arrow keys on the keyboard or use the arrow buttons on the remote control, and then press the Enter key on the keyboard or the OK button on the remote control to enter your selection.

If you have media playing, such as music or a slideshow, it appears in an inset window in the lower-left corner. To switch from watching your media in the inset window to watching it in full-screen mode, use the arrow buttons on the remote control or use the arrow keys on the keyboard to select it, and then press OK on the remote control or the Enter key on the keyboard.







Media Center control menu



To access the control menu in Media Center, move the mouse to display the menu bars. Select the **Shut Down** icon on the main Media Center window.

From this control menu, you can select icons to perform various actions.



Icon	Action
	Log off and end your Media Center session and switch users
	Shut down the PC
	Restart the PC
	Put the PC in a power-reduced state — standby mode



The audio or video of TV recordings are not affected when the PC is in Away mode.

Using Media Center Away mode


When your computer is in Away mode it appears off, but you can actually still perform tasks such as recording TV programs or music files. Away mode turns off the display and mutes the audio.




After you have enabled Away mode in the Control Panel, you can activate it by pressing the sleep button on your computer, keyboard, or remote control.

You can return to your desktop almost instantly by pressing any sleep button again, by pressing any key on the keyboard, by moving the mouse, or by pressing any button on the remote control if you select the *Return the computer from Away mode on mouse or keyboard activity* option in the Power Options Properties window. See the following procedure.



To enable your HP Media Center PC for Away mode:

- 1 Click **Start**  on the taskbar, and then click **Control Panel**.
- 2 Click **Performance and Maintenance**.
- 3 Click **Power Options**.
- 4 Select the **Away** tab.
- 5 Place a check mark in the **Enable Away mode** check box.
- 6 Under Options you can select to:
Return the computer from Away mode on mouse or keyboard activity
Or
Prompt for password when the computer returns from Away mode
- 7 Click **OK**.



Completing the setup wizard steps

If you did not complete the Media Center setup wizard steps the first time through, you can complete or change your selections by using the following procedure. You need to complete all of the required setup steps to access all of the Media Center features.

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **Settings**. You may need to use the arrow keys on the keyboard or the arrow buttons on the remote control to scroll down to see all the menu items.
- 3 Select **General, Media Center Setup**, and then **Run Media Center Setup Again**. Follow the onscreen instructions to complete the wizard.



Following are some of the items included in the setup wizard:

- **Check for your Internet connection.** An Internet connection allows Media Center to display information about your music CDs, DVDs, and other media.
- **Optimize how Media Center looks on your display.** You can change display settings such as brightness, contrast, color, and centering.
- **Set up your speakers.** Select how many speakers you have and test them. Speakers are sold separately for some models.
- **Display Calibration.** You can test and adjust the display settings of your monitor, TV, or other display. You can use the Media Center video to help you change onscreen centering, sizing, aspect ratio (shape), brightness, contrast, color, and sharpness of the display with your TV remote control or your monitor controls.




You can change your Media Center settings in the Settings menu.



You must subscribe with an Internet service provider (ISP) to have an Internet connection.

Media Center Start Menu



*Some of the features listed are for select models only.

- A** Access a menu to exit Media Center, to shut down or to restart the PC, to log off to end your Media Center session, to put the PC into standby mode, or to switch users. See page 5.
- B** Use media playback controls: Play, Stop, Pause, Skip, Fast-Forward, Replay, Rewind, Record, Volume Up/Down, Mute, and Channel Up/Down. See page 14.
- C** Open the Media Center Start menu. See page 3.
- D** Go back one screen.
- E** Open the Media Center Help.
- F** Minimize the Media Center window.
- G** Resize the Media Center window.
- H** Close the Media Center window.

Media Center Start menu items

Play DVD — Watch DVD movies. See page 39.

***Online Spotlight** — Go to the Media Center Web site for the latest Media Center information. See page 9.

My Videos — Watch your home videos. See page 35.

My Pictures — View digital pictures, play a slideshow, or print photos. See page 25.

My Music — Play music files or music CDs, create and edit playlists, and record music files to CD. See page 17.

More Programs — Find utilities and programs for communicating with instant messaging (see page 9) and backing up files (see page 12).

Settings — Change program settings. See page 11.

Online Spotlight

Online Spotlight is a link to the Microsoft Web site, where you can find the latest Media Center information and media offers and services. This site is periodically updated by Microsoft. Some of the services listed may not be available in certain countries/regions.

Your PC must be connected to the Internet to access the Online Spotlight Web site.



Using Instant Messaging in Media Center

Instant messaging may not be supported in all countries/regions.

Media Center supports instant messaging (Internet service required) so you can communicate with your friends and family while you are doing something in Media Center. You always have the option to turn this feature on or off.


You can use your remote control to log in and type messages. You can even have multiple conversations.

Logging in to your Messenger account

- 1 First, you must go to **http://www.msn.com** to set up your Messenger account. You will need a .NET passport to log in to Messenger. A .NET passport is an e-mail address, a login name, and a password. Make sure you verify the account with MSN before you try to log in from Media Center.
- 2 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 3 Select **More Programs**, and then select the **Messenger** icon.



- 4 Select **Sign In**.
- 5 Enter your .NET passport information, and then select **Sign In**.






From most areas in Media Center, you can select a media file and then press Ctrl+D on the keyboard or select a media file and press the *i* (More information) button on the remote control to access the Messenger login screen.

Changing Media Center Settings

In the Media Center Settings window, you can change settings for viewing your pictures and slideshows, and for controlling sound and the display of all the Media Center windows.

To change your Media Center settings:

- 1** Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2** Select **Settings**.
- 3** Select a category.
- 4** Select one of the settings listed. Then, use the arrow keys on the keyboard or the arrow buttons on the remote control to select an option or follow the onscreen instructions.
- 5** Select **Save** to save your changes.






Media Center Settings categories

- **General:**
 - **Startup and Window behavior.**
 - **Visual and Sound Effects** to set transition animations and sounds when navigating in Media Center.
 - **More Programs Options** to change settings for other programs on the PC.
 - **Media Center Setup** to configure your Internet connection and speakers, access Windows updates, run Media Center setup again, set up remote desktop, and reset Start Page defaults.
 - **Automatic Downloads Options** to get media information about CDs, DVDs, and movies from the Internet.
 - **Optimization** to keep your computer running smoothly by performing various tasks on a regularly scheduled basis. The Optimization setting closes and then opens Media Center at a specific time each day that you determine.
- **Pictures** to set slideshow settings.
- **Music** to select visualizations or song information to display when playing a song.
- **DVD** to select a language for subtitles, audio tracks, and menus of your DVDs, program the Skip and Replay buttons on the remote control for your DVDs, and select closed captioning. You can also access audio settings for your speakers.
- **Messenger** to allow instant messages within Media Center. Instant messaging may not be supported in all countries/regions.
- **Help** to find help about using Media Center and your hardware.

Archiving files using Media Center

To archive your hard disk drive files:

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **More Programs**.
- 3 Select **Media Archive**.
- 4 Select the drive where your files are located by selecting (+) or (-).
- 5 Select the type of files to archive, by placing a check next to **Music**, **Pictures**, **Video**, and **Recorded TV**.
- 6 Select the drive where you want to archive your files by selecting (+) or (-).
- 7 Select **Archive**. Follow any onscreen instructions.



Finding Additional Media Center Information



Information and guides are associated with specific PC model numbers. Some models do not have guides or manuals available on the Web site.



To learn more about using Media Center, refer to the online and other Help files located in Media Center. Using your mouse, click the **Help** icon in the Media Center toolbar.

You can select **Online Spotlight** from the main Media Center menu to go online for the latest Media Center tips and other information. Online Spotlight may not be available in all countries/regions.

You can also find guides and information for your PC using the Internet to access a Support Web site.

To view information for your PC, go to the Support Web address listed in the *Warranty and Support Guide*, and search for your model's name and number. The product model is on the lower front of the PC chassis.

To find the online documentation for your product, search for your model number, and then click **Manuals**.

Using the Remote Control

(Select models only)

The remote control is designed to work with Media Center. You can use your remote control with Media Center to play CDs and DVDs, view pictures, and much more.


This remote control helps you navigate the Media Center windows on your computer just as a TV remote control helps you navigate cable TV options or control the playback of a movie in a VCR or DVD player.

The remote control can:

- Navigate and control all Media Center windows.
- Control the video display.
- Place the computer in and out of standby mode.
- Shut down or restart the PC.
- Log off from Media Center or switch users.

The remote control cannot:

- Navigate the Windows desktop or control other computer programs outside of Media Center.
- Be used as a VCR, DVD player, or stereo remote control.
- Turn on or off a TV that is connected to your PC (select models only).
- Turn on the PC.



The remote control is included with select models only. Features and location may vary.



The remote control requires two AA batteries.

The remote control operates up to 7.9 meters (26 feet) away from the remote sensor.

Make sure there is nothing blocking the pathway between your remote control and the remote sensor.


Remote Control Buttons Overview



Make sure you turn off the monitor and turn down or mute the volume, for example, if you have a scheduled recording in the middle of the night and do not want to be disturbed.

The HP Media Center PC does not automatically go into standby mode if Media Center is open. It is recommended that you close Media Center before you manually place the PC in standby mode.

- 1 **Standby** — Puts the HP Media Center PC into and out of a power-reduced standby state. It does not turn the HP Media Center PC off.
- 2 **DVD Menu** — Opens the Play DVD window in Media Center or opens the main menu of a DVD movie, if available.
- 3 **Music** — Opens the My Music window in Media Center.
- 4 **Radio** — Opens the FM Radio window in Media Center.
- 5 **Record** — Records a selected television program and stores it on the hard disk drive.
- 6 **Rew** — Moves the media backward for three speeds.
- 7 **Replay** — Moves media backward 7 seconds, or to the beginning of a music track or a DVD chapter.
- 8 **Pause** — Pauses audio and video tracks and live or recorded TV programs.
- 9 **Back** — Returns to the previous window within Media Center.
- 10 **Arrows** — Move the cursor to navigate and select actions within all Media Center windows.
- 11 **Start** — Opens the Media Center main menu.
- 12 **Volume** — Increases (+) and decreases (-) volume.
- 13 **Live TV** — Is a shortcut to the full-screen view of live TV. Moves a TV program forward to the end of the pause buffer and resumes playing live TV.
- 14 **Guide** — Opens the Television Program Guide.
- 15 **Clear** — Deletes the last character entered.



- 16 LED** — Activity indicator light. The LED tells you that the remote control is emitting a signal when you press a button.

- 17 TV** — Opens the My TV window in Media Center.

- 18 Pictures** — Opens the My Pictures window in Media Center.

- 19 Videos** — Opens the My Videos window in Media Center.

- 20 Play** — Plays the selected media.

- 21 Stop** — Stops the media currently playing.

- 22 Fwd** — Moves media forward at three speeds.

- 23 Skip** — Moves media forward 30 seconds in videos and live TV, one music track, or one DVD chapter.

- 24 i (More information)** — Displays available information about a selected media file and displays other menus.

- 25 OK** — Selects the desired action or window option and acts as the Enter key.

- 26 CH/PG up (+) and down (-)** — Changes the TV channels or moves pages up and down, depending on available options. Moves to the next DVD chapter.

- 27 Mute** — Turns computer sound off. The word *Mute* is displayed when Mute is turned on.

- 28 Recorded TV** — Opens the Recorded TV window where recorded TV programs are listed.

- 29 0 to 9, #, *** — Use numeric keypad buttons to change channels or enter text into a Media Center search or text box. Each time you press a number button, a different character appears. Press the Enter button to select a character.

- 30 Enter** — Selects the desired action, menu, or window option.

- 31 Print** — Prints your pictures that you select in the My Pictures window of Media Center.



The PC will not automatically go into standby mode if Media Center is open. It is recommended that you close Media Center before you manually place the PC in standby mode.




If the PC model does not include a TV tuner, some remote control buttons are inactive.

Playing Music Files

The My Music area in Media Center is a great way to play, organize, and back up your music files. My Music is designed to work with the Windows Media Player program.

My Music

With My Music, you can find and play your favorite music files and CDs you have added to the Windows Media Player music library. For more information about using My Music, see “Using My Music with Media Center” on page 17.



My Music is designed to work with Windows Media Player


Using My Music with Media Center

You can copy digital music files and organize a music library by using My Music in Media Center or by using the Windows Media Player program.

Music files that are added from within My Music in Media Center are copied into the Windows Media Player music library and are then accessible from within Media Center.

In My Music you can:

- Play CDs or selected music tracks from your created Windows Media Player music library that you access in Media Center.
 - Select and edit a personalized list of songs from your library.
 - Delete songs from a music library or a queue list.
- Burn your favorite songs to CDs.
 - Back up your music tracks to a DVD or to an HP Personal Media Drive.



My Music menu in Media Center






You can store your music files in the My Music folder or in other folders on your hard disk drive, but you need to add those files to the Windows Media Player music library for Media Center to be able to find and play them.

Adding Music to My Music Library

When you add music files to your My Music library, they are placed into the music library in Windows Media Player. The added music files can immediately be found and played back by using My Music in Media Center.

You can also add music files to your music library from within the Windows Media Player program. For more information about adding and deleting music files to the library, use the Windows Media Player Help menu.



Adding music files from your hard disk drive

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Music**.
- 3 Press Ctrl+D on the keyboard or press the *i* (More information) button on the remote control, and select **Add Music**. 
- 4 Select **Add folders**, and then select **Next**.
- 5 Select **Add folders on this computer**, and then select **Next**.
- 6 Use the arrow buttons on the keyboard or the remote control to select a location. Press the Enter key on the keyboard or press the OK button to expand a folder. When you find the folder that contains your music folder, select it by making sure an arrow appears next to the folder. Repeat this step to add additional folders, and select **Next** and then **Finish**.
- 7 Select **OK**.



Adding music files from a CD



To add the CD tracks to your Media Center music library:

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Music**.
- 3 Insert a CD into the CD drive.
- 4 Select **Albums**.
- 5 Select the Album CD you want to add to your music library.
- 6 Select **Copy CD**. The first time you copy a music CD you must select your copy-protection option and then follow any onscreen instructions.
- 7 Select **Yes** to begin copying tracks to your music library. This process may take several minutes, depending on the length of your music tracks.
- 8 Click **OK**.



Each time you add music files outside of Windows Media Player, you must add these music files to your Windows Media Player music library for Media Center to find them. Select the *Tools* menu, and then select *Search for Media Files* to add new music files to your library.

Deleting music files from the My Music library

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Music**.
- 3 Select **Songs**.
- 4 Use the arrow buttons on your remote control or the keyboard to scroll through your songs. Select the song you want to delete.
- 5 Select **Delete**, and then select **Yes**.



For more information about music file formats, use Windows Media Player Help and Media Center Help.

Only supported audio file types are displayed in the My Music window. Unsupported files won't play.

Using supported music file types

You can play the following types of digital audio files in My Music. Refer to Windows Media Player Help for more information about supported file types.

File extension	File type
.cda	CD audio file
.au, .snd	Audio file
.aif, .aifc, .aiff	AIFF audio file
.wav	Windows audio file
.mp3, .m3u	MP3 file
.wax, .wma	Windows Media Audio file
.asf, .asx, .wm, .wma, .wmv, .wmp, .wmx, .wpl, .wm, .wmd, .wmz	Windows Media file




You can place all your music files into the My Music folder or into other folders on your hard disk drive, but you need to add those files to the Windows Media Player music library for Media Center to be able to find and play them.

Playing Music Files in My Music



When you first open Media Center and open the My Music window, you may not find any music files listed unless there is a music CD in your CD drive or unless you have already added audio files to your Windows Media Player music library.


When you copy music files using Windows Media Player and your computer is connected to the Internet, the CD information is copied and displayed in Media Center and in the Windows Media Player music library.

If you insert a music CD when Media Center is not open, a message appears asking what you want to do. You can select Windows Media Player as your default audio player. If you have another program set as the default audio player, Windows opens the program and begins playing the CD.





Playing an album in My Music

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Music**.
- 3 Insert a music CD into the CD drive.
- 4 Select **Albums**.
- 5 Select the album you want to play.
- 6 Select **Play**.



Playing a song in My Music

You can play a song from anywhere in My Music. You can select it from the View Song list, or from the Album, Artist, and Genre lists. You can also play a single song from a playlist:

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Music**.
- 3 Select **Songs**. The list displays all the songs in your library.
- 4 Use the arrow buttons on the remote control or the arrow keys on the keyboard to select a song, and then press OK on the remote control or the Enter key on the keyboard to play it.



You can select *Visualize* in the Now Playing window to see a visualization while you play a music track.

Creating a Queue List in My Music

A *queue list* is a temporary list of songs that is created in My Music as you select songs, albums, or playlists to play. You can continue to add songs or you can delete songs from your queue list.

You can create a queue list and save it as a playlist that you can access in Media Center.

- 1** From the My Music window:
 - Select **Songs**, use the arrow keys to select a song you want, and then select **Add to Queue**.

Or

 - Select **Albums** or **Playlists**, select an album or a playlist, and then select **Add to Queue** to add the entire album or playlist to the queue.
 - 2** Select **OK**.
 - 3** Use the Back button on the remote control or the Backspace key on the keyboard to go back to the Songs, Albums, or Playlists menus if you want to select more songs to add to your queue list. Repeat step 1.
 - 4** After you add the last song for your queue list, select **Play**. All songs in your queue list are played in the order you have selected them.
-

Finding and Playing an Album in My Music

- 1** In the Media Center Start menu, select **My Music**, and then select **Albums**.
- 2** Use the arrow buttons on the remote control or the arrow keys on the keyboard to select an album, and then press OK on the remote control or press the Enter key on the keyboard. Select Play to play the album. The Now Playing window opens, and the album starts playing.
- 3** In the Play window, you can also select:
 - **View Cover** to view cover art and play one track.
 - **View Queue** to view an ordered list of all tracks that will be played on the album.
 - **Shuffle** to rearrange the play order.
 - **Repeat** to play the album again.
 - **Copy CD** to copy an album into your Windows Media Player music library and your My Music library.
 - **Buy Music** to connect to the Internet, find CD information, and buy music CDs. To go back to Media Center, press Start on the remote control, or click **Start** on the taskbar and click **Media Center**.
 - **Visualize** to view a moving picture while listening to a song.
 - **Edit Queue** to save your queue list as a playlist, create a CD/DVD, or clear all the songs in the queue list.
- 4** To return to the previous window, press Back on the remote control or the Backspace key on the keyboard.

Creating a Playlist in My Music

A *playlist* is a customized list of songs you can keep to play later or record to CD. Using playlists, you can group various digital music files together and determine the order in which you want the files to play.

You can create a playlist that includes several tracks from various CDs or even a playlist that contains background music for a slideshow.

You can create playlists in Windows Media Player or from within Media Center.

To create a playlist:



- 1** Select **My Music**, and then select either **Albums**, **Artists**, **Playlists**, **Songs**, or **Genres**.
- 2** Use the arrow buttons on the remote control or the arrow keys on the keyboard to navigate to the music you want to add to your playlist.
- 3** Press OK on the remote control or press the Enter key on the keyboard to select a song.
- 4** Select **Add To Queue**. A confirmation displays that the music was added to the list of music in the queue.
- 5** Select the inset window in the lower-left corner to go to the queue.
- 6** On the Queue screen, select **Edit Queue**, and then select **Save As Playlist**.
- 7** Use the alphanumeric keypad to enter a name for the playlist, and then select **Save**.




If your PC is connected to the Internet, the CD track titles and cover art appear in Media Center.

Copying Music Files to CD in My Music

To copy your music files to CD:

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **More Programs**.
- 3 Insert a blank CD-R disc.
- 4 Select **Create CD/DVD**.
- 5 Select a disc format: **Audio CD** or **Data CD**, and then select **OK**.
- 6 Use the arrow buttons on the remote control or the arrow keys on the keyboard to select the **Untitled** text box.
- 7 Use the alphanumeric keypad buttons on the remote control or the keyboard to enter a name for your CD, and then select **OK**.
- 8 Select **Music**.
- 9 Select the music files to record. A check mark appears next to the song when it is selected. Use the Back button on the remote control or the Backspace key on the keyboard to select more songs from different menus.



- 10 When you are finished adding songs, select **View CD** to see the songs you have selected. If you want to delete songs, use the arrow buttons on the remote control to select the **X** next to the song you want to delete. Press **OK** on the remote control or press the Enter key on the keyboard to delete the song from your list of songs to be recorded to CD. This does not delete the song from your music library.
- 11 Select **Create CD**.
- 12 Select **Yes**.
- 13 Select **OK**.
- 14 Follow the onscreen instructions.



IMPORTANT: HP supports the lawful use of technology and does not endorse or encourage the use of our products for purposes other than those permitted by copyright law.



For more information about writable media, refer to the other documentation that came with your PC.

Working with Pictures

Use the My Pictures area in Media Center to view, edit, print, and share your pictures.

My Pictures

With My Pictures, you can view, sort, edit, print, and create a CD or DVD of your pictures from the folders you create in the My Pictures directory in Windows Explorer. For more information about using My Pictures, see "Using My Pictures in Media Center" on page 26.



Working with Digital Images

You can connect a digital image source, such as a digital photo or video camera, directly to the PC or through a docking station. Most digital picture files you copy or download from the device appear in the My Pictures folder.


Windows XP and Media Center detect your external device and display a message asking if you want to view your images. You can display them from the desktop or from within Media Center.

You can copy digital picture files from the memory cards used by digital cameras and other digital imaging devices by using the memory card reader (select models only).

Using My Pictures in Media Center

My Pictures is a folder on your hard disk drive in the My Documents folder, and it is a Media Center menu item that allows you to view and search for your digital images by using the remote control or the keyboard and mouse.

It provides all the tools you need for viewing, organizing, editing, printing, sharing, and protecting your digital images.






My Pictures folder in Windows Explorer



My Pictures in Media Center

Adding Pictures to My Pictures

Adding picture files from your hard disk drive

- 1** Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2** Select **My Pictures**.
- 3** Press Ctrl+D on the keyboard or press the *i* (More information) button on the remote control, and then select **Add Pictures**. 
- 4** Select **Add folders**, and then select **Next**.
- 5** Select **Add folders on this computer**, and then select **Next**.
- 6** Use the arrow buttons on the remote control or the arrow keys on the keyboard to select a location. Press the OK button on the remote control or press the Enter key on the keyboard to expand a folder. When you find the folder that contains your picture folder, select it by making sure an arrow appears next to the folder. Repeat this step to add additional folders, and then select **Next**.
- 7** Select **Finish**.






From the My Pictures menu, you can select Settings to:

- **Select a slide transition, a slide time delay, and a background color.**
- **Include picture folders you have created.**
- **Show captions.**
- **Display your pictures randomly.**
- **Show song information during a slideshow.**

Viewing Pictures in My Pictures




After you organize your pictures in the My Pictures folder in Windows Explorer, open Media Center to view your pictures:

- 1** Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2** Select **My Pictures**. The right side of the window shows a small picture image (thumbnail) and, if you've organized your pictures into folders, folder icons. The pictures are displayed just as you organized them in the My Pictures folder in Windows Explorer.
- 3** Use the arrow keys on the keyboard or the arrow buttons on the remote control to move through your picture files and folder files, and select a picture.
- 4** Press the Enter key on the keyboard or press the OK button on the remote control to select a picture or folder to view. The selected picture opens in full-screen mode.





- 5** Press the Enter key on the keyboard or the OK button on the remote control again to zoom in 150 percent; press it again to zoom in 225 percent. Use the arrow keys or buttons to pan across a picture. To return the picture to the original size, press Enter or OK a third time.

Viewing pictures as a slideshow

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Pictures**.
- 3 Select the folder of pictures you want to view as a slideshow, and then press OK on the remote control or Enter on the keyboard.
- 4 Select **Play Slide Show**, and then press OK.
- 5 Press Ctrl+D on the keyboard or press the *i* (More information) button on the remote control, and then select **Picture Details**. The picture name, location, last modification date, and resolution appears, if available. 
- 6 Press the Backspace key on the keyboard or the Back button on the remote control to go to a previous screen. Use the arrow keys on the keyboard or arrow buttons on the remote control to display the next or previous pictures.

If you do not select the pictures you want to view as a slideshow, Media Center uses the first folder listed. If you have picture files that are not stored in folders you created, Media Center plays all files stored in the My Pictures folder.

Viewing a slideshow with music in My Pictures

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Music**.
- 3 Select the music you want, and then press Enter on the keyboard or press OK on the remote control. If the music doesn't start automatically, move the mouse to display the media control toolbar, and then select the **Play** button, or press the Play button on the remote control.
- 4 Press the Back button on the remote control or the Backspace key on the keyboard until you are back to the Media Center Start menu.
- 5 Select **My Pictures**.
- 6 Select the folder of pictures, and then press Enter on the keyboard or OK on the remote control.
- 7 Select **Play Slide Show**, and then press the Enter key on the keyboard or the OK button on the remote control. When Media Center switches to full-screen mode, the inset window disappears but the music continues to play.



If the message *Image cannot be displayed* appears, the file may be corrupted or it may be an unsupported file type. You may need to edit your image with a photo editor and save it in a supported file format.

Using supported picture file types in My Pictures


You can view the following types of image files in Media Center.

File extension	File type
.jpg, .jpeg	Joint Photographic Experts Group
.tif, .tiff	Tagged Image File Format
.gif	Graphics Interchange Format
.bmp	Bitmap
.wmf	Windows MetaFile
.png	Portable Network Graphics

- Only supported image file types are displayed in My Pictures. Unsupported files are skipped in a slideshow.
- Folder icons appear even if the images inside them cannot be displayed.
- Corrupted and unsupported image file types display a generic image icon but cannot be displayed in Media Center.
- Some file types are supported only if appropriate filters and software are installed.

Editing Pictures in My Pictures




Fixing red eye or contrast

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Pictures**.
- 3 Select the picture you want to edit.
- 4 Right-click the picture or press the **i** (More information) button on the remote control, and then select **Picture Details**.
- 5 Select **Touch Up**.
- 6 Select **Red Eye** or **Contrast**, and then press OK on the remote control or press the Enter key on the keyboard.
- 7 After you select the options you want to fix, select **Save**. The picture is displayed with the new settings.



- 8 Select **Yes** to save changes and replace the original picture file.

Cropping pictures in My Pictures

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Pictures**.
- 3 Select the picture you want to edit.
- 4 Right-click the picture or press the *i* (More information) button on the remote control, and then select **Picture Details**. 
- 5 Select **Touch up**, and then select **Crop**.
- 6 For this step, you must use the mouse and keyboard. Select the arrows under the picture to move the picture side to side or up or down. Select the magnifying glass to move the cropping tool in or out. Select the rotate tool to move the cropping tool to a vertical or horizontal position.
- 7 After you select the options you want to fix, select **Save** or **Save As**. Once saved, you cannot revert to the original picture.





- 8 Select **Yes** to save changes and replace the original picture file if you selected **Save** in the previous step.

Or

Select **Yes** to create a different version of the original file if you selected **Save As** in the previous step.

Rotating pictures



If your picture appears horizontally or vertically and you want to change the orientation, you can change it in Media Center:


- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Pictures**.
- 3 Select the picture you want to rotate.
- 4 Right-click the picture or press the **i** (More information) button on the remote control, and then select **Picture Details**.
- 5 Select **Rotate**, and then press the Enter key on the keyboard or press the OK button on the remote control.

Printing Pictures in My Pictures





You need to set up your printer before you can print from Media Center, otherwise the file is saved to the My Documents folder by default when you select to print the picture.

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **My Pictures**.
- 3 Select the picture you want to print.
- 4 Press the Print button on the remote control.
Or
Press Ctrl+D on the keyboard or press the **i** (More information) button on the remote control, and then select **Picture Details**. Select **Print**, and then select **Print** again.
- 5 Follow any onscreen instructions.



Copying Pictures to CDs and DVDs

You can copy your pictures to CDs and DVDs in Media Center or by using the Sonic Digital Media Projects program. You can also create a LightScribe label for your CD or DVD if you have a LightScribe optical drive and you use LightScribe media discs. Refer to the other documentation that came with your PC.

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **More Programs**.
- 3 Insert writable media (CD-R, CD-RW, DVD+/-R, or DVD+/-RW) into the drive.
- 4 Select **Create CD/DVD**.
- 5 Select the Untitled area, and enter the name of your disc by using the numeric keys on the keyboard or the remote control, and then select **OK**. Use the Backspace key on the keyboard or the Clear button on the remote control to delete letters.
- 6 Select **Pictures**.
- 7 Select the pictures you want to copy. A check mark appears next to a picture when you select it.
- 8 Select **View CD/View DVD**. From here you can delete a picture, add more pictures, or change the name of your disc.
- 9 After you have selected all of your pictures, select **Create CD/Create DVD**.
- 10 Select **Yes**. Media Center displays a message if you need to insert an additional disc to complete your recording. Media Center displays a message when your disc has been created.



In Media Center, all pictures are copied to CDs as .jpg files.



For more information about writable media, refer to the other documentation that came with your PC.

Playing Videos

The My Videos window in Media Center makes it easy to play home video files you created or video files you downloaded from the Internet.

In My Videos you can:

- Play videos that are stored anywhere on your hard disk drive.
- Create a CD or DVD of your video files.
- View your videos in full-screen mode or from an inset window in Media Center.
- View small image (thumbnail) and title of video file.




Each user has a separate My Videos folder that can be opened only by that person. You can share videos with others by storing them in the Shared Video folder.

Playing Digital Videos in Media Center

After you organize your videos in the My Videos or Shared Video folder in Windows Explorer, open Media Center to watch your videos.

- 1** Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2** Select **My Videos**.
- 3** Select the video folder you want. The video folder opens, displaying a list of video files. You may need to use the scroll arrows at the bottom of the window to display all videos.
- 4** Select the video file. The video plays in full-screen mode. Use the mouse to resize the window if you want to watch your video while doing something else on your desktop.
- 5** To exit full-screen mode and return to the previous window, press Back on the remote control or the Backspace key on the keyboard. Your video continues to play in the inset window.



- 6** When the video is finished, select **Restart** to replay the video, or select **Done** to close the file and return to the My Videos window.



- Use the mouse to select the up arrows and down arrows at the bottom of the window, to scroll to other pages of video files and folders.
- You can maximize the media playing in the inset window by using the arrow buttons to select the inset window and then pressing OK on the remote control.



For more information about supported video file types, refer to Media Center Help menu.

Using Supported Video File Types

You can view the following types of video files in Media Center. Other file types are supported if your PC has the correct software installed.

File extension	File type
.avi	Video file
.dvr-ms	Digital Video Recording — Microsoft (TV file format)
.mpeg, .mpg, .mpe, .m1v, .mp2, .mpv2	Movie file
.wm, .asf	Windows Media file
.wmv	Windows Media AV file

Transferring and Recording Video Files

Once you capture your video by using video capture and editing software, you can use Media Center to find it and add it to your My Videos area.



Recording an analog video file

Refer to the *Getting Started Guide* and the other documentation that came with your PC for more information about capturing and recording video files from an analog video camera.

Recording a digital video file

Refer to the *Getting Started Guide* for more information about recording video files from a digital video camera.



Creating a CD/DVD from Video Files

- 1** Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2** Select **More Programs**.
- 3** Insert a writable disc, and then select **OK**.
- 4** Select **Create CD/DVD**.
- 5** Select the Untitled area, enter the name of your disc by using the numeric keys on the remote control or the keyboard, and then select **OK**. Use the Clear button on the remote control or the Backspace key on the keyboard to delete letters.
- 6** Select **Video**, and then select **OK**.
- 7** Select the video file you want to copy, and then select **View CD/View DVD**.
- 8** Select **Add More** if you want to add additional video files to your disc.
- 9** Select **View CD/View DVD** to check the contents of your disc before recording them.
- 10** Select **Create CD/Create DVD** to begin recording the disc, and then select **Yes**.

Playing DVDs

Watching DVDs in Media Center allows you to control the playback with your remote control. If you play your DVD in another program outside of Media Center, you will not be able to use the remote control.

Playing DVD Movies in Media Center

1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.


2 Insert the DVD into the drive. If you have other media playing, Media Center asks if you want to play the DVD. Select **Play DVD**. If you don't select an option, the DVD automatically plays in full-screen mode after a few seconds.

Or

If the DVD is already in the drive, select **Play DVD** from the Start menu. The DVD movie begins playing in full-screen mode.

3 If a DVD menu appears, use the remote control or the mouse to select the DVD menu items and control the DVD movie playback.

4 To stop playing the DVD, press Stop on the remote control or move the mouse to display the media controls, and then click the Stop button.



To view more information about a DVD that you are watching, such as the DVD title, chapter title, genre, parental rating, length, and current position, press the *i* (More information) button on the remote control.



5 To change the window size while the DVD movie is playing, move the mouse for the Resize icon to appear.


6 Click the **Resize** icon on the taskbar to adjust the window size.



Changing the DVD Movie Language

To select DVD language settings for subtitles, closed captioning, and viewing the DVD:



- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **Settings**.
- 3 In the Settings window, select **DVD**.
- 4 In the DVD Settings window, select **DVD Language**.
- 5 Use the arrow buttons on the remote control or the arrow keys on the keyboard to select (+) or (-). Press OK on the remote control or press the Enter key on the keyboard to scroll through the languages available.
- 6 When you find the one you want, select **Save**, and then press OK on the remote control or the Enter key on the keyboard.



- 7 To return to the main Settings window, press the Backspace key on the keyboard or press the Back button on the remote control.

Changing DVD Audio Settings

To select DVD audio settings for viewing the DVD:

- 1 Press the Media Center Start button  on the remote control, or, with your mouse, click **Start**  on the taskbar, and then click **Media Center**.
- 2 Select **Settings**.
- 3 Select **DVD**.
- 4 Select **Audio**. The Audio Properties window opens.
- 5 Select **Configuration**, and then select your speaker and sound options. Select your speaker output and your channel mode, if applicable. Select **Save**.
- 6 Select **OK**.

Creating Movies Using muvee autoProducer

(Select models only)



Creating personalized and professional-looking video movies is simple with muvee autoProducer, a software program on your PC.

Basic Steps to Make a Movie

The basic steps to produce a movie with muvee autoProducer are:

1 Capture digital video: Capture live or recorded video to your hard disk drive directly from a compatible digital video camcorder (only from the desktop muvee autoProducer version).

2 Add videos and pictures: Select video and picture files from your PC folders. You can easily add videos and still images to your movie production. You can use these video and still image file types in your movie project:

File extension	File type
.dv	Digital video
.avi	Audio Video Interleaved
.mpeg-1	Motion Picture Experts Group video playback
.mpeg-2	Motion Picture Experts Group DVD video playback
.mpeg-4	High-quality video format (for Web streaming, wireless devices, etc.)
.mov	QuickTime movie
.wmv	Windows Movie Video (only in the desktop version of muvee autoProducer)
.asf	Advanced Streaming Format
.jpg, .jpeg	Joint Photographic Experts Group, still image
.gif	Graphics Interchange Format, still image
.bmp	Bitmap, still image

3 Add music: Select music files on your PC to add to your movie soundtrack.

You can use these music file types in your movie project:

File extension	File type
.aac	Advanced audio coding
.mp3	MPEG Layer 3
.m4a	MPEG-4 audio layer
.wav	Windows audio
.wma	Windows Media audio

4 Select a style: Apply a movie style editing template for different effects and picture transitions in your movie.

5 Add captions: Personalize your movie with opening titles and closing credits.

6 Make the movie: Automatically analyze the videos, pictures, music, movie style, and captions you added to your movie and save your movie to your PC hard disk drive, CD, or DVD.

7 Burn to disc: You can burn a video to DVD, VCD, or SVCD only from the desktop muvee autoProducer version.

The following sections contain detailed instructions.


Locating the two versions of muvee autoProducer

You can access two versions of muvee autoProducer (select models only):

Desktop



To view Help files, press the F1 function key on the keyboard.

Click **Start**  on the taskbar, and then select **All Programs, muvee Technologies, muvee autoProducer**, and then **muvee autoProducer** to open muvee autoProducer. This version of muvee autoProducer has more features, such as video capture and disc recording.

See “Using muvee autoProducer on the Desktop” on page 43.




Or

Media Center




To view Help files, select the ? and then press OK on the remote control.

Press the Media Center Start button  on the remote control, or, with your mouse, click

Start  on the taskbar, and then click **Media Center**. Select **More Programs** and then **Make muvee** to open the muvee autoProducer unPlugged program. Use your remote control from within Media Center to personalize your video files.


See “Using muvee autoProducer unPlugged in Media Center” on page 51.



Using muvee autoProducer on the Desktop










Getting started on the desktop

To open muvee autoProducer (select models only):

- 1** Close or minimize Media Center.
- 2** Click **Start**  on the taskbar.
- 3** Select **All Programs, muvee Technologies, muvee autoProducer**, and then **muvee autoProducer** to open muvee autoProducer.
- 4** Open a project by selecting, from the File menu, either **New Project** or **Open Project**.
- 5** Select one of the button options:



You can also launch the muvee autoProducer program from within Sonic DigitalMedia Plus: under the Video tab, select muvee autoProducer.

Button	Allows you to	See
Get Video from Camera 	Open the muvee Video Capture window to capture (copy) live video or recorded video.	"Capturing video from a DV camcorder" on page 44.
Add Video 	Open the Add Video window to add existing video files to your project.	"Adding videos" on page 45.
Add Pictures 	Open the Add Pictures window to add existing still image files to your project.	"Adding pictures" on page 46.
Add Music 	Open the Add Music window to add existing music files to your project.	"Adding music" on page 47.
Change Settings 	Open the muvee Settings window to adjust audio and video production settings for your movie.	"Changing the settings" on page 48.
Title/Credits 	Open the muvee Title and Credits window to type an opening title and closing credits for your movie.	"Adding an opening title and closing credits" on page 49.
Make muvee 	Open the Make muvee window to automatically create and preview the movie.	"Making the movie" on page 49.
Save muvee 	Open the Save muvee window to save the finished movie on your PC hard disk drive in .wmv or .mpeg formats.	"Saving the movie project" on page 50.
Burn to Disc 	Open the muvee Burner window to record the finished movie in DVD, VCD, or SVCD formats.	"Recording the movie project to disc" on page 50.

Capturing video from a DV camcorder

You can capture (copy) digital video files to your hard disk drive by using muvee autoProducer either:

- **Live** (known as *camera mode*) using a compatible DV camcorder. See “Capturing live video from a DV camcorder” on page 44.

Or

- **Recorded** (known as *VCR mode*) using a recorded tape in your DV camcorder. See “Capturing recorded video from a DV camcorder” on page 45.


Captured video files are automatically added to your movie project. To remove the file from your movie project, select the video file in the list of Captured Video Files, and then click the **Trash Can** icon.

When capturing video, it is important to be aware of the amount of free space available on your PC hard disk drive. Capturing video can use a large amount of disk space. The amount of free disk space displays on the Capture Video window in muvee autoProducer while you are capturing video.

Capturing live video from a DV camcorder

Capturing live video in camera mode allows you to create a video file without even having a tape in the camcorder.


To capture (copy) live video to your hard disk drive using muvee autoProducer:

- 1** Connect your DV camcorder to the FireWire® (IEEE 1394) port on your PC.
- 2** Turn on the camcorder and set it to VCR mode. Refer to the instructions in the manufacturer’s documentation.
- 3** Click the **Get Video from Camera** button. 
- 4** Click the **Start Capture** button to begin capturing the live image directly to your hard disk drive.
- 5** Click the **Stop Capture** button to stop capturing.
- 6** Click **Capture Folder** to specify a folder for the captured video file.
- 7** Click **Filename** to specify a file name for the captured video file.
- 8** Click the **Done** button to automatically add captured video files to your movie project.

Capturing recorded video from a DV camcorder


For best results with muvee autoProducer, capture only video footage that you are most interested in using in your movie project.

To capture camcorder (copy) recorded video to your hard disk drive:


- 1 Connect your DV camcorder to the FireWire (IEEE 1394) port on your PC.
- 2 Turn on the camcorder and set it to VCR mode. Refer to the instructions in the manufacturer's documentation.
- 3 Click the **Get Video from Camera** button. 
- 4 Click the **Play** button on the screen to begin viewing the video.
- 5 Click **Start Capture** when you see the start of the video footage you want to use in your movie project.
- 6 Click **Stop Capture** to stop capturing.
- 7 Repeat steps 5 and 6 to capture additional sections of video footage.
- 8 Click **Capture Folder** to specify a folder for the captured video file.
- 9 Click **Filename** to specify a file name for the captured video file.
- 10 Click the **Done** button to automatically add captured video files to your movie project.

Adding videos

To add video files to your movie production:

- 1 Select the **Add Video** button in the video/pictures area. The Add Pictures window opens. 
- 2 Browse the folders on your hard disk drive to select existing video files for your movie:
 - Add up to three video files.
 - Select multiple video files by pressing and holding Ctrl on your keyboard while selecting the files.
- 3 Adjust the order of the video files by selecting and then dragging and dropping the file. Select the clip, and click the **Trash Can** icon to remove a video clip from the production.
- 4 You can mark specific scenes in a video clip to include or leave out of your final movie with the magicMoments feature in muvee autoProducer.

To select video scenes with magicMoments:

 - a Select a video file in the Select Video/Pictures window, and then click the **magicMoments** button. The magicMoments window opens. 
 - b Click the **Play** button to start viewing the video.

- c Use the magicMoment controls to mark video scenes to include and exclude:



- Click and hold down the **green thumbs-up** button to mark scenes that must be included in the movie.
- Click and hold down the **red thumbs-down** button to mark scenes that must be left out of the movie.
- Click or hold down the **gray thumb** button to undo 1 second of a selected scene. Press the Shift key on the keyboard, and then click the scene to undo scenes that were marked with the thumbs-up or thumbs-down buttons.

- Click or hold down the **arrow** buttons to navigate backward and forward through the video footage.




Video footage left unmarked is still analyzed when you make the movie and may be included in the final version of the movie.

For best results with the production of your movie:

- Keep each magicMoment to less than 10 seconds.
 - Keep the total duration of magicMoments to less than 50 percent of the duration of your movie. It is recommended to select only a few scenes.
- d Click **OK** when you finish marking scenes. The window closes. Note that the video clip is marked on the lower-left side.


Adding pictures

To add still image files to your movie production:

- 1 Select the **Add Pictures** button in the Video/Pictures area. The Add Pictures window opens. 
- 2 Browse the folders on your hard disk drive to select existing still image files for your movie:
 - Add up to 50 .jpg, .gif, or .bmp picture files.
 - Select multiple picture files by pressing and holding Ctrl on your keyboard while selecting the files.
- 3 Adjust the order of the picture files by selecting and then dragging and dropping the picture file. Select the picture, and click the **Trash Can** icon to remove a picture from the production.
- 4 Select the **Rotate Image Clockwise** button to rotate still images. 
- 5 Use magicSpot to control the motion that is applied to your picture:
 - Select the **magicSpot** button to open the magicSpot window.
 - Click the **manual** button to display two overlapping frames over your picture. 
 - Move the frames around to set the start and end points for motion. The arrow in the frames shows the direction of motion.

Adding music

To add music files to your movie production soundtrack on the desktop:

- 1** Select the **Add Music** button in the music area. The Add Music window opens. 
- 2** Browse the folders, as required.
- 3** Select existing music files on your hard disk drive, if desired for your movie:
 - Add up to three .mp3, .m4a, .wav, or .wma files.
- 4** Adjust the order of the music files by selecting and then dragging and dropping the file. Select the music, and click the **Trash Can** icon to remove a music clip from the production.

Selecting the style


The muvee autoProducer program comes with a set of style templates for setting the pace, scene transition effects, and caption fonts. The style you use also affects how muvee autoProducer combines the video, picture, and music files in your movie project to produce the final movie.

For example, using the Cinema style results in a movie that is moderately paced, color enhanced, and in a wide-screen format.

To select a style, just click a style from the list. A sample of the style displays in the Preview window.

Changing the settings

You can adjust audio and video production settings for your movie:


- 1** Select the **Change Settings** button. The muvee Settings window opens. 
- 2** Select the **Duration** tab to set the length of your video production and preferences. Click one of the following duration settings:
 - **Fit to music.** The produced version may reuse or drop some video and pictures.
 - **Best fit for videos and pictures.** The produced version may repeat or trim music.
 - **User Defined.** Select the duration in minutes and seconds:
 - If the duration of your music is longer than the duration of video and pictures, place a check in the **Allow video and pictures to repeat** check box to repeat video clips and pictures for the full duration of your music files.
 - If the total duration of your video and picture files is longer than the duration of your music, place a check in the **Allow Music to repeat** check box to repeat music for the duration of the video clips.
- 3** Select the **Video** tab to set the video and still image preferences. Click one of the following settings:
 - **Style default.** Select this style to sequence still images and video clips.
 - **Keep shots in sequence.** Select this style to use the sequence of still images and video clips in the *Add Video/Pictures* window.
 - **Shuffle shots.** Select this style to move the slider bar to determine the frequency of sequencing still images and video clips.
 - Place a check in the **Interleave pictures** check box to blend pictures with video at intervals.
- 4** Select the **Audio** tab to set the sound preferences. Click one of the following settings:
 - **Use all music.** Select this style to use the sequence of sound files in the Add Music window.
 - **smartJoin™ multiple music files.** Select this style to automatically remove silence between music tracks.
 - **Normalize music.** Select this style to automatically adjust audio playback volume to the same level.
 - Move the slider bar to adjust the sound mix level of the music and original soundtrack.
- 5** Click **OK** when you are finished adjusting the settings for your movie project.

Or

Click **Cancel** to not change any settings.

Adding an opening title and closing credits

You can personalize your movie project by adding an opening title and closing credits:

- 1** Click the **Title/Credits** button. The muvee Title and Credits window opens. 
- 2** Click the **Title tab**:
 - a** Select a title effect from the drop-down window.
 - b** Type the text you want to appear at the start of your movie in the **Enter your title here** box.
 - c** Click the **Use font** button to select the font, style, size, color, and effects from the Font window.
 - d** Select a background image for the title.
- 3** Click the **Credits tab**:
 - a** Select a **Credits effect** from the drop-down window.
 - b** Type the text you want to appear at the end of your movie in the **Enter your credits here** box.
 - c** Click the **Use font** button to select the font, style, size, color, and effects from the Font window.
 - d** Select a background image for the ending credits.
- 4** Click **Apply**.
- 5** Click **OK** to close the muvee Title and Credits window.

Making the movie

After you have added at least one video or picture file to your movie project, you can have muvee autoProducer make the movie.

The muvee autoProducer program makes a movie by combining the video, picture, and music files you have selected, along with the style of movie, and puts together all of these pieces into a professional-looking movie with just a few steps.




To make a movie:

- 1** Click the **make muvee** button. Click **OK** as required.
- 2** After making a movie, you can preview the movie in the muvee autoProducer Preview window. Use the controls in the Preview window to play, pause, and stop the movie preview:
 - Each time you make a change to a movie project, you need to click the **make muvee** button again to add that change to your movie.
 - You can revise and preview the movie as often as you want to experiment with different styles and the content of the movie.

Saving the movie project

Once you are satisfied with the look of your movie project, you are ready to save it.

You can save the movie to a file on your hard disk drive or create a VCD or DVD disc:


- 1 Click the **Save muvee** button. The Save muvee window opens. 
- 2 Choose the movie file type to save to your hard disk drive:
 - **Computer Playback**
 - **E-mail**
 - **DV (camcorder)**
 - **DVD**
 - **VCD (video CD)**
 - **SVCD**
 - **Web Streaming**

Click the **Change Settings** button to change the video and audio settings of the movie file type as required (advanced users only).

- 3 Click the **Save** button.
- 4 Enter a name for the output movie. Select a folder on your hard disk drive, as required. The movie is saved.
 - You can watch the preview as it is saved.
- 5 Click the **Save** button.
- 6 Click **Yes** to preview the movie file in Windows Media Player.

Recording the movie project to disc



To create a DVD, VCD, or SVCD disc:

- 1 Click the **Burn to Disc** button. The muvee Burner window opens. 
- 2 Type the disc title.
- 3 Select the video(s) to burn to the disc.
 - Select the order of the chapters.
 - Add or delete videos, as required.
- 4 Select the disc menu theme from the drop-down list.

- 5 Select the **CD** or **DVD** recording drive.
- 6 Select the type of disc you want to burn: **DVD**, **VCD**, or **SVCD**.
- 7 Click **Burn Now** to begin burning your movie to disc. To save the current settings for future, click **Burn Later**.
- 8 Click **OK** when the recording is complete. Close the muvee Burner window.

Using muvee autoProducer unPlugged in Media Center

To open muvee autoProducer unPlugged in Media Center:

- 1 Click **Start**  on the taskbar, select **Media Center** to open Media Center, or press the Media Center Start button  on the remote control to open Media Center.

If you were working in muvee and closed the program, muvee will reload your previous session settings. Select a button to continue with the previous session, or select **New Session** to start a fresh session.
- 2 Select **More Programs**, and then select the **Make muvee** icon. The main window displays with video production information on the current project.
- 3 Select a button option to produce your video, and follow the onscreen instructions:

Button	Allows you to	See
Select Video	Browse video folders and add existing video files to your video production.	"Selecting videos" on page 52.
Select Pictures	Browse picture folders and add existing image files to your video production.	"Selecting pictures" on page 52.
Select Music	Browse music folders and add existing audio files to your video production soundtrack.	"Selecting music" on page 53.
Select Style	Browse the style list and select an editing template for your movie production.	"Setting the style" on page 53.
Settings	Adjust audio and production settings for your movie production.	"Adjusting audio and video settings" on page 54.
Make muvee	Begin media analysis and construct your movie production.	"Making the movie" on page 55.

4 When you have completed a task:

- Select **Next** to open the next button option.

Or

- Select **Back to Main** to open another button option.

If you want to capture (copy) video from a digital video camcorder or burn a disc, see "Using muvee autoProducer on the Desktop" on page 43.



Click **Select All** to choose all video files in a folder. Click **Clear All** to remove all video files from the Selected Videos column.

Selecting videos

To add video files to your movie production:

- 1 Select the **Select Video** button to browse through video folders on your PC for video files to use in your movie production.
- 2 Select a folder with pictures in it, using the arrow buttons on the remote control:
 - Select the **My Videos** button to access the My Videos folder and subfolders.
 - Or
 - Select the **Shared Video** button to access the Shared videos folder and subfolders.
 - Or
 - Select the folder with the green up arrow to browse folders.
- 3 Navigate using the arrow buttons, and press OK on the remote control to add a video file to the Selected Videos list. You may select up to three video files in any .dv, .avi, .mpeg-1, or .mpeg-2 file format combination.
- 4 Adjust the order of the video clips by selecting and then using the **Move Up** and **Move Down** buttons. Select the **Delete** button to remove a video clip from the production.
- 5 Click **Next** to confirm your video selection and proceed to the next step.



Click **Select All** to choose all picture files in a folder. Click **Clear All** to remove all picture files from the Selected Pictures column.

Selecting pictures

To add still image files to your movie production:

- 1 Select the **Select Pictures** button to browse through picture folders on your PC for video files to use in your movie production.
- 2 Select a folder with pictures in it using the arrow buttons on the remote control:
 - Select the **My Pictures** button to access the My pictures folder and subfolders.
 - Or
 - Select the **Shared Pictures** button to access the Shared Pictures folder and subfolders.
 - Or
 - Select the folder with the green up arrow to browse folders.
- 3 Navigate using the arrow buttons, and press OK on the remote control to add a picture file to the Selected Pictures list. You may select up to 50 still image files in any .jpg, .gif, or .bmp file format combination.
- 4 Adjust the order of the pictures by selecting and then using the **Move Up** and **Move Down** buttons. Select the **Delete** button to remove a picture from the production.
- 5 Click **Next** to confirm your picture selection and proceed to the next step.

Selecting music

To add music to your movie soundtrack:

- 1 Select the **Select Music** button to browse through folders on your PC for music files to use in your movie production.
- 2 Select a folder with music in it, using the arrow buttons on the remote control:
 - Select the **My Music** button to access the My Music folder and subfolders.

Or

 - Select the **Shared Music** button to access the Shared music folder and subfolders.

Or

 - Select the folder with the green up arrow to browse folders.
- 3 Navigate using the arrow buttons on the remote control, and press OK to add a music file to the Selected Music list. You may select up to three music files in any .mp3, .wma, or .wav file format combination.
- 4 Adjust the order of the music clips by selecting and then using the **Move Up** and **Move Down** buttons. Select the **Delete** button to remove a music clip from the production.
- 5 Click **Next** to confirm your music selection and proceed to the next step.



Click *Select All* to choose all music files in a folder. Click *Clear All* to remove all music files from the Selected music column.

Setting the style

The muvee autoProducer program comes with a set of style templates for setting the pace, scene transition effects, and caption fonts. The style you use also affects how muvee autoProducer combines the video, picture, and music files in your movie project to produce the final movie.

For example, using the Cinema style results in a movie that is moderately paced, color enhanced, and in a wide-screen format.

To select a style:

- 1 Select the **Select Style** button.
- 2 Select a style from the style list, based on the description of the style displayed.
- 3 Click **Next** to confirm your style selection and proceed to the next step.

Adjusting audio and video settings

You can adjust audio and video production settings for your movie:

- 1** Select the **Settings** button.
- 2** Select **Audio** to adjust the sound mix level of the music and original soundtrack and check music clip preferences.
- 3** Select **Production** to check production preference settings:
 - If the duration of your music is longer than the duration of video and pictures, place a check in the **Allow video and pictures to be repeated** check box to repeat video clips and pictures for the full duration of your music files.
 - If the total duration of your video and picture files is longer than the duration of your music, place a check in the **Allow Music to be repeated** check box to repeat music for the duration of the video clips.
 - Place a check in the **Keep video and pictures in sequence** check box to maintain the selected sequence.
- 4** Click **Next** to confirm your settings and proceed to the next step.

Making the movie

After you have added at least one video or picture file to your movie production, muvee autoProducer can make the movie.

Each time you make a change to a movie project, you need to click the **make muvee** button again to add that change to your movie.

The muvee autoProducer program makes a movie by combining the video, picture, and music files you have selected along with the style of movie, and constructs a professional-looking movie with just a few steps.

To make a movie:

- 1** Click the **make muvee** button.
 - 2** Select the duration for your movie by clicking:
 - **Automatic** to allow muvee autoProducer to set the movie duration.

Or

 - **Manual** to allow you to set the duration of the movie in minutes and seconds.
 - 3** Click **Next** to start the process of creating your movie. Muvee analyzes your video and music.
 - 4** After making a movie, you can preview the movie in the muvee autoProducer Preview window. Use the controls in the Preview window to rewind, play, stop, and forward the movie.
- 5** Click the **Save** button if you have completed all changes and if you are satisfied with the look of your movie project:
 - a** Select a file type.
 - b** Type the movie file name using your remote control or your keyboard.
 - c** Click the **Continue** button to save the movie to your hard disk drive. The movie is saved on your hard disk drive.

To create a CD or DVD disc in muvee autoProducer unPlugged, copy the saved file using the Windows desktop.

You can revise and preview the movie as often as you want to experiment with different styles and the content of the movie.

Upgrading muvee autoProducer

You can purchase an upgraded version of muvee autoProducer with the following enhancements:

- MPEG-4 and DivX video format support.
- TIFF audio format support.
- Ability to include up to 75 video and audio clips in your movie production.

A

- adding
 - CD tracks to the music library 19
 - music files to the music library
 - from the hard disk drive 18
- Away mode
 - enabling 6
 - power setting 2
 - using 6

B

- buttons
 - remote control 14

C

- camcorder capture 44
- CDs
 - creating a music CD in My Music 24
 - playing in My Music 21

D

- desktop
 - switching from Media Center 4
- DV camcorder capture 44
- DVD movies
 - changing
 - audio settings 40
 - language 40
 - creating 50
 - playing
 - in Media Center 39

E

- editing
 - pictures 30
- error messages
 - Image cannot be displayed 30

F

- file type
 - .aac 41
 - .asf 41
 - .avi 41
 - .bmp 41
 - .cda 20
 - .dv 41
 - .gif 41
 - .jpg 41
 - .m4a 41
 - .mov 41
 - .mp3 41
 - .mpeg-1 41
 - .mpeg-2 41
 - .mpeg-4 41
 - .wav 41
 - .wma 41
 - .wmv 41
 - MPEG-4 56
 - SVCD 50
 - TIFF 56
- FireWire 44, 45

M

magicSpot 46

Media Center

- navigating 5

- playing DVDs 39

- resizing window 4

- Start menu 8

- toolbars 4

- using muvee autoProducer unPlugged 51

- using with another program open 4

- viewing your pictures 28

- what you can do

 - in My Music 17

 - in My Pictures 25

 - in My Videos 35

memory card reader 25

music library

- adding CD tracks 19

- creating 18

muvee autoProducer

- adding a title and credits 43

- adding music 43

- adding pictures 43, 46

- adding still image files 52

- adding video 43, 45

- adjusting audio and video settings 54

- adjusting production settings 54

- allowing music to repeat 48

- allowing video and pictures to repeat 48

- basic steps to create a movie 41

- burning a movie to disc 43

- changing settings 48

- getting started 43

- getting video from a camera 43

- keeping video and pictures in sequence 54

- making a movie 49, 55

- opening the desktop version 42

- opening the Media Center version 42

- previewing a movie 43, 49, 55

- rotating images clockwise 46

- saving movie 43, 50

- selecting style 47

- setting the duration of video 48, 55

- setting the style 53

- upgrading 56

- using muvee in Media Center 51

- using settings 54

- using the magicMoments feature 45

My Music 17, 53

- copying music to CD 24

- creating a queue list 22

- deleting music from the My Music library 19

- finding and playing an album 22

- playing a song 21

- playing an album 21, 22

- playing music 20

- supported file types 20

My Pictures 25, 52

- editing pictures 30

- printing pictures 30

- rotating pictures 32

- turning captions on or off 28

- types of files it can display 30

- viewing a slideshow with music 29

- viewing pictures 28

- viewing pictures as a slideshow 29

My Videos 35

- organizing and storing videos 35

- playing digital videos 35

- sorting videos 36, 37

O

Optimization setting 2, 11

P

pictures

- copying pictures to CD 33
- editing 30
- image not displayed in My Pictures 30
- printing 30
- rotating 32

playing

- digital music files 20
- digital videos 35
- DVDs in Media Center 39
- music CDs in Media Center 20
- songs in My Music 21

playing songs

- Buy Music option 22
- Visualize option 22

playlist

- creating in My Music 23

production settings, muvee 54

Q

queue list

- creating in My Music 22

R

remote control

- buttons 14

rotating pictures 32

S

settings

- for sound 10
- general 10
- Internet connections 10

Shared Video folder 35

slideshow

- displaying information about pictures 29
- viewing pictures 29
- viewing with music 29

Start menu

- Media Center 3

V

video capture

- live 44
- recorded video 44

video editing

- getting started with muvee autoProducer 43

video movies

- recording movie to disc 50
- sorting 36, 37

W

Windows Media Player

- setting as default player 20
- types of files 20

Part number: 5991-4218