

computer	model	key command to activate/deactivate video port
Acer	Note 350, 750,760, 780, 950	Ctrl+Alt+ESC while computer boots activates the setup menu; system config; advanced sys config; display device; LCD/CRT
	Note 971	FN + F5
AST	Ascentia, Ascentia A Series, PowerExec, 9xxN	FN + F5
	Ascentia J Series	FN + F3
	Ascentia P Series, Bravo 800N, B5N	FN + F12
	Premium Exec	FN + D
Canon	BTO	BN + F6
	Innova 386NX	Setup Menu Options
	Innova Book 360CD, 490CDS	FN + F7
	NoteJet 3CX	Change CMOS to CRT
Compaq	Armada, LTE, Contura	FN + F4
	Presario	FN + F2
	Other	Automatic, Ctrl+Alt <
Dell	Latitude, CP-Inspiron	FN + F8 FN + F12
	Other	Ctrl+Alt-< FN + D
Epson	650C	Set Switch to CRT
	Other	FN + F12
Fujitsu	Lifebook	FN + F10
Gateway	Solo, Liberty	FN + F3
	Colorbook	FN + F1
	Colorbook 2	Option in CMOS setup
Hitachi	M120T/1000, M100D	FN + F7
	E100D/810	FN + F8
Hewlett-Packard	Omnibook, Pavilion	FN + F5 FN + F12
IBM	Thinkpad 310, 36x, 380, 701, 75x, 760, 560, 770	FN + F7
	Thinkpad 350, PS/Note 425C	FN + F1 for setup
	LX40	Setup LCD to CRT
	Thinkpad 700	Ctrl+Alt+S
Macintosh	PowerBook 3400	Select Monitor Icon on PowerBook Control Strip, select resolution to match display device (e.g. 800x600 Simulscan for simultaneous display on PowerBook and on projector)
	PowerBook 1400	Requires optional video card. Select Monitor Icon on PowerBook Control Strip, select resolution to match display device (e.g. 800x600 Simulscan for simultaneous display on PowerBook and on projector)
	PowerBook 160, 165, 180, 520, 540, 5300	Control Panel folder, PowerBook Display folder, activate Video Mirroring, warm reboot. Or (if display problems occur with mirroring) Control Panel folder, Monitors, switch primary display by dragging white menu bar to Monitor 2.
	PowerBook 140, 145, 150, 170	No video port. Requires 3 <sup>rd</sup> party interface.
	G3 PowerBook	Reboot
	G4 PowerBook	Command Key + F1
	Portable 100	Not compatible

computer	model	key command to activate/deactivate video port
Micron	Millenia, Transport	FN + F2 FN + F12
Mitsubishi	All	SW2 ON Off Off Off to activate SW2 Off On On On to de-activate
NEC	Versa 2000, 4000 series, 5000 series 6000 series, M, P, V, MX series, Ultralite	FN + F3
	Versa 2400	FN + F10
	Versa S	FN + F2
	Other	Select "Active" from set-up
Packard Bell	All	FN + F10 FN + F2
Panasonic	All	FN + F2 Panasonic set-up program
Samsung	810	FN + F4
	55200	Set-up screen option
	Pro 500	FN + F5
	Pro 800, Sens 700	FN + F6
Sanyo	All	Set-up screen option
Sharp	All	FN + F5
	6020, 6030, 6050, Extensa 600CD	FN + F12
Toshiba	650CDT	FN + End
	1000, 1200, 1600, 3100E, 3200	Ctrl-Alt-End
	1100	Reboot
	1850	Automatic, no simultaneous display
	T1910 Satellite	Type TSetup at DOS prompt, select display location
	T1950CT, T1960CT	int/ext/both (internal, external, or both displays)
	105CS, 110CT, 115CS, 200CDS, 400, 410, 415, 420, 430, 500CDT, 610, 650CT, 2100CT, 2105CT, 2130CS, 2150CS, 2150CDT, 2150CT, 2400CS, 2400CT, 2450CT, 3600DT, 4500, 4700, 4800, 4850	FN + F5
	4900, Tera 700CDT, 720CDT, 730CDT	Ctrl-Alt-End
	3100	FN + End
	3100E, 3200	N/A PORT ACTIVE
	3100SX, 3200SX	Needs SCSI adapter for external video
	3400	N/A PORT ACTIVE
	4400sx	Ctrl+Alt-End
	5100	N/A PORT ACTIVE
	5100/100, 5200, 5200/100	Needs SCSI adaptor for external video
Twinhead	610CT	FN + F5
	Slimnote	FN + F5 FN + F7
Winbook	XP, XP5	FN + F6 (simul) FN + F10 (int/ext)
	XP5, Pro, FX	FN + F12
	XL	FN + F2
	LM	FN + F8