

HP Deskjet D1300 series



HP Photosmart Software Help

Hewlett-Packard Company notices

The information contained in this document is subject to change without notice.

All rights reserved. Reproduction, adaptation, or translation of this material is prohibited without prior written permission of Hewlett-Packard, except as allowed under copyright laws.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Acknowledgements

Microsoft, MS, MS-DOS, and Windows are registered trademarks of Microsoft Corporation.

TrueType is a U.S. trademark of Apple Computer, Inc.

Adobe, AdobeRGB, and Acrobat are trademarks of Adobe Systems Incorporated.

Terms and conventions

The following terms and conventions are used in this user's guide.

Terms

The HP Deskjet printer is also referred to as the **HP Deskjet**, **HP printer**, or **printer**.

Cautions and warnings

A **Caution** indicates possible damage to the HP Deskjet printer or to other equipment. For example:



Caution Do not touch the print cartridge ink nozzles or copper contacts. Touching these parts will result in clogs, ink failure, and bad electrical connections.

A **Warning** indicates possible harm to you or to others. For example:



Warning Keep both new and used print cartridges out of the reach of children.

Accessibility

Your HP printer provides a number of features that make it accessible for people with disabilities.

Visual

The printer software is accessible for users with visual impairments or low vision through the use of Windows accessibility options and features. It also supports most assistive technology such as screen readers, Braille readers, and voice-to-text applications. For users who are color blind, colored buttons and tabs used in the software and on the HP printer have simple text or icon labels that convey the appropriate action.

Mobility

For users with mobility impairments, the printer software functions can be executed through keyboard commands. The software also supports Windows accessibility options such as StickyKeys, ToggleKeys, FilterKeys, and MouseKeys. The printer doors, buttons, paper trays, and paper guides can be operated by users with limited strength and reach.

Support

For more details about the accessibility of this product and HP's commitment to product accessibility, visit HP's Web site at: www.hp.com/accessibility.

Contents

1	Welcome	3
2	Special features	5
3	Get started	6
	Printer at a glance	6
	Power button and light	7
	Paper tray	7
	Print cartridges	9
	Ink-backup mode	10
4	Connect to the printer	12
	USB	12
5	Print photos	13
	Print borderless photos	13
	Print photos with a border	15
	HP Real Life technologies photo fix	16
	Exif Print	16
	Store and handle photo paper	17
	Save money when printing photos	17
6	Print other documents	18
	Print e-mail	18
	Print documents	19
	Print letters	20
	Print envelopes	21
	Print postcards	22
	Print index cards and other small media	23
	Print labels	24
	Print CD/DVD tattoos	24
	Print transparencies	25
	Print brochures	26
	Print greeting cards	27
	Print booklets	28
	Print posters	30
	Print iron-on transfers	31
7	Printing tips	33
	Printing shortcuts	33
	Fast/Economical printing	34
	Select a paper type	35
	Change the print speed or quality	35
	Print resolution	35
	Maximum dpi	36
	Print in grayscale	36
	Set the page order	36
	Set a custom paper size	37
	Print multiple pages on a single sheet of paper	37
	Resize a document	37
	Print preview	38

	Two-sided printing	38
	Bound two-sided documents	39
8	Printer software	41
	Make the HP Deskjet the default printer	41
	Set default print settings	41
	Printer Properties dialog box	42
	What's This? help	43
	Ink Status window	43
	Download printer software updates	44
9	Maintenance	45
	Install print cartridges	45
	Align the print cartridges	48
	Automatically clean print cartridges	48
	Print a test page	49
	View estimated ink levels	49
	Maintain the printer body	49
	Remove ink from your skin and clothing	49
	Manually clean print cartridges	50
	Maintain print cartridges	51
	Printer Toolbox	52
10	Troubleshooting	53
	Installation problems	53
	Printer does not print	55
	Paper jam	57
	Paper problems	58
	Printer is stalled	59
	Print cartridge problems	59
	Photos do not print correctly	61
	Print quality is poor	62
	Document is misprinted	63
	Problems with borderless documents	64
	Error messages	66
	Power light is on or flashing	68
	Document prints slowly	69
	If you continue to have problems	69
A	HP support	70
	Support process	70
	HP support by phone	70
B	Supplies	72
C	Technical information	73
	Printer specifications	73
	Environmental product stewardship program	73
	Regulatory notices	75
	Index	76

1 Welcome

Welcome to the HP Deskjet D1300 series Help. Use the information in the following table to find out how to do something. You can also use the table of contents pane on the left to locate information.



Section	Description
Special features	Learn about some of the printer's special features.
Get started	Learn how to operate the printer and use and replace the print cartridges.
Connect to the printer	Learn how to connect your computer to the printer.
Print photos	Learn how to print photos, adjust the appearance of photos before you print, install a photo print cartridge, store and handle photo paper, and share photos with friends and family.
Print other documents	Learn how to print a variety of documents, including e-mail, greeting cards, envelopes, labels, posters, booklets, transparencies, and iron-on media.
Printing tips	Learn how to use printing shortcuts, select a paper type, change the print resolution, set the page order, print multiple pages on a single sheet, preview a document, and use two-sided printing.
Printer software	Learn how to make the HP Deskjet the default printer, set default print settings, and download printer software updates.
Maintenance	Learn how to install and care for print cartridges, view how much ink is left in a print cartridge, print a test page, and remove ink stains.
Troubleshooting	Find a solution to a hardware or software problem.
Supplies	Order supplies for the printer.

(continued)

Section	Description
Specifications	Learn about the paper capacity, requirements, and other specifications for the printer.
HP inkjet supplies recycling program	Find out how to recycle print cartridges.

2 Special features

Congratulations! You have purchased an HP Deskjet printer that is equipped with several exciting features:


- **User friendly:** Easy to install and operate.
- **Borderless printing:** Print 4 x 6 inch photos to the edges of the paper by using the [borderless](#) printing feature.
- **Ink level indicator:** Know the approximate ink level of each print cartridge with the onscreen Ink Status window. For information, see [View estimated ink levels](#) Ink Status window.
- **Ink-backup mode:** Continue printing with one print cartridge when the other print cartridge has run out of ink. For information, see [Ink-backup mode](#).

3 Get started


- Printer at a glance
- Power button and light
- Paper tray
- Print cartridges
- Ink-backup mode

Printer at a glance


Click the links below to learn about the printer features.

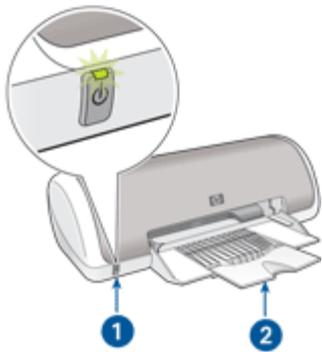

1	Power button and light
2	Paper tray

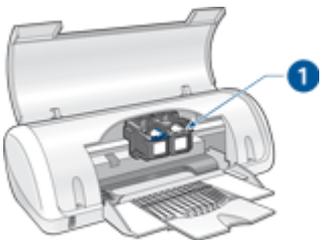

1	Print cartridges
---	------------------

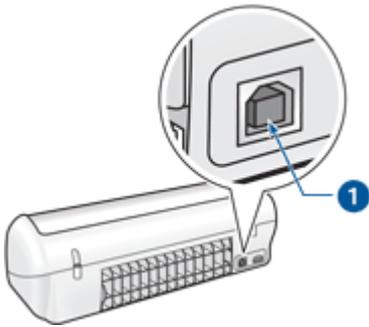

1 | USB port

Power button and light

Use the Power button to turn the printer on and off. It can take a few seconds for the printer to turn on after you press the Power button.



1 | Power button and light

The Power light flashes when the printer is processing.



Caution Always use the Power button to turn the printer on and off. Using a power strip, surge protector, or a wall-mounted switch to turn the printer on and off might cause printer failure.

Paper tray


The fold-out paper tray holds paper and other media to be printed. Unfold the paper tray before printing.

- [Unfold the paper tray](#)
- [Use the paper tray](#)


Unfold the paper tray

To unfold the paper tray


1. Raise the printer cover.

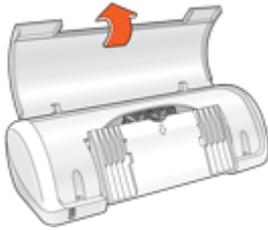


2. Lower the paper tray.

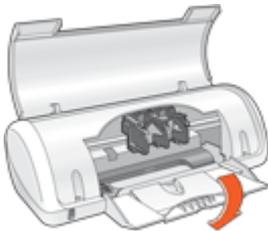

3. Fold out the tray extension.

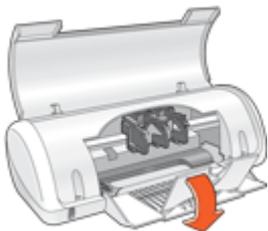


4. Lower the printer cover.

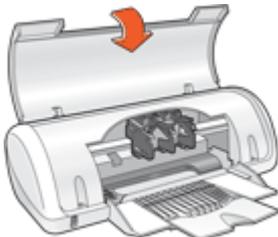

Use the paper tray

Print on different sizes of media by sliding the paper guide to the right or to the left. The printer deposits printed pages on the top of the paper tray.

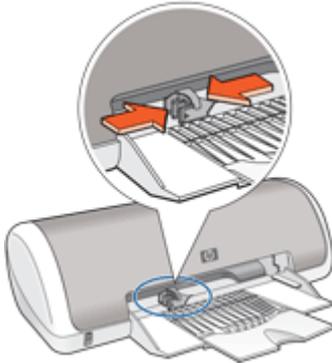

Print cartridges

Two print cartridges can be used with the printer.



1	Tri-color print cartridge
2	Black print cartridge



Note Your printer might be packaged with only a tri-color print cartridge. For better results, install a black print cartridge in addition to the tri-color print cartridge. You can print without a black print cartridge but doing so can cause the printer to print more slowly and printed colors to differ from those you would see if a black print cartridge and a tri-color print cartridge were installed.

To order print cartridges, go to www.hp.com. Choose your country/region, and then click **Buy** or **Online Shopping**.

Replace print cartridges

When buying print cartridges, look for the print cartridge selection number.

You can find the selection number in three places:

- Selection number label: Look at the label on the print cartridge that you are replacing.



1	Selection number label
---	------------------------

- Printer documentation: For a list of print cartridge selection numbers, see the reference guide that came with the printer.
- Print Cartridge Ordering Information dialog box: For a list of print cartridge selection numbers, open the printer [Toolbox](#), click the **Estimated Ink Level** tab, and then click the **Print Cartridge Information** button.

If a print cartridge runs out of ink, the printer can operate in ink-backup mode. For more information, see [Ink-backup mode](#).

For information about installing a replacement print cartridge, see [Installation instructions](#).

Ink-backup mode

Use the ink-backup mode to operate the printer with only one print cartridge. The ink-backup mode is initiated when a print cartridge is removed from the print cartridge cradle.



Note When the printer operates in ink-backup mode, a message is displayed on screen. If the message is displayed and two print cartridges are installed in the printer, verify that the protective piece of plastic tape has been removed from each print cartridge. When plastic tape covers the print cartridge contacts, the printer cannot detect that the print cartridge is installed.

For more information about ink-backup mode, see the following topics:

- [Ink-backup mode output](#)
- [Exit ink-backup mode](#)

Ink-backup mode output

Printing in ink-backup mode slows the printer and affects the quality of printouts.

Installed print cartridge	Result
Black print cartridge	Colors print as grayscale.
Tri-color print cartridge	Colors print but black is grayed and is not a true black.

Exit ink-backup mode

Install two print cartridges in the printer to exit ink-backup mode.

For information about installing a print cartridge, see [Installation instructions](#).

4 Connect to the printer


- USB

USB

The printer connects to the computer with a universal serial bus (USB) cable. The computer must be running Windows 98 SE or later to use a USB cable.



Note For best printing performance, use a USB 2.0 compatible cable.

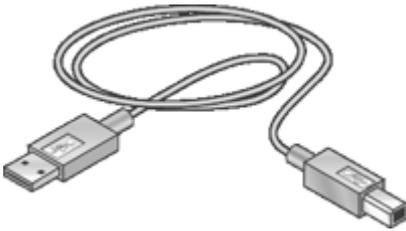

For instructions about connecting the printer with a USB cable, see the setup poster that came with the printer.



Note A USB cable might not be packaged with your printer.

5 Print photos

The printer software offers several features that make printing digital photos easier and improve photo quality.

Learn how to print photos



Print a [borderless photo](#).



Print a photo with a [border](#).

Learn how to perform other photo printing tasks

- Print an [Exif Print-formatted](#) photo if you have Exif Print-enabled software.
- Prevent photo paper from curling by following the [photo paper storage and handling guidelines](#).
- Use HP Everyday Photo Paper to [save money and ink](#) when printing photos.

Print borderless photos

To print borderless photos, use 4 x 6 inch photo paper with a 0.5 inch tab (10 x 15 cm with 1.25 cm tab); the photo prints without borders on three sides and with a small border on the bottom edge that you tear off to make the photo completely borderless.

Guidelines

- Use 4 x 6 inch photo paper with a 0.5 inch tab (10 x 15 cm with 1.25 cm tab).
- Do not print borderless photos in ink-backup mode. Always have two print cartridges installed in the printer.
For more information, see [Ink-backup mode](#).
- Open the file in a software program such as HP Photosmart software and resize the photo. Ensure that the size corresponds to the paper size that you want to use.
- For maximum fade resistance, use HP Premium Plus Photo Paper.
- Verify that the photo paper that you are using is flat. For information about preventing photo paper from curling, see the [photo paper storage instructions](#).
- Do not exceed the paper tray capacity: 15 sheets of photo paper.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Verify that the photo paper is flat.
3. Place the photo paper in the right side of the tray. The side to be printed on should face down and the short edge should point towards the printer.
If you are using photo paper that has a tear-off tab, verify that the tab is pointing away from the printer.

4. Push the paper into the printer until it stops.
5. Slide the paper guide firmly against the edge of the paper.



Print



Note If your software program includes a photo printing feature, follow the instructions that are provided with the software program. Otherwise, follow these instructions.

1. Open the photo in a software program that allows editing, such as HP Photosmart software.
2. Open the [Printer Properties dialog box](#).
3. Click the **Printing Shortcuts** tab.
4. In the **Printing Shortcuts** list, click **Photo Printing-Borderless**, and then select the following options:
 - **Print Quality: Normal or Best**



Note For maximum dpi quality, go to the **Features** tab, and then click **Maximum dpi** in the **Print Quality** drop-down list.

- **Paper Type:** An appropriate photo paper type
 - **Paper Size:** An appropriate borderless photo paper size
 - **Orientation: Portrait or Landscape**
5. If necessary, change the [HP Real Life technologies photo fix](#) setting.
 6. Select any other print settings that you want, and then click **OK**.
If you printed on photo paper with a tear-off tab, remove the tab to make the document completely borderless.



Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.


Print photos with a border

Guidelines


- For maximum fade resistance, use HP Premium Plus Photo Paper.
- Verify that the photo paper that you are using is flat. For information about preventing photo paper from curling, see the [photo paper storage instructions](#).
- Do not exceed the paper tray capacity: 15 sheets of photo paper.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Verify that the photo paper is flat.
3. Place the photo paper in the right side of the tray. The side to be printed on should face down and the short edge should point towards the printer.
4. Push the paper into the printer until it stops.
5. Slide the paper guide firmly against the edge of the paper.

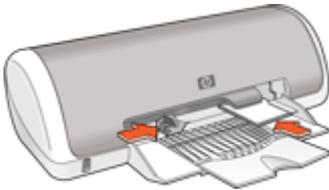

Small photos

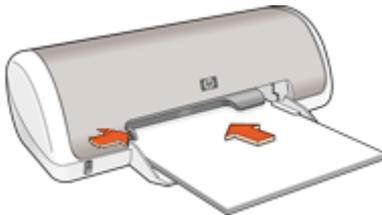

Large photos

Print



Note If your software program includes a photo printing feature, follow the instructions that are provided with the software program. Otherwise, follow these instructions.

1. Open the photo in a software program that allows editing, such as HP Photosmart software.
2. Open the [Printer Properties dialog box](#).
3. Click the **Printing Shortcuts** tab.

4. In the **Printing Shortcuts** list, click **Photo Printing-with white borders**, and then select the following options:
 - **Print Quality: Normal or Best**
-  **Note** For maximum dpi quality, go to the **Features** tab, and then click **Maximum dpi** in the **Print Quality** drop-down list.
- **Paper Type:** An appropriate photo paper type
 - **Paper Size:** An appropriate photo paper size
 - **Orientation: Portrait or Landscape**
5. If necessary, change the [HP Real Life technologies photo fix](#) setting.
 6. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

HP Real Life technologies photo fix

HP Real Life technologies photo fix enhances the quality of your printed photos.

In most cases, you do not need to change the **Basic** default print setting. The Basic setting sharpens the images that you print, and improves the quality and clarity of low resolution images, such as those downloaded from the Internet.

You can change the setting to **Full** if the images that you print are under exposed or over exposed, contain dark areas or red eye, or have colors that appear washed out.

You can also set photo fix to **Off** if you prefer to edit the image manually in a software program such as HP Photosmart software.

To change the HP Real Life technologies photo fix setting

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab.
3. In the HP Real Life technologies **Photo fix** drop-down list, select the appropriate setting for the photo you are printing.

Exif Print

Exif Print (Exchangeable Image File Format 2.2) is an international digital imaging standard that simplifies digital photography and enhances printed photos. When a photo is taken with an Exif Print-enabled digital camera, Exif Print captures information such as exposure time, type of flash, and color saturation, and stores it in the image file. The printer software then uses this information to automatically perform image-specific enhancements to create outstanding photos.

To print Exif Print-enhanced photos, you must have the following items:

- A digital camera that supports Exif Print
- Exif Print-enabled photo software, such as HP Photosmart software

To print Exif Print-enhanced photos

1. Open the photo in an Exif Print-enabled software program that allows editing, such as HP Photosmart software.
2. Open the [Printer Properties dialog box](#).
3. Click the **Features** tab.
4. In the **Paper Type** drop-down list, click **More**, and then select the appropriate photo paper type.
5. In the **Print Quality** drop-down list, click **Normal**, **Best**, or **Maximum dpi**.
6. Select any other print settings that you want, and then click **OK**.
The printer software automatically optimizes the printed image.

Store and handle photo paper

Follow these instructions to maintain the quality of HP brand photo paper.

Storage

- Keep unused photo paper in a plastic bag. Store the packaged photo paper on a flat surface in a cool place.
- When you are ready to print, remove only the paper that you plan to use immediately from the plastic bag. When you have finished printing, return any unused photo paper to the plastic bag.
- Do not leave unused photo paper in the paper tray. The paper might start to curl, which can reduce the quality of your photos.

Handling

- Always hold photo paper by its edges. Fingerprints on photo paper can reduce print quality.
- If the corners of the photo paper curl more than 10 mm (0.4 inch), flatten the paper by putting it in the storage bag, and then gently bending it in the opposite direction of the curl until the paper lies flat.
Photo paper should be flat before it is printed on.

Save money when printing photos

To save money and ink when printing photos, use HP Everyday Photo Paper and set the print quality to **Normal**.

HP Everyday Photo Paper is designed to create quality photos with less ink.



Note For higher-quality photos, use HP Premium Plus Photo Paper and set the print quality to **Best** or **Maximum dpi**.

6 Print other documents



E-mail



Documents



Letters



Envelopes



Postcards



Index cards



Labels



CD/DVD tattoos



Transparencies



Brochures



Greeting cards



Booklets



Posters



Iron-on transfers

Printing tips: Minimize your cost and effort while maximizing the quality of your printouts with [printing tips](#).

Printer software: Learn about the [printer software](#).

Print e-mail


Guidelines

Do not exceed the paper tray capacity: 80 sheets of plain paper.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Place plain paper in the right side of the tray. The side to be printed on should face down.

3. Push the paper into the printer until it stops.
4. Slide the paper guide firmly against the edge of the paper.

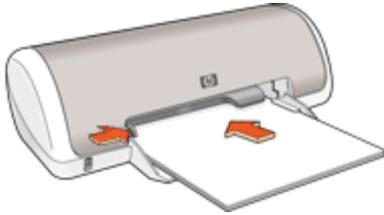

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Printing Shortcuts** tab.
3. In the **Printing Shortcuts** list, click **General Everyday Printing** or **Fast/Economical Printing**, and then specify the following print settings:
 - **Paper Type: Plain paper**
 - **Paper Size:** An appropriate paper size
4. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

Print documents

Guidelines

- For draft documents, use [Fast/Economical printing](#).
- Save paper with [two-sided printing](#).
- Do not exceed the paper tray capacity: 80 sheets of paper.

Prepare to print


1. Slide the paper guide all the way to the left.
2. Place plain paper in the right side of the tray. The side to be printed on should face down.

3. Push the paper into the printer until it stops.



Note The paper will extend over the edge of the tray.

4. Slide the paper guide firmly against the edge of the paper.

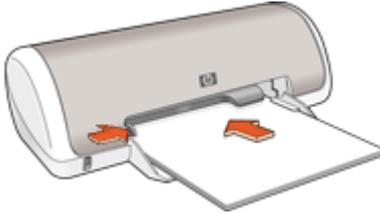

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Printing Shortcuts** tab.
3. In the **Printing Shortcuts** list, click **General Everyday Printing**, and then specify the following print settings:
 - **Paper Type: Plain paper**
 - **Paper Size:** An appropriate paper size
4. Select the following print settings:
 - **Print Quality** if you want a print quality other than Normal
 - **Print On Both Sides** if you want to print on both sides of the paper
For more information, see [Two-sided printing](#).
5. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

Print letters

Guidelines

- For information about printing an envelope for your letter, see [envelopes](#).
- Do not exceed the paper tray capacity: 80 sheets of paper.


Prepare to print

1. Slide the paper guide all the way to the left.
2. Place plain paper in the right side of the tray. The side to be printed on should face down.



Note If you are using letterhead paper, the letterhead should face down and point toward the printer.

3. Push the paper into the printer until it stops.
4. Slide the paper guide firmly against the edge of the paper.

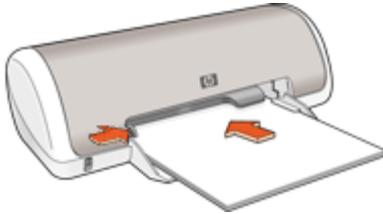

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Printing Shortcuts** tab.
3. In the **Printing Shortcuts** list, click **Presentation Printing**, and then specify the following print settings:
 - **Paper Type: Plain paper**
 - **Paper Size:** An appropriate paper size
4. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

Print envelopes


Guidelines

- Avoid using envelopes that have the following features:
 - Clasps or windows
 - Thick, irregular, or curled edges
 - Shiny or embossed coatings
 - Wrinkles, tears, or other damage
- You can print a single envelope or multiple envelopes.
- Align the envelope edges before inserting the envelopes in the paper tray.
- Do not exceed the paper tray capacity: 10 envelopes.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Place the envelopes in the right side of the tray. The side to be printed on should face down. The flap should be on the left side.

3. Push the envelopes into the printer until they stop.
4. Slide the paper guide firmly against the edge of the envelopes.

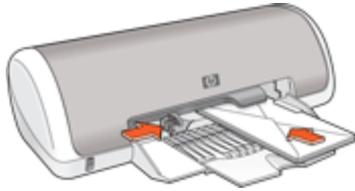

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab, and then select the following print settings:
 - **Paper Type: Plain paper**
 - **Size:** An appropriate envelope size
3. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.


Print postcards

Guidelines

Do not exceed the paper tray capacity: 20 postcards.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Place the cards in the right side of the tray. The side to be printed on should face down and the short edge should point toward the printer.
3. Push the cards into the printer until they stop.
4. Slide the paper guide firmly against the edge of the cards.

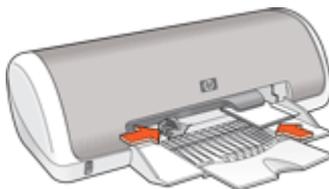

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab, and then specify the following print settings:
 - **Paper Type:** Click **More**, click **Specialty Papers**, and then select an appropriate card type.
 - **Print Quality:** **Normal** or **Best**
 - **Size:** An appropriate card size
3. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.



Note If an out-of-paper message is displayed, see [Out of paper message](#) for help in resolving the problem.


Print index cards and other small media

Guidelines

Do not exceed the paper tray capacity: 20 cards.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Place the cards in the right side of the tray. The side to be printed on should face down and the short edge should point toward the printer.
3. Push the cards into the printer until they stop.
4. Slide the paper guide firmly against the edge of the cards.

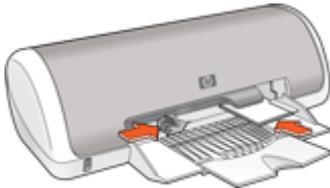

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab, and then specify the following print settings:
 - **Paper Type:** **Plain paper**
 - **Size:** An appropriate card size
3. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.



Note If an out-of-paper message is displayed, see [Out of paper message](#) for help in resolving the problem.


Print labels

Guidelines

- Use only paper, plastic, or clear labels that are designed specifically for inkjet printers.
- Use only full sheets of labels.
- Avoid using labels that are sticky, wrinkled, or pulling away from the protective backing.
- Do not exceed the paper tray capacity: 15 sheets of labels (use only Letter or A4-size sheets).

Prepare to print

1. Slide the paper guide all the way to the left.
2. Fan the edges of the label sheets to separate them, and then align the edges.
3. Place the label sheets in the right side of the tray. The label side should face down.
4. Push the sheets into the printer until they stop.
5. Slide the paper guide firmly against the edge of the sheets.

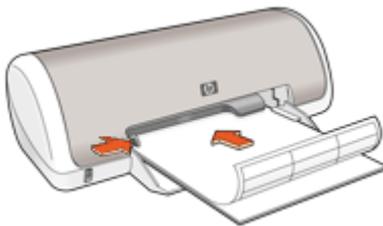

Print



Note If your software program includes a label printing feature, follow the instructions that are provided with the software program. Otherwise, follow the instructions below.

1. Open the [Printer Properties dialog box](#).
2. Click the **Printing Shortcuts** tab.
3. In the **Printing Shortcuts** list, click **General Everyday Printing**, and then specify the following print settings:
 - **Paper Type: Plain paper**
 - **Paper Size:** An appropriate paper size
4. Click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

Print CD/DVD tattoos




Note This feature might not be available in your country/region.

Guidelines

- See the instructions that are included with the CD/DVD tattoo for the most current printing tips.
- To avoid damaging the printer, do not feed a CD/DVD tattoo through the printer more than once.
- Make sure the CD/DVD tattoo covers the entire backing sheet with no exposed spaces. Separating any part of the CD/DVD tattoo from the protective backing sheet before printing could damage the printer.
- Avoid using a CD/DVD tattoo that is pulling away from the protective backing, or that is wrinkled, curled, or damaged in any way.
- Do not exceed the input tray capacity: 1 sheet of CD/DVD tattoo paper.

Prepare to print

1. Raise the output tray, and then remove all paper from the input tray.
2. Slide the paper guide all the way to the left.
3. Place one sheet of CD/DVD tattoo paper in the right side of the input tray. The side to be printed on should face down.
4. Push the paper into the printer until it stops.
5. Slide the paper guide firmly against the edge of the paper.

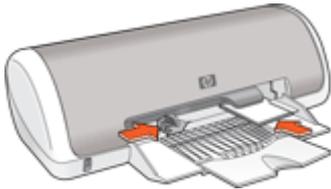

6. Lower the output tray.

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab, and then specify the print settings in the order shown below:
 - **Size: 5x7in.**
 - **Paper Type:** Click **More**, click **Specialty Papers**, and then click **HP CD/DVD Tattoo**.
 - **Print Quality: Best**
3. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.


Print transparencies

Guidelines

- For great results, use HP Premium Inkjet Transparency Film.
- Do not exceed the paper tray capacity: 20 transparencies.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Place the transparencies in the right side of the tray. The side to be printed should face down and the adhesive strip should face up and toward the printer.
3. Carefully push the transparencies into the printer until they stop, so that the adhesive strips do not catch on one another.
4. Slide the paper guide firmly against the edge of the transparencies.

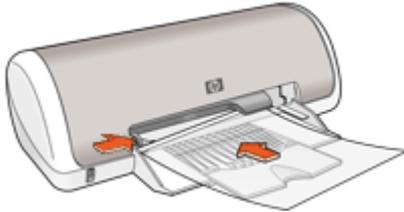

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Printing Shortcuts** tab.
3. In the **Printing Shortcuts** list, click **Presentation Printing**, and then specify the following print settings:
 - **Paper Type:** Click **More**, and then select an appropriate transparency film.
 - **Paper Size:** An appropriate paper size
4. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

Print brochures


Guidelines

- Open the file in a software program and assign the brochure size. Ensure that the size corresponds to the paper size on which you want to print the brochure.
- Do not exceed the paper tray capacity: 30 sheets of brochure paper.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Place the paper in the right side of the tray. The side to be printed on should face down.

3. Push the paper into the printer until it stops.
4. Slide the paper guide firmly against the edge of the paper.

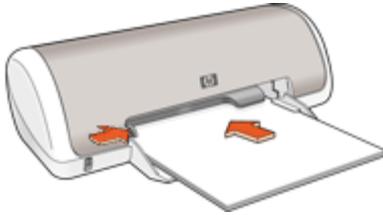

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab.
3. Specify the following print settings:
 - **Print Quality: Best**
 - **Paper Type:** Click **More**, and then select an appropriate HP inkjet paper.
 - **Orientation: Portrait** or **Landscape**
 - **Size:** An appropriate paper size
 - **Two-sided printing: Manual**
For more information, see [Two-sided printing](#).
4. Click **OK** to print.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

Print greeting cards

Greeting cards

- Unfold prefolded cards, and then place them in the paper tray.
- For great results, use HP Greeting Card Paper.
- Do not exceed the paper tray capacity: 20 cards.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Fan the edges of the greeting cards to separate them, and then align the edges.
3. Place the greeting cards in the right side of the tray. The side to be printed on should face down.

4. Push the cards into the printer until they stop.
5. Slide the paper guide firmly against the edge of the cards.



Print



Note If your software program includes a greeting card printing feature, follow the instructions that are provided with the software program. Otherwise, follow the instructions below.


1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab, and then specify the following print settings:
 - **Print Quality: Normal**
 - **Paper Type:** Click **More**, and then select an appropriate card type.
 - **Size:** An appropriate card size
3. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

Print booklets

Booklet printing automatically arranges and resizes the pages of a document so that when the document is folded into a booklet, the page order is correct.

For example, when a four-page booklet is printed on both sides of the paper, the pages are reordered and printed like this:

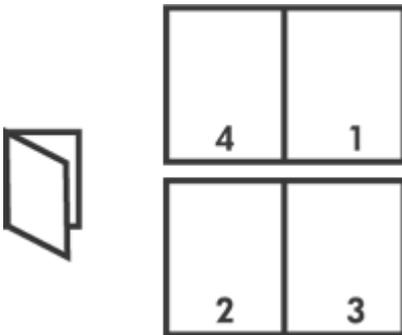


Guidelines

Do not exceed the paper tray capacity: 80 sheets of paper.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Place plain paper in the right side of the tray. The side to be printed on should face down.
3. Push the paper into the printer until it stops.
4. Slide the paper guide firmly against the edge of the paper.

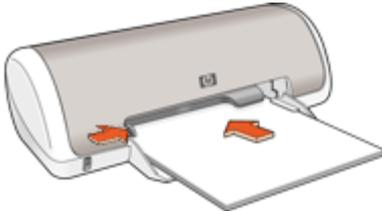

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Printing Shortcuts** tab.
3. In the **Printing Shortcuts** list, click **Two-sided (Duplex) Printing**.
4. In the **Print On Both Sides** drop-down list, select one of the following binding options:
 - **Left Edge Booklet**
 - **Right Edge Booklet**
5. Select any other print settings that you want, and then click **OK**.
6. When prompted, reload the printed pages in the paper tray as shown below.



7. Click **Continue** to finish printing the booklet.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

Print posters

Guidelines


- For poster printing, sections of the poster are automatically arranged on individual sheets that can be taped together. After the sections of a poster have been printed, trim the edges of the sheets and tape the sheets together.



- Do not exceed the paper tray capacity: 80 sheets of paper.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Place plain paper in the right side of the tray. The side to be printed on should face down.
3. Push the paper into the printer until it stops.
4. Slide the paper guide firmly against the edge of the paper.

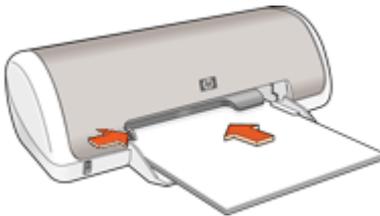

Print

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab, and then specify the following print settings:
 - **Paper Type:** Plain paper
 - **Orientation:** Portrait or Landscape
 - **Size:** An appropriate paper size
3. Click the **Advanced** tab, and then click **Printer Features**.
4. In the **Poster Printing** drop-down list, select the number of sheets for the poster.
5. Click the **Select Tiles** button.

6. Check that the number of tiles that are selected matches the number of sheets for the poster, and then click **OK**.
7. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

Print iron-on transfers

Guidelines


- When printing a mirror image, the text and the pictures are horizontally reversed from what is displayed on the computer screen.



- Do not exceed the paper tray capacity: 10 iron-on transfers.

Prepare to print

1. Slide the paper guide all the way to the left.
2. Place the iron-on transfer paper in the right side of the tray. The side to be printed on should face down.
3. Push the paper into the printer until it stops.
4. Slide the paper guide firmly against the edge of the paper.

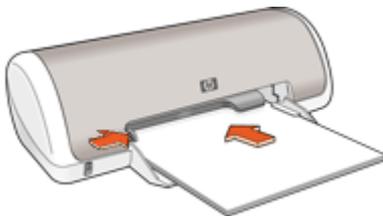

Print



Note If your software program includes an iron-on transfer printing feature, follow the instructions that are provided with the software program. Otherwise, follow the instructions below.

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab, and then specify the following print settings:
 - **Print Quality:** **Normal** or **Best**
 - **Paper Type:** Click **More**, click **Specialty Papers**, and then click **Other specialty paper**.
 - **Size:** An appropriate paper size
3. Click the **Advanced** tab.
4. Click **Printer Features**, and then set **Mirror Image** to **On**.



Note Some iron-on transfer software programs do not require you to print a mirror image.

5. Select any other print settings that you want, and then click **OK**.

Use the [What's This? help](#) to learn about the features that appear in the Printer Properties dialog box.

7 Printing tips

Save time

- Use the [Printing Shortcuts](#) tab.
- Set the [order](#) that the pages print.

Save money

- Use [Fast/Economical printing](#).
- Print [multiple pages](#) on a single sheet of paper.
- Print in [grayscale](#).
- Print a [two-sided document](#).
- Use [HP Everyday Photo Paper](#) to save money and ink when printing photos.

Enhance the quality of printouts

- [Preview](#) the document before printing it.
- Print on a [custom paper size](#).
- Select the correct [paper type](#).
- Change the [print speed and quality](#).
- View the [print resolution](#).
- Achieve the highest printing resolution with [Maximum dpi](#).
- [Resize](#) the document as needed.

Printing shortcuts

Use printing shortcuts to print with print settings that you use often. The printer software has several specially designed printing shortcuts that are available in the Printing Shortcuts list.



Note When you select a printing shortcut the appropriate printing options are automatically displayed. You can leave them as is or change them.

Use printing shortcuts

Use the Printing Shortcuts tab for the following print tasks:

- [General everyday printing](#)
- [Photo printing–borderless](#)
- [Photo printing–with white borders](#)
- [Fast/Economical printing](#)
- [Presentation printing](#)
- [Two-sided, duplex, printing](#)

You can also [create](#) your own printing shortcuts.

Create printing shortcuts

In addition to the printing shortcuts that are available in the Printing Shortcuts list, you can create your own printing shortcuts.

If you frequently print on transparency film, for example, you can create a printing shortcut by selecting the Presentation Printing shortcut, changing the paper type to HP Premium

Inkjet Transparency Film, and then saving the modified shortcut under a new name; for example, Transparency Presentations. After creating the printing shortcut, simply select it when printing on transparency film rather than changing the print settings each time.

To create a printing shortcut

1. Open the [Printer Properties dialog box](#).
2. Click the **Printing Shortcuts** tab.
3. In the **Printing Shortcuts** list, click a printing shortcut.
The print settings for the selected printing shortcut are displayed.
4. Change the print settings to those you want in the new printing shortcut.
5. In the **Type new shortcut name here** box, type a name for the new printing shortcut, and then click **Save**.
The printing shortcut is added to the list.

To delete a printing shortcut

1. Open the [Printer Properties dialog box](#).
2. Click the **Printing Shortcuts** tab.
3. In the **Printing Shortcuts** list, click the printing shortcut that you want to delete.
4. Click **Delete**.
The printing shortcut is removed from the list.



Note Only the shortcuts that you have created can be deleted. The original HP shortcuts cannot be deleted.

Fast/Economical printing

Use Fast/Economical printing to produce draft-quality printouts quickly.

To use Fast/Economical printing

1. Open the [Printer Properties dialog box](#).
2. Click the **Printing Shortcuts** tab.
3. In the **Printing Shortcuts** list, click **Fast/Economical Printing**.
4. Specify the print settings that you want, and then click **OK**.

General Everyday printing

Use General Everyday printing to print documents quickly.

- [Documents](#)
- [E-mail](#)

Presentation printing

Use Presentation printing to print high-quality documents, including:

- [Letters](#)
- [Brochures](#)
- [Transparencies](#)

Select a paper type

When printing a higher-quality document, HP recommends that you select a specific paper type.

To select a specific paper type

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab.
3. Click **More** in the **Paper Type** drop-down list, and then select the paper type that you want to use.
4. Click **OK**.
5. Select any other print settings that you want, and then click **OK**.

Change the print speed or quality

The HP Deskjet automatically chooses a print quality and speed setting depending on the paper type setting you select. You can also change the print quality setting to customize the speed and quality of the print process.

Print quality settings

- **Fast Draft** produces draft-quality output at the fastest printing speed, while using the least amount of ink.
- **Fast Normal** produces higher quality output than the Fast Draft setting and prints more quickly than the Normal setting.
- **Normal** provides the best balance between print quality and speed and is appropriate for most documents.
- **Best** provides the best balance between high quality and speed and can be used for high quality prints. For most documents, the Best setting prints more slowly than the Normal setting.
- **Maximum dpi** optimizes the dots per inch (dpi) that the HP Deskjet prints. Printing in maximum dpi takes longer than printing with other settings and requires a large amount of disk space. For more information, see [Maximum dpi](#).

To select a print quality and speed

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab.
3. In the **Paper Type** drop-down list, select the type of paper that you have loaded.
4. In the **Print Quality** drop-down list, select the appropriate quality setting for your project.

Print resolution

The printer software displays the print resolution in dots per inch (dpi). The dpi varies according to the paper type and print quality that you select in the printer software.

To view the print resolution

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab.

3. In the **Paper Type** drop-down list, select the type of paper that you have loaded.
4. In the **Print Quality** drop-down list, select the appropriate print quality setting for your project.
5. Click the **Resolution** button to view the print resolution dpi.

Maximum dpi

Use maximum dpi mode to print high-quality, sharp images.

To get the most benefit from maximum dpi mode, use it to print high-quality images such as digital photographs. When you select the maximum dpi setting, the printer software displays the optimized dots per inch (dpi) that the HP Deskjet will print.

Printing in maximum dpi takes longer than printing with other settings and requires a large amount of disk space.

To print in Maximum dpi mode

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab.
3. In the **Paper Type** drop-down list, click **More**, and then select the appropriate paper type.
4. In the **Print Quality** drop-down list, click **Maximum dpi**.



Note To view the maximum dpi that the HP Deskjet will print, click **Resolution**.

5. Select any other print settings that you want, and then click **OK**.

Print in grayscale

To print in grayscale

1. Open the [Printer Properties dialog box](#).
2. Click the **Color** tab.
3. Click **Print In Grayscale**.
4. In the **Print In Grayscale** drop-down list, select an option.
5. Select any other print settings that you want, and then click **OK**.

Set the page order

The page order determines the order in which your multipage documents print.

To set the page order

1. Open the [Printer Properties dialog box](#).
2. Click the **Advanced** tab.
3. Click **Document Options**, and then click **Layout Options**.

4. Select one of the following **Page Order** options:
 - **Front to back:** Prints the first page of the document last. This setting saves time because you do not have to reorder the printed pages. It is the appropriate setting for most print jobs.
 - **Back to front:** Prints the last page of the document last.
5. Select any other print settings that you want, and then click **OK**.

Set a custom paper size

Use the **Custom Paper Size** dialog box to print on a special paper size.



Note This feature is not available for all paper types.

To define a custom paper size

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab.
3. In the **Size** drop-down list, select **Custom**.
The Custom Paper Size dialog box is displayed.
4. In the **Name** box, type a name for the custom paper size.
5. In the **Width** and **Length** boxes, type the dimensions of the custom paper size.
The minimum and maximum dimensions are displayed beneath Width and Length.
6. Click the unit of measurement: **Inches** or **Millimeters**.
7. Click **Save** to save the custom paper size.
8. Click **OK** to exit the **Custom Paper Size** dialog box.
9. To use the custom paper size, select its name in the **Size** drop-down list.

Print multiple pages on a single sheet of paper

Use the printer software to print multiple pages of a document on a single sheet of paper. The printer software automatically resizes the document text and images to fit on the printed page.

To print multiple pages on a single sheet of paper

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab.
3. In the **Pages Per Sheet** drop-down list, select the number of pages that you want to appear on each sheet of paper.
4. In the **Page Order** drop-down list, select a layout for the pages.
A preview of the page order is displayed at the top of the Features tab.
5. Select any other print settings that you want, and then click **OK**.

Resize a document

Use the printer software to print a document that is formatted for one paper size on another paper size. Doing this can be useful if you do not have the correct paper size available.

For example, if you have created a document that is formatted for letter-size paper, but you do not have any letter-size paper available, you can print the document on another paper size that is available.

To resize a document for a different paper size

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab.
3. Click **Scale to paper size**, and then select the target paper size in the drop-down list.
The target paper size is the size of the paper on which you are printing, not the size for which the document was formatted.
4. Select any other print settings that you want, and then click **OK**.

Print preview

Use the print preview function to view a printout on your computer before printing a document. If the printout does not look correct, you can cancel the print job and adjust the print settings as needed.

To preview a printed document

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** or the **Color** tab.
3. Select the **Show preview before printing** check box.
4. Select any other print settings that you want, and then click **OK**.
Before the document prints, a preview is displayed.
5. Do one of the following:
 - Click **OK** to print the document.
 - Click **Cancel** to cancel the print job. Adjust the print settings as needed before printing the document.

Two-sided printing

Use two-sided printing, also called duplexing, to print on both sides of the paper. Printing on both sides of the paper is not only economical, but environmentally conscious as well.

To print a two-sided document

1. Open the [Printer Properties dialog box](#).
2. Click the **Printing Shortcuts** tab.
3. In the **Printing Shortcuts** drop-down list, click **Two-sided (Duplex) Printing**.
4. In the **Print On Both Sides** drop-down list, click **Manually**.
5. Select any other print settings that you want, and then click **OK**.
The printer prints the odd-numbered pages first.

6. After the odd-numbered pages have been printed, reload the printed pages with the printed side facing up.



7. Click **Continue** to print the even-numbered pages.

To create a two-sided document with a binding, see [Bound two-sided documents](#).

Bound two-sided documents

If you want to bind printed pages into a book, you can adjust the print settings to accommodate the binding.

Bound two-sided documents can have a book binding (binding on the side) or a tablet binding (binding at the top). Book binding is the most common type of binding.

To print a two-sided document with a book binding

→ Follow the [instructions](#) for basic two-sided printing.

To print a two-sided document with a tablet binding

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab.
3. In the **Two-sided printing** drop-down list, click **Manual**.
4. Select the following check boxes:
 - **Flip Pages Up**
 - **Preserve Layout**
5. Select any other print settings that you want, and then click **OK**.
The printer prints the odd-numbered pages first.

6. After the odd-numbered pages have been printed, reload the printed pages, with the printed side facing up according to the document orientation, portrait or landscape.



Portrait



Landscape

7. Click **Continue** to print the even-numbered pages.

8 Printer software

- Make the HP Deskjet the [default printer](#).
- Set the [default print settings](#) for all documents.
- Use the [Printer Properties dialog box](#) to select printing options.
- Use the [What's This? help](#) to learn more about specific print settings.
- View the [Ink Status window](#) for the approximate ink level of each print cartridge.
- Download [printer software updates](#) for the latest features and improvements.

Make the HP Deskjet the default printer

You can set the HP Deskjet as the default printer to use from any software program. This means that the HP Deskjet is automatically selected in the printer drop-down list when you click **Print** from the **File** menu in a software program.

Windows 2000 users

1. On the Windows taskbar, click **Start**, point to **Settings**, and then click **Printers**.
2. Right-click the HP Deskjet icon, and then click **Set as Default Printer**.

Windows XP users

1. On the Windows taskbar, click **Start**, and then click **Printers and Faxes**.
2. Right-click the HP Deskjet icon, and then click **Set as Default Printer**.


Set default print settings

The HP Deskjet uses default print settings for all documents unless you specify other settings.

To save time when printing, set the default print settings to options that you use often. That way, you do not have to specify the options every time you use the printer.

To change the default print settings

1. Double-click the HP Digital Imaging Monitor icon on the right side of the Windows taskbar.

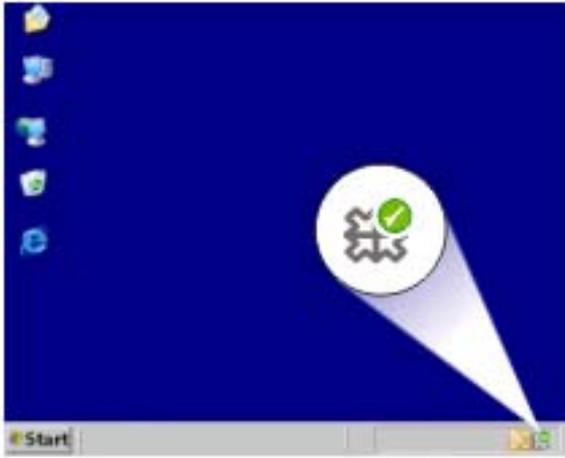

1 | HP Digital Imaging Monitor icon

The HP Solution Center is displayed.

2. In the HP Solution Center, click **Settings**, point to **Print Settings**, and then click **Printer Settings**.
3. Make changes to the print settings, and then click **OK**.

Printer Properties dialog box

The printer is controlled by software that is installed on your computer. Use the printer software, also known as the printer driver, to change the print settings for a document.

To change the print settings, open the Printer Properties dialog box.



Note The Printer Properties dialog box is also referred to as the Printing Preferences dialog box.

To open the Printer Properties dialog box

1. Open the file that you want to print.
2. Click **File**, click **Print**, and then click **Properties** or **Preferences**.

The Printer Properties dialog box is displayed.



Note The path to the Printer Properties dialog box can vary depending on the software program you are using.

What's This? help

Use the [What's This? help](#) to learn about the features that you see on the Printer Properties dialog box.

What's This? help

Use What's This? help to learn more about the available printing options.

To use What's This? help

1. Move the cursor over the feature that you want to learn more about.
2. Click the right mouse button.
The What's This box is displayed.
3. Move the cursor over the **What's This?** box, and then click the left mouse button.
An explanation of the feature is displayed.

Ink Status window

The Ink Status window is displayed each time the printer prints a file. The window displays the approximate ink level of each print cartridge. To close the Ink Status window, click **Close**.



Note This feature might not be available in your operating environment.

Print cartridge information and ordering

For print cartridge information and to link to HP's Web site for ordering print cartridges, click the **Print Cartridge Information** button.

Displaying the Ink Status window

If you do not want the Ink Status window to appear when you print, select the **Do not show this again** check box in the lower-left corner of the window.

If you previously chose not to show the Ink Status window but now want it to appear when you print, follow these steps:

1. For Windows 2000, click **Start**, and then click **Settings**. For Windows XP, click **Start**, and then click **Printers and Faxes**.
A list that includes the printers installed on your computer is displayed.
2. Highlight the printer name, and then right-click to display a list of options.
3. Click **Properties**.
The Printer Properties dialog box is displayed.
4. Click the **Device Settings** tab.
5. For **Display Ink Status Window**, click **On**, and then click **OK**.

Download printer software updates

Download the latest printer software update every few months to ensure you have the latest features and improvements.

To download a printer software update

1. Make sure you are connected to the Internet.
2. From the Windows **Start** menu, click **Programs** or **All Programs**, point to **HP**, and then click **HP Software Update**.
The HP Software Update window is displayed.
3. Click **Next**.
HP Software Update searches the HP Web site for printer software updates.
 - If the computer has the most recent version of the printer software installed, **No updates are available for your system at this time** is displayed in the HP Software Update window.
 - If the computer does not have the most recent version of the printer software installed, a software update is displayed in the HP Software Update window.
4. If a software update is available, select the check box beside the update name.
5. Click **Install**.
6. Follow the onscreen instructions.

Download HP Photosmart software

Installing the printer software update you download from the HP Web site does not update the HP Photosmart software you might have installed on the computer. For information about updating the HP Photosmart software, see the HP Photosmart Help.

9 Maintenance

- Install print cartridges
- Align the print cartridges
- Automatically clean print cartridges
- Print a test page
- View estimated ink levels
- Maintain the printer body
- Remove ink from your skin and clothing
- Manually clean print cartridges
- Maintain print cartridges
- Printer Toolbox

Install print cartridges

When you need to replace print cartridges, make sure you have the correct print cartridges for your printer, and then install them in the print cartridge cradle.

- Print cartridges
- Selection numbers
- Ink-backup mode
- Installation instructions

Print cartridges

Always install the tri-color print cartridge in the left side of the print cartridge cradle.

Install the black print cartridge in the right side of the print cartridge cradle.



Note Your printer might be packaged with only a tri-color print cartridge. For better results, install a black print cartridge in addition to the tri-color print cartridge. You can print without a black print cartridge but doing so can cause the printer to print more slowly and printed colors to differ from those you would see if a black print cartridge and a tri-color print cartridge were installed.

To order print cartridges, go to www.hp.com. Choose your country/region, and then click **Buy** or **Online Shopping**.

Selection numbers

When buying replacement print cartridges, look for the print cartridge selection number.

You can find the selection number in three places:

- Selection number label: Look at the label on the print cartridge that you are replacing.



1	Selection number label
---	------------------------

- Printer documentation: For a list of print cartridge selection numbers, see the reference guide that came with the printer.
- Print Cartridge Information dialog box: For a list of print cartridge selection numbers, open the printer **Toolbox**, click the **Estimated Ink Level** tab, and then click the **Print Cartridge Information** button.

Ink-backup mode


The printer can operate with only one print cartridge installed. For more information, see [Ink-backup mode](#).

Installation instructions

To install a print cartridge


1. Press the **Power** button to turn on the printer.
2. Open the printer cover.
The print cartridge cradle moves to the center of the printer.
3. Push down on the print cartridge.

- Slide the print cartridge out of the cradle.

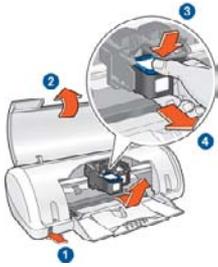


1	Press the Power button
2	Open the printer cover
3	Push down on the print cartridge
4	Slide the print cartridge out of the cradle

- Remove the replacement print cartridge from its packaging and carefully remove the plastic tape. Hold the print cartridge so that the copper strip is on the bottom and facing toward the printer.

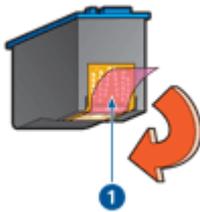


1	Remove plastic tape
---	---------------------

-  **Caution** Do not touch the print cartridge ink nozzles or copper contacts. Touching these parts will result in clogs, ink failure, and bad electrical connections. Do not remove the copper strips. They are required electrical contacts.

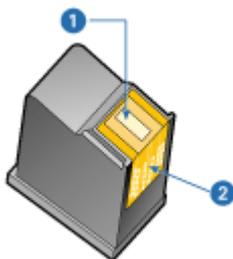

1	Ink nozzles
2	Copper contacts

6. Slide the print cartridge firmly into the cradle at a slight upward angle until you feel resistance.

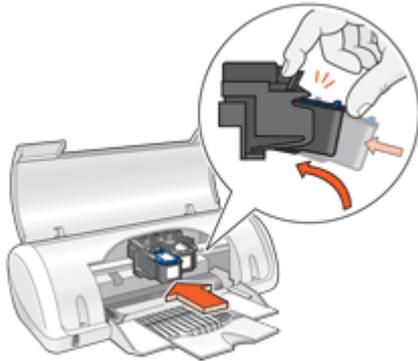

7. Push the cartridge into the cradle.
You hear a snap when the print cartridge is correctly positioned.
8. Close the printer cover.
9. **Align** the print cartridges for optimum print quality.

For information about storing print cartridges, see [Maintain print cartridges](#).

For information about recycling empty print cartridges, see [HP inkjet supplies recycling program](#).



Warning Keep both new and used print cartridges out of the reach of children.

Align the print cartridges

After installing a print cartridge, align the print cartridges to ensure the best print quality.

To align the printer

1. Load Letter or A4 unused plain white paper in the paper tray.
2. Open the printer [Toolbox](#).
3. Click **Align the Print Cartridges**.
4. Click **Align**, and then follow the onscreen instructions.

The HP Deskjet prints a test page, aligns the print cartridges, and calibrates the printer. Recycle or discard the test page.

Automatically clean print cartridges

If your printed pages are missing lines or dots, or if they contain ink streaks, the print cartridges might be low on ink or might need to be cleaned. For more information, see [View estimated ink levels](#).

If the print cartridges are not low on ink, clean the print cartridges automatically.

To clean the print cartridges

1. Open the printer [Toolbox](#).
2. Click **Clean the Print Cartridges**.
3. Click **Clean**, and then follow the onscreen instructions.

If your documents are still missing lines or dots after cleaning, [manually clean the print cartridge contacts](#).



Caution Clean print cartridges only when necessary. Unnecessary cleaning wastes ink and shortens the life of the cartridge.

Print a test page

You can print a test page to view the effects of any changes you have made to the print settings.

To print a test page

1. Open the printer [Toolbox](#).
2. Click the **Print a Test Page** button, and then follow the onscreen instructions.

View estimated ink levels

Follow these instructions to view the estimated ink levels of the print cartridges that are installed in the printer:

1. Open the printer [Toolbox](#).
2. Click the **Estimated Ink Level** tab.



Note If the print cartridges were used before being installed in the printer, the estimated ink levels will not appear on the Estimated Ink Level tab.

The Estimated Ink Level tab also contains print cartridge ordering information. To view this information, click the **Print Cartridge Information** button.

Maintain the printer body

Because the HP Deskjet ejects ink onto the paper in a fine mist, ink smudges will eventually appear.

To remove smudges, stains, or dried ink from the exterior

1. Turn off the HP Deskjet, and then disconnect the power cord.
2. Wipe the outside of the HP Deskjet with a soft cloth that has been lightly moistened with water.



Caution Do not use any type of cleaning solution. Household cleaners and detergents might damage the printer finish. Keep all fluids away from the interior. Do not lubricate the metal rod on which the print cartridge cradle slides. Noise is normal when the cradle moves back and forth.

Remove ink from your skin and clothing

Follow these instructions to remove ink from your skin and clothing:

Surface	Remedy
Skin	Wash the area with an abrasive soap.
White fabric	Wash the fabric in <i>cold</i> water and use chlorine bleach.
Color fabric	Wash the fabric in <i>cold</i> water and use sudsy ammonia.



Caution Always use cold water to remove ink from fabric. Warm or hot water can set the ink into the fabric.

Manually clean print cartridges

If the HP Deskjet is used in a dusty environment, a small amount of debris can accumulate on the print cartridge contacts. This debris can cause ink streaks and missing lines on printed pages. The problem can be corrected by manually cleaning the print cartridge contacts.

You need the following items to clean the print cartridges:

- Distilled water (tap water can contain contaminants that can damage the print cartridge)
- Cotton swabs or other soft, lint-free material that will not stick to the print cartridge

Be careful not to get **ink on your hands or clothing** as you clean.

To prepare to clean

1. Open the HP Deskjet cover.
2. Wait until the print cartridge cradle moves to the center of the HP Deskjet and is idle and quiet.
3. Remove the print cartridges and place them on a piece of paper, with the copper strips facing up.




Caution Do not leave the print cartridges outside the HP Deskjet for more than 30 minutes.

To manually clean print cartridge contacts

1. Lightly moisten a cotton swab with distilled water and squeeze any excess water from the swab.
2. Gently wipe the print cartridge copper contacts with the cotton swab.

 **Caution** Do not touch the print cartridge ink nozzles. Touching the ink nozzles will result in clogs, ink failure, and bad electrical connections.

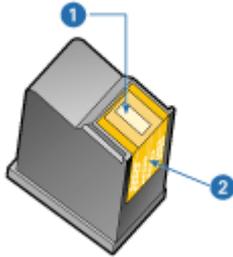

1	Ink nozzles (do not touch)
2	Copper contacts

3. Repeat this process until no ink residue or dust appears on the swab.
4. Insert the print cartridges in the HP Deskjet, and then close the cover. For more information, see [Installation instructions](#).

Maintain print cartridges

Use these tips to maintain and store HP print cartridges and to ensure consistent print quality.

- [Maintenance tips](#)
- [Storage tips](#)

Maintenance tips

- Keep all print cartridges in their sealed packages until they are needed. Print cartridges should be stored at room temperatures (15° to 35° C or 59° to 95° F).
- Do not remove the plastic tape covering the ink nozzles until you are ready to install the print cartridge in the printer. If the plastic tape has been removed from the print cartridge, do not attempt to reattach it. Reattaching the tape damages the print cartridge.

Storage tips

- When you remove print cartridges from the printer, store them in an airtight plastic container.
- Make sure that the ink nozzles are face down but are not in contact with the container.

Printer Toolbox

The printer Toolbox contains a number of useful tools to enhance the performance of the printer.

Use the printer Toolbox to perform the following tasks:

- [Align the print cartridges](#)
- [Clean the print cartridges](#)
- [Print a test page](#)
- [View estimated ink levels](#)

To open the printer Toolbox

1. Open the [Printer Properties dialog box](#).
2. Click the **Features** tab, and then click the **Printer services** button.
The Toolbox is displayed.

10 Troubleshooting

- Installation problems
- Printer does not print
- Paper jam
- Paper problems
- Printer is stalled
- Print cartridge problems
- Photos do not print correctly
- Print quality is poor
- Document is misprinted
- Problems with borderless documents
- Error messages
- Power light is on or flashing
- Document prints slowly
- If you continue to have problems

Installation problems

If the software installation program stops or fails, check the following topics for more information:

- Installation program stops
- "Unknown Device" message displays
- Printer name does not appear

If you continue to have problems, visit HP Technical Support at www.hp.com/support.

Installation program stops

If the installation program stops when it looks for new hardware, one of the following issues is causing a communication problem:

- The USB cable is old or defective.
- Software, such as an antivirus program, is running.
- Another device, such as a scanner, is connected to the computer.

To resolve the problem

1. Make sure that no USB devices other than the printer, the keyboard, and the mouse are connected to the computer.
2. Disconnect and reconnect the USB cable.
3. Make sure that the printer is connected directly to a USB port on the computer (instead of through a USB hub).
4. If the installation program still does not locate the printer, replace the USB cable, and then continue to the next step.
5. Click **Cancel**, and then restart the computer.
6. Turn the printer off, and then disconnect the USB cable and power cord.

7. Quit any antivirus programs or other software programs that are running on the computer.



Note To quit an antivirus program, follow the manufacturer's instructions.

8. Reinstall the printer software:
 - a. Insert the printer software CD into the drive.
 - b. Follow the onscreen instructions. When the installation program prompts you, connect the USB cable and the power cord to the printer, and then make sure that the printer is on.



Note Do not connect the USB cable until you are told to do so.

- c. Follow the onscreen instructions to finish the installation.
9. Restart the antivirus program.

"Unknown Device" message displays

During installation, an "Unknown Device" message might be displayed when you connect a USB cable between the printer and the computer. A possible cause might be a defective USB cable.



Note This is not a problem if you are using Windows 2000. If you are using Windows 2000 and this message is displayed, you can continue with the software installation.

To resolve the problem

1. Disconnect the USB cable from the printer.
2. Disconnect the power cord from the printer.
3. Wait approximately 30 seconds.
4. Reconnect the power cord to the printer.
5. Reconnect the USB cable to the printer.
6. If the "Unknown Device" message is still displayed, replace the USB cable.

Printer name does not appear

If the printer software seems to install correctly, but the printer name does not appear in the list of printers when you click **Print** on the **File** menu or in the Printers folder in Control Panel, try reinstalling the printer software.

To reinstall the printer software

1. Quit any antivirus programs or other software programs that are running on the computer.



Note To quit an antivirus program, follow the manufacturer's instructions.

2. Uninstall the printer software:
 - a. Insert the printer software CD into the drive, and then follow the onscreen instructions.



Note If the installation program does not start automatically, click your CD drive letter in Windows Explorer, then double-click the setup.exe file. For example, double-click D:\setup.exe.

- b. When prompted, click **Remove All**.
3. Reinstall the printer software:
 - a. Insert the printer software CD into the drive.
 - b. Follow the onscreen instructions to finish the installation.
4. Restart the antivirus program.

Printer does not print

- [Verify the following](#)
- [Check the printer cable connection](#)
- [Clear the print queue](#)
- [If the printer still does not print](#)

Verify the following

Verify the following conditions if the printer is not printing:

- The printer is connected to the power source.
- The cable connections are secure.
- The printer is turned on.
- The print cartridges are the correct print cartridges for the printer and are properly installed.

For more information, see [Print cartridges](#) and [Installation instructions](#).

- The paper or other media is correctly loaded in the paper tray.
- The printer cover is closed.
- The rear access door is attached.

Check the printer cable connection

If your printer and computer are connected with a USB cable and the devices are not communicating with each other, try the following:

- Make sure the power cord is firmly connected to the printer and plugged into a power outlet.
- Check the USB cable. If you are using an older cable, it might not be working properly. If you experience problems, the USB cable might need to be replaced. Also verify that the cable does not exceed 3 meters (9.8 feet) in length.
- Check the connection from your printer to your computer. Verify that the USB cable is securely plugged into the USB port on the back of your printer. Make sure the other end of the USB cable is plugged into a USB port on your computer. After the cable is connected properly, turn your printer off and then on again.
- If you are connecting the printer through a USB hub, make sure the hub is turned on. If the hub is on, try connecting the printer directly to your computer.
- Try connecting the USB cable to another USB port on your computer. After you check the connections, try restarting your computer. Turn your printer off and then on again.



Note For best printing performance, use a USB 2.0 compatible cable.

Clear the print queue

When you start a print job, it is sent to a list called the “print queue.” If the printer stops printing before the job is complete, the print job might be stalled in the print queue.

After resolving a print job that is stalled in the print queue, the print queue still might not be clear. In that situation, you need to stop and then restart the print service.

To resolve a print job that is stalled in the queue

1. For Windows 2000, click **Start**, click **Settings**, and then click **Printers**. For Windows XP, click **Start**, and then click **Printers and Faxes**.
2. Double-click the name of the HP Deskjet printer.
3. Click the **Printer** menu, and then click **Pause Printing**.
4. Click the **Printer** menu again, and then click **Cancel All Documents**.
5. Click **Yes** to confirm the cancellation.
6. Click the **Printer** menu, and then uncheck **Pause Printing**.
7. If there are still documents in the list, restart the computer.
8. After restarting, if there are still documents in the list, repeat steps 1 – 6.

To stop and restart the print service

1. For Windows 2000, click **Start**, click **Control Panel**, and then click **Administrative Tools**. For Windows XP, click **Start**, click **Control Panel**, click **Performance and Maintenance**, and then click **Administrative Tools**.
2. Double-click **Services**, and then double-click **Print Spooler**.
3. Click **Stop**, and then click **Start** to restart the print service.
4. Click **OK** to close the window.


If the printer still does not print

1. Select the topic below that best describes the problem:
 - [Paper jam](#)
 - [Out of paper message](#)
 - [Printer is stalled](#)
2. If the printer still does not print, shut down, and then restart your computer.


Paper jam

To clear a paper jam

1. Remove the paper from the paper tray.
2. If you are printing labels, verify that a label did not become detached from the label sheet while passing through the printer.
3. Turn off the printer.
4. Remove the rear access door. Press the handle to the right, and then pull out the door.

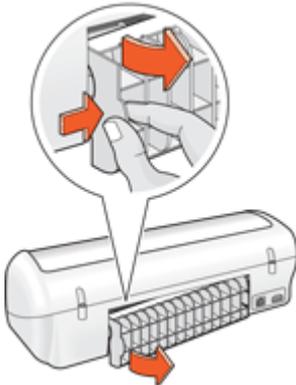

5. Remove the paper jam from the back of the printer, and then replace the rear access door securely.

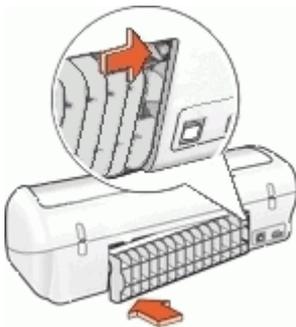

6. If the paper jam cannot be removed from the back of the printer, raise the printer cover, remove the paper jam from the front of the printer, and then lower the cover.



Caution Remove the paper jam carefully as it is possible to damage the printer when removing paper from the front.

7. Reload paper in the paper tray.
8. Turn on the printer.
9. Reprint the document.



Note If paper jams occur frequently, try using a heavier paper. See [Printer specifications](#) for paper weight specifications.

Paper problems

- [Printer does not feed paper](#)
- [Out of paper message](#)
- [Printer prints on multiple sheets at once](#)

Printer does not feed paper

Try one or more of the following solutions:

- Reduce the number of sheets in the paper tray.
- Remove the paper from the paper tray, and then reload it.
- Use a different type of paper.

Out of paper message

Follow the appropriate steps for the condition that exists.

- [If the paper tray is loaded](#)
- [If the paper tray is empty](#)

If the paper tray is loaded

1. Verify the following:
 - A sufficient amount of paper is loaded in the paper tray (at least ten sheets).
 - The paper tray is not overly full.
 - The paper stack is touching the back of the paper tray.
2. Slide the paper guide so that it fits firmly against the edge of the paper.
3. Click **Continue** to resume printing.

If the paper tray is empty

1. Load paper in the paper tray.
2. Push the paper forward until it stops.
3. Slide the paper guide so that it fits firmly against the edge of the paper.
4. Click **Continue** to resume printing.

Printer prints on multiple sheets at once

If the printer prints on multiple sheets at once, check the following:

- Paper weight
- Paper might be loaded improperly

Paper weight

The printer might print on multiple sheets of paper at once if the paper is under the recommended [paper weight](#). Use paper that is within the recommended specifications.

Paper might be loaded improperly

The printer might print on multiple sheets of paper at once if the paper is loaded too far toward the back of the printer or if the paper guide is not positioned firmly against the paper. Reload the paper into the paper tray, pushing the paper until you feel resistance, and then slide the paper guide firmly against the edge of the paper stack.

The printer also might print on multiple sheets if different paper types are loaded in the printer. For example, photo paper might be mixed with plain paper. Empty the paper tray and load only the paper type that is appropriate for the document that you are printing.

Printer is stalled

If the printer stalls while printing a document, raise the printer cover, and then disconnect the power cable from the back of the printer.



Caution First, check for any loose or broken parts in the printer. If you find loose or broken parts, go to www.hp.com/support.

If there are no loose or broken parts, follow these steps:

1. Check for and remove any obstacles, such as packing tape or materials, that prevent the print cartridges from moving back and forth.
2. Make sure the print cartridges are installed securely in the print cartridge cradle. For more information, see [Installation instructions](#).
3. Make sure the tri-color print cartridge is installed in the left side of the cradle and the black print cartridge is installed in the right side of the cradle.
4. Check for and clear any paper jam. For more information, see [Paper jam](#).
5. Lower the printer cover.
6. Connect the power cable to the back of the printer, and then turn on the printer.

Print cartridge problems


- Incorrect print cartridge
- Print cartridge is faulty or not installed properly
- "Printing in ink-backup mode" message
- "Print cartridge is in the wrong slot" message

Incorrect print cartridge

The printer can only print when the correct print cartridges are installed.

To verify that you have the correct print cartridges

1. Open the printer cover.
2. Read the selection number on the print cartridge label.

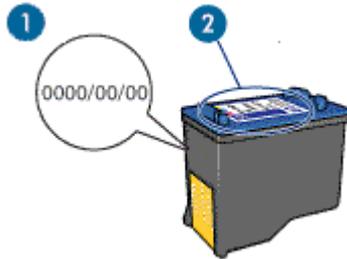

1	Warranty date
2	Selection number

3. Check the list of print cartridges that can be used in the printer.
 - a. Open the printer [Toolbox](#).
 - b. Click the **Estimated Ink Levels** tab.
 - c. Click the **Print Cartridge Information** button and view the list of print cartridge selection numbers.
The reference guide that came with the printer also shows the print cartridge selection numbers.
4. Check the warranty date on the print cartridge.
5. If the print cartridge has the wrong selection number, or if the warranty has expired, install a new print cartridge. For more information, see [Installation instructions](#).
6. Close the printer cover.
If the Power light is not flashing, then the problem is fixed.
If the Power light is flashing, visit HP Technical Support at www.hp.com/support.

Print cartridge is faulty or not installed properly

The printer cannot print if the print cartridges are faulty, or if they are not installed properly.

To resolve the problem

1. Raise the printer cover.
2. Do one of the following:
 - If an error message is displayed on screen, remove the print cartridge that is named in the error message. Go to step 3.
 - If an error message is not displayed, remove and reinstall each print cartridge. If the Power light is not flashing, the problem is solved. If the Power light is flashing, go to step 4.

3. Reinstall the print cartridge. For more information, see [Installation instructions](#).
If the Power light is not flashing, the problem is solved.
If the Power light is flashing, go to step 4.
4. [Manually clean](#) the print cartridge.
5. Reinsert the print cartridge in the printer and close the printer cover.
If the Power light is still flashing, the print cartridge is faulty and must be replaced.



Note You can print with one print cartridge in ink-backup mode if you do not have a replacement print cartridge available. For more information, see [Ink-backup mode](#).

6. If the Power light continues to flash after replacing the print cartridge, visit HP Technical Support at www.hp.com/support.

"Printing in ink-backup mode" message

When the printer detects that only one print cartridge is installed, ink-backup mode is initiated. This printing mode lets you print with a single print cartridge, but it slows the printer and affects the quality of printouts.

If you receive the ink-backup mode message and two print cartridges are installed in the printer, verify that the protective piece of plastic tape has been removed from each print cartridge. When plastic tape covers the print cartridge contacts, the printer cannot detect that the print cartridge is installed.

"Print cartridge is in the wrong slot" message

If you receive this error message, the print cartridge is installed in the wrong side of the print cartridge cradle.

Always install the tri-color print cartridge in the left print cartridge cradle compartment.
Install the black print cartridge in the right print cartridge cradle compartment.

Photos do not print correctly

- [Check the paper tray](#)
- [Check the printer properties](#)

Check the paper tray

1. Verify that the photo paper is placed in the paper tray with the side to be printed on facing down.
2. Slide the paper forward until it stops.
3. Slide the paper guide firmly against the edge of the paper.
Do not press the guide so firmly against the paper that the paper bends or curls.

Check the printer properties

Open the [Printer Properties dialog box](#) and verify the following options:

Tab	Setting
Features	Size: An appropriate paper size Paper Type: An appropriate photo paper Print Quality: Best or Maximum dpi

Print quality is poor


- Streaks and missing lines
- Print is faded
- Blank pages print

Streaks and missing lines

If your printed pages are missing lines or dots or if streaks appear, the print cartridges might be low on ink or might need to be cleaned. For more information, see [View estimated ink levels](#) and [Automatically clean print cartridges](#).

Print is faded

- Verify that neither of the print cartridges is low on ink.
For more information, see [View estimated ink levels](#). If a print cartridge is low on ink, consider replacing the print cartridge. For the correct part numbers, see the reference guide that came with the printer.
- Verify that a black print cartridge is installed.
If the black text and images on your printouts are faded, you might be printing with only the tri-color print cartridge. Insert a black print cartridge, in addition to the tri-color print cartridge, for optimal black print quality.
- Verify that the protective piece of plastic tape has been removed from the print cartridges.

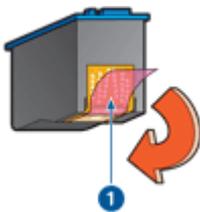


1	Remove plastic tape
---	---------------------

- Consider selecting a higher [print quality](#).

Blank pages print

- The protective piece of plastic tape might still be attached to the print cartridges. Verify that the plastic tape has been removed from the print cartridges.

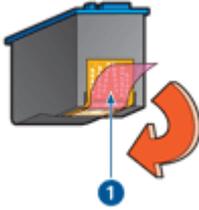

1	Remove plastic tape
---	---------------------

- The print cartridges might be out of ink. Replace one or both empty print cartridges. For more information, see [View estimated ink levels](#).

Document is misprinted

- Text and images are misaligned
- Document is printed off-center or at an angle
- Parts of the document are missing or printed in the wrong place
- Envelope is printed at an angle
- Document does not reflect the new print settings

Text and images are misaligned

If the text and images on your printouts are misaligned, then [align](#) the print cartridges.

Document is printed off-center or at an angle

1. Verify that only one type of paper is placed in the paper tray, and that the paper has been placed in the tray correctly.
2. Verify that the paper guide fits firmly against the edge of paper.
3. Reprint the document.

Parts of the document are missing or printed in the wrong place

Open the [Printer Properties dialog box](#) and confirm the following options:

Tab	Setting
Features	Portrait or Landscape: Verify the appropriate orientation.
	Size: Verify the appropriate paper size.
	Scale to paper size: Select this option to scale text and graphics to the paper size specified in the corresponding drop-down list.

If parts of the document are still missing, the printer settings might be overridden by the software program print settings. Select the appropriate print settings from within the software program.

Envelope is printed at an angle

1. Slide the flap inside the envelope before loading it in the printer.
2. Confirm that the paper guide fits firmly against the edge of the envelope.
3. Reprint the envelope.

Document does not reflect the new print settings

The printer settings might differ from the software program print settings. Select the appropriate print settings within the software program.

Problems with borderless documents

- [Borderless printing guidelines](#)
- [Image is printed at an angle](#)
- [Fading occurs on the edges of a photo](#)
- [Photo has an unwanted border](#)

Borderless printing guidelines

When printing borderless photos or brochures, follow these guidelines:

- Verify that the paper size that is specified in the **Paper Size** drop-down list on the **Printing Shortcuts** tab matches the size of the paper that is loaded in the paper tray.
- Select the appropriate paper type in the **Paper Type** drop-down list on the **Printing Shortcuts** tab.
- If printing in grayscale, select **High Quality** under **Print in Grayscale** on the **Color** tab.
- Do not print borderless documents in ink-backup mode. Always have two print cartridges installed in the printer when printing borderless documents.
For more information, see [Ink-backup mode](#).

Image is printed at an angle



Verify that no problem exists with the source image. For example, if you are printing a scanned image, verify that the image was not crooked when it was scanned.

If the problem is not caused by the source image, follow these steps:

1. Remove all paper from the paper tray.
2. Load the photo paper correctly in the paper tray.
3. Verify that the paper guide fits firmly against the edge of the paper.
4. Follow loading instructions for the paper type.

Fading occurs on the edges of a photo



Verify that the photo paper is not curled. If the photo paper is curled, place the paper in a plastic bag and gently bend it in the opposite direction of the curl until the paper lies flat. If the problem persists, then use photo paper that is not curled.

For instructions about preventing photo paper from curling, see [Store and handle photo paper](#).

Photo has an unwanted border

- For small photo paper
- For small photo paper with a tear-off tab

For small photo paper



If the printout has an unwanted border, try the following solutions:

- [Align the print cartridges.](#)
- Open the [Printer Properties dialog box](#), click the **Features** tab, and verify that the selected paper size matches both the paper size that the photo is formatted for and the size of the paper that is loaded in the printer.
- Verify that no problem exists with the source image. For example, if you are printing a scanned image, verify that the image was not crooked when it was scanned.
- Verify that the software application you are using supports borderless printing.

For small photo paper with a tear-off tab

If the border appears below the tear-off tab, then remove the tab.



If the border appears above the tear-off tab, then [align the print cartridges.](#)



Error messages

- [Print cartridge error messages](#)
- [Other error messages](#)

Print cartridge error messages

If you receive a print cartridge error message, follow these directions.

Incorrect print cartridge message

The printer can only print when the correct print cartridges are installed. If you receive a print cartridge error message, one or both of the print cartridges cannot be used in the printer.

To resolve the problem, follow the instructions in [Incorrect print cartridge](#).

Print cartridge problem message

The printer cannot print if the print cartridges are faulty, or if they are not installed properly.

If you receive a message stating there is a problem with a print cartridge, follow the instructions in [Print cartridge is faulty or not installed properly](#) to resolve the problem.

"Print cartridge carriage is stalled" message

If the printer stalls while you are printing a document, follow the instructions in [Printer is stalled](#).

"Print cartridge is in the wrong slot" message

If you receive this error message, the print cartridge is installed in the wrong side of the print cartridge cradle. Follow the instructions in ["Print cartridge is in the wrong slot" message](#) to resolve the problem.

"Printing in ink-backup mode" message

If you receive this error message, [follow these instructions](#).

Other error messages

If you receive an error message, follow these directions.

Out of paper message

If you receive an out of paper message, follow the guidelines in [Out of paper message](#).

"There was an error writing to USB port" message

The printer might not be receiving correct data from another USB device or USB hub. Connect the printer directly to the USB port on the computer.

"Two-way communication cannot be established" or "Printer not responding" message

The printer might not be able to communicate with the computer if the USB cable is too long.

If you receive this error message, make sure that the USB cable is not greater than 3 meters (approximately 9.8 feet) in length.



Note For best printing performance, use a USB 2.0 compatible cable.

Power light is on or flashing



1	Power light
---	-------------

- If the Power light is **on**, the printer is either printing or ready to print.
- If the Power light is **off**, the printer is off.
- If the Power light is **flashing**, see the following information.
- [What the flashing light means](#)
- [If an error message appears](#)
- [If no error message appears](#)

What the flashing light means

The Power light can flash for several reasons:

- The printer cover is open.
- The printer is out of paper.
- A problem exists with the printer, such as a paper jam or a problem with a print cartridge.

For information about clearing a paper jam, see [Paper jam](#).

If an error message appears

Read the error message that explains the problem and its solution.

If no error message appears

Check the status of the printer by using the printer tools. To gain access to the tools, open the [Printer Properties dialog box](#), click the **Features** tab, and then click the **Printer services** button.

Use the printer tools to perform the following tasks:

- View estimated ink levels.
- Clean the print cartridges.
- Calibrate the printer.
- Print a test page.
- Perform other functions as needed.

Document prints slowly

Multiple software programs are open

The computer resources are insufficient for the printer to print at its optimum speed. To increase printer speed, close all unnecessary software programs when printing.

Complex documents, graphics, or photos are printing

Documents containing graphics or photos print more slowly than text documents.

Best or Maximum dpi print mode is selected

The printer prints more slowly when Best or Maximum dpi is selected as the print quality. To increase the printer speed, select a different print quality mode.

Printer is in ink-backup mode

The printer might print more slowly if it is in ink-backup mode. For more information, see [Ink-backup mode](#).

To increase the print speed, use two print cartridges in the printer.

Printer software is outdated

Outdated printer software might be installed.

For information about updating the printer software, see [Download printer software updates](#).

Computer does not meet system requirements

If your computer does not have enough RAM or a large amount of free space on the hard drive, the printer processing time will be longer.

1. Verify that the computer hard disk space, RAM, and processor speed meet the system requirements.
The system requirements are listed in the reference guide that came with the printer.
2. Make space available on the hard drive by deleting unwanted files.

If you continue to have problems

If you continue to have problems after investigating the troubleshooting topics, shut down your computer and then restart it.

If you still have questions after restarting your computer, visit HP Technical Support at www.hp.com/support.

For information about the support process, see [HP support](#).

A HP support

- [Support process](#)
- [HP support by phone](#)

Support process

If you have a problem, follow these steps

1. Check the documentation that came with the HP Deskjet.
2. Visit the HP online support Web site at www.hp.com/support. HP online support is available to all HP customers. It is the fastest source for up-to-date device information and expert assistance and includes the following features:
 - Fast access to qualified online support specialists
 - Software and driver updates for your HP Deskjet
 - Valuable HP Deskjet and troubleshooting information for common problems
 - Proactive device updates, support alerts, and HP newsgroups that are available when you register your device
3. For Europe only: Contact your local point of purchase. If your device has a hardware failure, you will be asked to bring it back to your local point of purchase. (Service is provided at no charge during the device limited warranty period. After the warranty period, you will be quoted a service charge.)
4. Call HP support. Support options and availability vary by device, country/region, and language.

HP support by phone

- [Phone support period](#)
- [Placing a call](#)
- [After the phone support period](#)

Phone support period

One year of phone support is available in North America, Asia Pacific, and Latin America (including Mexico). To determine the duration of phone support in Europe, the Middle East, and Africa, go to www.hp.com/support. Standard phone company charges apply.

Placing a call

Call HP support while you are in front of the computer and the HP Deskjet. Be prepared to provide the following information:

- Device model number (located on the label on the front of the device)
- Device serial number (located on the back or bottom of the device)
- Messages that appear when the situation occurs
- Answers to these questions:
 - Has this situation happened before?
 - Can you re-create it?
 - Did you add any new hardware or software to your computer at about the time that this situation began?
 - Did anything else occur prior to this situation (such as a thunderstorm, device was moved, etc.)?

After the phone support period

After the phone support period, help is available from HP at an additional cost. Help may also be available at the HP online support Web site: www.hp.com/support. Contact your HP dealer or call the support phone number for your country/region to learn more about support options.

B Supplies

Order the following supplies with your HP Deskjet.

Paper

To order media such as HP Premium Paper, HP Premium Inkjet Transparency Film, or HP Greeting Cards, go to www.hp.com.

Choose your country/region, and then click **Buy** or **Online Shopping**.

USB cables

C6518A HP USB A–B 2-meter cable

C Technical information

- [Printer specifications](#)
- [Environmental product stewardship program](#)
- [Regulatory notices](#)

Printer specifications

The HP Deskjet has the following specifications and requirements.

Physical specifications

Printer dimension (with the tray extended): 142 mm high x 422 mm wide x 346 mm deep (5.6 inches high x 16.6 inches wide x 13.62 inches deep)

Printer weight (without print cartridges): 2.04 kg (4.5 lbs)

Software compatibility

Windows compatible (98 SE, Me, 2000, and XP)

Memory

384 KB integrated memory

Minimum system requirements

Operating system	Processor	RAM	Hard disk space
Windows 98 SE, Me, 2000, XP	Pentium II or equivalent	64 MB	200 MB



Note For best printing performance, use a USB 2.0 compatible cable.

Paper tray capacity

Plain paper sheets: Up to 80

Paper size

For a complete list of supported media sizes, see the printer software.

Paper weights

Letter Paper: 65 to 90 g/m² (16 to 24 lb)

Legal Paper: 70 to 90 g/m² (20 to 24 lb)

Envelopes: 70 to 90 g/m² (20 to 24 lb)

Cards: Up to 200 g/m² (110-lb index maximum)

Photo Paper: Up to 280 g/m² (75-lb index maximum)

Environmental product stewardship program

Hewlett-Packard is committed to providing quality products in an environmentally sound manner. Design for recycling has been incorporated into this product. The number of materials has been kept to a minimum while ensuring proper functionality and reliability. Dissimilar materials have been designed to separate easily. Fasteners and other connections are easy to locate, access, and remove using common tools. High priority parts have been designed to access quickly for efficient disassembly and repair.

For more information, visit HP's Commitment to the Environment Web site at:
www.hp.com/hpinfo/globalcitizenship/environment/index.html

This section contains the following topics:

- Paper use
- Plastics
- Material safety data sheets
- Recycling program
- HP inkjet supplies recycling program
- Energy consumption - Energy Star

Paper use

This product is suited for the use of recycled paper according to DIN 19309 and EN 12281:2002.

Plastics

Plastic parts over 25 grams are marked according to international standards that enhance the ability to identify plastics for recycling purposes at the end of product life.

Material safety data sheets

Material safety data sheets (MSDS) can be obtained from the HP Web site at:

www.hp.com/go/msds

Recycling program

HP offers an increasing number of product return and recycling programs in many countries/regions, and partners with some of the largest electronic recycling centers throughout the world. HP conserves resources by reselling some of its most popular products. For more information regarding recycling of HP products, please visit:

For more information regarding recycling of HP products, please visit:

www.hp.com/hpinfo/globalcitizenship/environment/recycle/

HP inkjet supplies recycling program

HP is committed to protecting the environment. The HP Inkjet Supplies Recycling Program is available in many countries/regions, and lets you recycle used print cartridges and ink cartridges free of charge. For more information, go to the following Web site:

www.hp.com/hpinfo/globalcitizenship/environment/recycle/

Energy consumption - Energy Star

Energy usage drops significantly while in ENERGY STAR® mode, which saves natural resources, and saves money without affecting the high performance of this product.

This product qualifies for ENERGY STAR (MOU v.3.0), which is a voluntary program established to encourage the development of energy-efficient office products.



ENERGY STAR is a U.S. registered service mark of the U.S. EPA. As an ENERGY STAR partner, HP has determined that this product meets ENERGY STAR guidelines for energy efficiency.

For more information on ENERGY STAR guidelines, go to the following Web site:

www.energystar.gov

Regulatory notices

- [FCC statement](#)
- [LED indicator statement](#)
- [Notice to users in Korea](#)

FCC statement

The United States Federal Communications Commission (in 47 CFR 15.105) has specified that the following notice be brought to the attention of users of this product.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifications (part 15.21): The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by HP may void the user's authority to operate the equipment.

For further information, contact the Manager of Corporate Product Regulations, Hewlett-Packard Company, 3000 Hanover Street, Palo Alto, CA 94304, (650) 857-1501.

LED indicator statement

The display LEDs meet the requirements of EN 60825-1.

Notice to users in Korea

사용자 안내문(B급 기기)

이 기기는 비업무용으로 전자파 적합 등록을 받은 기기로서,
주거지역에서는 물론 모든 지역에서 사용할 수 있습니다.

Index

- A**
 - accessibility 2
 - after the support period 71
 - aligning print cartridges 48
- B**
 - booklet printing 28
 - borderless printing 64
 - bound two-sided printing 39
 - brochure printing 26
 - buttons
 - Power button 7
- C**
 - calling HP support 70
 - CD/DVD tattoo printing 24
 - cleaning
 - print cartridges
 - automatically 48
 - print cartridges manually 50
 - printer body 49
 - clearing the print queue 56
 - custom paper size 37
- D**
 - default print settings 41
 - default printer 41
 - digital photos 16
 - document is misprinted
 - document is printed off-center or at an angle 63
 - document printing 19
 - document prints slowly
 - complex documents are printing 69
 - ink-backup mode 69
 - Maximum dpi selected 69
 - multiple programs are open 69
 - printer software is outdated 69
 - system requirements 69
 - dpi, maximum 36
 - duplexing 38, 39
- E**
 - e-mail printing 18
- energy consumption 74
- Energy Star 74
- envelope printing 21
- environment
 - Environmental product stewardship program 73
- error messages
 - other errors 67
 - out of paper message 58
 - print cartridge errors 66
- estimated ink level 49
- Exif Print 16
- F**
 - fast/economical printing 34
 - FCC statement 75
- G**
 - general everyday printing 34
 - grayscale printing 36
 - greeting card printing 27
- H**
 - Hewlett-Packard Company
 - notices 2
 - HP Photosmart software
 - downloading 44
- I**
 - index card printing 23
 - Ink Status window 43
 - ink, removing ink from skin and clothing 49
 - ink-backup mode 10
 - installation
 - program stops 53
 - installing print cartridges 45
 - iron-on transfer printing 31
- L**
 - label printing 24
 - LED indicator statement 75
 - letter printing 20
 - lights
 - Power light 7
 - low ink 49
- M**
 - maintenance
 - print cartridges 51
 - printer 45
 - printer body 49
 - maximum dpi 36
- O**
 - other document printing 18
- P**
 - page order, setting 36
 - paper jam 57
 - paper tray 7
 - paper type, selecting 35
 - phone support period
 - period for support 70
 - photo fix options 16
 - photo has unwanted border
 - for small photo paper 65
 - photo paper, storing and handling 17
 - photo printing
 - borderless photos 13
 - photos with a border 15
 - saving money 17
 - photo printing problems
 - verifying print settings 61
 - photos
 - digital 16
 - do not print correctly 61
 - placing a call 70
 - postcard printing 22
 - poster printing 30
 - power light is flashing
 - if an error message appears 68
 - if no error message appears 68
 - presentation printing 34
 - print cartridge problems
 - incorrect print cartridge 60
 - print cartridges
 - aligning 48
 - cleaning automatically 48
 - cleaning manually 50
 - faulty 60

Index

- installing 45
- maintaining 51
- not installed properly 60
- ordering information 49
- print with one print
 - cartridge 10
- problem message 60
- replacing 9
- selection numbers 45
- used with the printer 9
- print preview 38
- print quality
 - blank pages print 63
- print queue, clearing 56
- print resolution 35
- print settings
 - changing 42
 - default settings 41
- print speed 35
- printer does not feed paper 58
- printer features 6
- printer is not printing 55
- printer is stalled 59
- printer maintenance 45
- printer name does not appear 55
- printer prints on multiple sheets
 - at once 58
- printer properties 42
- printer software
 - downloading updates 44
- printer specifications 73
- printer Toolbox 52
- printer troubleshooting 53
- printing
 - 4800 x 1200 optimized dpi 36
 - booklets 28
 - borderless photos 13
 - bound two-sided printing 39
 - brochures 26
 - CD/DVD tattoos 24
 - custom paper size 37
 - digital photos 16
 - documents 19
 - e-mails 18
 - envelopes 21
 - Exif Print 16
 - fast/economical 34
 - general everyday printing 34
 - grayscale 36
 - greeting cards 27
 - high quality 36
 - index cards and small media 23
 - iron-on transfers 31
 - labels 24
 - letters 20
 - maximum dpi 36
 - multiple pages on single sheet 37
 - other documents 18
 - photos 13
 - photos with a border 15
 - postcards 22
 - posters 30
 - presentation printing 34
 - print preview 38
 - print quality 35
 - print resolution 35
 - print settings 42
 - print speed 35
 - resizing documents 37
 - selecting a paper type 35
 - setting the page order 36
 - software 41
 - tips 33
 - transparencies 25
 - two-sided printing 38
 - with one print cartridge 10
- Printing Shortcuts tab 33
- printing tips 33
- problems with borderless documents
 - for small photo paper with a tear off tab 66
- R**
- Real Life technologies 16
- recycle
 - ink cartridges 74
- regulatory notices
 - FCC statement 75
 - notice to users in Korea 75
- removing ink from skin and clothing 49
- resizing documents 37
- S**
- settings 42
- T**
- terms and conventions in manual 2
- test page, printing 49
- Toolbox 52
- transparency printing 25
- troubleshooting
 - borderless printing
 - guidelines 64
 - borderless printing problems 64
 - document does not reflect new print settings 64
 - document prints slowly 69
 - envelope prints at angle 64
 - image prints at angle 64
 - installation program stops 53
 - misprinted document 63
 - multiple pages print at once 58
 - paper jam 57
 - parts of the document are missing or in wrong place 63
 - photo printing problems 61
 - poor print quality 62
 - print is faded 62
 - printer 53
 - printer does not feed paper 58
 - printer is not printing 55
 - printer is stalled 59
 - printer name does not appear 55
 - streaks and missing lines 62
 - text and images are misaligned 63
 - unwanted border on photo 65
- two-sided printing 38
- U**
- Unknown Device message 54
- updates
 - downloading for software 44
 - HP Photosmart software 44
- USB
 - cable 72
 - connecting to the printer 12

W

What's This help 43