

快速入門手冊

Quick Start Guide




HP Photosmart D7300 series



1

拆開 HP Photosmart 印表機的包裝

Unpack the HP Photosmart printer

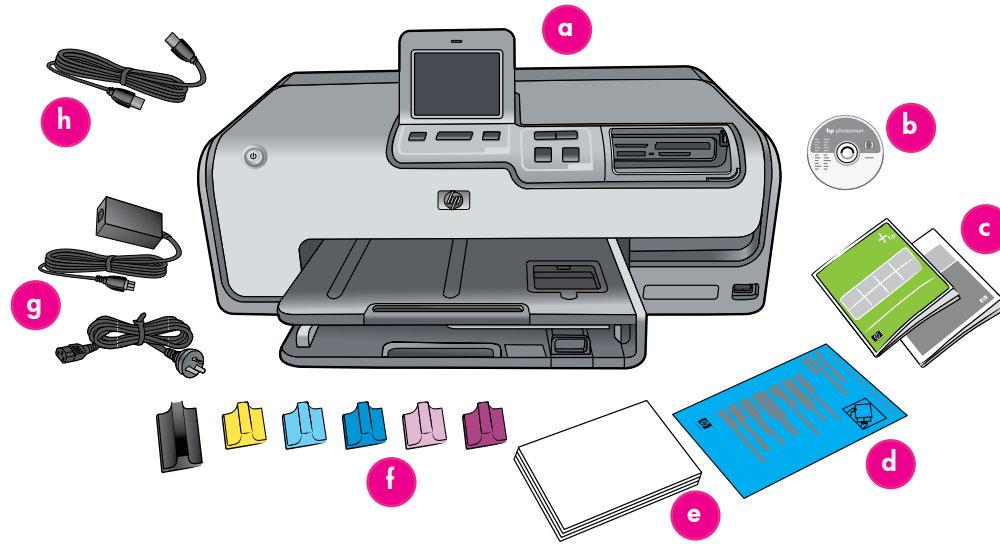

繁體中文

感謝您購買 HP Photosmart 印表機！請仔細閱讀此手冊與其他隨附的文件來幫助您開始使用以及獲得印表機的最佳效能。

1. **Windows 使用者請注意：** 在安裝軟體過程中等候連接 USB 纜線的系統提示。
2. 從內部和印表機周圍取出膠帶和硬紙板包裝材料。
3. 檢查包裝箱內的物品。物品可能會根據國家/地區而有所不同。參照包裝說明以了解實際包含的物品。
 - a. HP Photosmart D7300 series 印表機
 - b. HP Photosmart 軟體光碟片
 - c. 使用者說明文件：使用者手冊和快速入門手冊
 - d. 相紙儲存袋（僅在特定國家/地區提供）
 - e. 紙張樣品
 - f. 六個墨水匣
 - g. 電源線和電源供應器
 - h. USB 纜線（僅在特定國家/地區提供）

English

Thank you for purchasing an HP Photosmart printer! Read this booklet and other accompanying documentation to help you get started and get the most out of your printer.


1. **Attention Windows users:** Wait to connect the USB cable until prompted during software installation.
2. Remove the tape and cardboard packaging from inside and around the printer.
3. Check the contents of the box. The contents may vary by country/region. Refer to the packaging for the actual contents.
 - a. HP Photosmart D7300 series printer
 - b. HP Photosmart software on CD
 - c. User documentation: User Guide and Quick Start Guide
 - d. Photo paper storage bag (only available in certain countries/regions)
 - e. Paper sampler
 - f. Six ink cartridges
 - g. Power cord and power supply
 - h. USB cable (only available in certain countries/regions)

2


連接電源與設定您的語言

Connect the power and set your language

僅連接電源
Connect power only

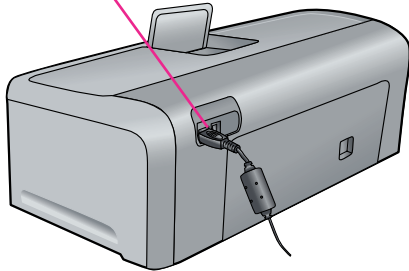

「On」（開啓）按鈕
On button

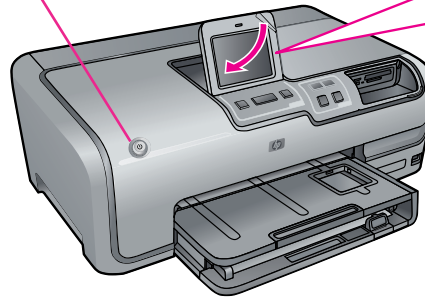

繁體中文

1. 將電源線插入印表機和牆上插座。
2. **Windows 使用者請注意：** 在安裝軟體過程中等到出現系統提示才連接 USB 纜線。
3. HP Photosmart D7300 series 印表機具有觸控式螢幕。 **移除觸控式螢幕的保護膜。**
4. 按「On」（開啓）按鈕，開啓印表機。
5. 當出現「**Select Language**」（**選擇語言**）的提示時，上下觸摸箭頭捲動可用的語言，然後觸摸您的語言。
6. 觸摸「**Yes**」（**是**）確認您的語言。
7. 當出現「**Select country/region**」（**選擇國家/地區**）的提示時，捲動可用的國家/地區。
8. 觸摸您的國家/地區，然後觸摸「**Yes**」（**是**）確認。


English

1. Connect the power cord to the printer and to a wall outlet.
2. **Attention Windows users:** Wait to connect the USB cable until you are prompted during software installation.
3. The HP Photosmart D7300 series printer has a touch screen display. **Remove the protective film from the touch screen.**
4. Press the **On** button to turn on the printer.
5. When the **Select Language** prompt appears, touch the up and down arrows to scroll through the available languages, then touch your language.
6. Touch **Yes** to confirm your language.
7. When the **Select country/region** prompt appears, scroll through the available countries/regions.
8. Touch your country/region, and then touch **Yes** to confirm.

3

安裝墨水匣

Install the ink cartridges

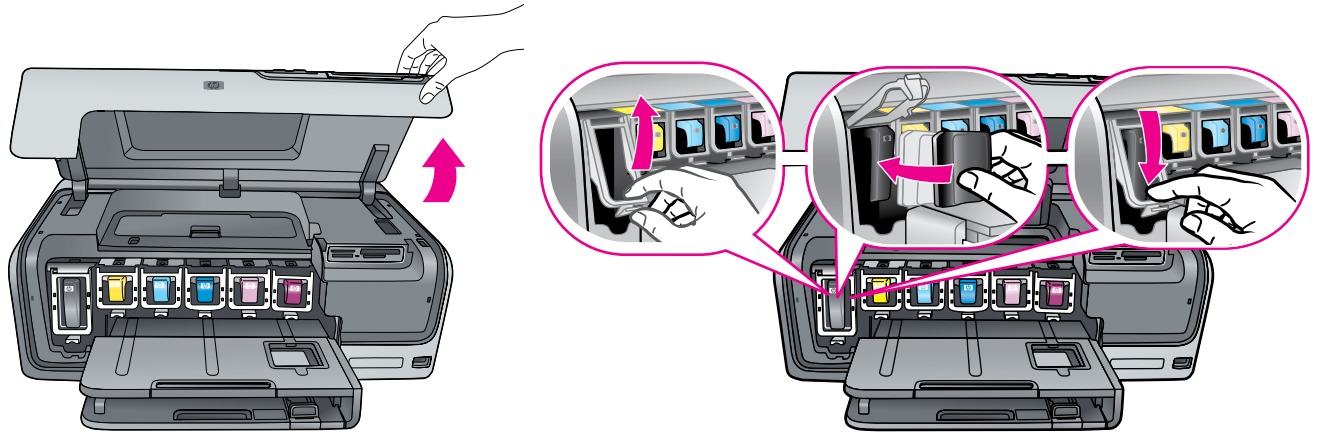

繁體中文

重要！ 僅使用隨印表機提供的墨水匣。這些墨水匣中的墨水是為與印字頭裝置中的墨水混合而特別調配。若印表機在墨水匣安裝過程中顯示錯誤訊息，請瀏覽 www.hp.com/support 以獲取詳細資訊。請勿使用任何其他墨水匣。

1. 提起頂蓋。
2. 拆開其中一個墨水匣包裝。
3. 找到與墨水匣顏色匹配的底座，然後擠壓閘鎖底部的彈片以將它釋放。
4. 插入相符的墨水匣，然後關閉閘鎖。
5. 重複此過程來安裝其他墨水匣。
6. 放下頂蓋，然後依照觸控式螢幕上的提示開始進行墨水匣初始化。

重要！ 安裝墨水匣後，一次性的初始化過程會開始進行。這時發出機械噪音是正常現象，並會持續大約 4 分鐘。請勿關閉或斷開您的印表機。若初始化被中斷，請參閱使用者手冊的疑難排解一節。

提示： 當出現初始化狀態螢幕時，繼續第 4 步驟「裝入一般紙張」。

English

Important! Use only the ink cartridges that came with the printer. The ink in these cartridges is specially formulated to mix with the ink in the print head assembly. **If the printer displays an error message during cartridge installation, browse to www.hp.com/support for more information. Do not use any other cartridges.**

1. Raise the top cover.
2. Unwrap one of the ink cartridges.
3. Locate the stall that matches the ink cartridge color and squeeze the tabs at the bottom of the latch to release it.
4. Insert the matching ink cartridge, then close the latch.
5. Repeat this process to install the remaining cartridges.
6. Lower the top cover, and follow the touch screen prompts to begin the ink cartridge initialization.

Important! A one-time initialization process begins after ink cartridge installation. Mechanical noises are normal and last about 4 minutes. Do not turn off or disconnect your printer. If the initialization is interrupted, see the troubleshooting section of the User Guide.

Tip: Once the initialization status screen appears, proceed to step 4 to load plain paper.

4

裝入一般紙張




Load plain paper

紙張寬度導板

Paper-width guide

紙張長度導板

Paper-length guide

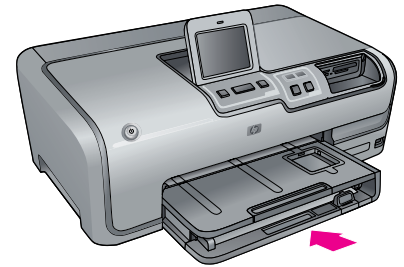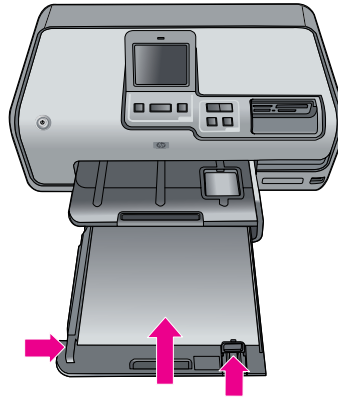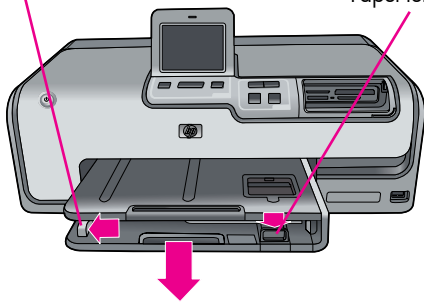

繁體中文

為取得最佳校準效果，裝入一般紙張準備進行印字頭校準。

1. 延伸主紙匣。
2. 將紙張寬度和紙張長度導板滑至它們的最遠位置。
3. 將數張一般紙張裝入主紙匣。
4. 滑入紙張寬度和紙張長度導板直到它們停止在紙張的邊緣。
5. 推入主紙匣。

重要！ 若印表機電源在墨水匣安裝時關閉，請在校準印字頭前完成第 4 頁的墨水起始化。

6. 觸摸螢幕上的 **OK** 以啟動印字頭校準。

如需關於裝入相紙和列印相片的詳細資訊，請翻到本手冊第 11 頁或參閱使用者手冊。

English

For best calibration results, load **plain** paper in preparation for the print head alignment.

1. Extend the main tray.
2. Slide the paper-width and paper-length guides to their outermost positions.
3. Place a few sheets of **plain** letter paper in the main tray.
4. Slide the paper-width and paper-length guides until they stop at the edges of the paper.
5. Push in the main tray.

Important! If the printer was off when the ink was installed, complete the ink initialization on page 4 **before** aligning the print heads.


6. Touch **OK** on the screen to initiate the print head alignment.

For information about loading photo paper and printing photos, turn to page 11 of this booklet or see the User Guide.

5 Windows

安裝 HP Photosmart 軟體 (Windows)

Install the HP Photosmart software (Windows)

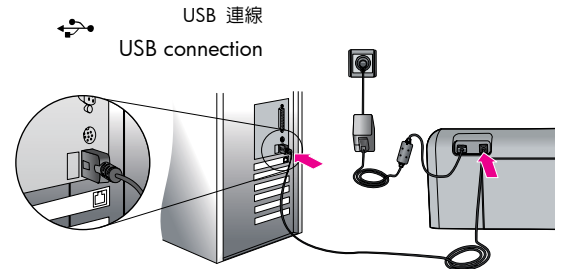

Windows

繁體中文

Windows® 98、Me、2000 Professional、XP Home、XP Professional、x64 Edition

1. **重要!** 等到出現提示才連接 USB 纜線。
2. 放入 HP Photosmart 光碟片。若未顯示指示，請找出並連接兩下光碟片上的 **setup.exe** 檔案。
3. 依照提示安裝軟體。
4. 當被提示安裝類型時，請選擇「**建議**」(HP Photosmart Premier) 或透過選擇「**自訂**」選取 HP Photosmart Essential。
註: Essential 是適用於 Windows 98 和 Me 系統的唯一選項。
5. 出現提示時，連接 USB 纜線。可能需要幾分鐘來建立連線及複製檔案。
6. 出現「恭喜」頁時，請按一下「**列印展示頁**」。

註: 若您在安裝過程中遇到問題，請參閱第 8-9 頁的「安裝疑難排解」。

Windows

English

Windows® 98, Me, 2000 Professional, XP Home, XP Professional, x64 Edition

1. **Important!** Wait to connect the USB cable until you are prompted.
2. Insert the HP Photosmart CD. If instructions do not appear, locate and double-click the **setup.exe** file on the CD.
3. Follow the prompts to install the software.
4. When prompted for the installation type, choose **Recommended** (HP Photosmart Premier) or choose **Custom** to select HP Photosmart Essential.
Note: Essential is the only option for Windows 98 and Me systems.
5. When prompted, connect the USB cable. It may take several minutes to establish a connection and copy the files.
6. When the Congratulations page appears, click **Print a demo page**.
Note: If you experience problems during installation, see Installation troubleshooting on pages 8-9.




5 Mac OS X

安裝 HP Photosmart 軟體 (Mac OS X)



Install the HP Photosmart software (Mac OS X)

USB 連線
USB connection

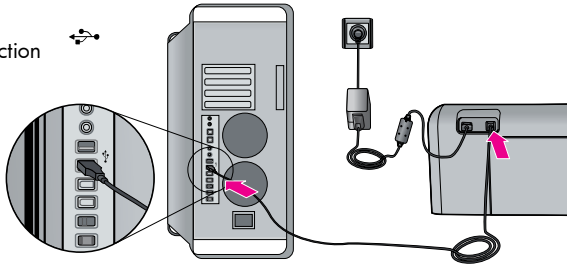

Mac OS X

繁體中文

Mac OS X 10.3、10.4 或更新版本

1. 將 USB 纜線連接到印表機和電腦。
2. 將 HP Photosmart 光碟片放入電腦。
3. 連按兩下桌面上的 **HP Photosmart** 光碟片圖示。
4. 連按兩下「**HP Installer**」(HP 安裝程式) 圖示。會出現「Welcome」(歡迎使用) 頁。依照安裝過程每一頁上的螢幕指示執行。
5. 出現「Congratulations」(恭喜) 頁時，按一下 **OK**。

註： 若您在安裝過程中遇到問題，請參閱第 8-9 頁的「安裝疑難排解」。

Mac OS X

English

Mac OS X 10.3, 10.4 and later

1. Connect the USB cable to the printer and to the computer.
2. Insert the HP Photosmart CD into the computer.
3. Double-click the **HP Photosmart** CD icon on the desktop.
4. Double-click the **HP Installer** icon. The Welcome page appears. Follow the onscreen instructions on each page of the installation.
5. When the Congratulations page appears, click **OK**.

Note: If you experience problems during installation, see Installation troubleshooting on pages 8-9.



安裝疑難排解

Installation troubleshooting

繁體中文

若印表機軟體未成功安裝，或軟體安裝之後，印表機與電腦未正確通訊，請參閱此頁以取得可能的解決方案。

請檢查印表機與電腦之間所有纜線的連接情況，並確保您所安裝的印表機軟體是最新的版本。您可以瀏覽 HP 支援網站 www.hp.com/support 獲取最新的軟體更新。若您仍需要幫助，請參閱印表機說明文件。

僅限於 Macintosh

問題：「Print Center」（列印中心）內的所有印表機在安裝印表機軟體後消失。

解決方法：解除安裝然後重新安裝印表機軟體。將印表機新增到「Print Center」（列印中心）之前先重新啟動電腦。

僅限於 Windows

問題：插入光碟片時，安裝軟體沒有自動啟動。

解決方法：從 Windows 「開始」功能表，選取「執行」。按一下「瀏覽」，然後導覽至您放入 HP Photosmart 軟體光碟片的 CD-ROM 光碟機。連按兩下 **setup.exe** 檔案。

問題：「發現新硬體精靈」有開啓但未能識別印表機。

解決方法：您可能在完成軟體安裝之前連接 USB 纜線。拔掉 USB 纜線。取消硬體安裝精靈。將軟體光碟片放入您的 CD-ROM 光碟機，然後按照畫面上的指示執行。如果沒有出現指示，請查找並連按兩下 CD 上的 **setup.exe** 檔案以重新啟動安裝。如果出現一則訊息說明軟體已成功安裝，請選取「解除安裝」，然後依照指示重新安裝軟體。只有在軟體安裝期間出現提示時重新連接 USB 纜線。

問題：系統需求檢查指出，電腦目前所執行的是舊版 Internet Explorer。

解決方法：按住鍵盤上的 **Ctrl + Shift** 並在「系統需求」對話方塊中按一下「取消」，略過限制並完成軟體安裝。您必須在安裝完成 HP Photosmart 軟體後立即升級 Internet Explorer，否則 HP 軟體將無法正常執行。

註：Internet Explorer 完成升級後，您無須重新安裝 HP 軟體。

問題：在軟體安裝期間電腦停止回應。

解決方法：可能是因為背景正在執行防毒軟體或其他軟體程式，減慢安裝作業速度。請等待軟體完成複製檔案，這可能需要數分鐘的時間。若數分鐘後電腦仍無回應，請重新啟動電腦、暫停或停用任何使用中的防毒軟體、關閉所有其他的軟體程式，然後重新安裝印表機軟體。**註：**您的防毒軟體會在重新啟動電腦後自動重新開啓。

問題：軟體安裝期間出現「系統需求」對話方塊。

解決方法：電腦系統的其中一個元件不符合最低系統需求。依照螢幕指示來修正問題，然後重新安裝印表機軟體。

Windows 與 Macintosh

問題：電腦無法讀取 HP Photosmart 光碟片。

解決方法：請確定光碟片沒有弄髒或有刮痕。若其他光碟片可以運作，只有 HP Photosmart 光碟片無效，則表示您的光碟片可能已經損壞。您可以從 HP 支援網站下載軟體，並向 HP 支援中心索取新的光碟片。若其他光碟片也不能正常運作，則表示您需要維修 CD-ROM 光碟機。



English

If the printer software did not install successfully, or if the printer and computer are not communicating properly after software installation, check this page for possible solutions.

Check all cable connections between the printer and computer, and be sure you are using the most recent version of the printer software. You can acquire the latest software updates by visiting the HP support website at www.hp.com/support. If you still need help, check the printer documentation.

Macintosh only

Problem: All of the printers in Print Center disappear after printer software installation.

Solution: Uninstall then reinstall the printer software. Restart the computer before adding the printer in Print Center.

Windows only

Problem: The installation software does not start automatically when the CD is inserted.

Solution: From the Windows Start menu, select **Run**. Click **Browse**, and navigate to the CD-ROM drive where you inserted the HP Photosmart software CD. Double-click the **setup.exe** file.

Problem: The Found New Hardware Wizard opens but does not recognize the printer.

Solution: You might have connected the USB cable before completing the software installation. Disconnect the USB cable. Cancel the hardware installation Wizard. Insert the software CD into your CD-ROM drive, and follow the onscreen instructions. If instructions do not appear, locate and double-click the **setup.exe** file on the CD to restart the installation. If a message appears saying the software has already been successfully installed, then select **Uninstall**, and follow the instructions to reinstall the software. Reconnect the USB cable only when prompted during software installation.

Problem: The system requirements check indicates that the computer is running an outdated version of Internet Explorer.

Solution: Press **Ctrl + Shift** on the keyboard and click **Cancel** in the System Requirements dialog box to bypass the block and complete the software installation. You must update Internet Explorer immediately after installing the HP Photosmart software, or the HP software will not work properly. **Note:** You do not have to reinstall the HP software after updating Internet Explorer.

Problem: The computer stops responding during software installation.

Solution: Virus protection software or another software program might be running in the background and slowing down the installation process. Wait while the software finishes copying files; this may take several minutes. If the computer is still not responding after several minutes, restart the computer, pause or disable any active virus protection software, quit all other software programs, and then reinstall the printer software. **Note:** Your virus protection software will turn back on automatically when you restart the computer.

Problem: The System Requirements dialog box appears during installation.

Solution: A component of the computer system does not meet the minimum system requirements. Follow the onscreen instructions to remedy the issue and then reinstall the printer software.

Windows and Macintosh

Problem: The computer could not read the HP Photosmart CD.


Solution: Make sure the CD is not dirty or scratched. If other CDs work but the HP Photosmart CD does not, your CD might be damaged. You can download the software from the HP support website or request a new CD from HP Support. If other CDs do not work, you might need to service your CD-ROM drive.



列印您的第一張無框相片

Print your first borderless photo

1 不連接電腦的情況下列印相片 Print photos without a computer

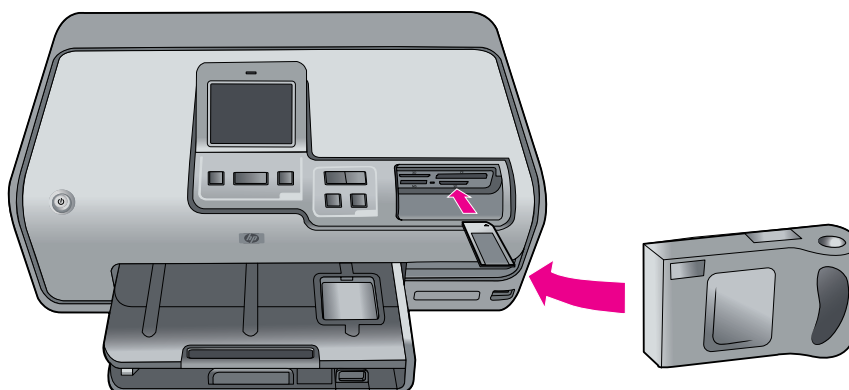

繁體中文

透過依照以下頁面中簡單的逐步指示執行，HP Photosmart D7300 series 印表機讓您在不需連接電腦的情況下即可從數位相機列印精美的相片。

只要將記憶卡直接插入印表機上適當的卡插槽，在觸控式螢幕上確定您的選擇，然後列印相片即可。

如需更多有關無須電腦即可從數位相機或記憶卡列印相片的資訊，請參閱使用者手冊。

English

The HP Photosmart D7300 series printer allows you to print beautiful photos from a digital camera without connecting to a computer by following the simple, step-by-step instructions on the following pages.


Simply insert a memory card directly into the appropriate card slot on the printer, make your selections on the touch screen, and print the photo.

For more information about printing photos from a digital camera or memory card without using a computer, see the User Guide.

2

裝入 10 x 15 公分 (4 x 6 英吋) 相紙

Load 10 x 15 cm (4 x 6 inch) photo paper

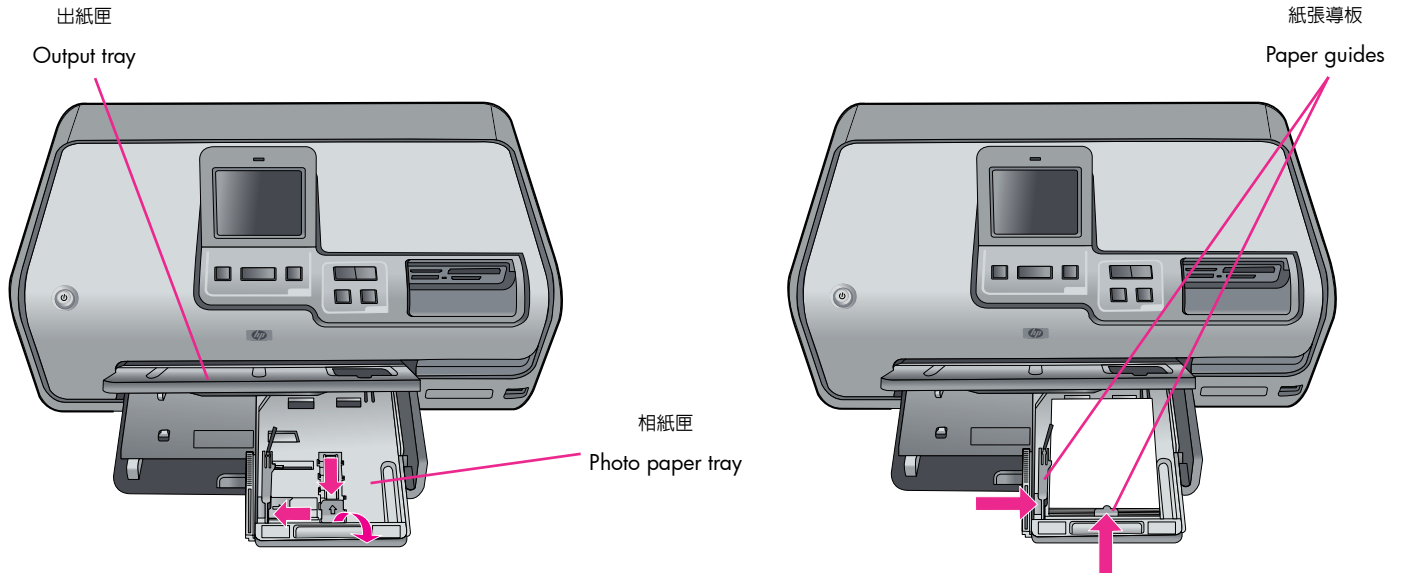

繁體中文

1. 提起出紙匣。
2. 將相紙匣拉向您至其停住為止。
3. 將相紙匣紙張長度導板滑向您至其停住為止，然後將紙張寬度導板滑向左至其停住為止。
4. 在相紙匣中裝入多達 20 張 10 x 15 公分 (4 x 6 英吋) 的相紙，列印面朝下。如果使用含標籤的紙，插入紙張時使有標籤的一端靠近您。
5. 滑動紙張寬度與紙張長度導板至靠緊紙張的邊緣，並且沒有使紙張彎曲。
6. 推入相紙匣，然後關上出紙匣。

提示： 使用 HP 進階相紙列印可防水和指紋的光面相片。相紙背面的獨特標記觸動印表機中的自動紙張類型感應器，可進行快速、保存品質的相片列印。

English



1. Lift the output tray.
2. Pull the photo tray toward you until it stops.
3. Slide the photo tray paper-length guide toward you until it stops, and slide the paper-width guide to the left until it stops.
4. Place up to 20 sheets of 10 x 15 cm (4 x 6 inch) photo paper in the photo tray with the print side down. If you are using tabbed paper, insert the paper so the tabbed end is closer to you.
5. Slide the paper-width and paper-length guides against the edges of the paper without bending the paper.
6. Push in the photo tray and close the output tray.

Tip: Use HP Advanced Photo paper to print water- and fingerprint-resistant glossy photos. The unique marks on the back of the paper trigger the automatic paper-type sensor in the printer to produce fast, store-processed-quality photo printing.

3

插入記憶卡

Insert a memory card

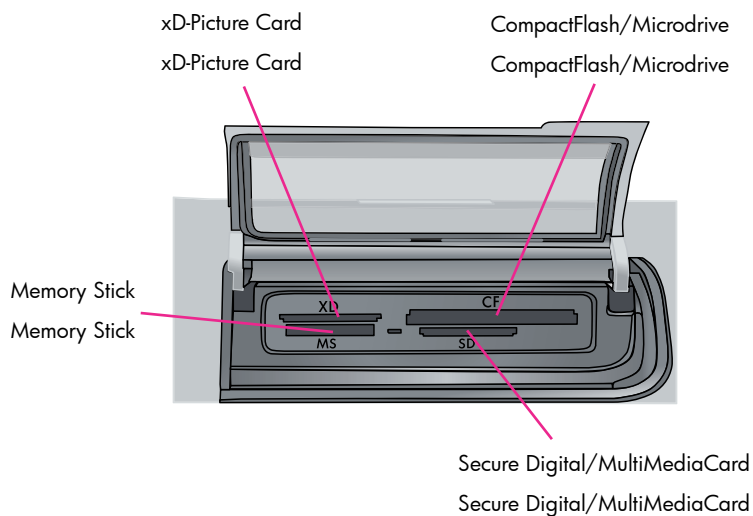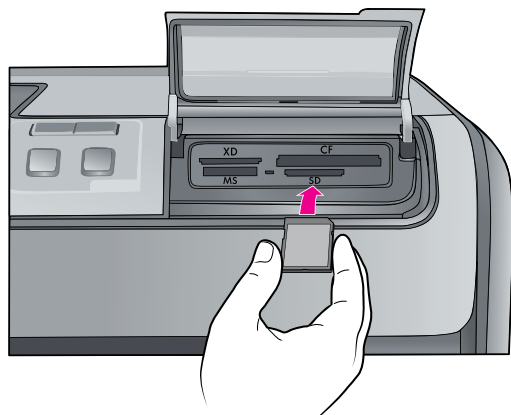

繁體中文

以下頁面提供列印首張無框相片的基本指示。請參閱使用者手冊以獲取更詳細的指示和更全面了解印表機的功能。

註： 一次僅將一張記憶卡插入印表機。

1. 將記憶卡插入正確的插槽：

- 銅色觸點向下，或
- 金屬針孔朝向印表機

2. 將記憶卡輕輕推入印表機，直到停止移動。

小心： 記憶卡不會完全插入印表機，切勿強行用力推入。

English

The following pages provide basic instructions for printing your first borderless photo. See the User Guide for more comprehensive instructions and to gain a full understanding of the printer capabilities.

Note: Insert only one memory card into the printer at a time.

1. Insert the memory card into the correct slot:

- copper-colored contacts down, or
- metal pinholes toward the printer

2. Gently push the memory card into the printer until it stops.

Caution: The memory card does not insert all the way into the printer; do not try to force it.

4

選擇和列印相片

Select and print a photo

觸摸「View & Print」(檢視和列印)

Touch View & Print



 
觸摸 10x15 (4x6)

Touch 10x15 (4x6)



選擇 10x15 (4x6) 的紙張尺寸

Select the 10x15 (4x6) paper size



4



觸摸 ◀ 和 ▶ 進行導覽

Touch ◀ and ▶ to navigate


5



觸摸相片以將它選取

Touch the photo to select it

6

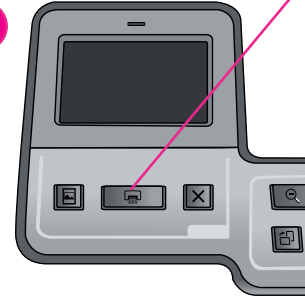

「列印」按鈕

Print button

繁體中文

1. 觸摸「**View & Print**」(檢視和列印)。
2. 觸摸 **10x15 (4x6)** 以選取影像尺寸。
3. 觸摸 **10x15 (4x6)** 以選取紙張尺寸。
4. 觸摸 ◀ 和 ▶ 以導覽記憶卡上的相片。
5. 觸摸您要列印的相片。 右上角會顯示一個核取記號。

提示： 要取消選擇影像，請再次觸摸相片。

6. 按下「**列印**」按鈕。 HP Photosmart 印表機會將相片列印至紙張邊緣，以消除白色邊框。

English

1. Touch **View & Print**.
2. Touch **10x15 (4x6)** to select the image size.
3. Touch **10x15 (4x6)** to select the paper size.
4. Touch ◀ and ▶ to navigate through the photos on the memory card.
5. Touch the photo you want to print. A check mark appears in the upper right corner.

Tip: To deselect an image, touch the photo again.

6. Press the **Print** button. Your HP Photosmart printer prints the photo to the edges of the paper, eliminating white borders.

快速提示

Quick tips



使用電腦與 HP Photosmart Premier 進行列印

Print with a computer and HP Photosmart Premier



繁體中文

使用 HP Photosmart Premier 軟體建立相片專案，可以讓您有無限的發揮空間。

- 使用數位相片來設計日曆、小冊子和傳單。
- 建立自己的相簿和紀念品。
- 自訂的手工 T 恤、光碟片封面和相框。
- 使用 HP Photosmart Share 可透過電子郵件傳送相片和線上分享相片。

如需關於自己建立有趣專案的更詳細資訊，請參閱 HP Photosmart 軟體說明。

English


The possibilities are endless when you use HP Photosmart Premier software to create your photo projects.

- Design calendars, brochures, and flyers using your digital photos.
- Create your own photo albums and keepsakes.
- Craft custom T-shirts, CD covers, and picture frames.
- Use HP Photosmart Share to e-mail photos and to share photos online.

For more information about creating your own fun projects, see the HP Photosmart Software Help.

需要更多資訊？

Need more information?

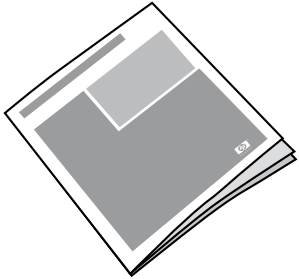

請閱讀使用者手冊以獲得有關印表機功能的描述、疑難排解資訊，以及如何使用您的全新 HP Photosmart 印表機來執行特殊列印工作的說明。

Read the User Guide for a description of the printer features, troubleshooting information, and explanations of how to perform specific printing tasks using your new HP Photosmart printer.



請參閱 HP Photosmart 軟體說明以取得有關使用您的印表機隨附之軟體的資訊。螢幕上的說明已隨您的軟體安裝。

Check the HP Photosmart Software Help for information about using the software that came with your printer. The onscreen help is installed with your software.



HP 支援網站與電子支援：www.hp.com/support
材質與列印耗材：www.hpshopping.com

HP support website and E-support: www.hp.com/support
Media and printing supplies: www.hpshopping.com

www.hp.com



Q7057-90172

ZHTW

EN

新加坡印製。 4/06 • v1.0.0
著作權 © 2006 Hewlett-Packard Development Company, L.P.
Printed in Singapore. 4/06 • v1.0.0
© 2006 Hewlett-Packard Development Company, L.P.

