 


# Setup Guide

HP Photosmart A310 series

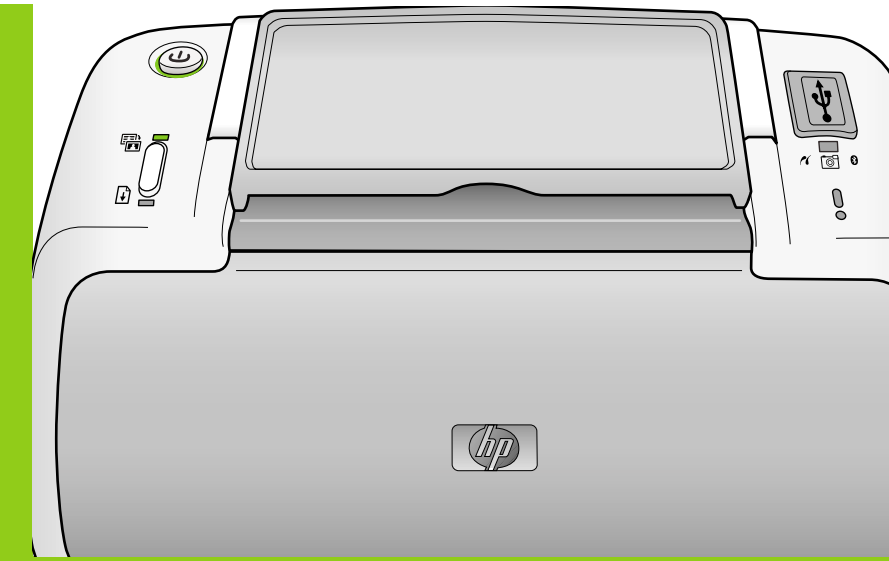

EN

Q8471-90952

 
## 1 Unpack the printer

Remove the protective tape from inside and around the printer.

The box contains the following items:

1. HP Photosmart A310 series printer
2. Setup Guide (this poster)
3. User Guide
4. HP Photosmart software and electronic Help on CD
5. Power supply
6. HP Advanced Photo Paper and resealable media bag
7. HP 110 Tri-color Inkjet print cartridge


**Note:** Contents may vary by country/region. Please check the packaging for the official box contents.

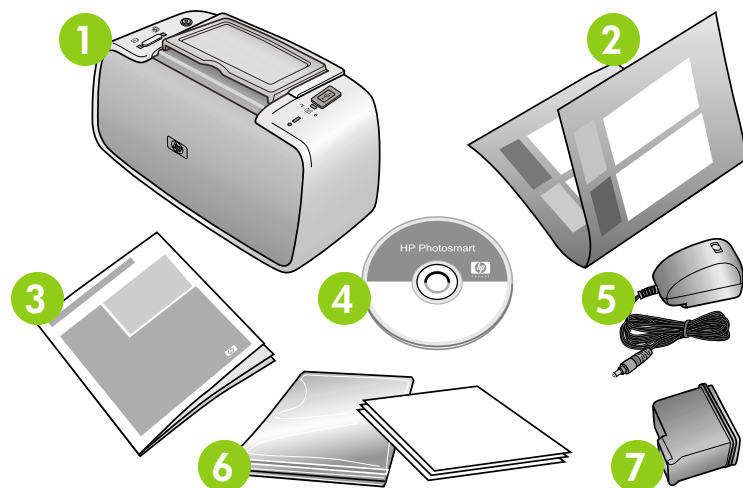

## 2 Plug in the power cord


1. Connect the power cord to the back of the printer.
2. Plug the power cord into a working electrical outlet.
3. Press **On** to turn on the printer.

 At this point, the printer lights will flash to indicate you need to load paper and install the print cartridge. Please proceed to the next step.

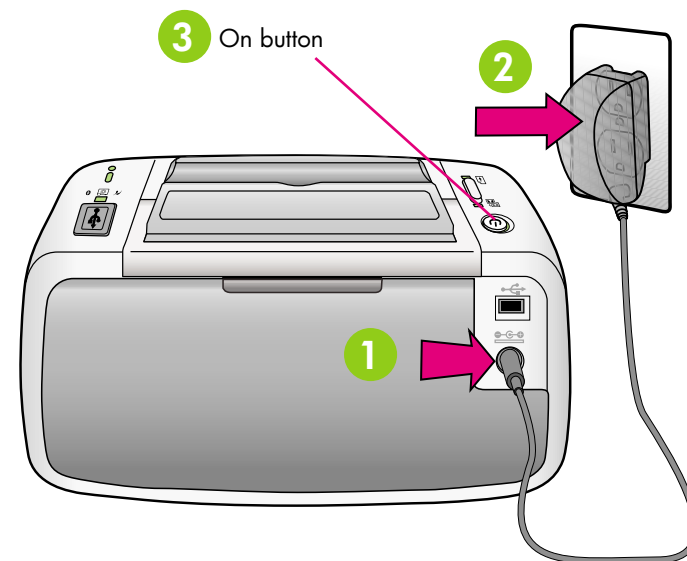


## 3 Load paper in the printer

 1. Open the output tray on the front of the printer. The input tray opens automatically.
2. Place a few sheets of HP Advanced Photo Paper (sample pack included) in the input tray with the glossy sides facing toward you.
3. Align the paper against the left side of the input tray. Adjust the paper-width guide to fit close to the right edge of the paper without bending it.

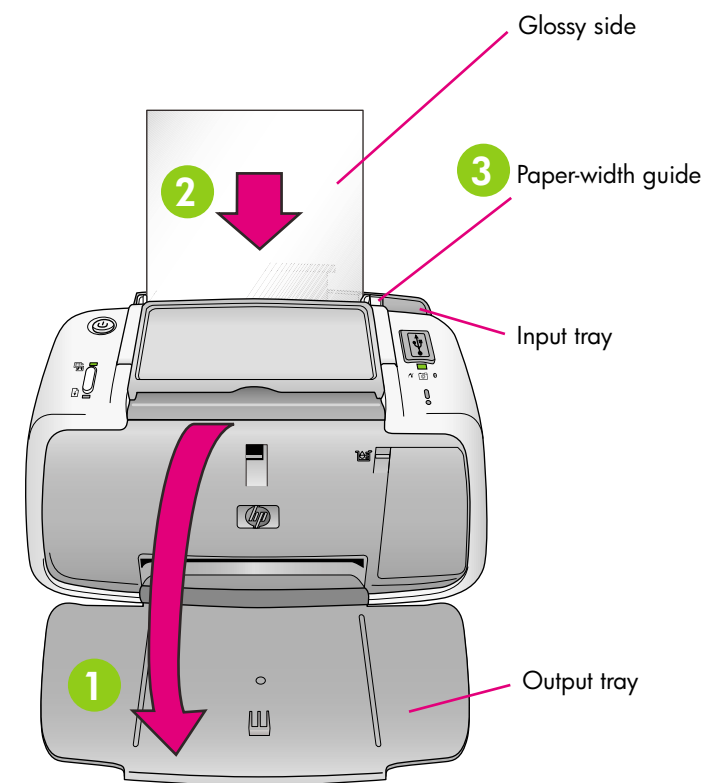


## 4 Remove the tape on the print cartridge

 
1. Open the print cartridge package. Pull the **pink pull-tab** to remove the clear tape from the print cartridge.
2. Open the print cartridge door.

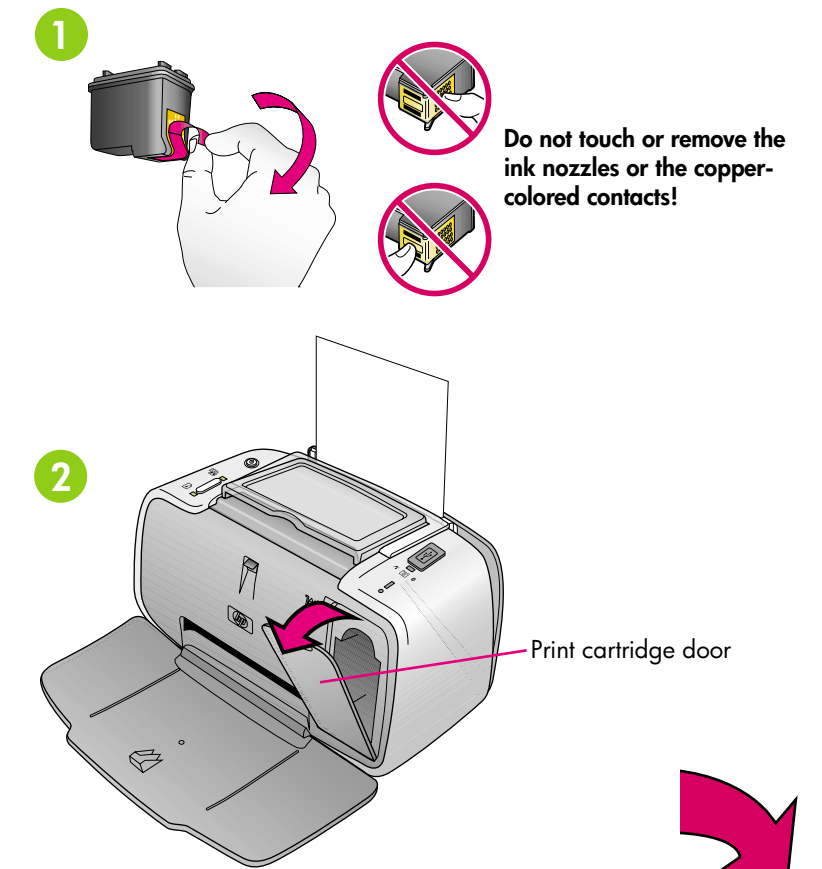

invent

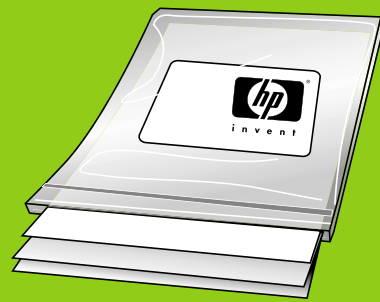 


 Use **HP Advanced Photo Paper** - especially designed to produce beautiful photos using the inks in your new printer.

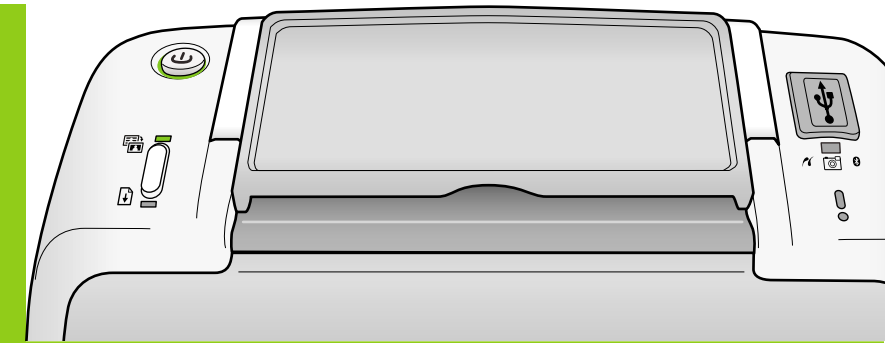

## 5 Install the print cartridge

 1. Insert the print cartridge into the print cartridge cradle with the label facing up and the copper-colored contacts facing the inside of the printer.
2. Push the print cartridge into the cradle until it snaps into place.
3. Close the print cartridge door.
4. The printer aligns the print cartridge, ensuring high print quality. You can discard the alignment page that prints.

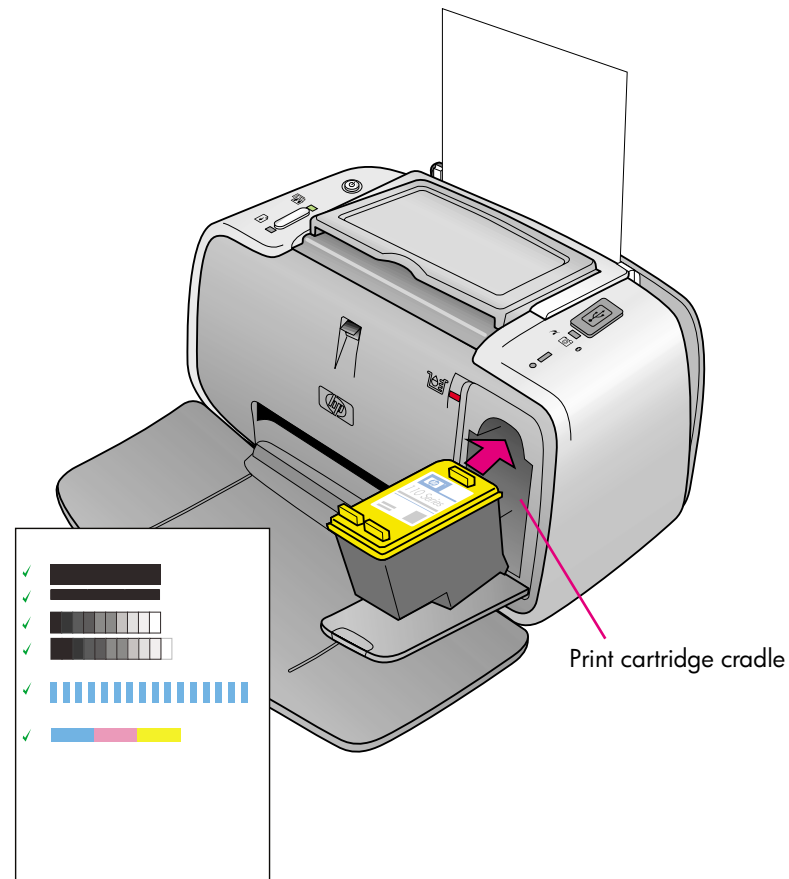


## 6 Attach your camera to the printer

1. Plug the USB cable from your PictBridge-enabled camera into the camera.
2. Lift the rubber cover on the PictBridge port on the printer, and then plug the other end of the USB cable into the port. The PictBridge light turns solid green.

**Note:** You can also print photos from other devices, such as camera phones and video cameras. See the printer User Guide for more information.

 **Note:** Your camera may vary from the one shown.

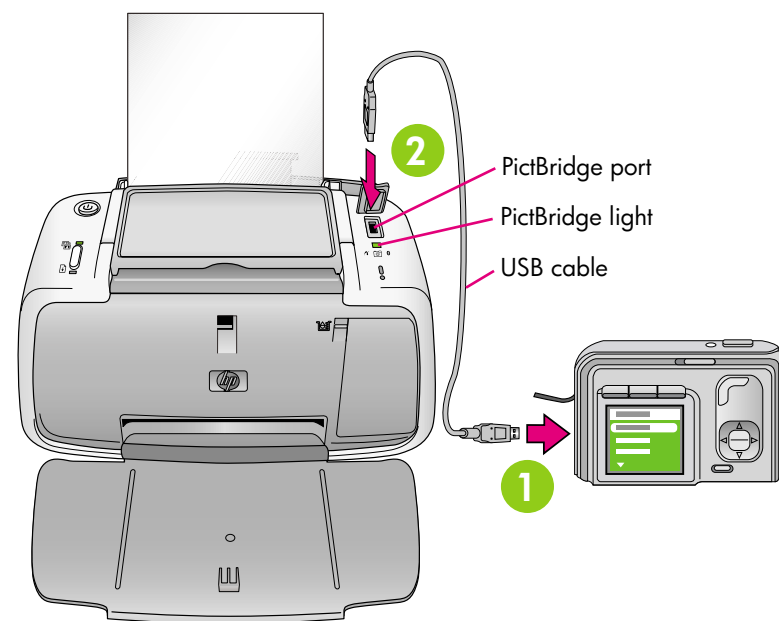

## 7 Print your first photo

 
1. Find the photo you want to print on your camera.
2. Following the directions in your camera User Guide, choose the print settings you want on the camera image display, and then print the photo from your camera to the printer.

**Note:** The PictBridge light and On light flash during printing.



## Need more information?

For more information, see the following:

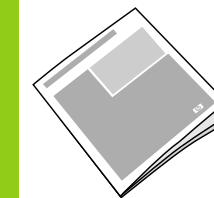

**HP Photosmart A310 series User Guide**



**Electronic Help and HP Photosmart Software**

 


[www.hp.com/support](http://www.hp.com/support)

You can also call HP support at 1-800-474-6836 (1-800 HP invent).

Printed in USA, 06/06. © 2006.  
Hewlett-Packard Development Company, L.P.

## Print from a computer!

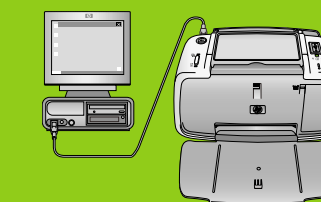

- Make changes to photos and print settings
- E-mail photos
- Clean and align the print cartridge, check ink levels, and more!

For information on installing the HP Photosmart software, see *Install the software* in Appendix A of the printer User Guide.

