

User Guide

© Copyright 2006 Hewlett-Packard Development Company, L.P.

Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation. Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: March 2006

Document Part Number: 406623-001

Table of contents

1	Components	
	Top components	2
	Pointing Devices	2
	Lights	3
	Buttons, switches, and readers	5
	Keys	6
	Hotkey quick reference	
	Front components	
	Rear components	9
	Right-side components	
	Left-side components	
	Bottom components	13
	Display components	
	Wireless antennae (select models only)	
	Additional hardware components	
	Labels	
2	Specifications	
	Operating environment	19
	Rated input power	20
ln	ndex	21

iv ENWW

1 Components

This chapter explains the hardware features of the computer.

To see a list of hardware installed in the computer:

- Select Start > My Computer.
- 2. In the left pane of the System Tasks window, select **View system information**.
- Select Hardware tab > Device Manager.

You can also add hardware or modify device configurations using Device Manager.




NOTE Components included with the computer may vary by region and by model. The illustrations in this chapter identify the standard features included in most computer models.

ENWW 1

Top components


Pointing Devices

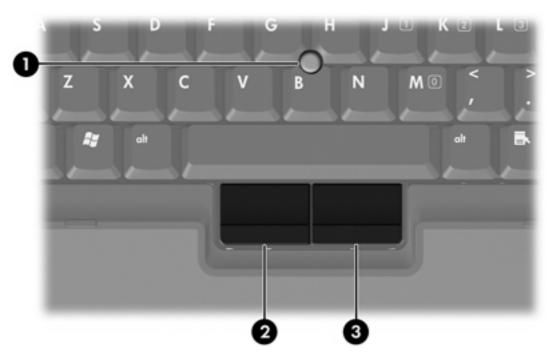

Component		Description
(1)	Pointing stick	Moves the pointer and selects or activates items on the screen.
(2)	Left pointing stick button	Functions like the left button on an external mouse.
(3)	Right pointing stick button	Functions like the right button on an external mouse.

^{*}This table describes default settings. To view and change pointing device preferences, select **Start** > **Control Panel** > **Printers and Other Hardware** > **Mouse**.

Lights

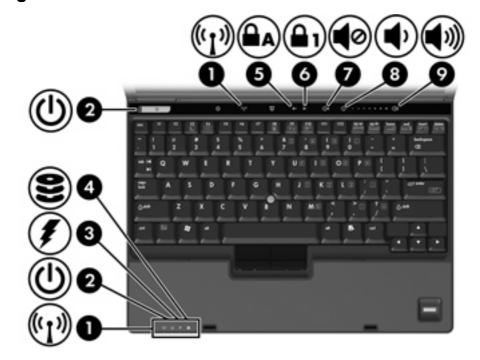

Com	ponent	Description
· ,		On: An integrated wireless device, such as a wireless local area network (LAN) device and/or a Bluetooth® device, is turned on.
(2)	Power lights † (2)	On: The computer is on.
		Blinking: The computer is in standby.
		Blinking rapidly: An AC adapter with a higher power rating should be connected.
		Off: The computer is off or in hibernation.
(3)	Battery light	Amber: A battery pack is charging.
		Green: A battery pack is close to full charge capacity.
		Blinking amber: A battery pack that is the only available power source has reached a low-battery condition. When the battery reaches a <i>critical</i> low-battery condition, the battery light begins blinking rapidly.
		Off: If the computer is plugged into an external power source, the light is turned off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low-battery condition.
(4)	Drive light	Blinking green: The hard drive or optical drive is being accessed.
		 Amber: HP Mobile Data Protection with accelerometer software has temporarily parked the internal hard drive.
(5)	Caps lock light	On: Caps lock is on.
(6)	Num lock light	On: Num lock is on or the embedded numeric keypad is enabled.

ENWW Top components

3

Component		Description
(7)	Volume mute light	On: Computer sound is turned off.
(8)	Volume down light	On: The volume scroll zone is being used to decrease computer sound.
(9)	Volume up light	On: The volume scroll zone is being used to increase computer sound.

^{*}There are 2 wireless lights. Both display the same information. The light on the wireless button is visible only when the computer is open; the other wireless light is always visible on the front of the computer.

[†]There are 2 power lights. Both display the same information. The light on the power button is visible only when the computer is open; the other power light is always visible on the front of the computer.

Buttons, switches, and readers



Component		Description	
(1) Power button*		When the computer is	
		Off, press to turn on the computer.	
		On, press to enter hibernation.	
		 In standby, briefly press to exit standby. 	
		In hibernation, briefly press to exit hibernation.	
		If the computer has stopped responding and Microsoft® Windows® shutdown procedures cannot be used, press and hold the power button for at least 5 seconds to turn off the computer.	
(2)	Info Center button	Launches Info Center, which enables you to open various software solutions.	
(3)	Wireless button*	Turns the wireless feature on or off, but does not create a wireless connection.	
		NOTE To establish a wireless connection, a wireless network must already be set up.	
(4)	Presentation button	Starts the Presentation feature.	
(5)	Volume mute button	Mutes and restores computer sound.	
(6)	Volume scroll zone	Adjusts volume. Slide your finger to the left to decrease volume and to the right to increase volume.	
(7)	Fingerprint reader	Allows a fingerprint logon to Windows, instead of a password logon.	

ENWW Top components

5

Keys




Component		Description		
(1)	esc key	Displays system information when pressed in combination with the fn key.		
(2)	fn key	Executes frequently used system functions when pressed in combination with a function key or the esc key.		
(3)	Windows logo key	Displays the Microsoft Windows Start menu.		
(4)	Windows applications key	Displays a shortcut menu for items beneath the pointer.		
(5)	Embedded numeric keypad keys	Can be used like the keys on an external numeric keypad.		
(6)	Function keys	Execute frequently used system functions when pressed in combination with the fn key.		
		NOTE Refer to the table in "Hotkey quick reference" for a description of each hotkey.		

Hotkey quick reference

To perform this function	Press
Display system information.	fn+esc
Clear system information	fn+esc or click OK
Initiate standby.	fn+f3
Resume from standby	Power button
Alternate between computer display and external display	fn+f4
Display battery information.	fn+f8
Clear battery information	fn+f8
Decrease screen brightness.	fn+f9
Increase screen brightness.	fn+f10

ENWW Top components 7

Front components

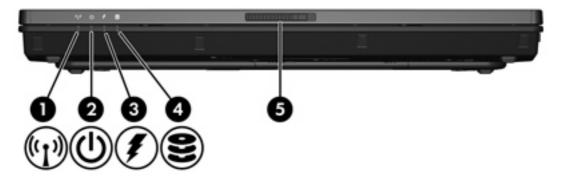

Com	ponent	Description	
(1)	Wireless light	On: An integrated wireless device, such as a wireless local area network (LAN) device and/or a Bluetooth® device is turned on.	
(2)	Power light	On: The computer is on.	
		Blinking: The computer is in standby.	
		Blinking rapidly: An AC adapter with a higher power rating should be connected.	
		Off: The computer is off or in hibernation.	
(3)	Battery light	Amber: A battery pack is charging.	
		Green: A battery pack is close to full charge capacity.	
		Blinking amber: A battery pack that is the only available power source har reached a low-battery condition. When the battery reaches a <i>critical</i> low-batcondition, the battery light begins blinking rapidly.	
		Off: If the computer is plugged into an external power source, the light is turned off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low-battery condition.	
(4)	Drive light	Blinking green: The hard drive or optical drive is being accessed.	
		 Amber: HP Mobile Data Protection with accelerometer software has temporarily parked the internal hard drive. 	
(5)	Display release latch	Opens the computer.	

Rear components




	Component	Description	
(1)	RJ-45 (network) jack	Connects a network cable.	
(2)	Security cable slot	Attaches an optional security cable to the computer. NOTE The security cable is designed to act as a deterrent, but may not prevent the computer from being mishandled or stolen.	

ENWW Rear components


9

Right-side components

Computer features vary depending on model. Refer to one of the following illustrations.

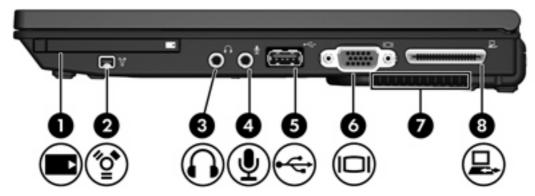


Component		Description	
(1)	PC Card slot (select models only)	Supports optional Type I or Type II PC Cards.	
(2)	1394 port	Connects an optional IEEE 1394 device, such as a camcorder.	
(3)	Audio-out (headphone) jack	Produces computer sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.	
(4)	Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.	
(5)	USB port	Connects an optional USB device.	
(6)	External monitor port	Connects an external VGA monitor or projector.	
(7)	Vent	Enables airflow to cool internal components.	
		CAUTION To prevent overheating, do not obstruct vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or thick rugs or clothing, to block airflow.	
		NOTE The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.	
(8)	Docking connector	Connects an optional docking device.	

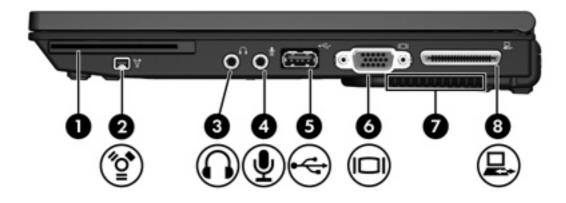

	Component	Description	
(1)	Smart card reader (select models only)	Supports smart cards and Java™ Cards.	
(2)	1394 port	Connects an optional IEEE 1394 device, such as a camcorder.	
(3)	Audio-out (headphone) jack	Produces computer sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.	
(4)	Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.	
(5)	USB port	Connects an optional USB device.	
(6)	External monitor port	Connects an external VGA monitor or projector.	
(7)	Vent	Enables airflow to cool internal components.	
		CAUTION To prevent overheating, do not obstruct vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or thick rugs or clothing, to block airflow.	
		NOTE The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.	
(8)	Docking connector	Connects an optional docking device.	

ENWW Right-side components 11


Left-side components

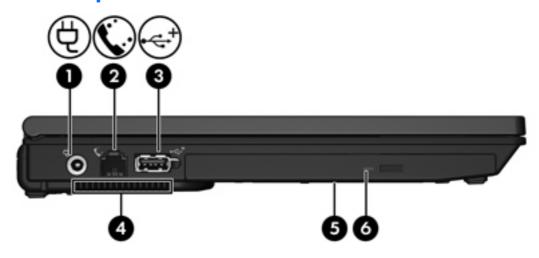

Component		Description		
(1)	Power connector	Conne	Connects an AC adapter.	
(2)	RJ-11 (modem) jack	Conne	cts a modem cable.	
(3)	Powered USB 2.0 port	Provide	es power to an external USB device if used with a powered USB cable.	
(4)	Vent	Enable	Enables airflow to cool internal components.	
		\triangle	CAUTION To prevent overheating, do not obstruct vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or thick rugs or clothing, to block airflow.	
		1999	NOTE The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.	
(5)	Optical drive (select models only)	Reads an optical disc.		
(6)	Optical drive light	Blinking: The optical drive is being accessed.		

Chapter 1 Components

Bottom components

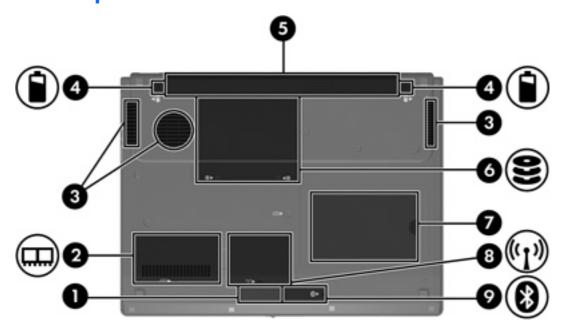

Component		Description		
(1)	Speaker	Produces computer sound.		
(2)	Memory module compartment	Contains the memory module slot.		
(3)	Vents (3)	Enable airflow to cool internal components.		
		CAUTION To prevent overheating, do not obstruct vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or thick rugs or clothing, to block airflow.		
		NOTE The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.		
(4)	Battery pack release latches	Release the battery pack from the battery bay.		
(5)	Battery bay	Holds the battery pack.		
(6)	Hard drive bay	Holds the hard drive.		
(7)	Business card holder	Holds a standard sized business card.		
(8)	Mini Card compartment	Contains a wireless LAN device (select models only)		
		CAUTION To prevent an unresponsive system and the display of a warning message, replace the devices with only a Mini Card authorized for use in the computer by the governmental agency that regulates wireless devices in your country, If you replace the device and then receive a warning message, remove the device to restore computer functionality, and then contact Customer Care through the Help and Support Center.		
(9)	Bluetooth compartment	Contains a Bluetooth device (select models only).		

ENWW Bottom components 13

Component Description

Display components



Component		Description	
(1)	Display release latch	Opens the computer.	
(2)	Internal display switch	Turns off the display if the display is closed while the computer is turned on.	

ENWW Display components 15

Wireless antennae (select models only)

On select computer models, at least 2 wireless antennae send and receive wireless device signals. These antennae are not visible from the outside of the computer.

For wireless regulatory notices pertaining to your region, refer to the *Regulatory, Safety and Environmental Notices* located in the Help and Support Center.





16

NOTE For optimal transmission, keep the areas immediately around the antennae free from obstructions.

Chapter 1 Components ENWW

Additional hardware components



Component		Description	
(1)	Power cord*	Connects an AC adapter to an AC outlet.	
(2)	HP Smart AC adapter	Converts AC power to DC power.	
(3)	Battery pack*	Powers the computer when the computer is not plugged into external power.	
(4)	Modem cable*	Connects the internal modem to an RJ-11 telephone jack or to a country-specific modem adapter.	
(5)	Country-specific modem cable adapter (select models only)	Adapts the modem cable to a non-RJ-11 telephone jack.	

Labels

18

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

- Service tag—Provides the product brand and series name, serial number (s/n), and product number (p/n) of your computer. Have this information available when you contact Customer Care. The service tag label is affixed to the bottom of the computer.
- Microsoft Certificate of Authenticity—Contains the Microsoft® Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed under the business card holder.
- Modem approval label—Provides regulatory information about the modem and lists the agency
 approval markings required by some of the countries in which the modem has been approved for
 use. You may need this information when traveling internationally. The modem approval label is
 affixed inside the hard drive bay.
- Wireless certification label(s)—Provide information about optional wireless devices available on select models, and the approval markings of some of the countries in which the devices have been approved for use. An optional device may be a wireless local area network (WLAN) device or an optional Bluetooth® device. If your computer model includes one or more wireless devices, one or more certification labels are included with your computer. You may need this information when traveling internationally. Wireless certification labels are affixed inside the Mini PCI compartment.

2 Specifications

Operating environment

The operating environment information in the following table may be helpful if you plan to use or transport the computer in extreme environments.

Factor	Metric	U.S.		
Temperature				
Operating (not writing to optical disc)	0°C to 35°C	32°F to 95°F		
Operating (writing to optical disc)	5°C to 35°C	41°F to 95°F		
Nonoperating	-20°C to 60°C	-4°F to 140°F		
Relative humidity (noncondensing)				
Operating	10% to 90%	10% to 90%		
Nonoperating	5% to 95%	5% to 95%		
Maximum altitude (unpressurized)				
Operating (14.7 to 10.1 psia*)	-15 m to 3,048 m	-50 ft to 10,000 ft		
Nonoperating (14.7 to 4.4 psia*)	-15 m to 12,192 m	-50 ft to 40,000 ft		
*Pounds per square inch absolute (psia) is another unit of measurement for altitude.				

ENWW Operating environment

19

Rated input power

20

The power information in this section may be helpful if you plan to travel internationally with your computer.

The computer operates on DC power, which can be supplied by an AC or a DC power source. Although the computer can be powered from a stand-alone DC power source, it should be powered only with an AC adapter or a DC power cord supplied by or approved for an HP computer.

The computer is capable of accepting DC power within the following specifications.

Input power	Rating
Operating voltage	18.5 V dc @ 3.5 A – 65 W
Operating current	3.5 A

This product is designed for IT power systems in Norway with phase-to-phase voltage not exceeding 240 V rms.

Chapter 2 Specifications ENWW

Index

Symbols/Numerics 1394 port 10, 11 A AC adapter identifying 17 altitude specifications 19 antennae 16 applications key, Windows 6 audio-in (microphone) jack 10, 11 audio-out (headphone) jack 10, 11	Mini Card 13 components bottom 13 display 15 front 8 left-side 12 rear 9 right-side 10 top 2 connector, power 12 cord, power, identifying 17	battery pack charge information 7 decreasing screen brightness 7 displaying system information 7 increasing screen brightness 7 initiating standby 7 quick reference 7 switching screen image 7 humidity specifications 19
battery bay 13, 18 battery light, identifying 3, 8 battery pack identifying 17 battery pack charge information 7 battery pack release latch 13 bays battery 13, 18	display image, switching 7 screen brightness hotkeys 7 display release latch 8, 15 display switch 15 docking connector 10, 11 drive light 3, 8 drives hard 13	I IEEE 1394 port 10, 11 internal display switch 15 J jacks audio-in (microphone) 10, 11 audio-out (headphone) 10, 11 RJ-11 (modem) 12
Bluetooth device 13 hard drive 13 Bluetooth compartment 13 Bluetooth label 18 business card holder 13 buttons mute 5 power 5 wireless 5	optical 12 E environmental specifications 19 external monitor port 10, 11 F fingerprint reader 5 fn key identifying 6	RJ-45 (network) 9 K keypad keys 6 keys esc 6 fn 6 function 6 keypad 6 Windows applications 6
cable RJ-11 (modem) 17 caps lock light 3 Certificate of Authenticity label 18 compartments Bluetooth 13 memory module 13	function keys identifying 6 H hard drive bay, identifying 13 headphone (audio-out) jack 10, 11 hotkeys	Windows applications of Windows logo 6 L labels Bluetooth 18 Microsoft Certificate of Authenticity 18 modem approval 18

ENWW Index 21

regulatory 18	power cord 17	V	
service tag 18	power light 3, 8	vents 10, 11, 12, 13	
wireless certification 18	Presentation button 5	volume scroll zone 5	
WLAN 18	Product Key 18		
latches	product name and number,	W	
battery pack release 13	computer 18	Windows applications key	6
display release 8, 15		Windows logo key 6	
lights	R	wireless antennae 16	
battery 3, 8	rated input power specifications	wireless button 5	
caps lock 3	20		18
drive 3, 8	reader, fingerprint 5	wireless light 3, 8	. 0
mute 4	regulatory information	WLAN device 18	
num lock 3	modem approval label 18	WLAN label 18	
power 3, 8	regulatory label 18	VVE/ (IV label 10	
volume 4	wireless certification labels 18		
	release latch		
wireless 3, 8	battery pack 13		
lock, security cable 9	display 8		
84			
M	RJ-11 (modem) cable 17		
memory module compartment 13	RJ-11 (modem) jack 12		
microphone (audio-in) jack 10, 11	RJ-45 (network) jack 9		
Microsoft Certificate of Authenticity	6		
label 18	S		
Mini Card compartment 13	screen brightness hotkeys 7		
modem approval label 18	screen image, switching 7		
modem cable adapter 17	security cable slot 9		
monitor port, external 10, 11	serial number, computer 18		
mute button 5	service tag 18		
mute light 4	slots		
	memory module 13		
N	PC Card 10		
network (RJ-45) jack 9	security cable 9		
num lock light 3	smart card reader 11		
	speaker 13		
0	specifications		
operating environment	operating environment 19		
specifications 19	rated input power 20		
operating system	standby hotkey 7		
Microsoft Certificate of	system information hotkey 7		
Authenticity label 18			
Product Key 18	Т		
optical drive, identifying 12	temperature specifications 19		
	traveling with the computer		
P	environmental specifications		
PC Card slot 10	20		
ports	modem approval label 18		
1394 10, 11	wireless certification labels 18		
external monitor 10, 11			
USB 10, 11, 12	U		
power button 5	USB ports, identifying 10, 11, 12		
power connector 12			

22 Index ENWW

