



Maintenance and Service Guide

HP Pavilion dv9000 Notebook PC

Document Part Number: 417615-002

September 2006

This guide is a troubleshooting reference used for maintaining and servicing the computer. It provides comprehensive information on identifying computer features, components, and spare parts; troubleshooting computer problems; and performing computer disassembly procedures.

© Copyright 2006 Hewlett-Packard Development Company, L.P.

Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation. Intel and Core are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries. AMD, Sempron, Turion, and combinations thereof, are trademarks of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. SD Logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Maintenance and Service Guide
HP Pavilion dv9000 Notebook PC
Second Edition: September 2006
First Edition: August 2006
Document Part Number: 417615-002

Contents

1 Product Description

1.1 Features	1–2
1.2 Resetting the Computer.	1–4
1.3 Power Management.	1–5
1.4 External Components	1–6
1.5 Design overview	1–22

2 Troubleshooting

2.1 Setup Utility	2–1
2.2 Using the Setup Utility	2–2
2.3 Setup Utility Menus	2–6
2.4 Troubleshooting Flowcharts	2–9

3 Illustrated Parts Catalog

3.1 Serial Number Location	3-1
3.2 Computer Major Components	3-2
3.3 Display Assembly Components	3-18
3.4 Mass Storage Devices	3-20
3.5 Plastics Kit	3-22
3.6 Cable Kit	3-24
3.7 Miscellaneous	3-26
3.8 Sequential Part Number Listing	3-28

4 Removal and Replacement Preliminaries

4.1 Tools Required	4-1
4.2 Service Considerations	4-2
Plastic Parts	4-2
Cables and Connectors	4-2
4.3 Preventing Damage to Removable Drives	4-3
4.4 Preventing Electrostatic Damage	4-4
4.5 Packaging and Transporting Precautions	4-5
4.6 Workstation Precautions	4-6
4.7 Grounding Equipment and Methods	4-7

5 Removal and Replacement Procedures

5.1 Serial Number	5-2
5.2 Disassembly Sequence Chart	5-2
5.3 Preparing the Computer For Disassembly	5-5
5.4 Hard Drive.	5-7
5.5 Computer Feet.	5-11
5.6 Memory Module	5-12
5.7 RTC Battery	5-15
5.8 Mini Card Module.	5-16
5.9 Optical Drive.	5-19
5.10 Switch Cover.	5-22
5.11 Keyboard.	5-25
5.12 Speaker Assembly.	5-30
5.13 Power Button Board	5-32
5.14 Display Assembly	5-34
5.15 Top Cover	5-47
5.16 Wireless Switch Board	5-53
5.17 Audio Board	5-56
5.18 Bluetooth Module	5-58
5.19 USB/Magnetic Board	5-60
5.20 ExpressCard Assembly	5-62
5.21 Top Cover Support Trim.	5-65
5.22 Display Lid Switch Module	5-68
5.23 Power Connector Assembly	5-70
5.24 System Board	5-74
5.25 Fan/Heat Sink Assembly.	5-79
5.26 Processor	5-84

6 Specifications

A Screw Listing

B Backup and Recovery

C Display Component Recycling

D Connector Pin Assignments

E Power Cord Set Requirements

Index

Product Description

The HP Pavilion dv9000 Notebook PC offers advanced modularity, Intel® Core™ Duo and AMD Mobile Turion™ 64 Mobile Technology and Mobile AMD Sempron™ processors, and extensive multimedia support.



HP Pavilion dv9000 Notebook PC

1.1 Features

- The following processors are available, varying by computer model:
 - ❑ Intel Core Duo T7200 (2.00-GHz)
 - ❑ Intel Core Duo T5600 (1.83-GHz)
 - ❑ Intel Core Duo T2250 (1.66-GHz)
 - ❑ Intel Core Duo T2300E (1.66-GHz)
 - ❑ Intel Core Duo T5200 (1.66-GHz)
 - ❑ AMD Turion ML-60 2.0-GHz
 - ❑ AMD Turion ML-56 1.8-GHz
 - ❑ AMD Turion ML-52 1.6-GHz
 - ❑ AMD Turion ML-50 1.6-GHz
 - ❑ Mobile AMD Sempron 3500+ (1.8-GHz)
- The following displays are available, varying by computer model:
 - ❑ 17.0-inch WSXGA+ BrightView (1680 × 1050) TFT display with over 16.7 million colors
 - ❑ 17.0-inch WXGA+ BrightView (1440 × 900) TFT display with over 16.7 million colors
- 120-, 100-, or 80-GB high-capacity hard drive, varying by computer model
- 512-MB DDR synchronous DRAM (SDRAM) at 667 MHz, expandable to 2.0 GB
- Microsoft® Windows® XP Home Edition, Windows XP Professional, or Windows XP Media Center Edition, varying by computer model
- Full-size Windows keyboard with numeric keypad
- TouchPad pointing device with on/off button and dedicated two-way scroll zone

- Integrated 10/100/1000 Gigabit Ethernet local area network (LAN) network interface card (NIC) with RJ-45 jack, varying by computer model
- Integrated high-speed 56K modem with RJ-11 jack
- Integrated wireless support for Mini Card IEEE 802.11a/b/g and 802.11b/g WLAN devices
- Support for ExpressCard
- External 90-watt AC adapter with 3-wire power cord
- 8-cell Li-Ion battery
- Stereo speakers with volume control buttons
- Integrated 1.3-megapixel camera
- Integrated microphones (select models only)
- Support for the following optical drives:
 - ❑ DVD±RW/R and CD-RW Double-Layer Combo Drive with LightScribe
 - ❑ DVD±RW/R and CD-RW Double-Layer Combo Drive
- Connectors:
 - ❑ Audio-in (microphone)
 - ❑ Audio-out (headphone, 2)
 - ❑ Consumer infrared lens
 - ❑ Expansion port 3
 - ❑ ExpressCard
 - ❑ External monitor
 - ❑ IEEE 1394a digital
 - ❑ Digital Media Slot
 - ❑ Power
 - ❑ RJ-11 (modem)
 - ❑ RJ-45 (network)
 - ❑ S-Video-out
 - ❑ Universal Serial Bus (USB) v. 2.0 (4 ports)

1.2 Resetting the Computer

If the computer you are servicing has an unknown password, follow these steps to clear the password. These steps also clear CMOS:

1. Prepare the computer for disassembly (refer to [Section 5.3, “Preparing the Computer For Disassembly,”](#) for more information).
2. Remove the real-time clock (RTC) battery (refer to [Section 5.7, “RTC Battery,”](#) for more information).
3. Wait approximately 5 minutes.
4. Replace the RTC battery and reassemble the computer.
5. Connect AC power to the computer. Do not reinsert any batteries at this time.
6. Turn on the computer.

All passwords and all CMOS settings have been cleared.

1.3 Power Management

The computer comes with power management features that extend battery operating time and conserve power. The computer supports the following power management features:

- Standby
- Hibernation
- Setting customization by the user
- Hotkeys for setting the level of performance
- Battery calibration
- Lid switch standby/resume
- Power button
- Advanced Configuration and Power Management (ACPM) compliance

1.4 External Components

The external components on the front of the computer are shown below and described in Table 1-1.



Front Components

Table 1-1
Front Components

Item	Component	Function
1	Power light	On: The computer is on. Blinking: The computer is in standby. Off: The computer is off or in hibernation.
2	Battery light	On: A battery is charging. Blinking: A battery that is the only available power source has reached a low-battery condition. When the battery reaches a <i>critical</i> low-battery condition, the battery light begins blinking rapidly. Off: If the computer is plugged into an external power source, the light is turned off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low-battery condition.

Table 1-1
Front Components (*Continued*)

Item	Component	Function
3	Drive light	Blinking: The hard drive or optical drive is being accessed.
4	Wireless switch	Turns the wireless feature on or off, but does not create a wireless connection.  A wireless network must be set up in order to establish a wireless connection.
5	Wireless light	Blue: An integrated wireless device, such as a wireless local area network (LAN) device and/or a Bluetooth® device, is turned on. Amber: All wireless devices are turned off.
6	Consumer infrared lens (select models only)	Receives a signal from the HP Remote Control.
7	Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
8	Audio-out (headphone) jack	Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.
	Audio-out (headphone) S/PDIF jack	Provides enhanced audio performance, including surround sound and other high-end audio output.
9	Display lid latch	Opens the computer.

The external components on the left side of the computer are shown below and described in Table 1-2.



Left-Side Components

Table 1-2
Left-Side Components

Item	Component	Function
1	Security cable slot	Attaches an optional security cable to the computer.  The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.
2	S-Video-out jack	Connects an optional S-Video device such as a television, VCR, camcorder, overhead projector, or video capture card.
3	External monitor port	Connects an external VGA monitor or projector.

Table 1-2
Left-Side Components (*Continued*)

Item	Component	Function
4	Expansion port 3	Connects the computer to an optional expansion product.  The computer has only one expansion port. The term <i>expansion port 3</i> describes the type of expansion port.
5	RJ-45 (network) jack	Connects a network cable.  The RJ-45 (network) jack provides Gigabit Ethernet functionality.
6	RJ-11 (modem) jack	Connects a modem cable.
7	HDMI port (select models only)	Connects an optional audio or video device such as a high-definition television, set-top box, DVD player, or any compatible digital or audio device.
8	USB ports (2)	Connect optional USB devices.
9	1394 port	Connects an optional IEEE 1394 or 1394a device, such as a camcorder.
10	Digital Media Slot light	On: A digital card is being accessed.
11	Digital Media Slot	Supports the following optional digital card formats: Secure Digital (SD) Memory Card, MultiMediaCard (MMC), Secure Digital Input/Output (SD I/O), Memory Stick (MS), Memory Stick Pro (MSP), xDPicture Card (XD), xD-Picture Card (XD) Type M.

The external components on the right side of the computer are shown below and described in Table 1-3.




Right-Side Components

Table 1-3
Right-Side Components

Item	Component	Function
1	USB ports (2)	Connect optional USB devices.
2	ExpressCard slot	Supports optional ExpressCard/54 cards.
3	Optical drive	Reads an optical disc.
4	Power connector	Connects an AC adapter.

The computer keyboard components are shown below and described in Table 1-4.

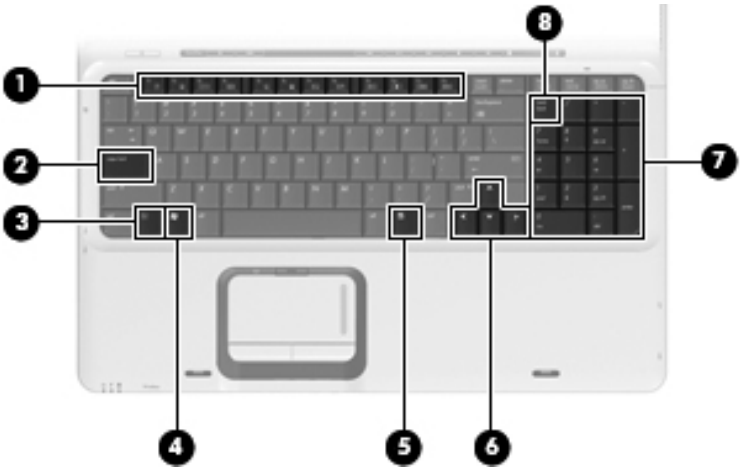


Keyboard Components

Table 1-4
Keyboard Components

Item	Component	Function
1	Function keys	Execute frequently used system functions when pressed in combination with the fn key.
2	caps lock key	Enables caps lock and turns on the caps lock light.
3	fn key	Executes frequently used system functions when pressed in combination with a function key or the esc key.
4	Windows logo key	Displays the Microsoft Windows Start menu.
5	Windows applications key	Displays a shortcut menu for items beneath the pointer.
6	Arrow keys	Move the cursor around the screen.
7	Numeric keypad keys	Can be used like the keys on an external numeric keypad.
8	num lock key	Enables numeric lock, turns on the embedded numeric keypad, and turns on the num lock light.

The computer top components are shown below and described in Table 1-5.

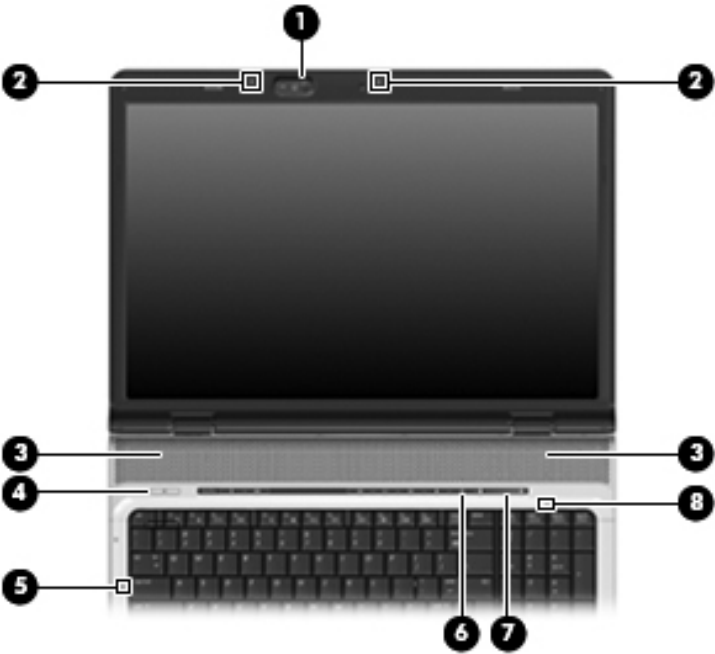


Top Components, Part 1

Table 1-5
Top Components, Part 1

Item	Component	Function
1	Integrated camera (select models only)	Records video and captures still photos.
2	Internal microphones (2, select models only)	Record sound.  A microphone icon next to each microphone opening indicates that the computer has internal microphones.
3	Speakers (2)	Produce sound.
4	Power button	When the computer is ■ Off, press to turn on the computer. ■ On, press to enter hibernation. ■ In standby, briefly press to exit standby. ■ In hibernation, briefly press to exit hibernation. If the computer has stopped responding and Microsoft® Windows® shutdown procedures cannot be used, press and hold the power button for at least 5 seconds to turn off the computer.
5	Caps lock light	On: Caps lock is on.
6	Volume mute button	Mutes and restores speaker sound.
7	Volume scroll zone	Adjusts speaker volume. Slide your finger to the left to decrease volume and to the right to increase volume. You can also tap the minus sign on the scroll zone to decrease volume, or tap the plus sign on the scroll zone to increase volume.
8	Num lock light	On: Num lock is on.

The computer top components are shown below and described in Table 1-6.

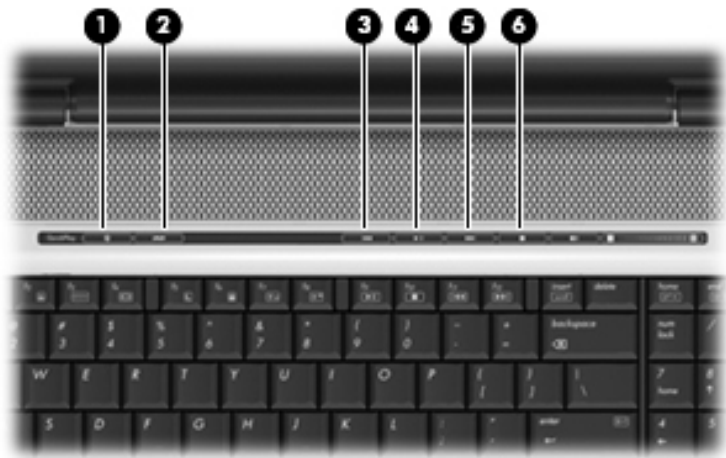

Top Components, Part 2

Table 1-6
Top Components, Part 2

Item	Component	Function
1	Media button	If QuickPlay is not installed and the computer is ■ On, opens the music program or Media menu, which allows you to select a multimedia program. ■ Off, does not function. ■ In standby, resumes from standby into Windows. If QuickPlay is installed and the computer is ■ On, opens the music program or Media menu, which allows you to select a multimedia program. ■ Off, opens the music program or the Media menu, which allows you to select a multimedia program. ■ In standby, resumes from standby into Windows.  The media button does not affect the procedure for restoring from hibernation.
2	DVD button	When the computer is  On, opens the default DVD program to start a DVD in the optical drive.  Off, opens QuickPlay to start a DVD in the optical drive. If the QuickPlay software is not installed, the DVD button starts in Windows.  In hibernation, opens QuickPlay to start a DVD in the optical drive. If QuickPlay is not installed, the computer resumes from hibernation.

Table 1-6
Top Components, Part 2 (*Continued*)

Item	Component	Function
3	Previous/rewind button	When a disc is playing in the optical drive: ■ Plays the previous track or chapter, when pressed once. ■ Rewinds when pressed with the fn key.
4	Play/pause button	When a disc is in the optical drive and is ■ Not playing, plays the disc. ■ Playing, pauses the disc.
5	Next/fast forward button	When a disc is playing in the optical drive: ■ Play the next track or chapter, when pressed once. ■ Fast forwards when pressed with the fn key.
6	Stop button	When a disc is playing in the optical drive, stops the current disc activity.

The computer TouchPad components are shown below and described in Table 1-7.




TouchPad Components

Table 1-7
Touchpad Components

Item	Component	Function
1	TouchPad light	Blue: TouchPad is enabled. Amber: TouchPad is disabled.
2	TouchPad	Moves the pointer and selects or activates items on the screen.
3	Left and right TouchPad buttons	Function like the left and right buttons on an external mouse.
4	TouchPad on/off button	Enables/disables the TouchPad.
5	TouchPad vertical scroll zone	Allows you to scroll up or down.

The external components on the bottom of the computer are shown below and described in Table 1-8.

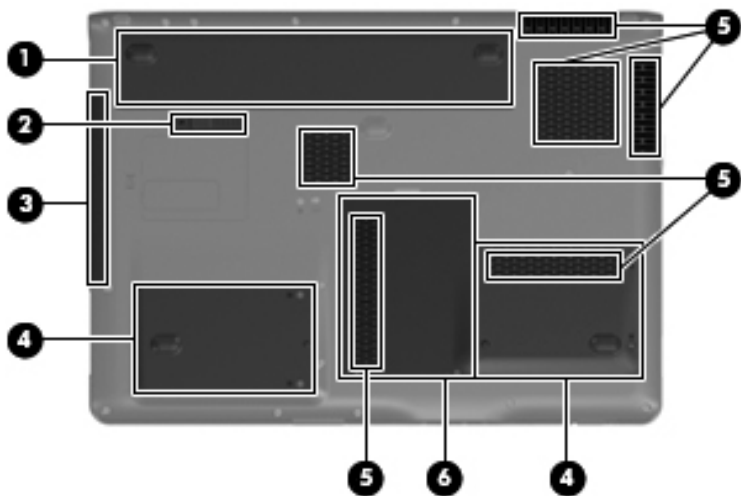

Bottom Components

Table 1-8
Bottom Components

Item	Component	Function
1	Battery bay	Holds the battery.
2	Battery release latch	Releases the battery from the battery bay.

Table 1-8
Bottom Components (Continued)

Item	Component	Function
3	Optical drive	Reads an optical disc.
4	Secondary hard drive bay	Holds an optional secondary hard drive.
	Primary hard drive bay	Hold the primary hard drive.
5	Vents (6)	Enable airflow to cool internal components.  To prevent overheating, do not obstruct vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or thick rugs or clothing, to block airflow.  The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
6	Memory module compartment	Contains the memory module slots, the Mini Card slot, and the RTC battery.

1.5 Design overview

This section presents a design overview of key parts and features of the computer. Refer to [Chapter 3, “Illustrated Parts Catalog,”](#) to identify replacement parts, and [Chapter 5, “Removal and Replacement Procedures,”](#) for disassembly steps.

The system board provides the following device connections:

- AMD Mobile Turion and Mobile AMD Sempron processors
- Audio
- Display
- ExpressCard
- Fan
- Hard drive
- Intel Core Duo processors
- Keyboard and TouchPad
- Memory module
- Mini Card module



CAUTION: To properly ventilate the computer, allow at least a 7.6-cm (3-inch) clearance on the left and right sides of the computer.

The computer uses an electric fan for ventilation. The fan is controlled by a temperature sensor and is designed to turn on automatically when high temperature conditions exist. These conditions are affected by high external temperatures, system power consumption, power management/battery conservation configurations, battery fast charging, and software. Exhaust air is displaced through the ventilation grill located on the left side of the computer.

Troubleshooting



WARNING: Only authorized technicians trained by HP should repair this equipment. All troubleshooting and repair procedures are detailed to allow only subassembly-/module-level repair. Because of the complexity of the individual boards and subassemblies, do not attempt to make repairs at the component level or modifications to any printed wiring board. Improper repairs can create a safety hazard. Any indication of component replacement or printed wiring board modification may void any warranty or exchange allowances.

2.1 Setup Utility

The Setup Utility is a ROM-based information and customization utility that can be used even when your Windows operating system is not working or will not load.

The utility reports information about the computer and provides settings for startup, security, and other preferences.

1. Turn on or restart the computer in Windows.
2. Before Windows opens and while the “Press <F10> to enter setup” prompt is displayed in the lower-left corner of the screen, press **F10**.

2.2 Using the Setup Utility

Changing the Language of the Setup Utility

The following procedure explains how to change the language of the Setup Utility. If the computer is not in the Setup Utility, begin at step 1. If the computer is in the Setup Utility, begin at step 2.

1. To open the Setup Utility, turn on or restart the computer in Windows, and then press **f10** while the prompt, “Press <F10> to enter setup,” is displayed in the lower-left corner of the screen.
2. Use the arrow keys to select **System Configuration > Language**, and then press **enter**.
3. Press **f5** or **f6** (or use the arrow keys) to select a language, and then press **enter** to select a language.
4. When a confirmation prompt with your preference selected is displayed, press **enter** to save your preference.
5. To set your preferences and exit the Setup Utility, press **f10** and then follow the instructions on the screen.

Your preferences go into effect when the computer restarts in Windows.

Navigating and Selecting in the Setup Utility

Because the Setup Utility is not Windows-based, it does not support the TouchPad. Navigation and selection are by keystroke.

- To choose a menu or a menu item, use the arrow keys.
- To choose an item in a drop-down list or to toggle a field, for example an Enable/Disable field, use either the arrow keys or **f5** or **f6**.
- To select an item, press **enter**.
- To close a text box or return to the menu display, press **f1**.
- To display additional navigation and selection information while the Setup Utility is open, press **f1**.

Displaying System Information

The following procedure explains how to display system information in the Setup Utility. If the Setup Utility is not open, begin at step 1. If the Setup Utility is open, begin at step 2.

1. To open the Setup Utility, turn on or restart the computer in Windows, and then press **f10** while the prompt, “Press <F10> to enter setup,” is displayed in the lower-left corner of the screen.
2. Access the system information by using the **Main** menu.
3. To close the Setup Utility without changing any settings, use the arrow keys to select **Exit > Exit Discarding Changes**, and then press **enter**. (The computer restarts in Windows.)

Restoring Default Settings in the Setup Utility

The following procedure explains how to restore the Setup Utility default settings. If the computer is not in the Setup Utility, begin at step 1. If the computer is in the Setup Utility, begin at step 2.

1. To open the Setup Utility, turn on or restart the computer in Windows, and then press **f10** while the prompt, “Press <F10> to enter setup,” is displayed in the lower-left corner of the screen.
2. Select **Exit > Load Setup Defaults**, and then press **f10**.
3. When the Setup Confirmation is displayed, press **enter** to save your preferences.
4. To set your preferences and exit the Setup Utility, press **f10**, and then follow the instructions on the screen.

The Setup Utility default settings are set when you exit the Setup Utility and go into effect when the computer restarts.



Your password, security, and language settings are not changed when you restore the factory default settings.

Using Advanced Setup Utility Features

This guide describes the Setup Utility features recommended for all users. For more information about the Setup Utility features recommended for advanced users only, refer to the Help and Support Center, which is accessible only when the computer is in Windows.

The Setup Utility features available for advanced users include a hard drive self-test, a Network Service Boot, and settings for boot order preferences.

The “<F12> to boot from LAN” message that is displayed in the lower-left corner of the screen each time the computer is started or restarted in Windows or restored from hibernation is the prompt for a Network Service Boot.

The “Press <ESC> to change boot order” message that is displayed in the lower-left corner of the screen each time the computer is started or restarted in Windows or restored from hibernation is the prompt to change the boot order.

Closing the Setup Utility

You can close the Setup Utility with or without saving changes.

- To close the Setup Utility and save your changes from the current session, use either of the following procedures:
 - ❑ Press **f10**, and then follow the instructions on the screen.
 - or –
 - ❑ If the Setup Utility menus are not visible, press **esc** to return to the menu display. Then use the arrow keys to select **Exit > Exit Saving Changes**, and then press **enter**.

When you use the **f10** procedure, you are offered an option to return to the Setup Utility. When you use the Exit Saving Changes procedure, the Setup Utility closes when you press **enter**.

- To close the Setup Utility without saving your changes from the current session:

If the Setup Utility menus are not visible, press **esc** to return to the menu display. Then use the arrow keys to select **Exit > Exit Discarding Changes**, and then press **enter**.

After the Setup Utility closes, the computer restarts in Windows.

2.3 Setup Utility Menus

The menu tables in this section provide an overview of Setup Utility options.



Some of the Setup Utility menu listed in this chapter may not be supported by your computer.

Selecting from the Main Menu

Table 2-1
Main Menu

Select	To Do This
System Information	■ View and change the system time and date. ■ View identification information about the computer. ■ View specification information about the processor, memory size, system BIOS, and keyboard controller version (select models only).

Selecting from the Security Menu

Table 2-2
Security Menu

Select	To Do This
Administrator password	Enter, change, or delete an administrator password.
Power-on password	Enter, change, or delete a power-on password.

Selecting from the System Configuration Menu

Table 2-3
System Configuration Menu

Select	To Do This
Language Support	Change the Setup Utility language.
Embedded WLAN Device Radio	Enable/disable an embedded wireless LAN device.
Embedded Bluetooth Device (select models only)	Enable/disable an embedded Bluetooth device (select models only).
Enhanced SATA support (select models only)	Enable/disable enhanced SATA mode.
Boot Options	Set the following boot options: ■ f10 and f12 Delay (sec.)—Set the delay for the f10 and f12 functions of the Setup Utility in intervals of 5 seconds each (0, 5, 10, 15, 20). ■ CD-ROM boot—Enable/disable boot from CD-ROM. ■ Floppy boot—Enable/disable boot from Floppy. ■ Internal Network Adapter boot—Enable/disable boot from Internal Network Adapter. ■ Boot Order—Set the boot order for: ☐ USB Floppy ☐ ATAPI CD/DVD ROM Drive ☐ Hard drive ☐ USB Diskette on Key ☐ USB Hard drive ☐ Network adapter

Selecting from the Diagnostics Menu

Table 2-4
Diagnostics Menu

Select	To Do This
Hard Disk Self Test	Run a comprehensive self-test on the hard drive.  On models with two hard drives, this menu option is called the Primary Hard Disk Self Test.
Secondary Hard Disk Self Test (select models only)	Run a comprehensive self-test on a secondary hard drive.

2.4 Troubleshooting Flowcharts


Table 2-5
Troubleshooting Flowcharts Overview

Flowchart	Description
2.1	"Flowchart 2.1—Initial Troubleshooting"
2.2	"Flowchart 2.2—No Power, Part 1"
2.3	"Flowchart 2.3—No Power, Part 2"
2.4	"Flowchart 2.4—No Power, Part 3"
2.5	"Flowchart 2.5—No Power, Part 4"
2.6	"Flowchart 2.6—No Video, Part 1"
2.7	"Flowchart 2.7—No Video, Part 2"
2.8	"Flowchart 2.8—Nonfunctioning Docking Device (if applicable)"
2.9	"Flowchart 2.9—No Operating System (OS) Loading"
2.10	"Flowchart 2.10—No OS Loading, Hard Drive, Part 1"
2.11	"Flowchart 2.11—No OS Loading, Hard Drive, Part 2"
2.12	"Flowchart 2.12—No OS Loading, Hard Drive, Part 3"
2.13	"Flowchart 2.13—No OS Loading, Diskette Drive"


Table 2-5
Troubleshooting Flowcharts Overview (*Continued*)

Flowchart	Description
2.14	"Flowchart 2.14—No OS Loading, Optical Drive"
2.15	"Flowchart 2.15—No Audio, Part 1"
2.16	"Flowchart 2.16—No Audio, Part 2"
2.17	"Flowchart 2.17—Nonfunctioning Device"
2.18	"Flowchart 2.18—Nonfunctioning Keyboard"
2.19	"Flowchart 2.19—Nonfunctioning Pointing Device"
2.20	"Flowchart 2.20—No Network/Modem Connection"


Flowchart 2.1—Initial Troubleshooting

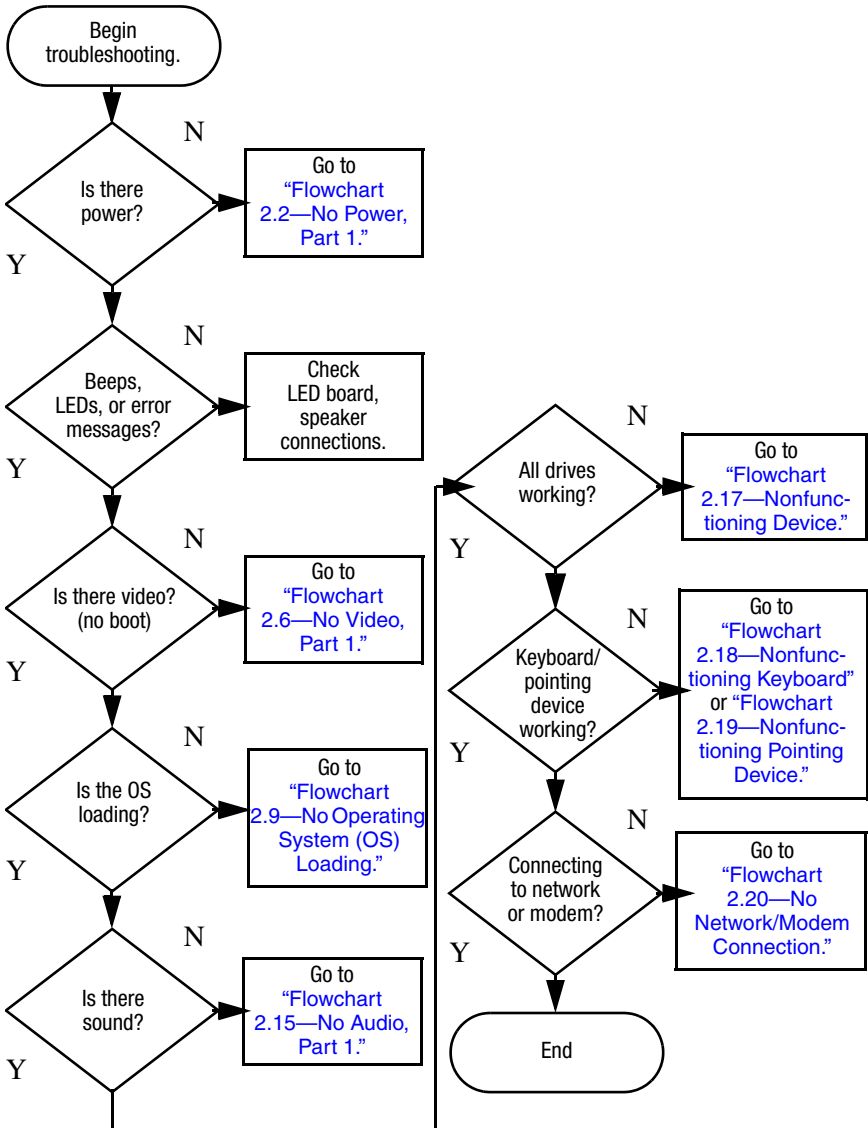


Flowchart 2.2—No Power, Part 1

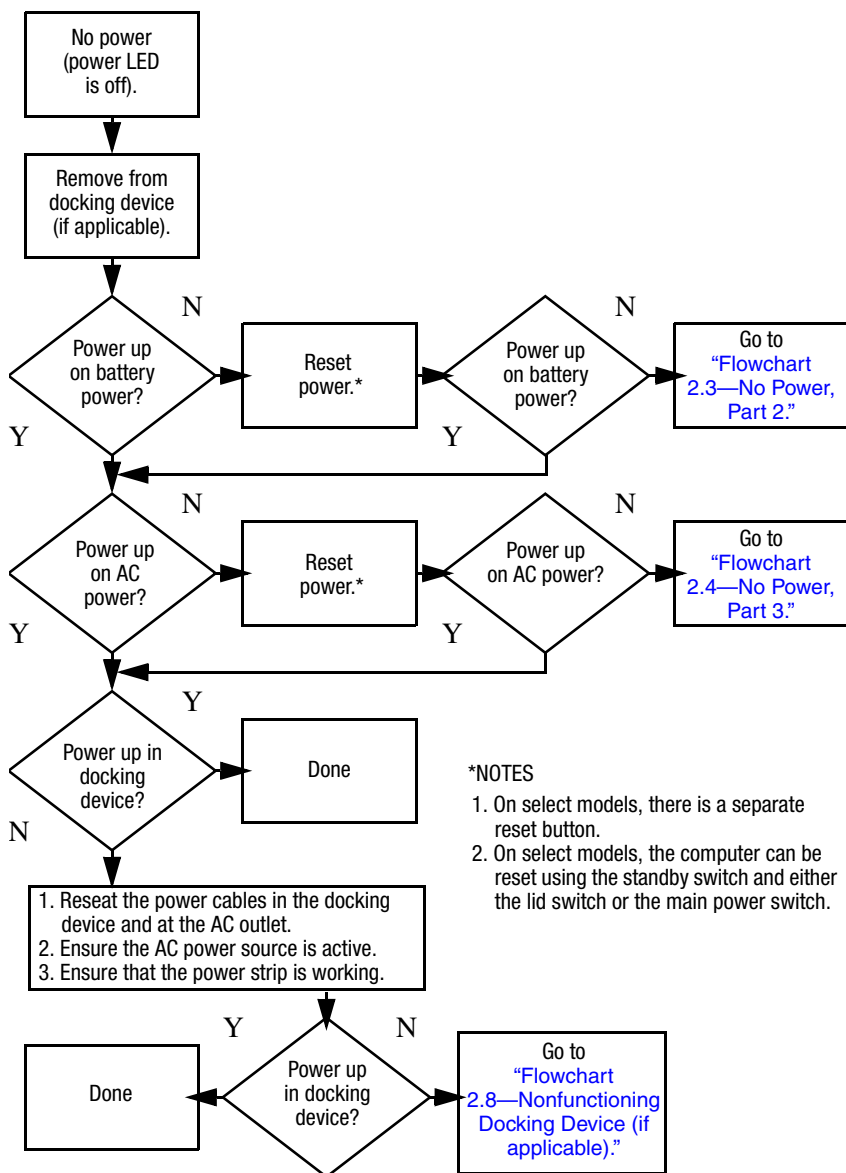


Flowchart 2.3—No Power, Part 2

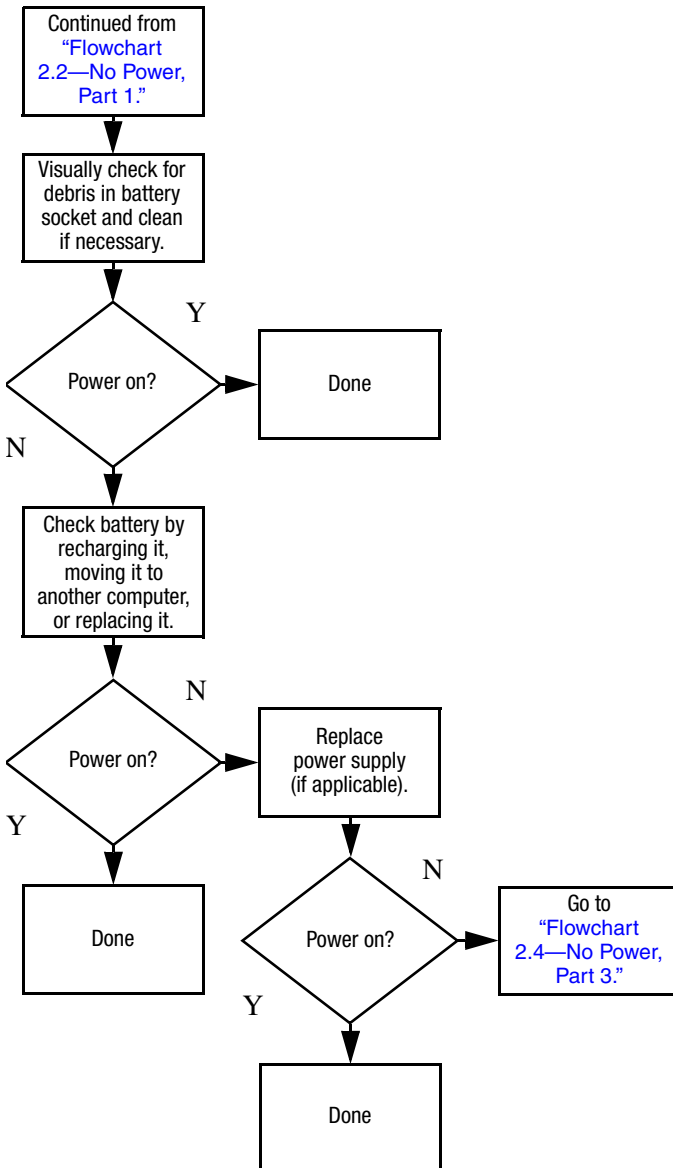


Flowchart 2.4—No Power, Part 3

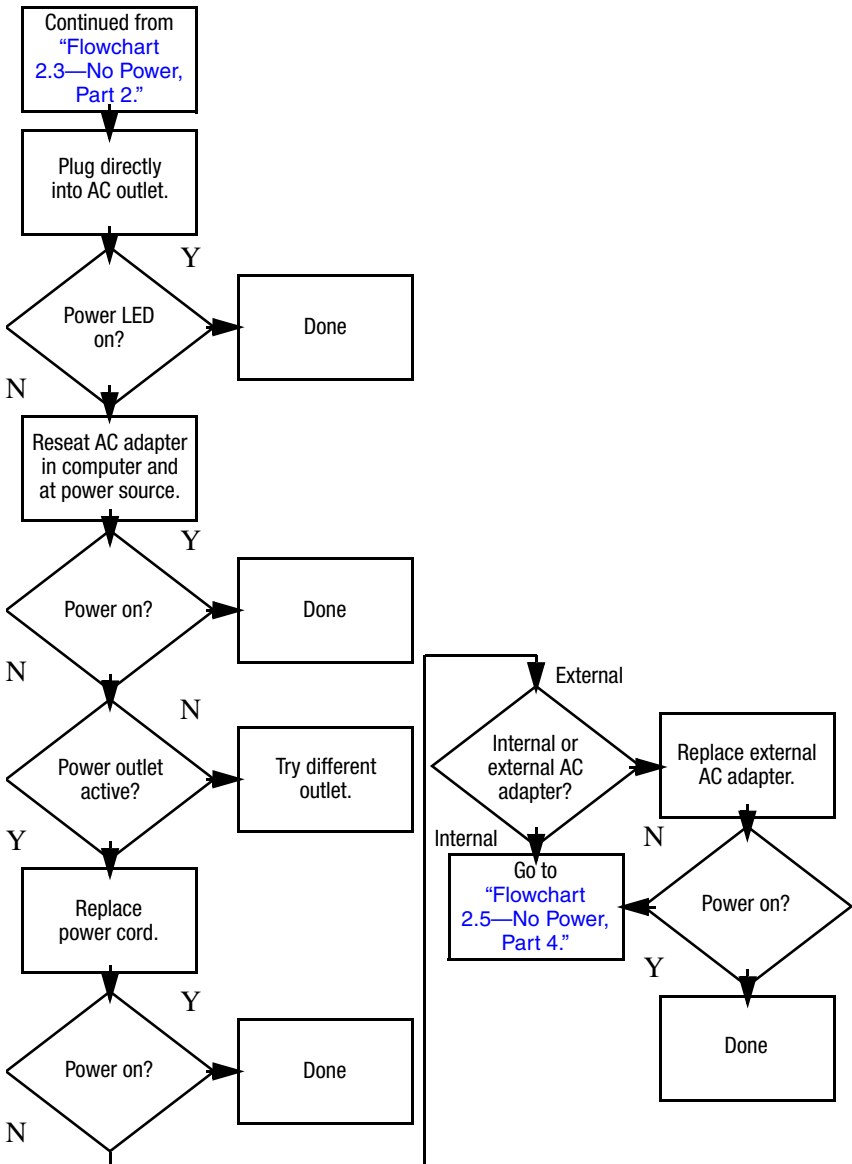


Flowchart 2.5—No Power, Part 4

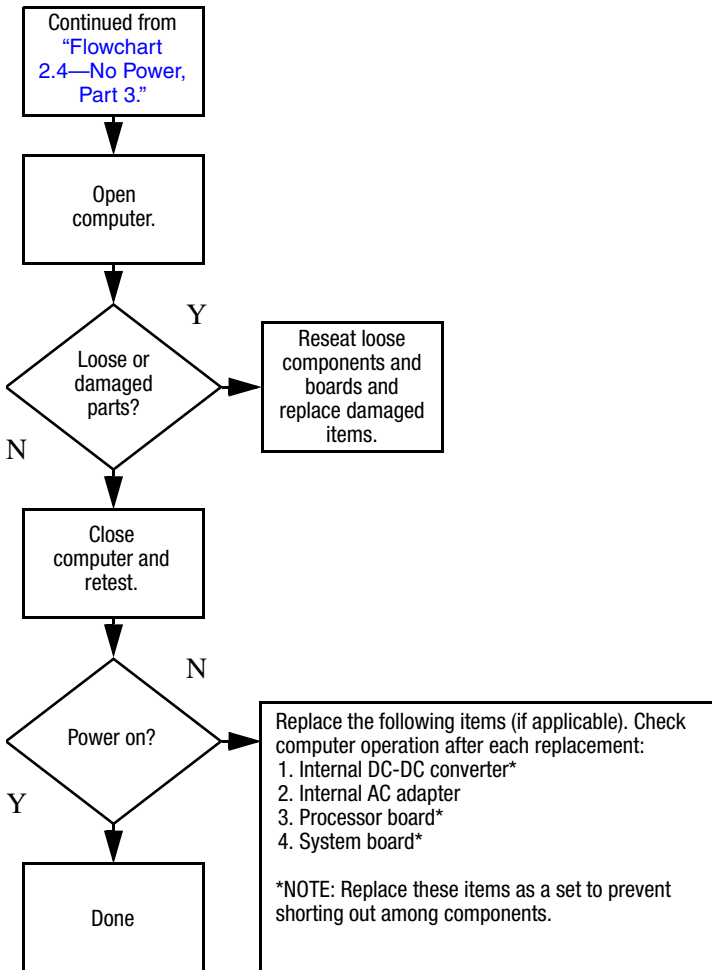


Flowchart 2.6—No Video, Part 1

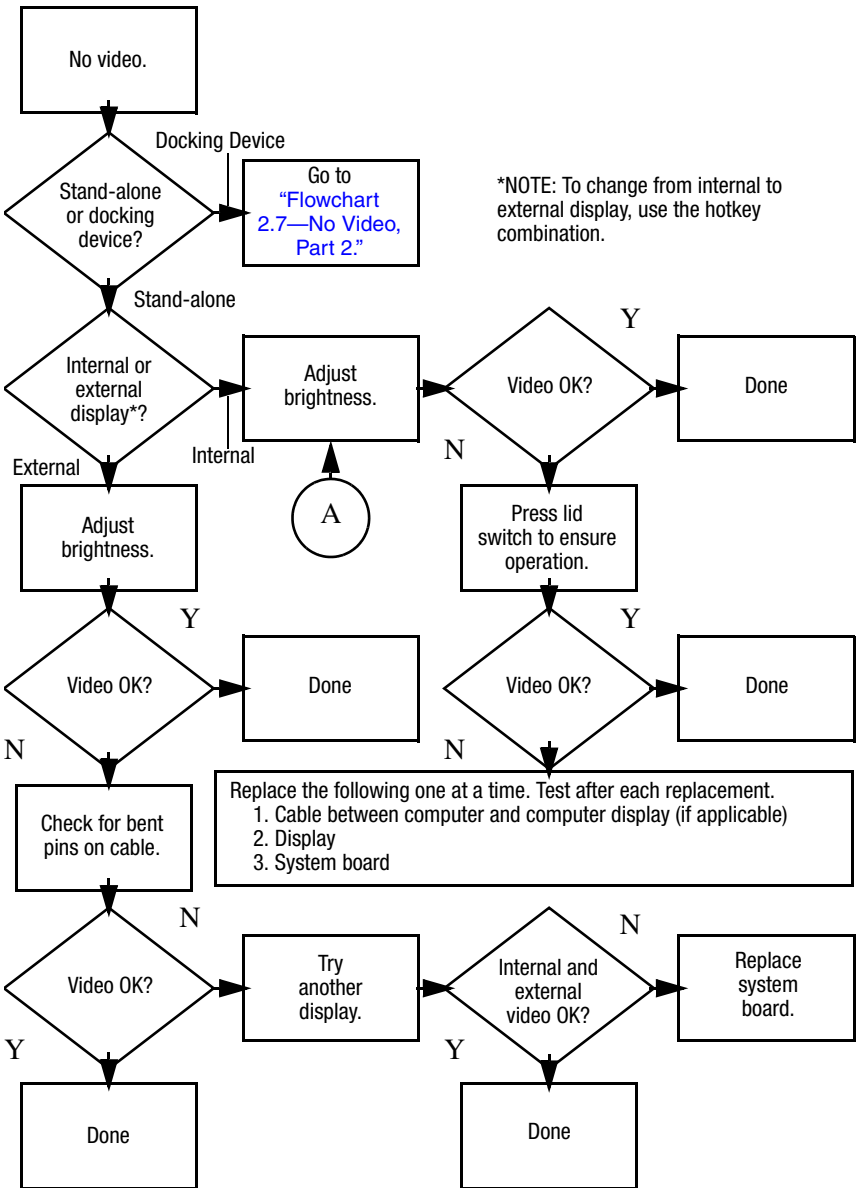


Flowchart 2.7—No Video, Part 2

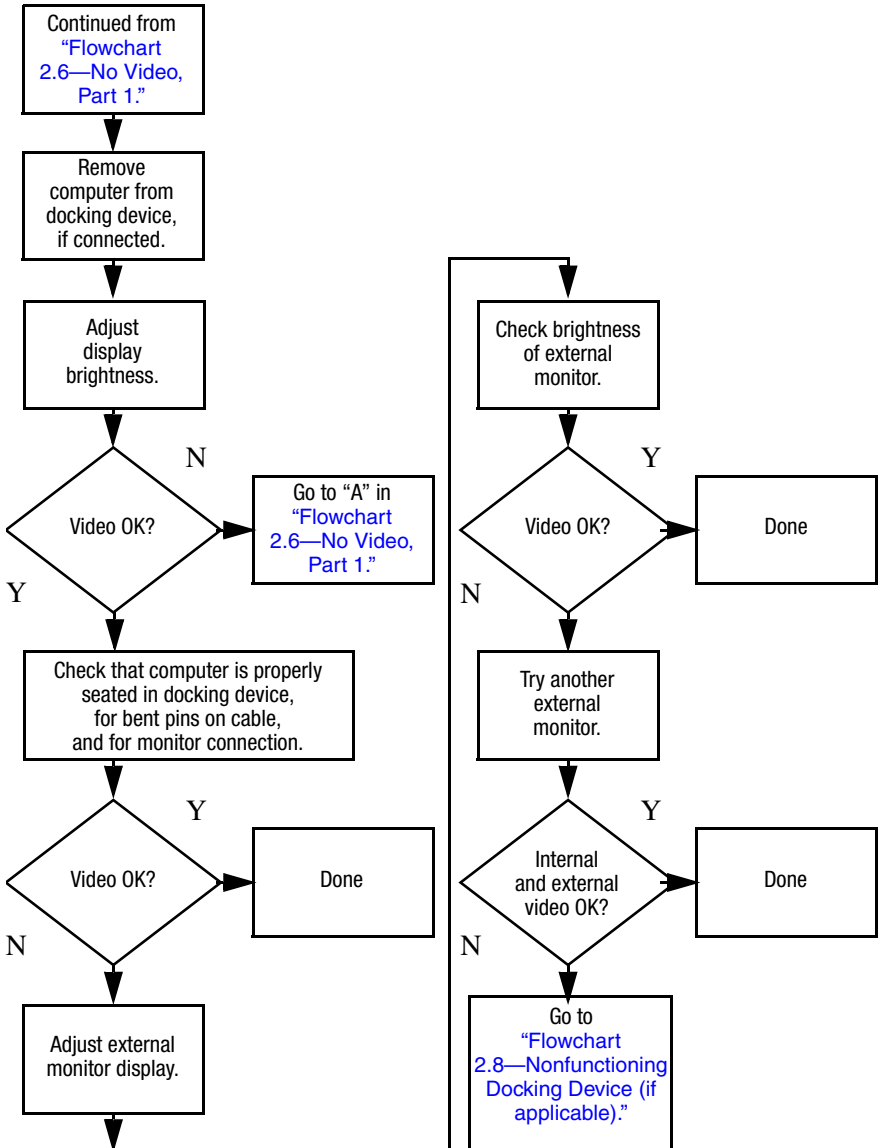

Flowchart 2.8—Nonfunctioning Docking Device (if applicable)

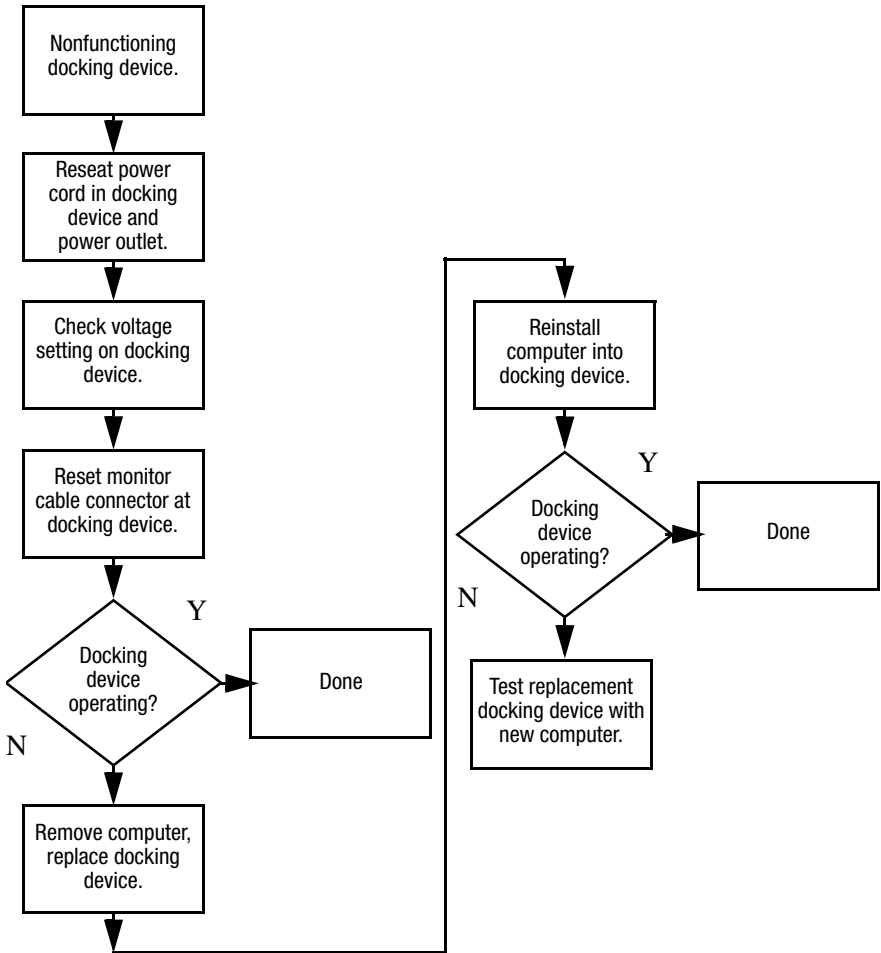


Flowchart 2.9—No Operating System (OS) Loading

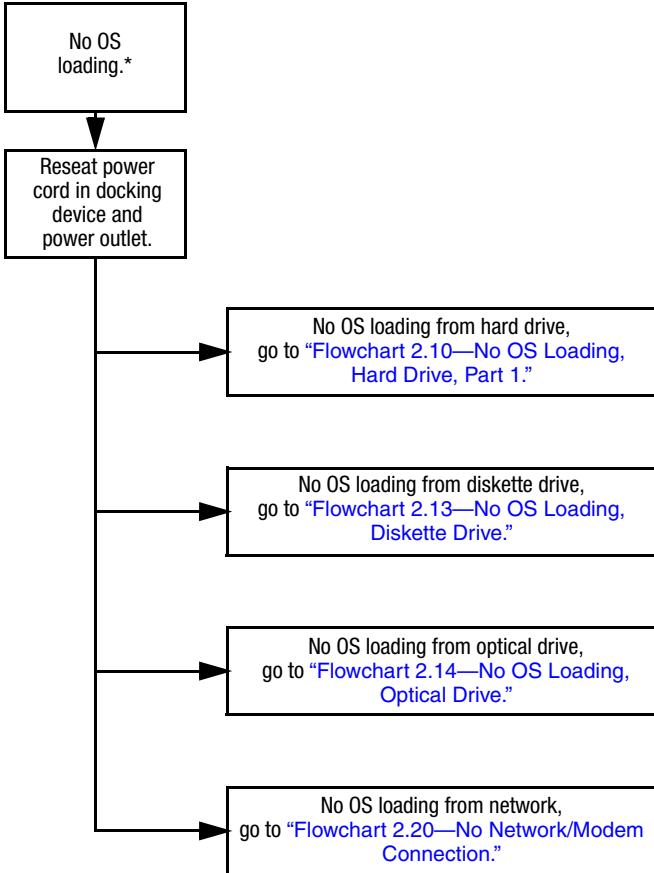


*NOTE: Before beginning troubleshooting, always check cable connections, cable ends, and drives for bent or damaged pins.


Flowchart 2.10—No OS Loading, Hard Drive, Part 1

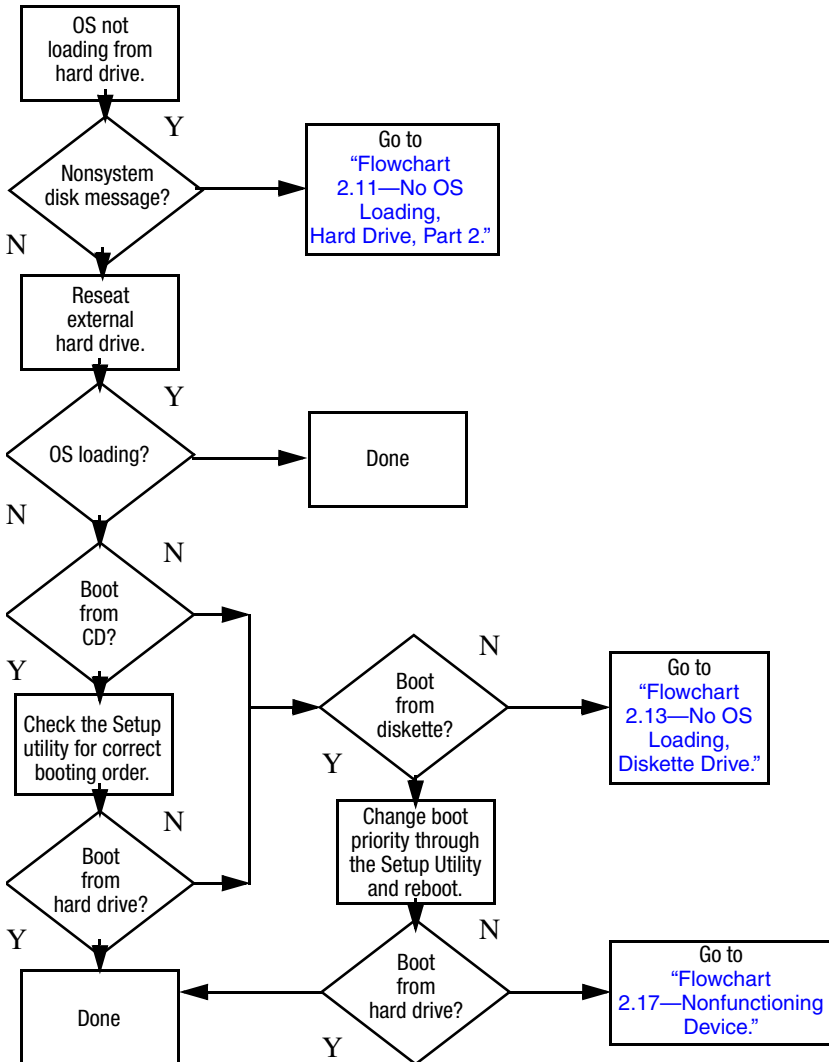


Flowchart 2.11 —No OS Loading, Hard Drive, Part 2

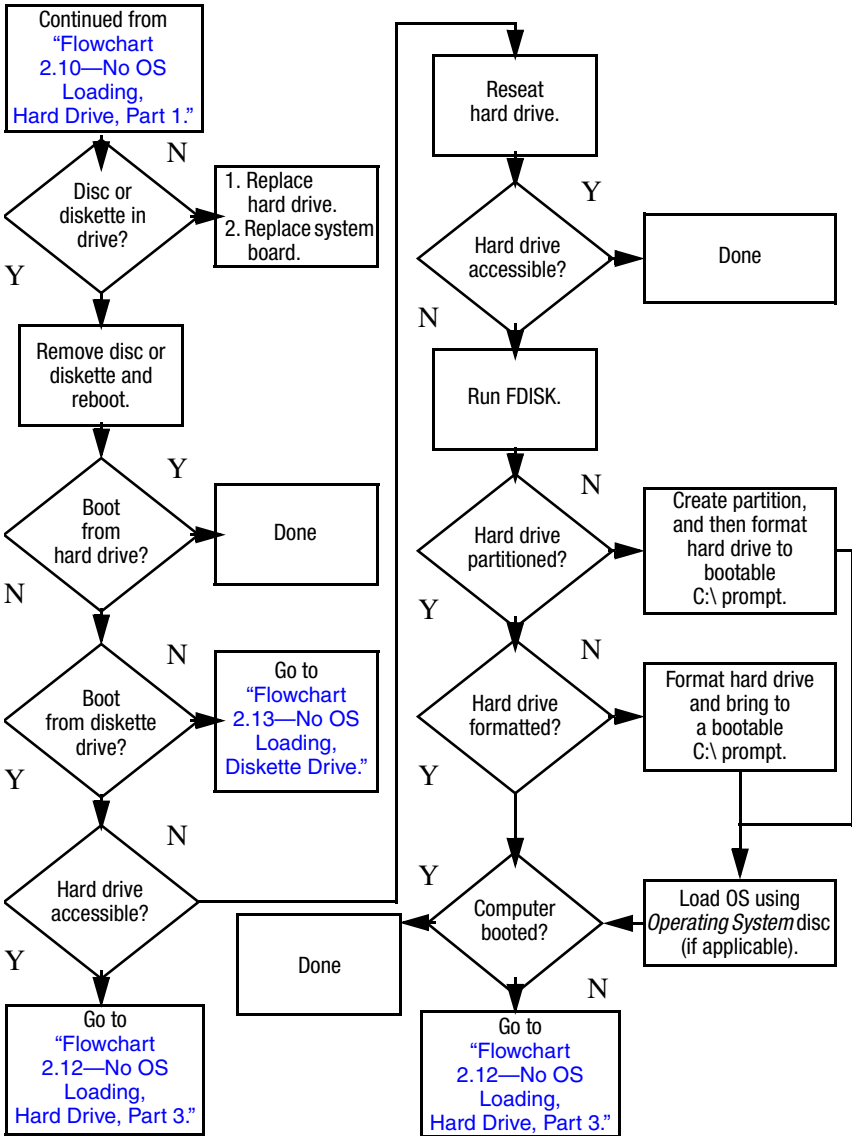


Flowchart 2.12—No OS Loading, Hard Drive, Part 3

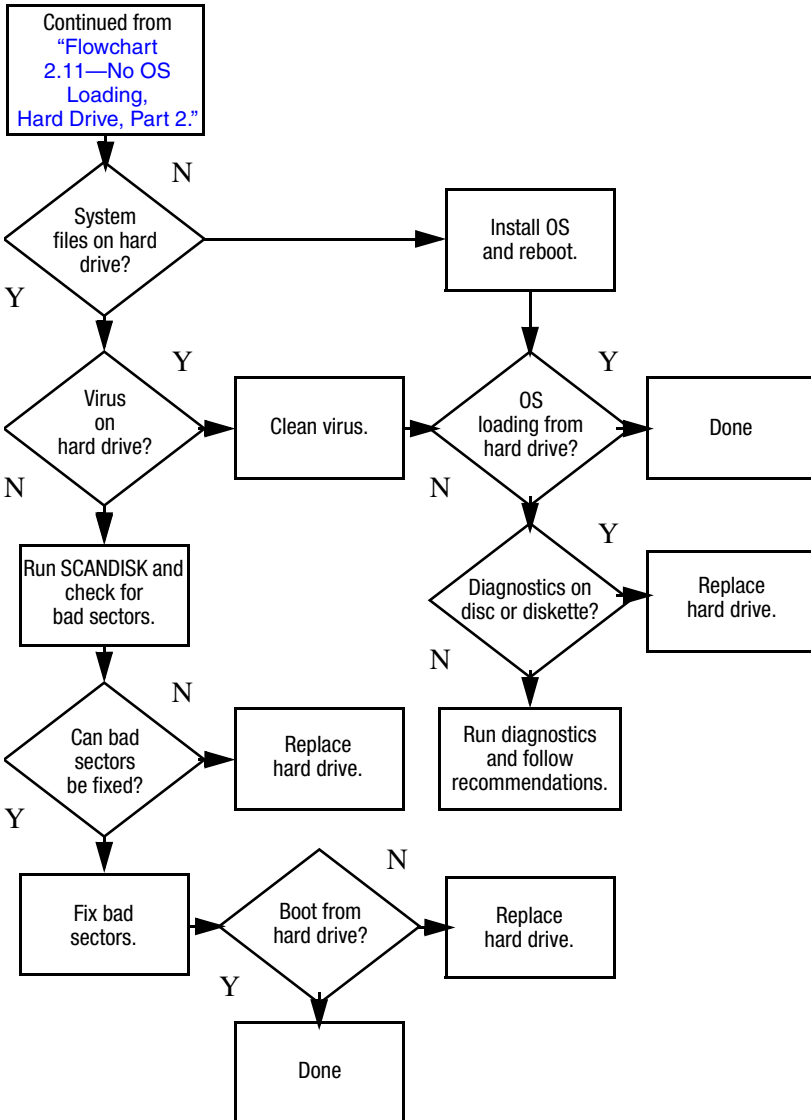


Flowchart 2.13—No OS Loading, Diskette Drive

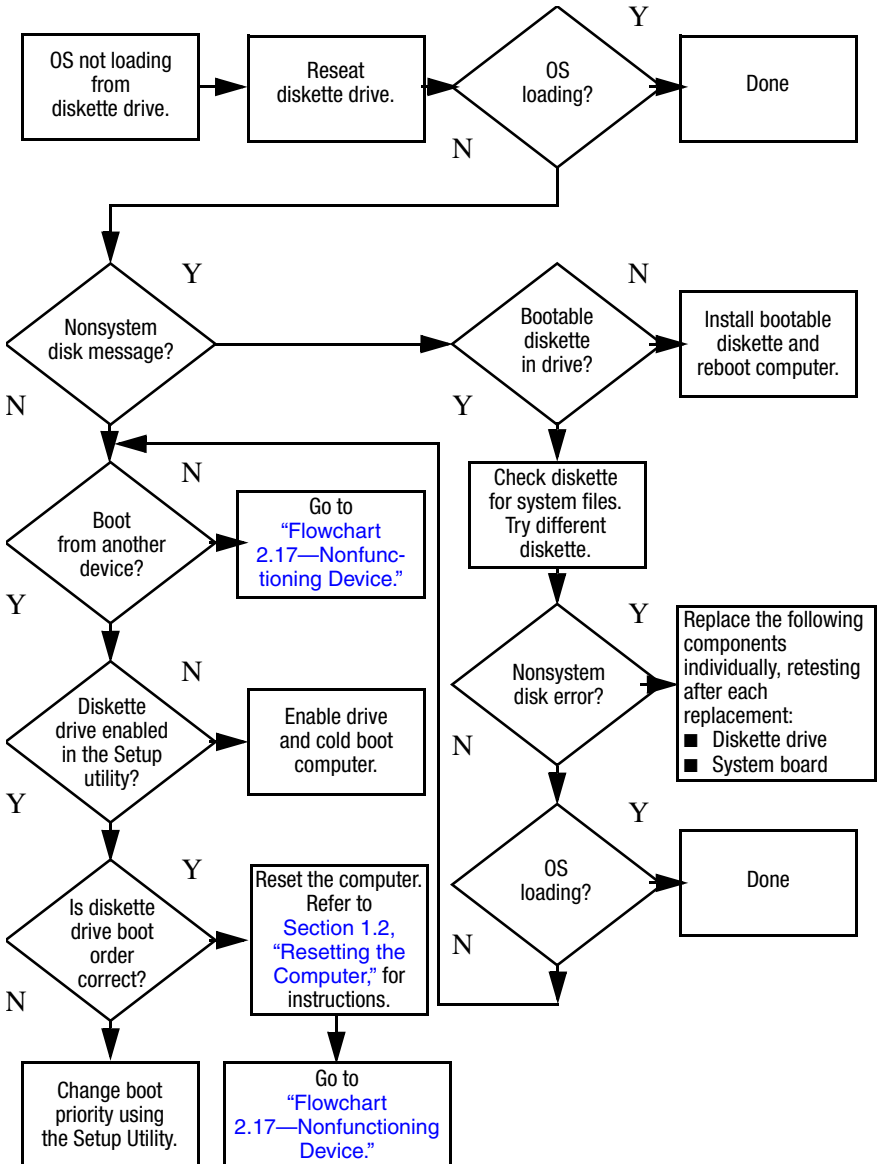


Flowchart 2.14—No OS Loading, Optical Drive

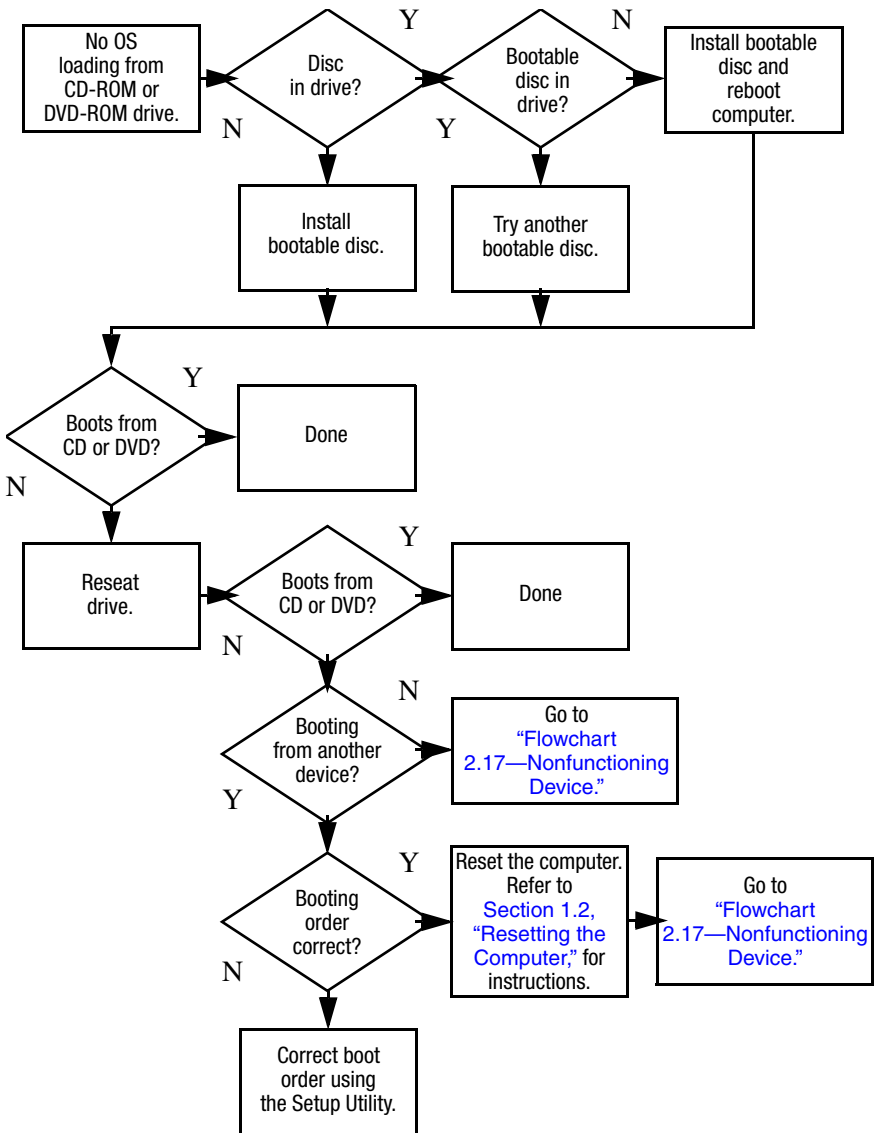


Flowchart 2.15—No Audio, Part 1

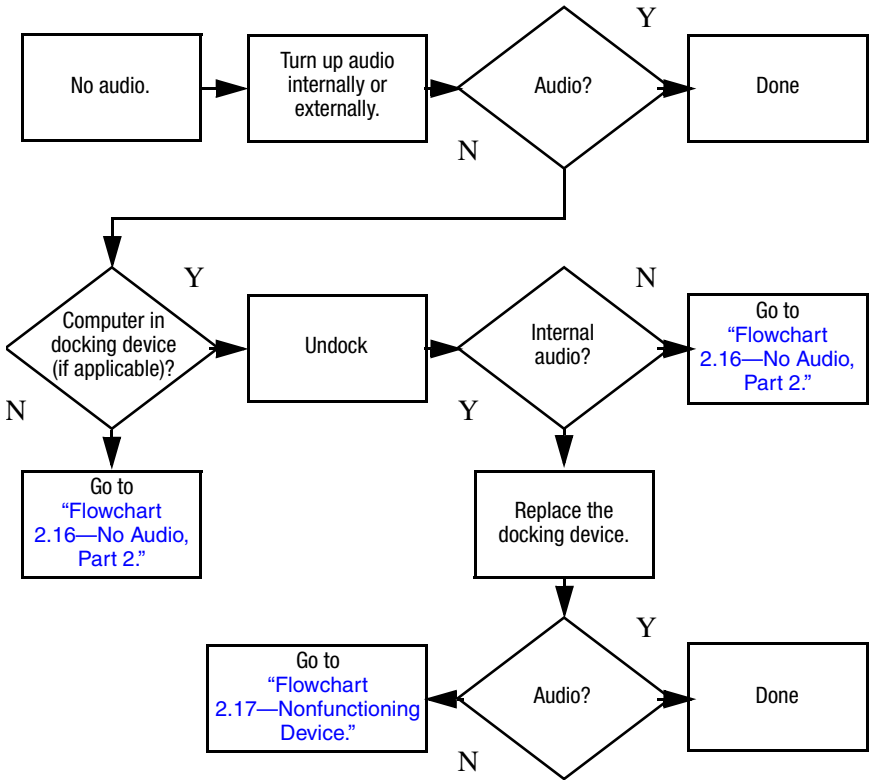


Flowchart 2.16—No Audio, Part 2

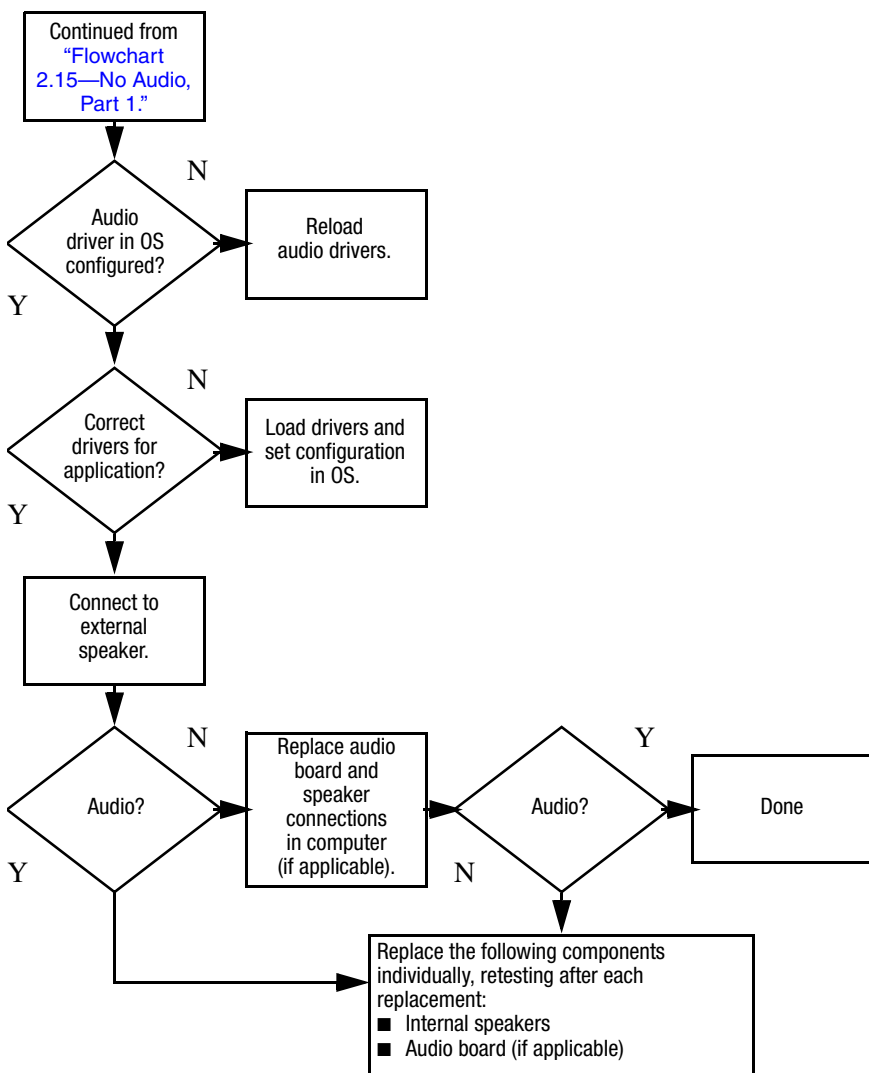


Flowchart 2.17—Nonfunctioning Device

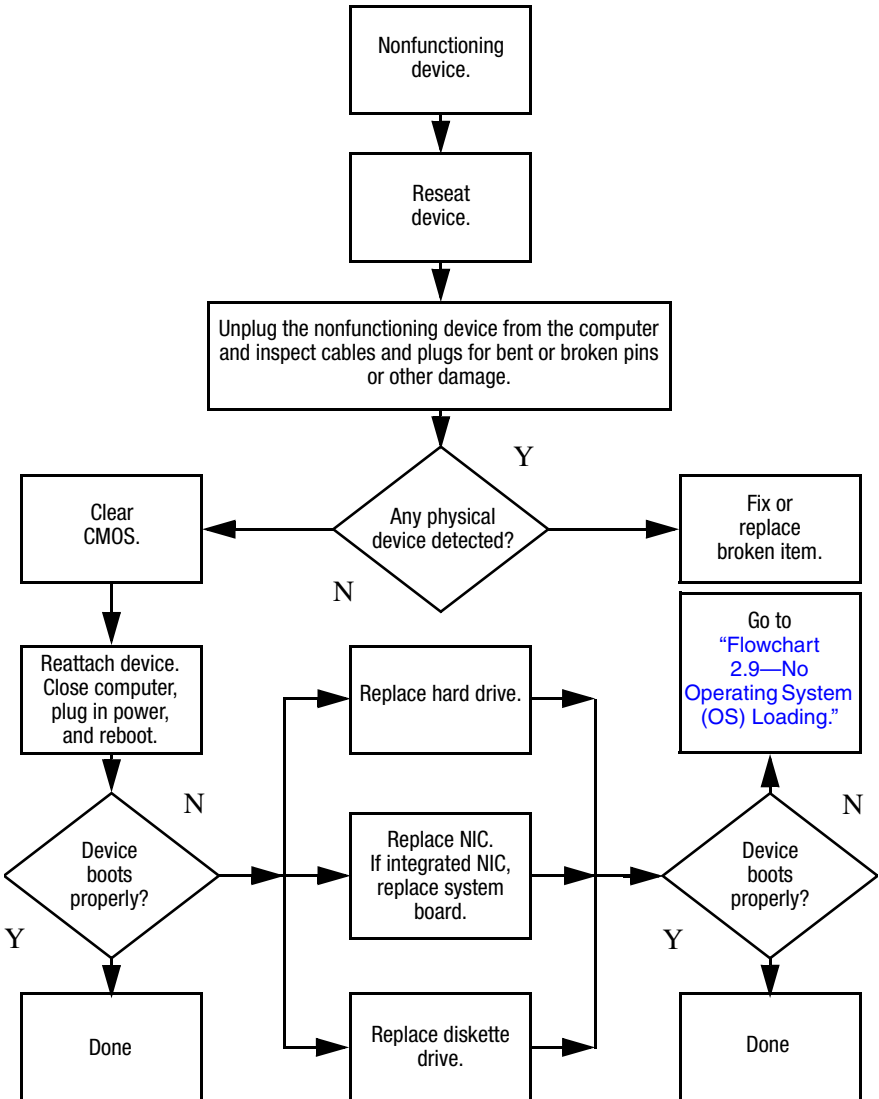


Flowchart 2.18—Nonfunctioning Keyboard

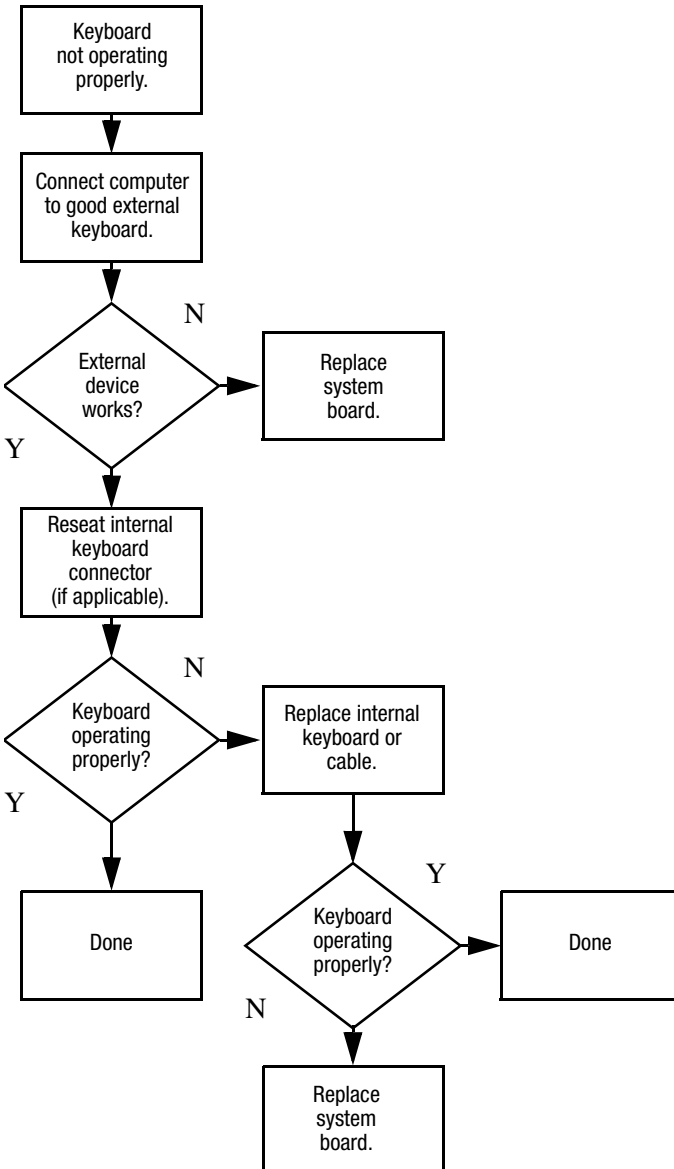

Flowchart 2.19—Nonfunctioning Pointing Device

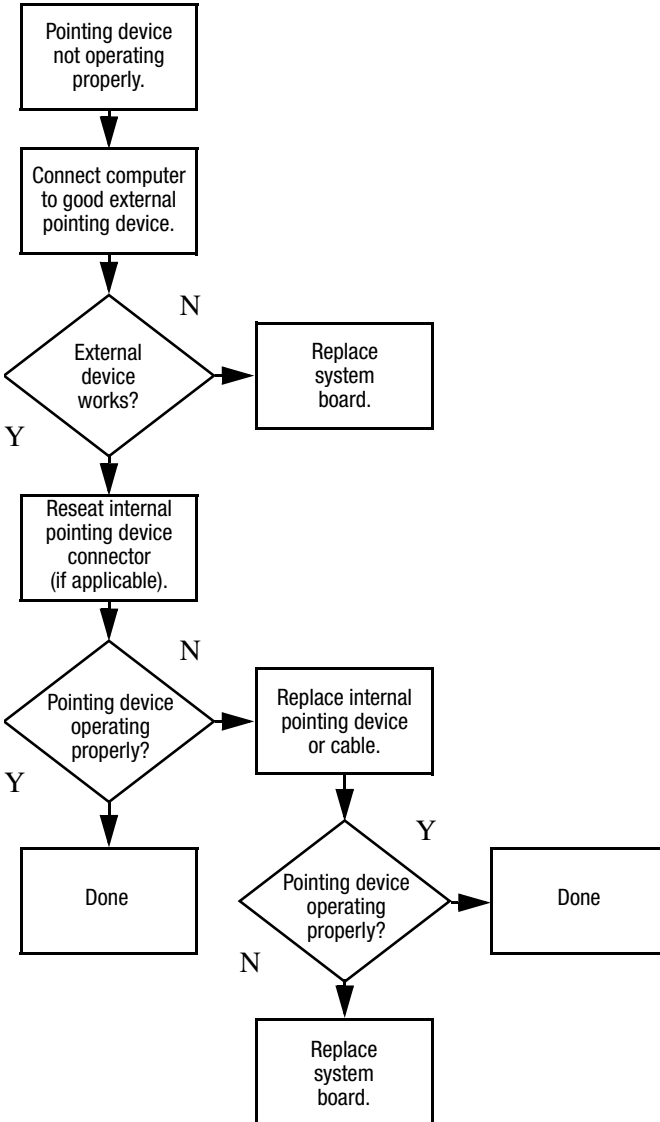

Flowchart 2.20—No Network/Modem Connection

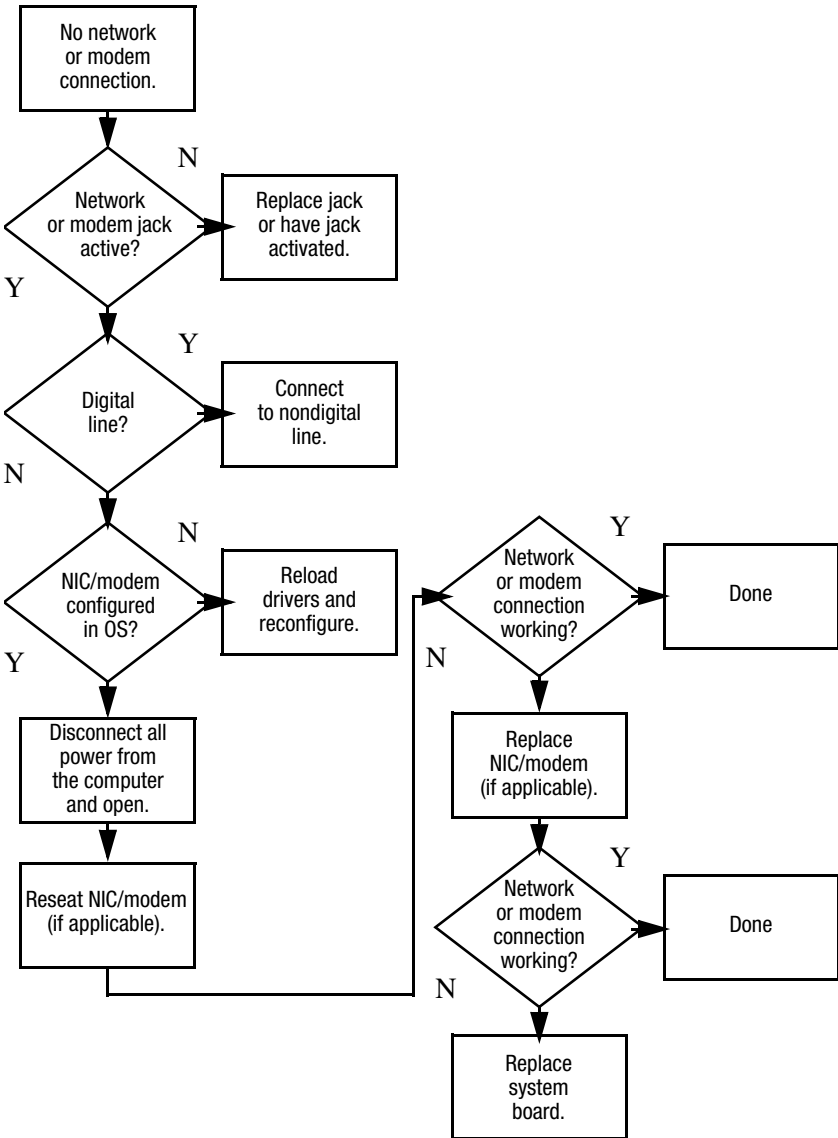


Illustrated Parts Catalog


This chapter provides an illustrated parts breakdown and a reference for spare part numbers and option part numbers.

3.1 Serial Number Location

When ordering parts or requesting information, provide the computer serial number and model number located on the bottom of the computer.

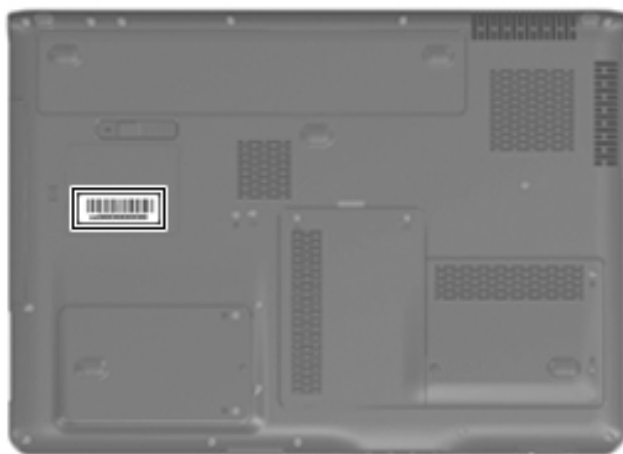


3.2 Computer Major Components

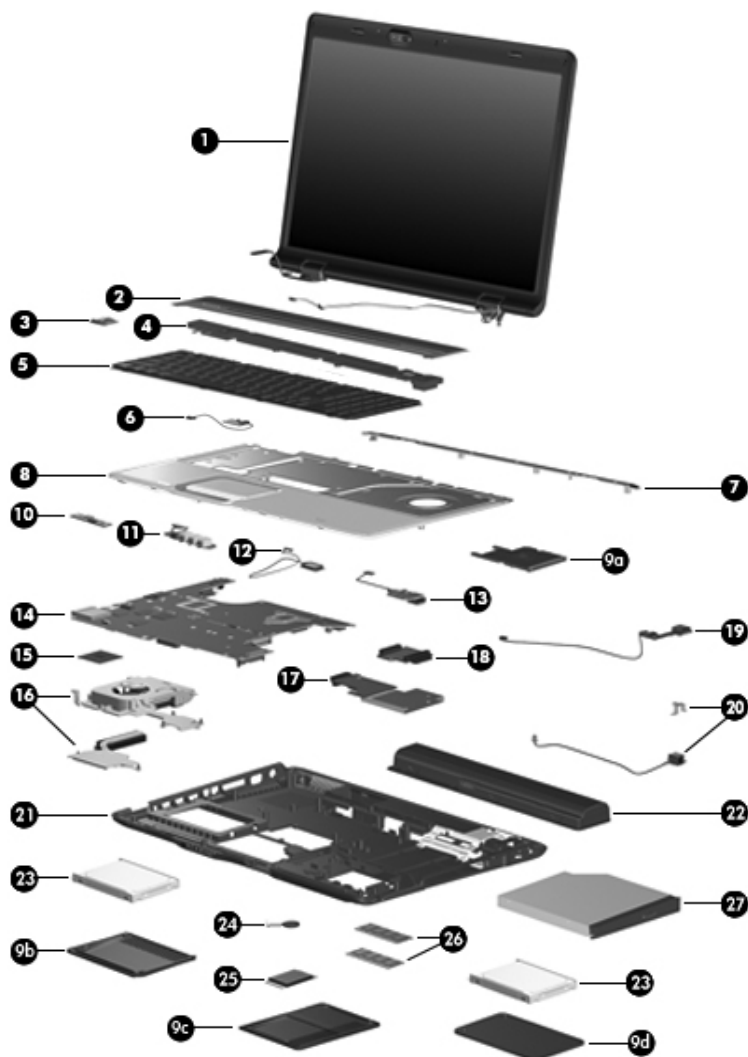

Computer Major Components

Table 3-1
Spare Parts: Computer Major Components


Item	Description	Spare Part Number
1	Display assemblies (include wireless antenna transceivers and cables) For use with full-featured computer models (includes camera, camera cable, and microphones): 17.0-inch, WXGA+, TFT Dual Lamp with BrightView 432948-001 17.0-inch, SXGA+, TFT Single Lamp with BrightView 432947-001 17.0-inch, WXGA+, TFT Single Lamp with BrightView 432946-001 For use with de-featured computer models (includes microphones): 17.0-inch, WXGA+, TFT Dual Lamp with BrightView 432951-001 17.0-inch, SXGA+, TFT Single Lamp with BrightView 432950-001 17.0-inch, WXGA+, TFT Single Lamp with BrightView 432949-001  Refer to Section 3.3, "Display Assembly Components," for display assembly internal component spare part number information.	
2	Switch cover (includes LED board and LED board cable)	432979-001
3	Power button board (includes power button board cable)	432987-001
4	Speaker assembly	432994-001
5	Keyboards For use with all computer models in the following countries: French Canada 432976-121 The United States 432976-001	

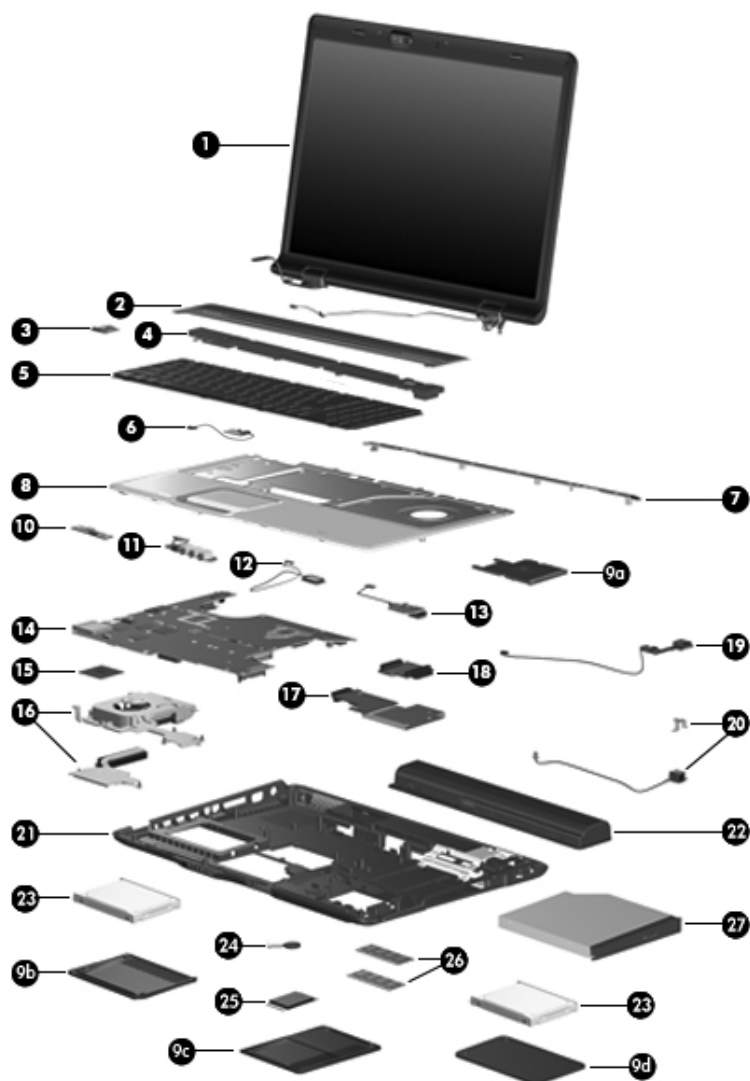

Computer Major Components

Table 3-1**Spare Parts: Computer Major Components (Continued)**


Item	Description	Spare Part Number
5	Keyboards (Continued) For use only with computer models using Intel processors in the following countries: Latin America 432976-161 Thailand 432976-281	
	For use only with computer models using AMD processors in the following countries: Denmark, 432976-DH1 The Netherlands 432976-B31 Finland, Italy 432976-061 Norway, Spain 432976-071 and Sweden The United France 432976-051 Kingdom 432976-031 Germany 432976-041	
6	Display lid switch module (includes display lid switch module cable)	432993-001
7	Top cover support trim	432978-001
8	Top cover (includes TouchPad and TouchPad cable)	432977-001
	Plastics Kit	432981-001
9a	ExpressCard slot bezel	
9b	Left hard drive cover (includes 2 captive screws, secured by C-clips)	
9c	Memory module compartment cover (includes 2 captive screws, secured by C-clips)	
9d	Right hard drive cover (includes 2 captive screws, secured by C-clips)	
10	Wireless switch board (includes wireless switch board cable)	432991-001
11	Audio board (includes audio board cable and infrared lens)	432986-001
12	Bluetooth module (includes Bluetooth module cable)	412766-001

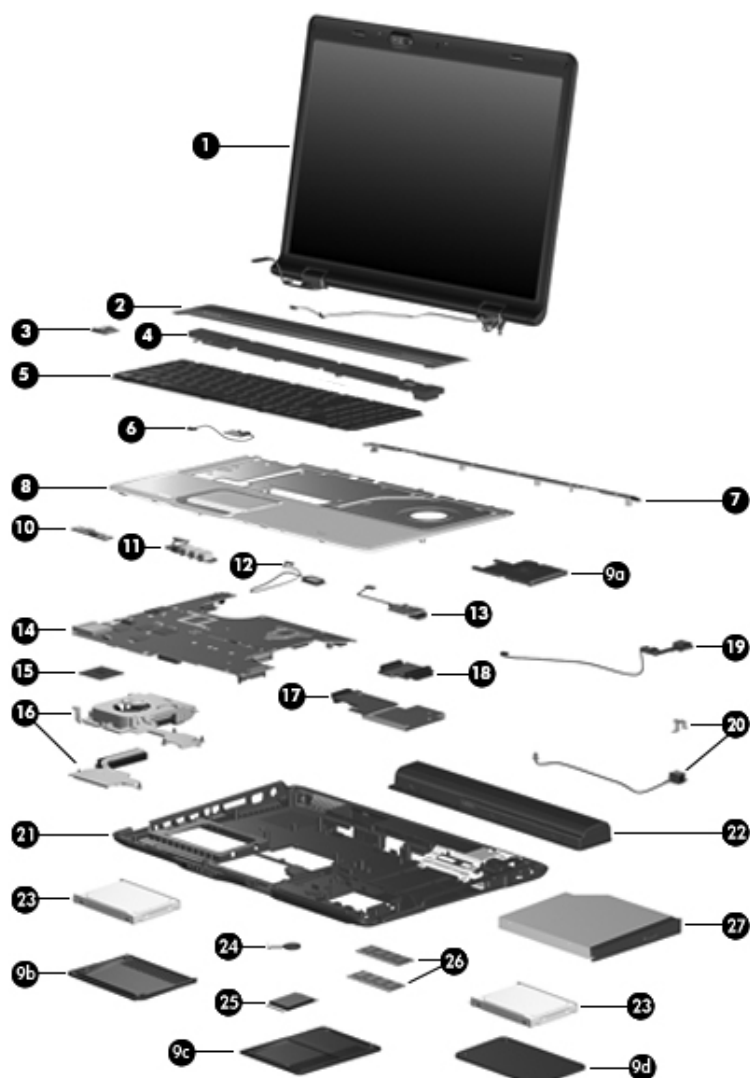

Computer Major Components

Table 3-1**Spare Parts: Computer Major Components (Continued)**


Item	Description	Spare Part Number
13	USB/magnetic board (includes USB/magnetic board cable)	432990-001
14	System boards For use with only computer models using Intel processors: G73 (includes 512-MB of video RAM) G73M (includes 256-MB of video RAM) For use only with UMA computer models using AMD processors For use only with discrete computer models using AMD processors	 434660-001 434659-001 436450-001 432945-001
15	Processors (include thermal pad) Intel Core Duo T7200 (2.00-GHz) Intel Core Duo T5600 (1.83-GHz) Intel Core Duo T2250 (1.66-GHz) Intel Core Duo T2300E (1.66-GHz) Intel Core Duo T5200 (1.66-GHz) AMD Turion ML-60 2.0-GHz AMD Turion ML-56 1.8-GHz AMD Turion ML-52 1.6-GHz AMD Turion ML-50 1.6-GHz Mobile AMD Sempron 3500+ (1.8-GHz)	 434730-001 434731-011 436903-001 419437-001 436902-001 436069-001 431373-001 431372-001 431371-001 436070-001
16	Fan/heat sink assemblies For use only with computer models using Intel processors For use only with computer models using AMD processors	 434678-001 432995-001
17	ExpressCard assembly	432988-001

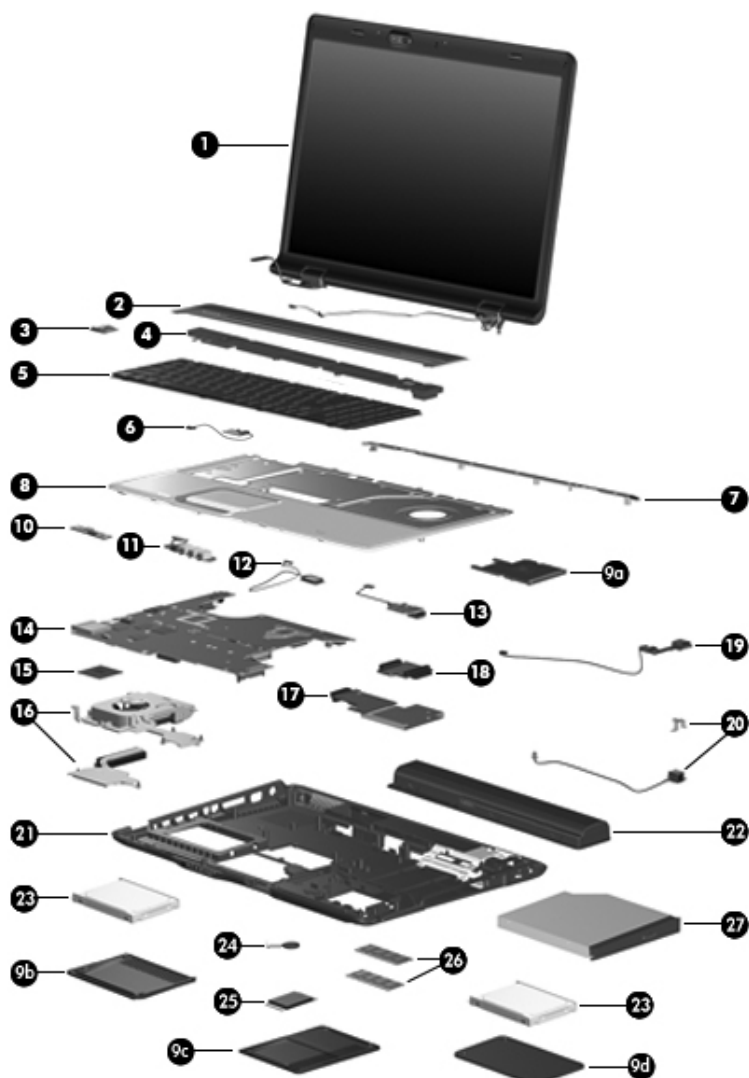

Computer Major Components

Table 3-1
Spare Parts: Computer Major Components (Continued)


Item	Description	Spare Part Number
18	Optical drive connector board	432992-001
19	USB board (includes USB board cable)	432989-001
20	Power connector assembly (includes power connector, power connector assembly cable, and power connector assembly bracket)	432985-001
21	Base enclosures (include wireless switch actuator)	
	For use only with computer models using Intel processors	436364-001
	For use only with computer models using AMD processors	432980-001
	Rubber Feet Kit (includes 5 computer feet, not illustrated)	432982-001
22	Batteries	
	8-cell, 4.4-AHr for use only with computer models using AMD processors	432974-001
	8-cell, 2.55-AHr for use only with computer models using Intel processors	436904-001
	8-cell, 2.2-AHr	434674-001

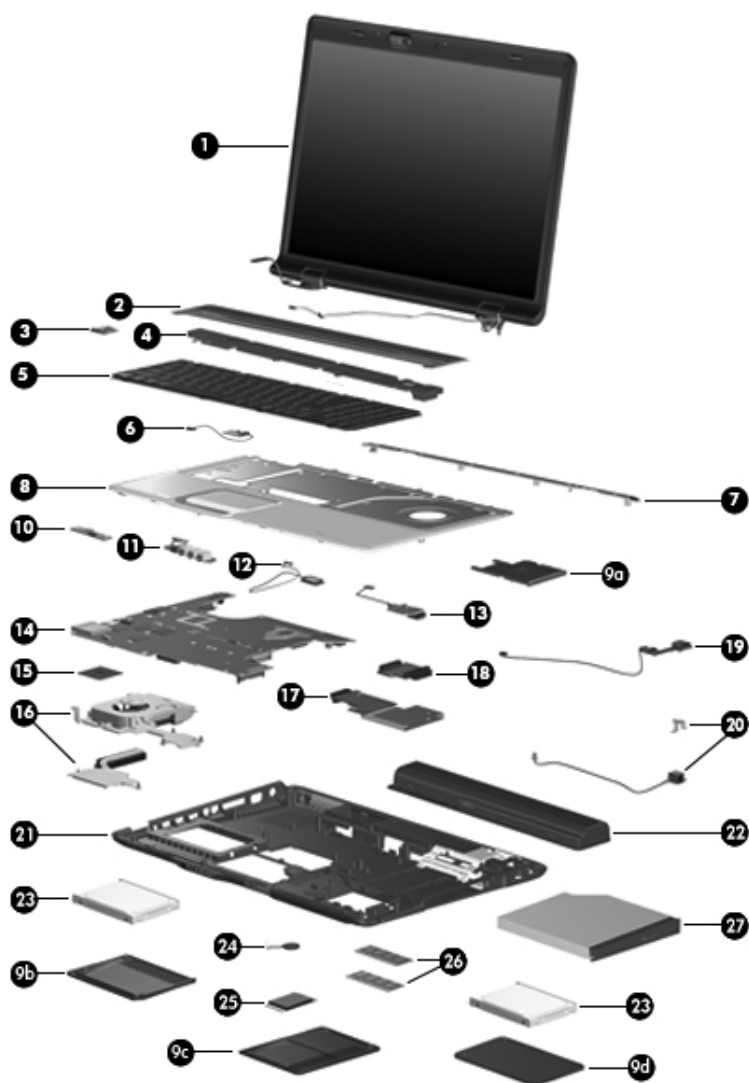

Computer Major Components

Table 3-1**Spare Parts: Computer Major Components (Continued)**


Item	Description	Spare Part Number
23	Hard drives (include bracket and connector) For use only with computer models using Intel processors: 7200-rpm, 100-GB	434662-001
	For use with all computer models (all 5400 rpm; include bracket and connector): 120-GB 100-GB 80-GB	432998-001 432997-001 432996-001
	Hard Drive Bracket Kit (includes the hard drive bracket and screws; not illustrated)	434106-001
24	RTC battery (includes 2-sided tape)	431436-001
25	Mini Card modules For use only with models using Intel processors: 802.11a/b/g WLAN Mini Card module for use in the countries listed below. These countries are categorized as most of the world1 (MOW1). Antigua & Barbuda Canada Panama Paraguay Chile India Saudi Arabia Argentina Dominican Republic Indonesia Taiwan Australia Republic Malaysia The United States Bahamas Guam Mexico Barbados Guatemala New Zealand Vietnam Brunei Hong Kong	407674-001

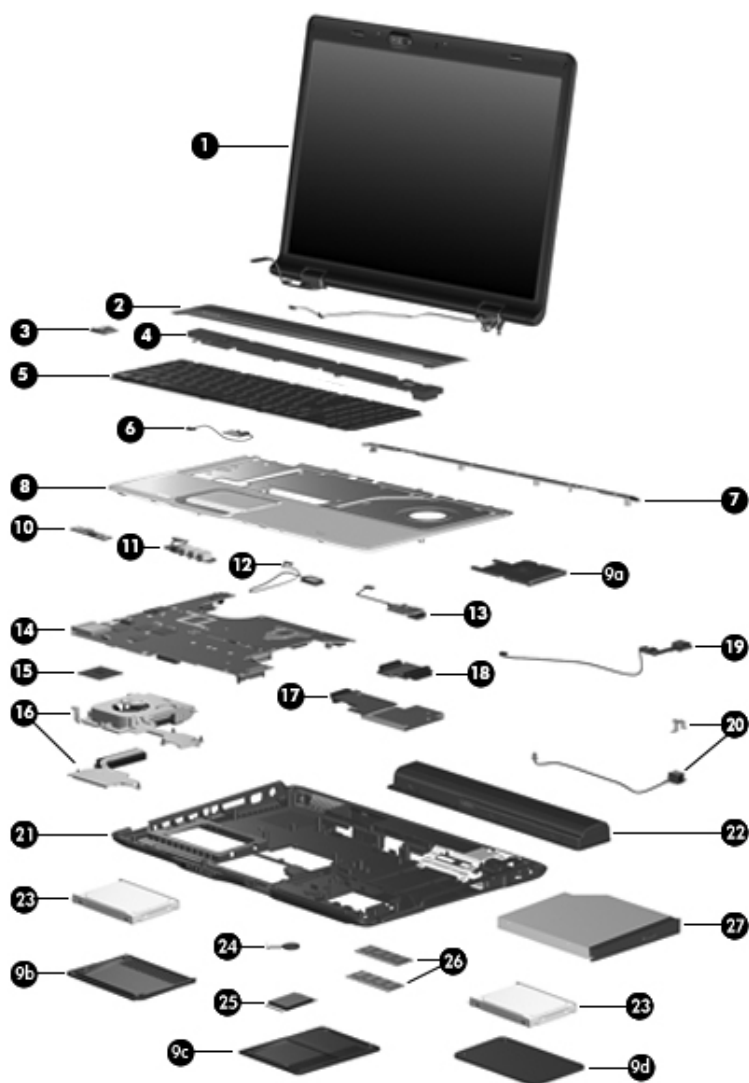

Computer Major Components

Table 3-1**Spare Parts: Computer Major Components (Continued)**


Item	Description	Spare Part Number
25	Mini Card modules (Continued)	
	802.11a/b/g WLAN Mini Card module for use in the countries listed below. These countries are categorized as most of the world2 (MOW2).	407674-002
	Aruba	Egypt
	Austria	El Salvador
	Azerbaijan	Estonia
	Bahrain	Finland
	Belgium	France
	Bermuda	Georgia
	Bulgaria	Germany
	Cayman Islands	Greece
	Columbia	Hungary
	Croatia	Iceland
	Cyprus	Ireland
	The Czech Republic	Italy
	Denmark	Latvia
		Lebanon
		The Philippines
		Poland
		Portugal
		Romania
		Russia
		Serbia and Montenegro
		Singapore
		Slovakia
		Liechtenstein
		Lithuania
		Luxembourg
		Malta
		Monaco
		The Netherlands
		Norway
		Oman
		Slovenia
		South Africa
		Spain
		Sri Lanka
		Sweden
		Switzerland
		Turkey
		The United Kingdom
		Uzbekistan
	802.11a/b/g WLAN Mini Card module for use in the countries listed below. These countries are categorized as the rest of the world (ROW).	407674-003
	China	Honduras
	Ecuador	Pakistan
	Haiti	Peru
		Qatar
		South Korea
		Uruguay
		Venezuela

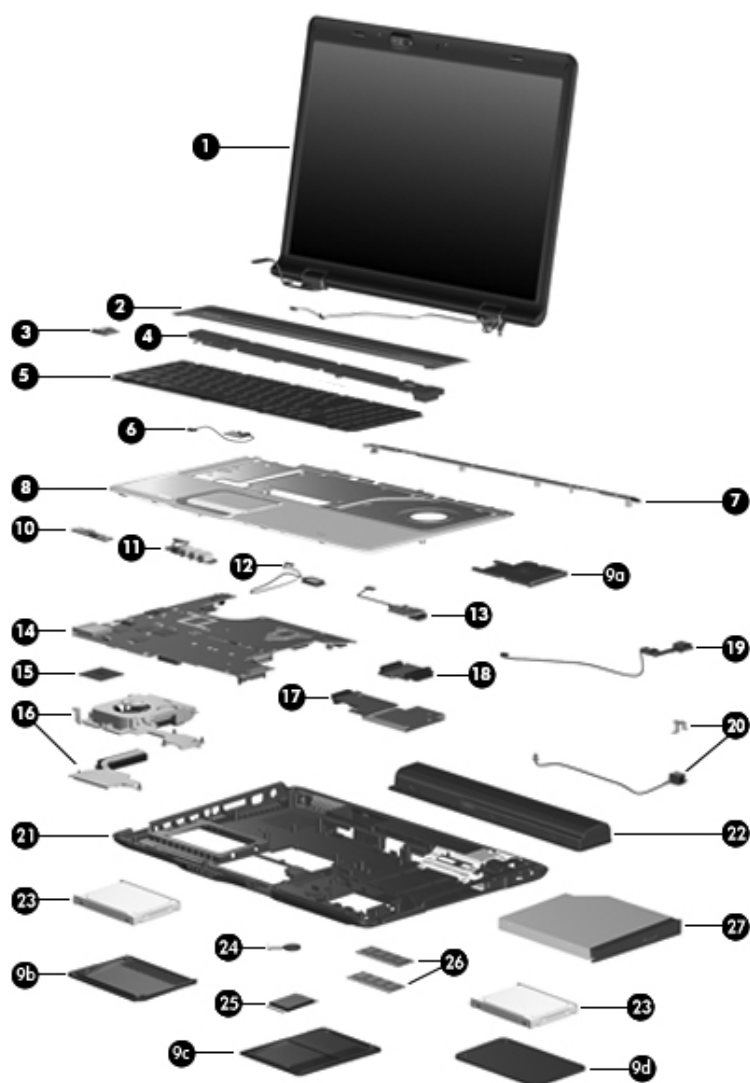

Computer Major Components

Table 3-1**Spare Parts: Computer Major Components (Continued)**

Item	Description	Spare Part Number
25	Mini Card modules (Continued)	
	For use only with models using AMD processors:	
	802.11a/b/g WLAN Mini Card module for use in the United States and Canada.	407160-001
	802.11a/b/g WLAN Mini Card module for use in the countries listed below:	407160-002
	China Honduras Qatar Uruguay	
	Ecuador Pakistan South Korea Venezuela	
	Haiti Peru	
	802.11b/g WLAN Mini Card module for use in the United States and Canada.	407159-001
	802.11b/g WLAN Mini Card module for use in the countries listed below:	407159-002
	China Honduras Qatar Uruguay	
	Ecuador Pakistan South Korea Venezuela	
	Haiti Peru	
26	Memory modules, PC-5300, 667-MHz, 1-DIMM	
	For use only with models using Intel processors:	
	1024-MB	434742-001
	512-MB	434741-001
	256-MB	434740-001
	For use only with models using AMD processors:	
	1024-MB	432970-001
	512-MB	432969-001
	256-MB	432968-001

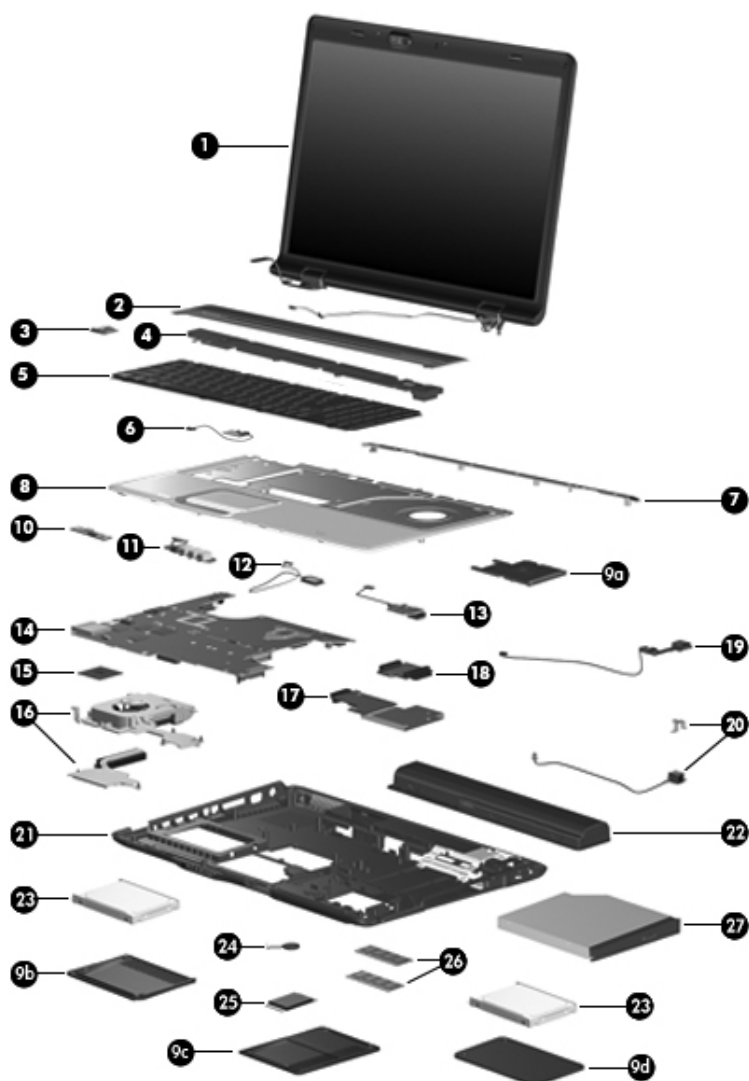


Computer Major Components

Table 3-1
Spare Parts: Computer Major Components (Continued)

Item	Description	Spare Part Number
27	Optical drives (include bezel)	
	For use only with computer models using Intel processors:	
	DVD/CD-RW Combo Drive	434673-001
	For use only with computer models using AMD processors:	
	DVD/CD-RW Combo Drive	432971-001
	For use with all computer models:	
	DVD±RW/R and CD-RW Double-Layer Combo Drive with LightScribe	432973-001
	DVD±RW/R and CD-RW Double-Layer Combo Drive	432972-001
	Cable Kit (not illustrated), includes:	434677-001
	Audio board cable	
	Bluetooth module cable	
	Display lid switch module cable	
	USB board cable	
	USB/magnetic board cable	

3.3 Display Assembly Components

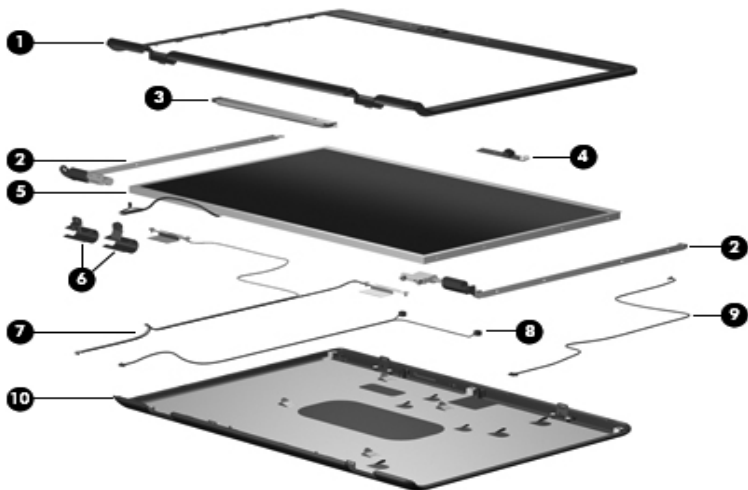

Display Assembly Components

Table 3-2
Display Assembly Components
Spare Part Number Information

Item	Description	Spare Part Number
1	Display bezels	
	For use with Dual Lamp display panels with camera	432956-001
	For use with Dual Lamp display panels without camera	436068-001
	For use with Single Lamp display panels with camera	432955-001
	For use with Single Lamp display panels without camera	436067-001

Table 3-2
Display Assembly Components
Spare Part Number Information (Continued)

Item	Description	Spare Part Number
2	Display Hinge Kit (includes left and right display hinges)	
	For use with Dual Lamp display panels	432964-001
	For use with Single Lamp display panels	432963-001
3	Display inverters	
	For use with Dual Lamp display panels	432959-001
	For use with Single Lamp display panels	431391-001
4	Camera module	432960-001
5	Display panels	
	17.0-inch, WXGA+, TFT Dual Lamp display panel with BrightView	432954-001
	17.0-inch, SXGA+, TFT Single Lamp display panel with BrightView	432953-001
	17.0-inch, WXGA+, TFT Single Lamp display panel with BrightView	432952-001
6	Display hinge covers	432965-001
7	Wireless antenna transceivers and cables	432966-001
8	Microphones	432961-001
9	Display Cable Kit (includes camera cable)	432962-001
10	Display enclosures	
	For use with Dual Lamp display panels	432958-001
	For use with Single Lamp display panel	432957-001
	Display Screw Kit (includes screws and rubber screw covers, not illustrated)	432967-001

3.4 Mass Storage Devices



Mass Storage Devices


Table 3-3
Mass Storage Devices
Spare Part Number Information

Item	Description	Spare Part Number
1	Hard drives (include bracket and connector)	
	For use only with computer models using Intel processors:	
	7200-rpm, 100-GB	434662-001
	For use with all computer models (all 5400 rpm):	
	120-GB	432998-001
	100-GB	432997-001
	80-GB	432996-001
	Hard Drive Bracket Kit (not illustrated)	434106-001

Table 3-3
Mass Storage Devices
Spare Part Number Information (*Continued*)

Item	Description	Spare Part Number
2	Optical drives	
	For use only with computer models using Intel processors:	
	DVD/CD-RW Combo Drive	434673-001
	For use only with computer models using AMD processors:	
	DVD/CD-RW Combo Drive	432971-001
	For use with all computer models:	
	DVD±RW/R and CD-RW Double-Layer Combo Drive with LightScribe	432973-001
	DVD±RW/R and CD-RW Double-Layer Combo Drive	432972-001

3.5 Plastics Kit

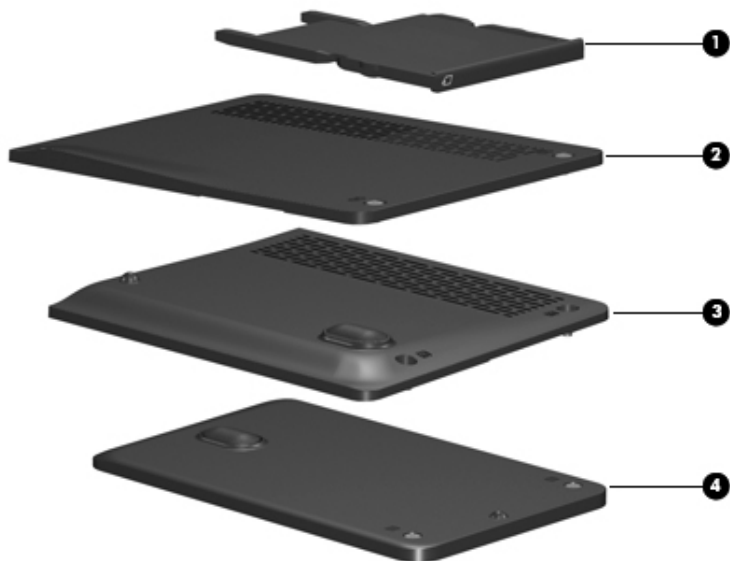


Plastics Kit Components

Table 3-4
Plastics Kit
Spare Part Number Information

Item	Description	Spare Part Number
	Plastics Kit	432981-001
	Includes:	
1	ExpressCard slot bezel	
2	Memory module compartment cover (includes 2 captive screws, secured by C-clips)	
3	Right hard drive cover (includes 2 captive screws, secured by C-clips)	
4	Left hard drive cover (includes 2 captive screws, secured by C-clips)	

3.6 Cable Kit

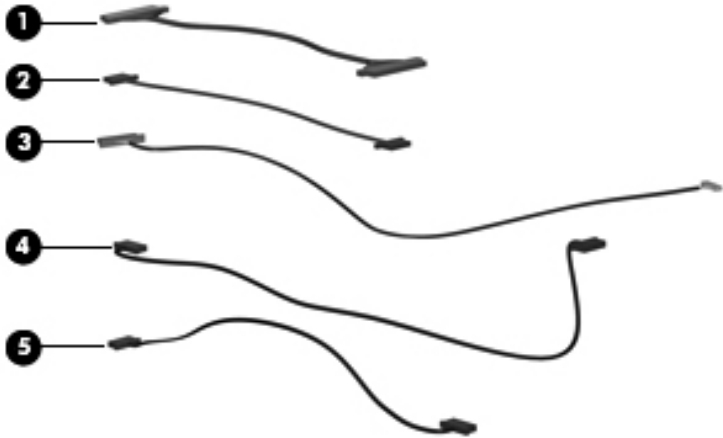

Cable Kit Components

Table 3-5
Cable Kit
Spare Part Number Information

Item	Description	Spare Part Number
	Cable Kit	434677-001
	Includes:	
1	Audio board cable	
2	Display lid switch module cable	
3	Bluetooth module cable	
4	USB board cable	
5	USB/magnetic board cable	

3.7 Miscellaneous

Table 3-6
Spare Parts: Miscellaneous

Description	Spare Part Number
AC adapters	
HP 90W PFC AC adapter	432309-001
HP 90W non-PFC AC adapter	432310-001
Analog TV tuner	407941-001
Composite S-Video and audio input cable	407939-001
DVB-T TV tuner	412175-001
DVB-T TV tuner antenna	412176-001
Ear bud headset	371693-001
HP Backpack	405527-001
HP Remote Control	407313-001
Logo Kit	432984-001
RF cable	408485-001
RF input adapter cable	407940-001
TV tuner remote control	408479-001
USB digital drive	364727-001
USB infrared receiver	408483-001
USB travel mouse	309674-001
Wireless laser mouse	430958-001

Table 3-6
Spare Parts: Miscellaneous (Continued)

Description	Spare Part Number
Power cords for use with all computer models:	
Belgium, Europe, Finland, France, Germany, Greece, the Netherlands, Norway, Portugal, Spain, and Sweden	394279-021
Canada, French Canada, Latin America, Thailand, and the United States	394279-001
Denmark	394279-081
Italy	394279-061
The United Kingdom and Hong Kong	394279-031
Power cords for use only with computer models using Intel processors:	
Australia and New Zealand	394279-011
Israel	394279-BB1
India	394279-D61
Switzerland	394279-111
Screw Kits (include the following screws; refer to Appendix A, "Screw Listing," for more information on screw specifications and usage)	
For use only with computer models using Intel processors	434676-001
For use only with computer models using AMD processors	432983-001
■ Phillips PM3.0×3.0 screw	■ Phillips PM2.5×4.0 screw
■ Phillips PM2.5×11.0 screw	■ Phillips PM2.0×6.0 Screw
■ Phillips PM2.5×8.0 screw	■ Phillips PM2.0×5.0 captive screw
■ Phillips PM2.5×7.0 screw	■ Phillips PM2.0×4.0 screw
■ Phillips PM2.5×5.0 screw	■ Phillips PM2.0×3.0 screw

3.8 Sequential Part Number Listing

Table 3-7**Spare Parts: Sequential Part Number Listing**

Spare Part Number	Description
309674-001	USB travel mouse
364727-001	USB digital drive
371693-001	Headset
394279-001	Power cord for use in Canada, French Canada, Latin America, Thailand, and the United States
394279-011	Power cord for use only with computer models using Intel processors in Australia and New Zealand
394279-021	Power cord for use in Belgium, Europe, Finland, France, Germany, Greece, the Netherlands, Norway, Portugal, Spain, and Sweden
394279-031	Power cord for use in the United Kingdom and Hong Kong
394279-061	Power cord for use in Italy
394279-081	Power cord for use in Denmark
394279-111	Power cord for use only with computer models using Intel processors in Switzerland
394279-BB1	Power cord for use only with computer models using Intel processors in Israel
394279-D61	Power cord for use only with computer models using Intel processors in India
405527-001	HP Backpack
407159-001	802.11b/g WLAN Mini Card module for use only with models using AMD processors in the United States and Canada.

Table 3-7**Spare Parts: Sequential Part Number Listing (*Continued*)**

Spare Part Number	Description
407159-002	802.11/b/g WLAN Mini Card module for use only with models using AMD processors in the countries listed below: China Ecuador Haiti Honduras Pakistan Peru Qatar South Korea Uruguay Venezuela
407160-001	802.11a/b/g WLAN Mini Card module for use only with models using AMD processors in the United States and Canada.
407160-002	802.11/b/g WLAN Mini Card module for use only with models using AMD processors in the countries listed below: China Ecuador Haiti Honduras Pakistan Peru Qatar South Korea Uruguay Venezuela
407313-001	HP Remote Control
407674-001	802.11a/b/g WLAN Mini Card module for use only with computer models using Intel processors in the MOW1 countries listed below: Antigua & Barbuda Argentina Australia Bahamas Barbados Brunei Canada Chile Dominican Republic Guam Guatemala Hong Kong Panama India Indonesia Malaysia Mexico New Zealand Paraguay Saudi Arabia Taiwan The United States Vietnam

Table 3-7

Spare Parts: Sequential Part Number Listing (*Continued*)

Spare Part Number	Description		
407674-002	802.11a/b/g WLAN Mini Card module for use only with computer models using Intel processors in the MOW2 countries listed below:		
	Aruba	Georgia	Liechtenstein
	Austria	Germany	Lithuania
	Azerbaijan	Greece	Luxembourg
	Bahrain	Hungary	Malta
	Belgium	Iceland	Monaco
	Bermuda	Ireland	The Netherlands
	Bulgaria	Italy	Norway
	Cayman Islands	Latvia	Oman
	Columbia	Lebanon	Slovenia
	Croatia	The Philippines	South Africa
	Cyprus	Poland	Spain
	The Czech Republic	Portugal	Sri Lanka
	Denmark	Romania	Sweden
	Egypt	Russia	Switzerland
	El Salvador	Serbia and Montenegro	Turkey
	Estonia	Singapore	The United Kingdom
	Finland	Slovakia	Uzbekistan
	France		
407674-003	802.11a/b/g WLAN Mini Card module for use only with computer models using Intel processors in the ROW countries listed below:		
	China	Honduras	Qatar
	Ecuador	Pakistan	South Korea
	Haiti	Peru	

Table 3-7**Spare Parts: Sequential Part Number Listing (*Continued*)**

Spare Part Number	Description
407939-001	Composite S-Video and audio input cable
407940-001	RF input adapter cable
407941-001	Analog TV tuner
408479-001	TV tuner remote control
408483-001	USB infrared receiver
408485-001	RF cable
412175-001	DVB-T TV tuner
412176-001	DVB-T TV tuner antenna
412766-001	Bluetooth module (includes Bluetooth module cable)
430958-001	Wireless laser mouse
419437-001	Intel Core Duo T2300E (1.66-GHz) processor (includes thermal pad)
431371-001	AMD Turion ML-50 1.6-GHz processor (includes thermal pad)
431372-001	AMD Turion ML-52 1.6-GHz processor (includes thermal pad)
431373-001	AMD Turion ML-56 1.8-GHz processor (includes thermal pad)
431391-001	Display inverter for use with Single Lamp display panels
431436-001	RTC battery (includes 2-sided tape)
432309-001	HP 90W PFC AC adapter

Table 3-7

Spare Parts: Sequential Part Number Listing (*Continued*)

Spare Part Number	Description
432310-001	HP 90W non-PFC AC Adapter
432945-001	System board for use only with discrete computer models using AMD processors (includes thermal pads)
432946-001	17.0-inch, WXGA+, TFT Single Lamp display assembly with BrightView (includes camera, camera cable, microphones, wireless antenna transceivers, and cables)
432947-001	17.0-inch, SXGA+, TFT Single Lamp display assembly with BrightView (includes camera, camera cable, microphones, wireless antenna transceivers, and cables)
432948-001	17.0-inch, WXGA+, TFT Dual Lamp display assembly with BrightView for use with full-featured computer models (includes camera, camera cable, microphones, wireless antenna transceivers, and cables)
432949-001	17.0-inch, WXGA+, TFT Single Lamp display assembly with BrightView (includes microphones, wireless antenna transceivers, and cables)
432950-001	17.0-inch, SXGA+, TFT Single Lamp display assembly with BrightView (includes microphones, wireless antenna transceivers, and cables)
432951-001	17.0-inch, WXGA+, TFT Dual Lamp display assembly with BrightView for use with de-featured computer models (includes microphones, wireless antenna transceivers, and cables)
432952-001	17.0-inch, WXGA+, TFT Single Lamp display panel with BrightView

Table 3-7**Spare Parts: Sequential Part Number Listing (*Continued*)**

Spare Part Number	Description
432953-001	17.0-inch, SXGA+, TFT Single Lamp display panel with BrightView
432954-001	17.0-inch, WXGA+, TFT Dual Lamp display panel with BrightView
432955-001	Display bezel for use with Single Lamp display panels with camera
432956-001	Display bezel for use with Dual Lamp display panels with camera
432957-001	Display enclosure for use with Single Lamp display panel
432958-001	Display enclosure for use with Dual Lamp display panels
432959-001	Display inverter for use with Dual Lamp display panels
432960-001	Camera module
432961-001	Microphones
432962-001	Display Cable Kit (includes camera cable)
432963-001	Display Hinge Kit for use with Single Lamp display panels (includes left and right display hinges)
432964-001	Display Hinge Kit for use with Dual Lamp display panels (includes left and right display hinges)
432965-001	Display hinge covers
432966-001	Wireless antenna transceivers and cables
432967-001	Display Screw Kit (includes screws and rubber screw covers)

Table 3-7**Spare Parts: Sequential Part Number Listing (*Continued*)**

Spare Part Number	Description
432968-001	256-MB memory module, PC-5300, 667-MHz, 1-DIMM for use only with computer models using AMD processors
432969-001	512-MB memory module, PC-5300, 667-MHz, 1-DIMM for use only with computer models using AMD processors
432970-001	1024-MB memory module, PC-5300, 667-MHz, 1-DIMM for use only with computer models using AMD processors
432971-001	DVD/CD-RW Combo Drive for use only with computer models using AMD processors
432972-001	DVD±RW/R and CD-RW Double-Layer Combo Drive
432973-001	DVD±RW/R and CD-RW Double-Layer Combo Drive with LightScribe
432974-001	8-cell, 4.4-AHr battery for use only with computer models using AMD processors
432976-001	Keyboard for use with all computer models in the United States
432976-031	Keyboard for use only with computer models using AMD processors in the United Kingdom
432976-041	Keyboard for use only with computer models using AMD processors in Germany
432976-051	Keyboard for use only with computer models using AMD processors in France
432976-061	Keyboard for use only with computer models using AMD processors in Italy

Table 3-7**Spare Parts: Sequential Part Number Listing (*Continued*)**

Spare Part Number	Description
432976-071	Keyboard for use only with computer models using AMD processors in Spain
432976-121	Keyboard for use with all computer models in French Canada
432976-161	Keyboard for use only with computer models using Intel processors in Latin America
432976-281	Keyboard for use only with computer models using Intel processors in Thailand
432976-B31	Keyboard for use only with computer models using AMD processors in the Netherlands
432976-DH1	Keyboard for use only with computer models using AMD processors in Denmark, Finland, Norway, and Sweden
432977-001	Top cover (includes TouchPad and TouchPad cable)
432978-001	Top cover support trim
432979-001	Switch cover (includes LED board and LED board cable)
432980-001	Base enclosure for use only with computer models using AMD processors (includes wireless switch actuator)
432981-001	Plastics Kit
432982-001	Rubber Feet Kit (includes 5 computer feet)
432983-001	Screw Kit for use only with computer models using AMD processors
432984-001	Logo Kit

Table 3-7**Spare Parts: Sequential Part Number Listing (*Continued*)**

Spare Part Number	Description
432985-001	Power connector assembly (includes power connector assembly cable and power connector assembly bracket)
432986-001	Audio board (includes audio board cable and infrared lens)
432987-001	Power button board (includes power button board cable)
432988-001	ExpressCard assembly
432989-001	USB board (includes USB board cable)
432990-001	USB/magnetic board (includes USB/magnetic board cable)
432991-001	Wireless switch board (includes wireless switch board cable)
432992-001	Optical drive connector board
432993-001	Display lid switch module (includes display lid switch module cable)
432994-001	Speaker assembly
432995-001	Fan/heat sink assembly for use only with computer models using AMD processors (includes thermal pads)
432996-001	80-GB, 5400-rpm hard drive (includes bracket and connector)
432997-001	100-GB, 5400-rpm hard drive (includes bracket and connector)
432998-001	120-GB, 5400-rpm hard drive (includes bracket and connector)
434106-001	Hard Drive Bracket Kit

Table 3-7**Spare Parts: Sequential Part Number Listing (*Continued*)**

Spare Part Number	Description
434659-001	G73M system board for use only with computer models using Intel processors (includes 256-MB of video RAM and thermal pad)
434660-001	G73 system board for use only with computer models using Intel processors (includes 512-MB of video RAM and thermal pad)
434662-001	100-GB, 7200-rpm hard drive for use only with computer models using Intel processors (includes bracket and connector)
434673-001	DVD/CD-RW Combo Drive for use only with computer models using Intel processors
434674-001	8-cell, 2.2-AHr battery
434676-001	Screw Kit for use only with computer models using Intel processors
434677-001	Cable Kit for use only with computer models using Intel processors
434678-001	Fan/heat sink assembly for use only with computer models using Intel processors (includes thermal pad)
434730-001	Intel Core Duo T7200 (2.0-GHz) processor (includes thermal pad)
434731-001	Intel Core Duo T5600 (1.8-GHz) processor (includes thermal pad)
434740-001	256-MB memory module, PC-5300, 667-MHz, 1-DIMM for use only with computer models using Intel processors

Table 3-7**Spare Parts: Sequential Part Number Listing (*Continued*)**

Spare Part Number	Description
434741-001	512-MB memory module, PC-5300, 667-MHz, 1-DIMM for use only with computer models using Intel processors
434742-001	1024-MB memory module, PC-5300, 667-MHz, 1-DIMM for use only with computer models using Intel processors
435659-001	Hard Drive Hardware Kit for use only with computer models using Intel processors
436067-001	Display bezel for use with Single Lamp display panels without camera
436068-001	Display bezel for use with Dual Lamp display panels without camera
436069-001	AMD Turion ML-60 2.0-GHz processor (includes thermal pad)
436070-001	Mobile AMD Sempron 3500+ (1.80-GHz) processor (includes thermal pad)
436364-001	Base enclosure for use only with computer models using Intel processors (includes wireless switch actuator)
436902-001	Intel Core Duo T5200 (1.66-GHz) processor (includes thermal pad)
436903-001	Intel Core Duo T2250 (1.73-GHz) processor (includes thermal pad)
436904-001	8-cell, 2.55-AHr battery for use only with computer models using Intel processors
436450-001	System board for use only with UMA computer models using AMD processors (includes thermal pads)

Removal and Replacement Preliminaries

This chapter provides essential information for proper and safe removal and replacement service.

4.1 Tools Required

You will need the following tools to complete the removal and replacement procedures:

- Magnetic screwdriver
- Phillips P0 and P1 screwdrivers
- Flat-bladed screwdriver

4.2 Service Considerations

The following sections include some of the considerations that you should keep in mind during disassembly and assembly procedures.



As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic Parts

Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic parts. Apply pressure only at the points designated in the maintenance instructions.

Cables and Connectors



CAUTION: When servicing the computer, ensure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Ensure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

4.3 Preventing Damage to Removable Drives

Removable drives are fragile components that must be handled with care. To prevent damage to the computer, damage to a removable drive, or loss of information, observe the following precautions:

- Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in hibernation, turn the computer on, and then shut it down through the operating system.
- Before removing a diskette drive or optical drive, ensure that a diskette or disc is not in the drive and ensure that the optical drive tray is closed.
- Before handling a drive, ensure that you are discharged of static electricity. While handling a drive, avoid touching the connector.
- Handle drives on surfaces covered with at least one inch of shock-proof foam.
- Avoid dropping drives from any height onto any surface.
- After removing a hard drive, CD-ROM drive, or a diskette drive, place it in a static-proof bag.
- Avoid exposing a hard drive to products that have magnetic fields, such as monitors or speakers.
- Avoid exposing a drive to temperature extremes or liquids.
- If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package, "FRAGILE: Handle With Care."

4.4 Preventing Electrostatic Damage

Many electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, the discharge contains enough power to alter device parameters or melt silicon junctions.

A sudden discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Often the spark is neither felt nor heard, but damage occurs.

An electronic device exposed to electrostatic discharge might not be affected at all and can work perfectly throughout a normal cycle. Or the device might function normally for a while, then degrade in the internal layers, reducing its life expectancy.

4.5 Packaging and Transporting Precautions

Use the following grounding precautions when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe containers, such as tubes, bags, or boxes.
- Protect all electrostatic-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep electrostatic-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a sensitive component or assembly.
- Store reusable electrostatic-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Ensure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

4.6 Workstation Precautions

Use the following grounding precautions at workstations:

- Cover the workstation with approved static-shielding material (refer to [Table 4-2, “Static-Shielding Materials”](#)).
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- When using fixtures that must directly contact dissipative surfaces, only use fixtures made of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle electrostatic-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

4.7 Grounding Equipment and Methods

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm $\pm 10\%$ resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive strips must be worn in contact with the skin.

Other grounding equipment recommended for use in preventing electrostatic damage includes

- Antistatic tape.
- Antistatic smocks, aprons, and sleeve protectors.
- Conductive bins and other assembly or soldering aids.
- Nonconductive foam.
- Conductive tabletop workstations with ground cords of one megohm resistance.
- Static-dissipative tables or floor mats with hard ties to the ground.
- Field service kits.
- Static awareness labels.
- Material-handling packages.
- Nonconductive plastic bags, tubes, or boxes.
- Metal tote boxes.
- Electrostatic voltage levels and protective materials.

Table 4-1 shows how humidity affects the electrostatic voltage levels generated by different activities.

Table 4-1
Typical Electrostatic Voltage Levels

Event	Relative Humidity		
	10%	40%	55%
Walking across carpet	35,000 V	15,000 V	7,500 V
Walking across vinyl floor	12,000 V	5,000 V	3,000 V
Motions of bench worker	6,000 V	800 V	400 V
Removing DIPS from plastic tube	2,000 V	700 V	400 V
Removing DIPS from vinyl tray	11,500 V	4,000 V	2,000 V
Removing DIPS from Styrofoam	14,500 V	5,000 V	3,500 V
Removing bubble pack from PCB	26,500 V	20,000 V	7,000 V
Packing PCBs in foam-lined box	21,000 V	11,000 V	5,000 V
 A product can be degraded by as little as 700 V.			

Table 4-2 lists the shielding protection provided by antistatic bags and floor mats.

Table 4-2
Static-Shielding Materials

Material	Use	Voltage Protection Level
Antistatic plastic	Bags	1,500 V
Carbon-loaded plastic	Floor mats	7,500 V
Metallized laminate	Floor mats	5,000 V

Removal and Replacement Procedures


This chapter provides removal and replacement procedures.

There are as many as 109 screws, in 11 different sizes, that must be removed, replaced, or loosened when servicing the computer. Make special note of each screw size and location during removal and replacement.

Refer to [Appendix A, “Screw Listing,”](#) for detailed information on screw sizes, locations, and usage.

5.1 Serial Number

Report the computer serial number to HP when requesting information or ordering spare parts. The serial number is located on the bottom of the computer.

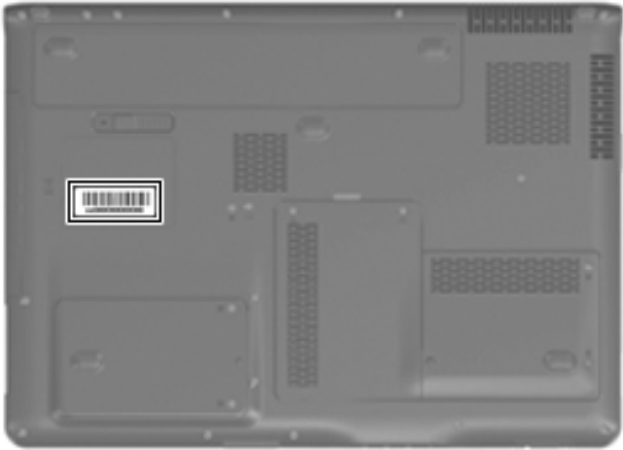

Serial Number Location

5.2 Disassembly Sequence Chart

Use the chart below to determine the section number to be referenced when removing computer components.

Disassembly Sequence Chart		
Section	Description	# of Screws Removed
5.3	Preparing the Computer For Disassembly	
	Battery	0

Disassembly Sequence Chart (*Continued*)

Section	Description	# of Screws Removed
5.4	Hard Drive	2 loosened to remove each hard drive cover 4 removed to disassemble each hard drive
5.5	Computer Feet	0
5.6	Memory Module	2 loosened to remove the memory module compartment cover
5.7	RTC Battery	0
5.8	Mini Card Module	2
	 To prevent an unresponsive system and the display of a warning message, install only a Mini Card device authorized for use in your computer by the governmental agency that regulates wireless devices in your country. If you install a device and then receive a warning message, remove the device to restore computer functionality. Then contact Customer Care.	
5.9	Optical Drive	1 to remove the optical drive 2 to remove the optical drive bracket
5.10	Switch Cover	6
5.11	Keyboard	4
5.12	Speaker Assembly	2
5.13	Power Button Board	1

Disassembly Sequence Chart (Continued)

Section	Description	# of Screws Removed
5.14	Display Assembly	6
	Display bezel	5
	Camera module	0
	Display inverter	0
	Display panel	6
	Display hinges	4
	Display hinge covers	0
	Wireless antenna transceivers	4
	Microphones	0
	Camera cable	0
5.15	Top Cover	18
5.16	Wireless Switch Board	2
5.17	Audio Board	1
5.18	Bluetooth Module	2
5.19	USB/Magnetic Board	1
5.20	ExpressCard Assembly	4
5.21	Top Cover Support Trim	5
5.22	Display Lid Switch Module	0
5.23	Power Connector Assembly	2 to remove the power connector assembly bracket 1 to remove the USB board 1 to remove the power connector assembly
5.24	System Board	7
5.25	Fan/Heat Sink Assembly	7 loosened
5.26	Processor	1 loosened

5.3 Preparing the Computer For Disassembly

Before you begin any removal or installation procedures:

1. Shut down the computer. If you are unsure whether the computer is off or in hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power cord.

Battery Spare Part Number Information

8-cell, 4.4-AHr battery for use only with computer models using AMD processors	432974-001
8-cell, 2.55-AHr battery for use only with computer models using Intel processors	436904-001
8-cell, 2.2-AHr battery for use with all computer models	434674-001

4. Remove the battery by following these steps:
 - a. Turn the computer upside down with the front panel toward you.

- b. Slide and hold the battery release latch **1** to the left.
(The front edge of the battery disengages from the computer.)
- c. Lift the front edge of the battery **2** and swing it back.
- d. Remove the battery.



Removing the Battery

Reverse the above procedure to install the battery.

5.4 Hard Drive

Hard Drive Spare Part Number Information

Hard drives (include bracket and connector)

For use only with computer models using Intel processors:

7200-rpm, 100-GB	434662-001
------------------	------------

For use with all computer models (all 5400 rpm):

120-GB	432998-001
--------	------------

100-GB	432997-001
--------	------------


80-GB	432996-001
-------	------------

Hard Drive Bracket Kit	434106-001
-------------------------------	------------

1. Prepare the computer for disassembly (refer to [Section 5.3](#)).
2. Loosen the two captive Phillips PM2.0×5.0 screws **1** that secure each hard drive cover to the computer.
3. Lift the right side of the cover **2** and swing it to the left.
4. Remove the hard drive cover.




The hard drive covers are included in the Plastics Kit, spare part number 432981-001.

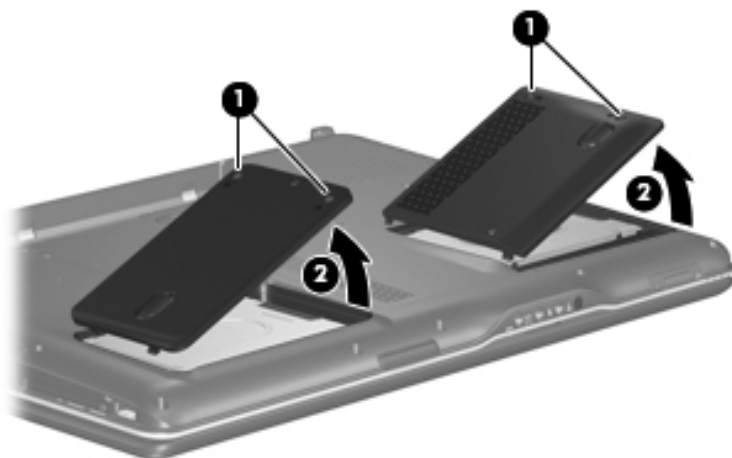

Removing the Hard Drive Covers

5. Use the mylar tab ❶ to lift the hard drive ❷ until it disconnects from the computer.
6. Remove the hard drive from the hard drive bay.

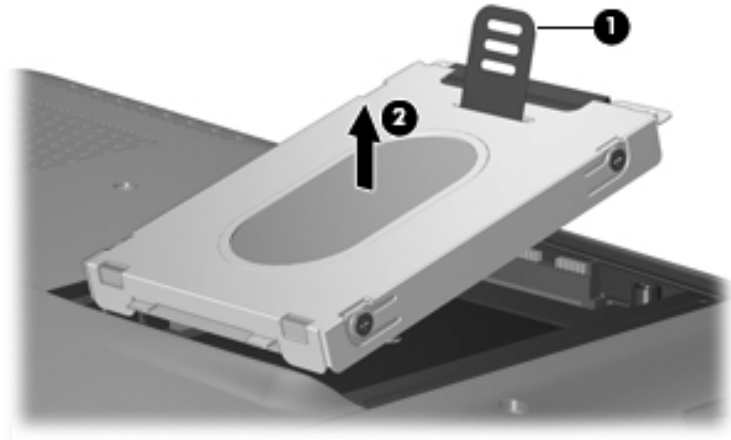


Removing the Hard Drive

7. Remove the four Phillips PM3.0×3.0 screws ❶ that secure the hard drive bracket to the hard drive.
8. Lift the bracket ❷ straight up to remove it from the hard drive.



The hard drive bracket and the screws used to secure the bracket to the hard drive are included in the Hard Drive Bracket Kit, spare part number 434677-001.

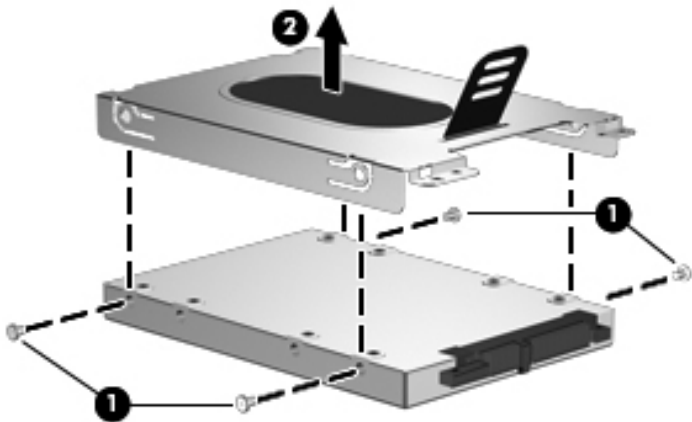


Removing the Hard Drive Bracket

Reverse the above procedure to install and reassemble the hard drives.

5.5 Computer Feet

The computer feet are adhesive-backed rubber pads. The feet are included in the Rubber Feet Kit, spare part number 432982-001. The feet attach to the base enclosure in the locations illustrated below.

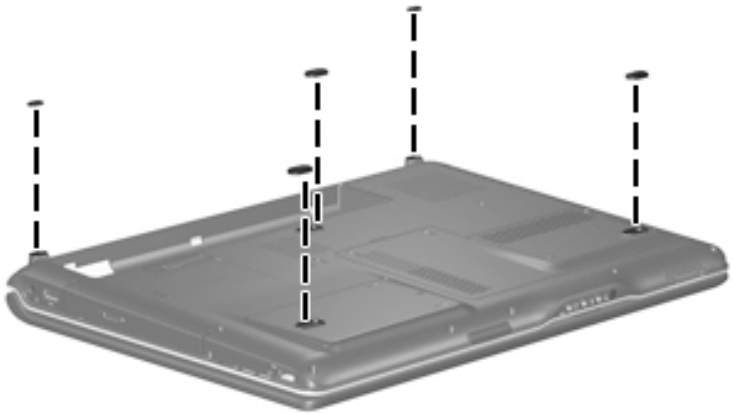

Computer Feet Locations

5.6 Memory Module

Memory Module Spare Part Number Information

Memory modules, PC-5300, 667-MHz, 1-DIMM

For use only with models using Intel processors:

1024-MB	434742-001
512-MB	434741-001
256-MB	434740-001

For use only with models using AMD processors:


1024-MB	432970-001
512-MB	432969-001
256-MB	432968-001

1. Prepare the computer for disassembly (refer to [Section 5.3](#)).

2. Loosen the two captive Phillips PM2.0x5.0 screws ❶ that secure the memory module compartment cover to the computer.
3. Lift the front of the memory module compartment cover ❷, and then swing it back.
4. Remove the memory module compartment cover.



The memory module compartment cover is included in the Plastics Kit, spare part number 432981-001.

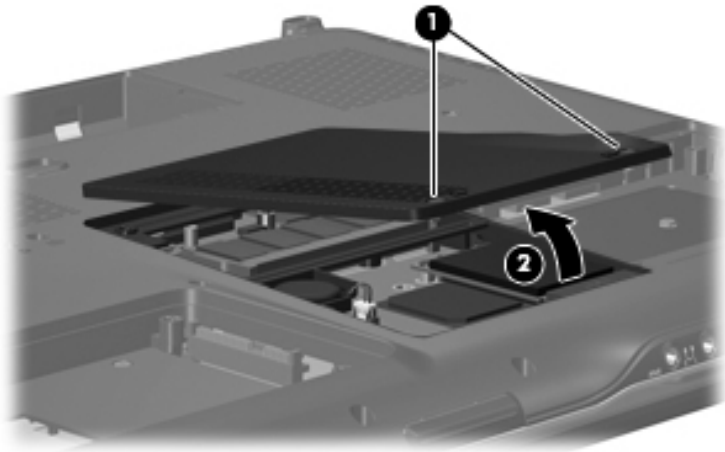


Removing the Memory Module Compartment Cover

5. Spread the retaining tabs **❶** on each side of the memory module socket to release the memory module. (The edge of the module opposite the socket rises away from the computer.)
6. Slide the module **❷** away from the socket at an angle.



Memory modules are designed with a notch **❸** to prevent incorrect installation into the memory module socket.

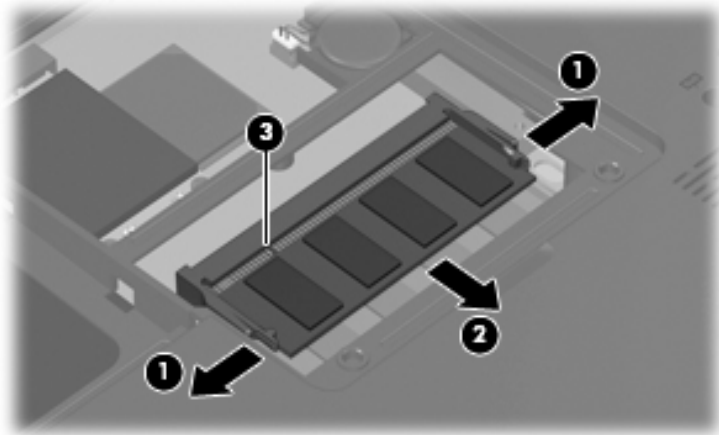

Removing a Memory Module

Reverse the above procedure to install a memory module.

5.7 RTC Battery


RTC Battery Spare Part Number Information

RTC battery (includes 2-sided tape)	431436-001
-------------------------------------	------------

1. Prepare the computer for disassembly (refer to [Section 5.3](#)).
2. Remove the memory module compartment cover ([Section 5.6](#)).
3. Disconnect the RTC battery cable ❶ from the system board.
4. Remove the RTC battery ❷.



The RTC battery is secured to the computer by 2-sided tape. All replacement RTC battery spare part kits include 2-sided tape.

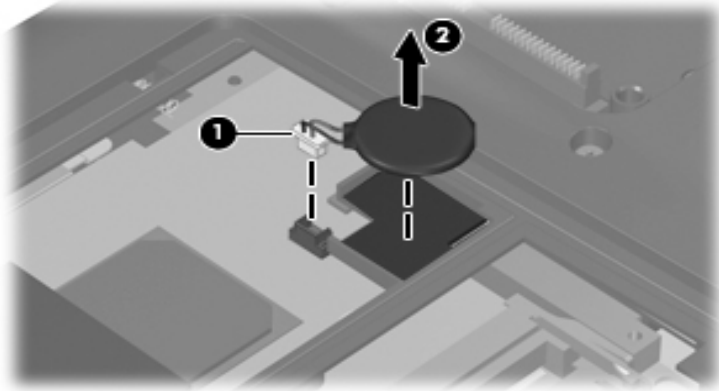

Removing the RTC Battery

Reverse the above procedure to install the RTC battery.

5.8 Mini Card Module

Mini Card Module

Spare Part Number Information

For use only with models using Intel processors:

802.11a/b/g WLAN Mini Card module for use in the MOW1 407674-001
countries listed below:

Antigua & Barbuda	Canada	Panama	Paraguay
Argentina	Chile	India	Saudi Arabia
Australia	Dominican Republic	Indonesia	Taiwan
Bahamas	Guam	Malaysia	The United States
Barbados	Guatemala	Mexico	Vietnam
		New Zealand	

802.11a/b/g WLAN Mini Card module for use in the MOW2 407674-002
countries listed below:

Aruba	Egypt	The Philippines	The Netherlands
Austria	El Salvador	Poland	Norway
Azerbaijan	Estonia	Portugal	Oman
Bahrain	Finland	Romania	Slovenia
Belgium	France	Russia	South Africa
Bermuda	Georgia	Serbia and Montenegro	Spain
Bulgaria	Germany	Singapore	Sri Lanka
Cayman Islands	Greece	Slovakia	Sweden
Columbia	Hungary	Liechtenstein	Switzerland
Croatia	Iceland	Lithuania	Turkey
Cyprus	Ireland	Luxembourg	The United Kingdom
The Czech Republic	Italy	Malta	Uzbekistan
Denmark	Latvia	Monaco	
	Lebanon		

Mini Card Module

Spare Part Number Information (*Continued*)

802.11a/b/g WLAN Mini Card module for use in the ROW countries listed below:	407674-003
--	------------

China	Honduras	Qatar	Uruguay
Ecuador	Pakistan	South Korea	Venezuela
Haiti	Peru		

For use only with models using AMD processors:

802.11a/b/g WLAN Mini Card module for use in the United States and Canada.	407160-001
--	------------

802.11a/b/g WLAN Mini Card module for use in the countries listed below:	407160-002
--	------------

China	Honduras	Qatar	Uruguay
Ecuador	Pakistan	South Korea	Venezuela
Haiti	Peru		

802.11b/g WLAN Mini Card module for use in the United States and Canada.	407159-001
--	------------

802.11b/g WLAN Mini Card module for use in the countries listed below:	407159-002
--	------------


China	Honduras	Qatar	Uruguay
Ecuador	Pakistan	South Korea	Venezuela
Haiti	Peru		

1. Prepare the computer for disassembly ([Section 5.3](#)).
2. Remove the memory module compartment cover ([Section 5.6](#)).

3. Make note of which wireless antenna cable is attached to which antenna clip on the Mini Card module before disconnecting the cables. Then disconnect the cables ❶ from the module.
4. Remove the two Phillips PM2.0×11.0 screws ❷ that secure the Mini Card module to the computer. (The edge of the module opposite the socket rises away from the computer).
5. Remove the module ❸ by pulling it away from the socket at an angle.



Mini Card modules are designed with a notch ❹ to prevent incorrect installation into the Mini Card module socket.

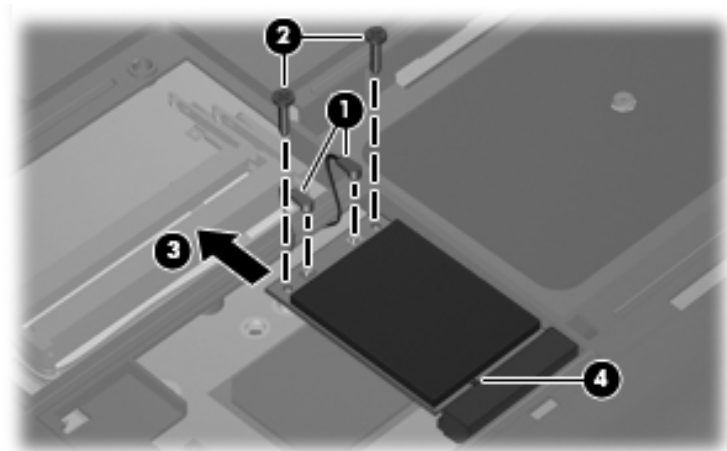

Removing a Mini Card Module

Reverse the above procedure to install a Mini Card module.

5.9 Optical Drive

Optical Drive Spare Part Number Information

For use only with computer models using Intel processors:

DVD/CD-RW Combo Drive	434673-001
-----------------------	------------

For use only with computer models using AMD processors:

DVD/CD-RW Combo Drive	432971-001
-----------------------	------------


For use with all computer models

DVD±RW/R and CD-RW Double-Layer Combo Drive with LightScribe	432973-001
---	------------

DVD±RW/R and CD-RW Double-Layer Combo Drive	432972-001
---	------------


1. Prepare the computer for disassembly ([Section 5.3](#)).

2. Remove the Phillips PM2.5×8.0 screw ❶ that secures the optical drive to the computer.
3. Insert a thin tool, such as a paper clip ❷, into the media tray release hole. (The optical drive media tray releases from the optical drive.)
4. Use the media tray frame to slide the optical drive ❸ out of the computer.
5. Remove the optical drive.

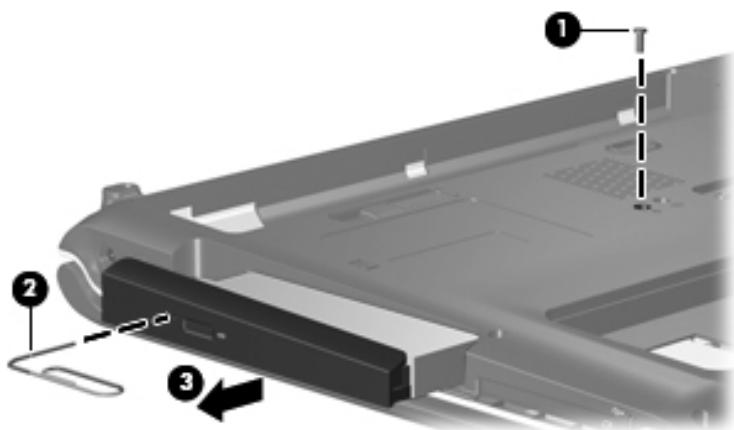

Removing the Optical Drive

6. Position the optical drive with the optical drive bracket toward you.
7. Remove the two Phillips PM2.0×3.0 screws **1** that secure the optical drive bracket to the optical drive.
8. Remove the optical drive bracket **2**.

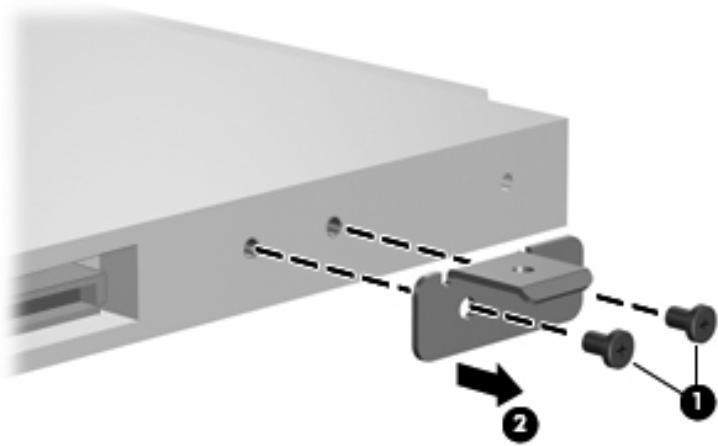

Removing the Optical Drive Bracket


Reverse the above procedure to reassemble and install the optical drive.

5.10 Switch Cover

Switch Cover Spare Part Number Information

Switch cover (includes LED board and LED board cable)	432979-001
---	------------

1. Prepare the computer for disassembly ([Section 5.3](#)).
2. Close the computer.
3. Turn the computer upside down with the front panel toward you.
4. Remove the six Phillips PM2.0×5.0 screws that secure the switch cover to the computer.

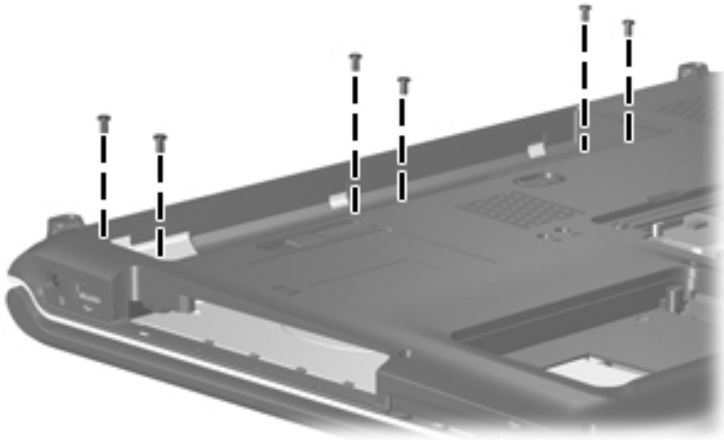


Removing the Switch Cover Screws

5. Turn the computer display-side up with the front toward you.
6. Open the computer as far as possible.
7. Lift the rear edge of the switch cover and swing it forward until it rests on the keyboard.



Releasing the Switch Cover

8. Release the zero insertion force (ZIF) connector **1** to which the LED board cable is connected and disconnect the cable **2** from the LED board.
9. Remove the switch cover.

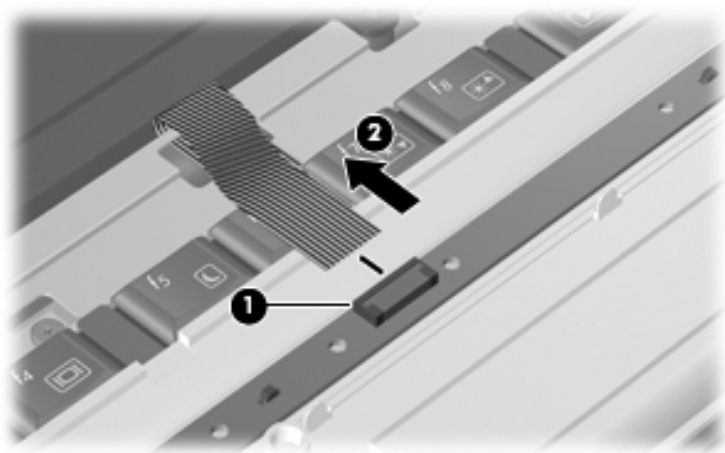

Disconnecting the LED Board Cable

Reverse the above procedure to install the switch cover.

5.11 Keyboard

Keyboard Spare Part Number Information

For use with all computer models in the following countries:

French Canada	432976-121	The United States	432976-001
---------------	------------	-------------------	------------

For use only with computer models using Intel processors in the following countries:


Latin America	432976-161	Thailand	432976-281
---------------	------------	----------	------------

For use only with computer models using AMD processors in the following countries:

Denmark,	432976-DH1	The Netherlands	432976-B31
Finland,		Italy	432976-061
Norway,		Spain	432976-071
and Sweden		The United	
France	432976-051	Kingdom	432976-031
Germany	432976-041		

1. Prepare the computer for disassembly ([Section 5.3](#)).
2. Remove the switch cover ([Section 5.10](#)).

3. Remove the Phillips PM2.5×7.0 screw that secures the keyboard to the computer.

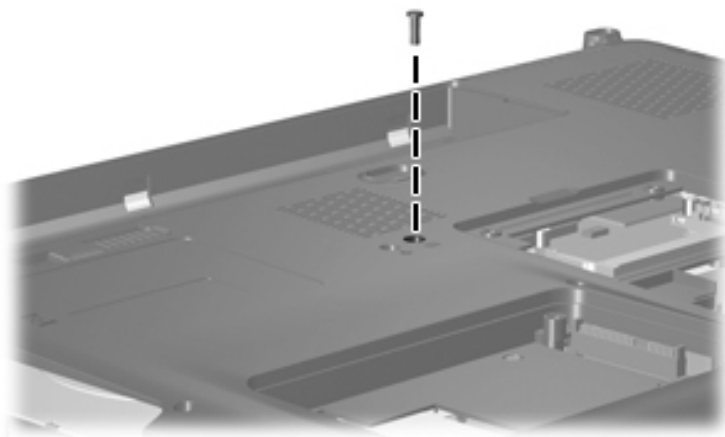


Removing the Keyboard Screw, Part 1

4. Turn the computer display-side up with the front panel toward you.
5. Open the computer as far as possible.
6. Remove the three silver Phillips PM2.5×5.0 screws that secure the keyboard to the computer.




Removing the Keyboard Screws, Part 2

7. Lift the rear edge of the keyboard **1** until it rests at an angle.
8. Slide the keyboard **2** back to disengage the tabs on the front edge of the keyboard from the top cover.
9. Swing the keyboard **3** forward until it rests on the palm rest.

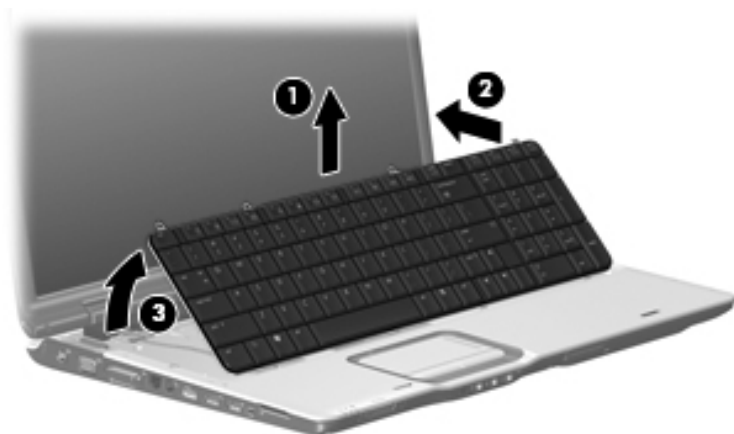

Releasing the Keyboard

10. Release the ZIF connector ❶ to which the keyboard cable is connected and disconnect the keyboard cable ❷ from the system board.

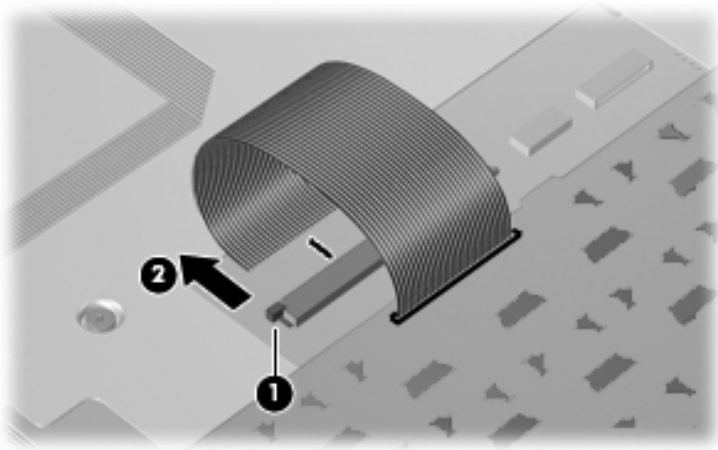

Disconnecting the Keyboard Cable

11. Remove the keyboard.

Reverse the above procedure to install the keyboard.


5.12 Speaker Assembly

Speaker Assembly Spare Part Number Information

Speaker assembly


432994-001

1. Prepare the computer for disassembly ([Section 5.3](#)).
2. Remove the switch cover ([Section 5.10](#)).
3. Remove the keyboard ([Section 5.11](#)).
4. Disconnect the speaker assembly cable ❶ from the power button board.
5. Remove the the wireless antenna cables and microphone cable from the clips ❷ in the speaker assembly.

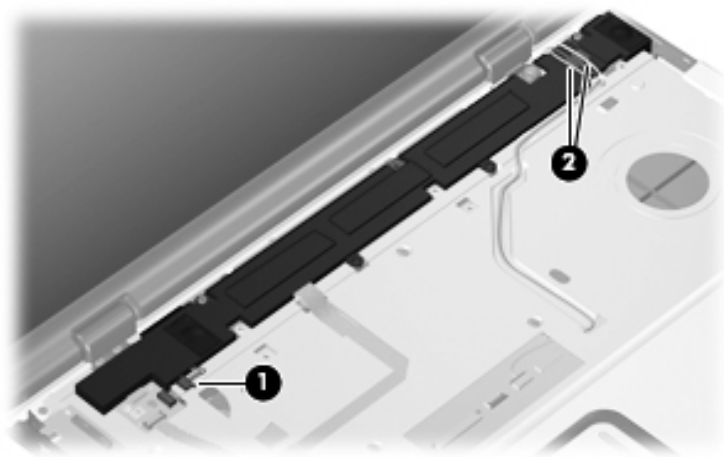

Releasing the Speaker Assembly

6. Remove the two black Phillips PM2.5×5.0 screws ❶ that secure the speaker assembly to the computer.
7. Remove the speaker assembly ❷.

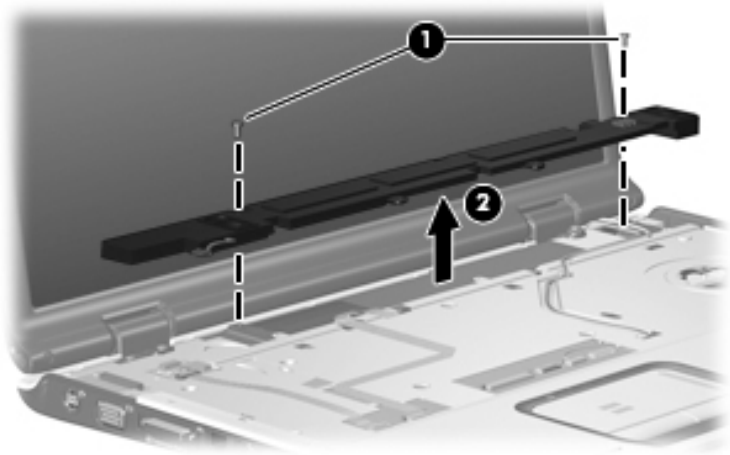

Removing the Speaker Assembly


Reverse the above procedure to install the speaker assembly.

5.13 Power Button Board

Power Button Board Spare Part Number Information


Power button board (includes power button board cable)	432987-001
--	------------

1. Prepare the computer for disassembly ([Section 5.3](#)).
2. Remove the switch cover ([Section 5.10](#)).
3. Remove the keyboard ([Section 5.11](#)).
4. Disconnect the following cables from the power button board:
 - ❶ Display lid switch module cable
 - ❷ Microphone cable
 - ❸ Speaker assembly cable
5. Release the ZIF connector ❹ to which the power button board cable is connected and disconnect the cable ❺.

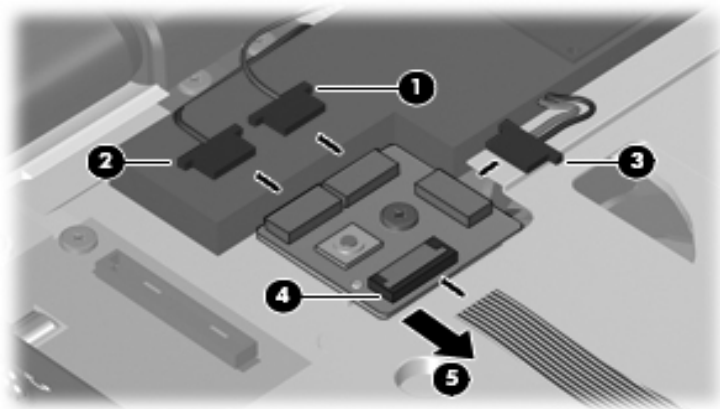

Disconnecting the Power Button Board Cables

6. Remove the silver Phillips PM2.5×5.0 screw ❶ that secures the power button board to the computer.
7. Remove the power button board ❷.

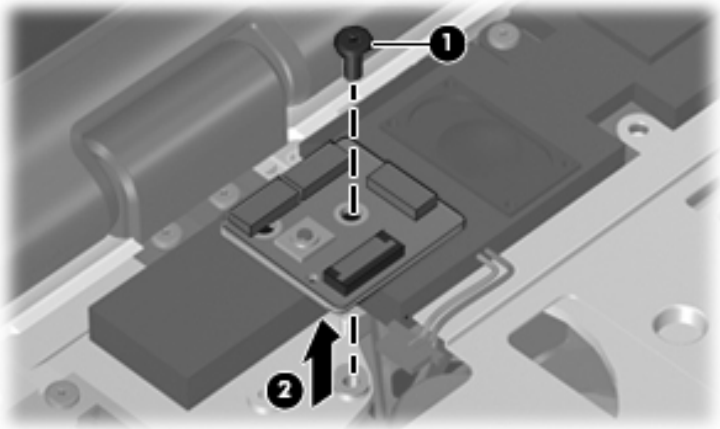

Removing the Power Button Board

Reverse the above procedure to install the power button board.

5.14 Display Assembly

Display Assembly Spare Part Number Information

For use with full-featured computer models (includes camera, camera cable, and microphones)


17.0-inch, SXGA+, TFT Single Lamp with BrightView	432947-001
17.0-inch, WXGA+, TFT Single Lamp with BrightView	432946-001
17.0-inch, WXGA+, TFT Dual Lamp with BrightView	432948-001

For use with de-featured computer models (includes microphones)

17.0-inch, SXGA+, TFT Single Lamp with BrightView	432950-001
17.0-inch, WXGA+, TFT Single Lamp with BrightView	432949-001
17.0-inch, WXGA+, TFT Dual Lamp with BrightView	432951-001


1. Prepare the computer for disassembly ([Section 5.3](#)) and remove the following components:
 - ❑ Memory module compartment cover ([Section 5.8](#))
 - ❑ Switch cover ([Section 5.10](#))
 - ❑ Keyboard ([Section 5.11](#))
 - ❑ Speaker assembly ([Section 5.12](#))

2. Close the computer.
3. Turn the computer upside down with the rear panel toward you.
4. Remove the two Phillips PM2.5×8.0 screws that secure the display assembly to the computer.

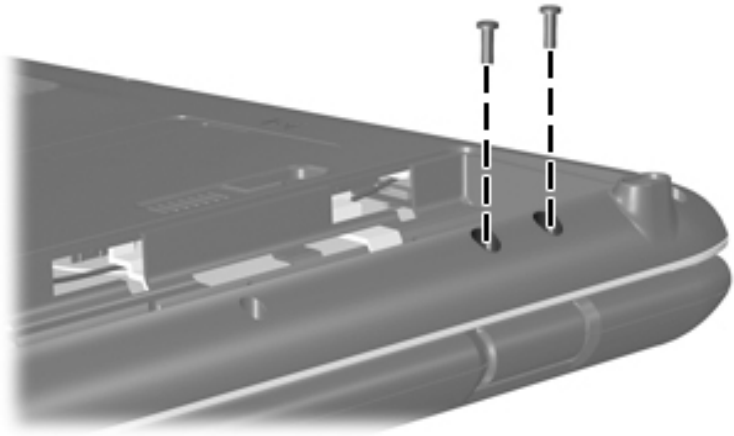

Removing the Display Assembly Screws

5. Turn the computer display-side up with the front toward you.
6. Open the computer to an upright position.
7. Disconnect the display cable ❶ from the system board and the microphone cable ❷ from the power button board.
8. Remove the wireless antenna cables and the camera cable from the clips ❸ in the top cover.
9. Disconnect the camera cable ❹ from the system board.

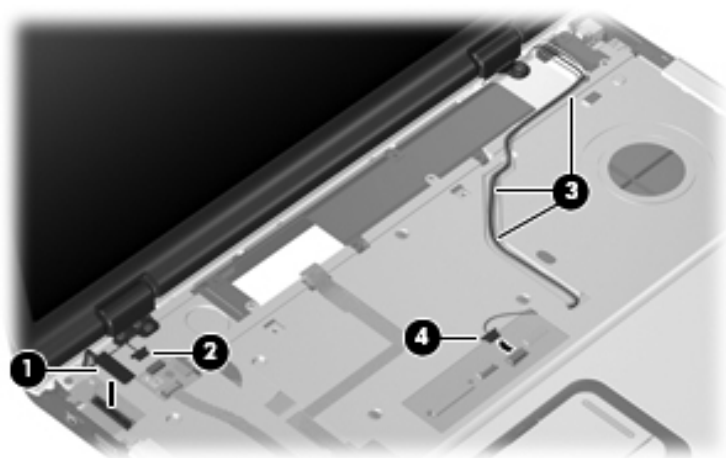


Disconnecting the Display Cables



CAUTION: Support the display assembly when removing the following screws. Failure to support the display assembly can result in damage to the display assembly and other computer components.

10. Remove the two Phillips PM2.5×8.0 screws ❶ and the two silver Phillips PM2.5×5.0 screws ❷ that secure the display assembly to the computer.
11. Remove the display assembly ❸.

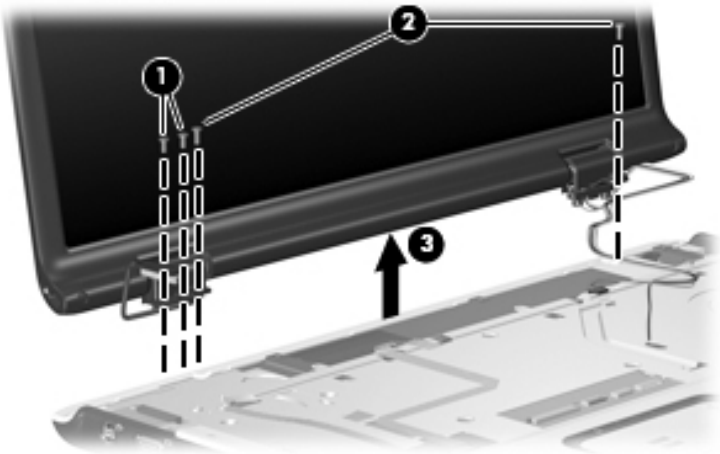


Removing the Display Assembly

12. Remove the following:

- ❶ Three rubber screw covers on the display bezel top edge
- ❷ Two rubber screw covers on the display bezel bottom edge
- ❸ Five Phillips PM2.5×8.0 screws



The display rubber screw covers are included in the Display Screw Kit, spare part number 432967-001.

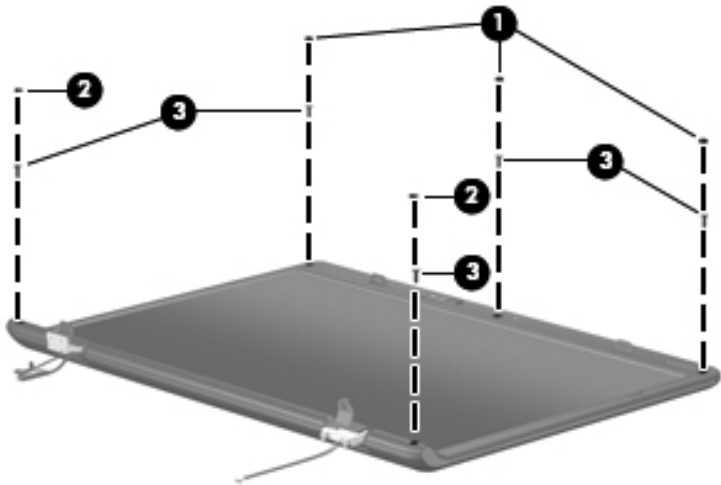


Removing the Display Bezel Screws

Display Assembly Subcomponents**Spare Part Number Information**

Display bezels

For use with Dual Lamp display panels with camera	432956-001
For use with Dual Lamp display panels without camera	436068-001
For use with Single Lamp display panels with camera	432955-001
For use with Single Lamp display panels without camera	436067-001

13. Flex the inside edges of the left and right sides **❶** and the top and bottom sides **❷** of the display bezel until the bezel disengages from the display enclosure.
14. Remove the display bezel **❸**.

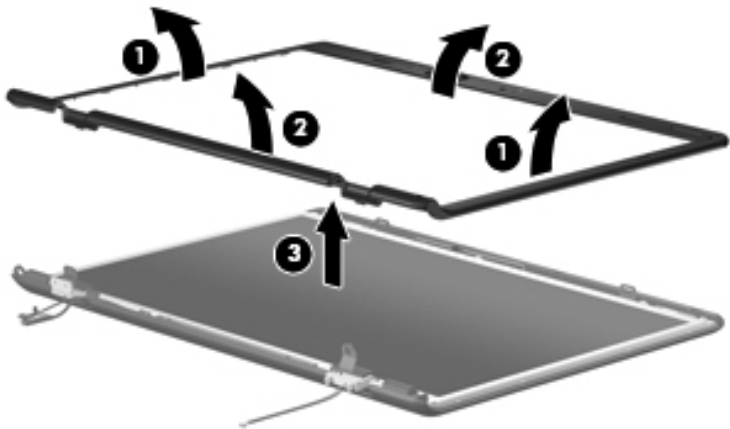*Removing the Display Bezel*

Display Assembly Subcomponents

Spare Part Number Information


Camera module	432960-001
---------------	------------



The camera module is secured to the display enclosure by a 2-sided adhesive pad. Apply removal force to the middle of the module to remove it.

15. Remove the camera module ❶ from the display enclosure.

16. Disconnect the camera cable ❷ from the camera module.

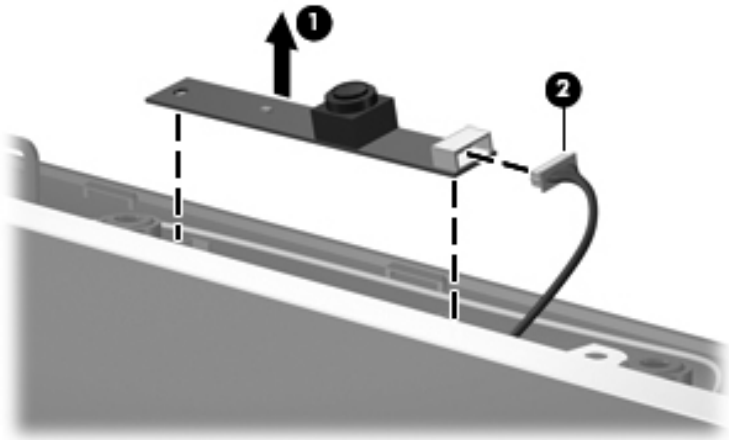

Removing the Camera Module


Display Assembly Subcomponents

Spare Part Number Information

Display inverters

For use with Dual Lamp display panels	432959-001
For use with Single Lamp display panels	431391-001

17. Remove the inverter ❶ from the display enclosure.
18. Disconnect the display cable ❷ and the backlight cable ❸ from the display inverter.

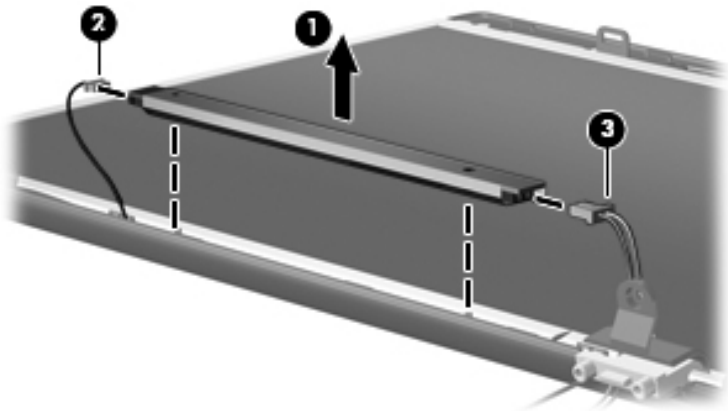


Removing the Display Inverter

Display Assembly Subcomponents
Spare Part Number Information

Display panels

17.0-inch, WXGA+, TFT Dual Lamp display panel with BrightView	432954-001
17.0-inch, SXGA+, TFT Single Lamp display panel with BrightView	432953-001
17.0-inch, WXGA+, TFT Single Lamp display panel with BrightView	432952-001

- 19. Remove the six Phillips PM2.5×8.0 screws ❶ that secure the display panel to the display enclosure.
- 20. Remove the display panel ❷.

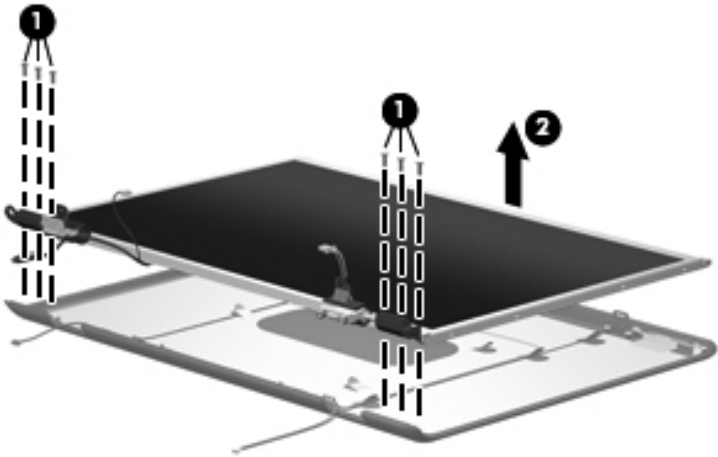

Removing the Display Panel

Display Assembly Subcomponents

Spare Part Number Information


Display Hinge Kits

For use with Dual Lamp display panels 432964-001

For use with Single Lamp display panels 432963-001

Display hinge covers 432965-001

21. Remove the two Phillips PM2.0×3.0 screws ❶ that secure each display hinge to the display enclosure.
22. Remove the display hinges ❷.
23. Slide the left and right display hinge covers ❸ off of the display hinges.

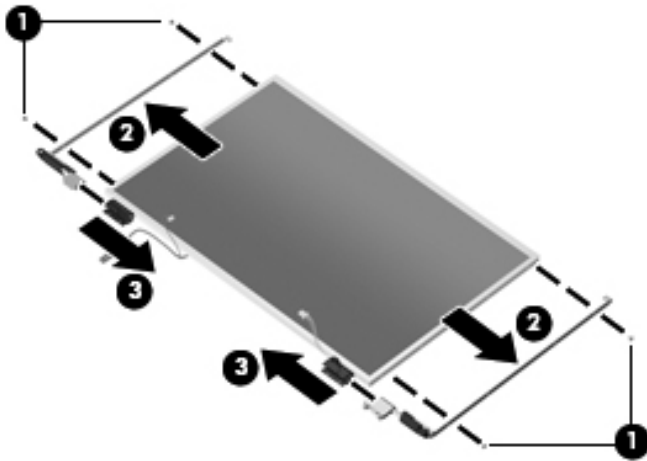


Removing the Display Hinges

Display Assembly Subcomponents

Spare Part Number Information

Wireless antenna transceivers and cables	432966-001
--	------------

24. If it is necessary to replace the wireless antenna transceivers and cables, remove the two Phillips PM2.0×4.0 screws ❶ that secure each transceiver to the display enclosure.
25. Remove the wireless antenna cables from the clips ❷ built into the display enclosure.
26. Detach the wireless antenna transceivers ❸ from the display enclosure.
27. Remove the wireless antenna cables ❹.

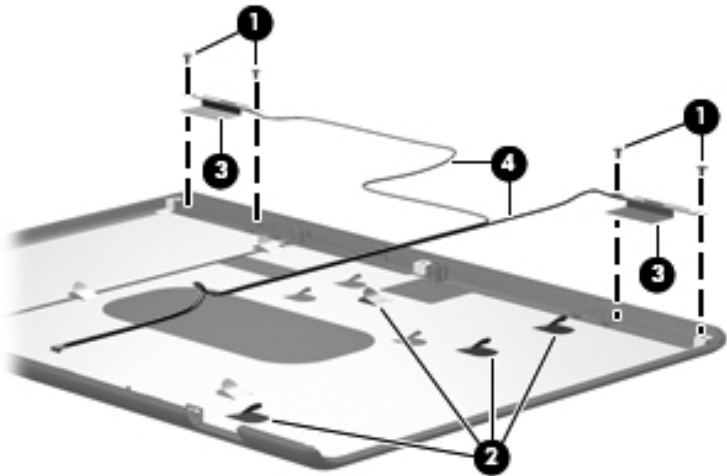

Removing the Wireless Antenna Transceivers and Cables


Display Assembly Subcomponents

Spare Part Number Information

Microphones

432961-001

28. If it is necessary to replace the microphones and cables, release the retention tabs ❶ built into the display enclosure that secure the microphone cables to the display enclosure.
29. Remove the microphone receivers ❷ from the clips in the display enclosure.
30. Remove the microphone cables ❸ from the display enclosure.

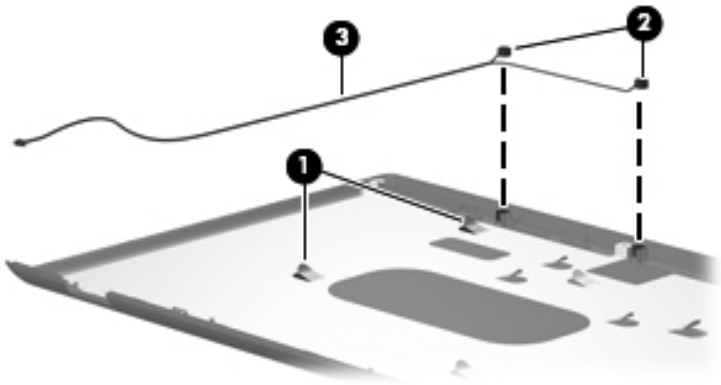


Removing the Microphones

Display Assembly Subcomponents

Spare Part Number Information

Display Cable Kit (includes camera cable)	432962-001
---	------------

31. If it is necessary to replace the camera cable, release the retention tabs ❶ built into the display enclosure that secure the camera cable to the display enclosure.
32. Remove the camera cable ❷ from the display enclosure.

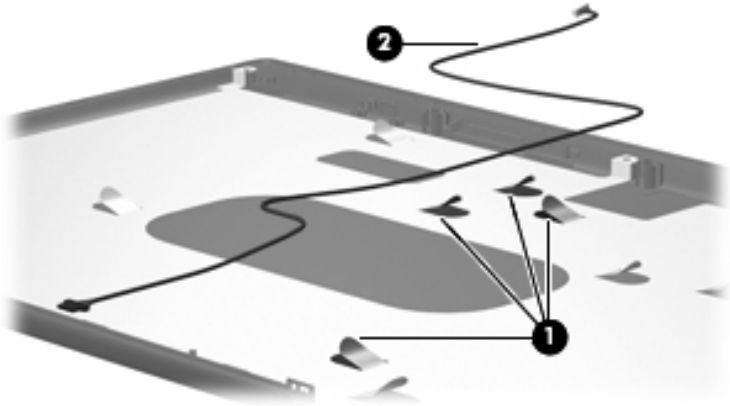

Removing the Camera Cable

Reverse the above procedure to reassemble and install the display assembly


5.15 Top Cover

Top Cover Spare Part Number Information

Top cover (includes TouchPad and TouchPad cable)	432977-001
--	------------


1. Prepare the computer for disassembly ([Section 5.3](#)) and remove the following components:
 - ❑ Hard drive ([Section 5.4](#))
 - ❑ Optical drive ([Section 5.9](#))
 - ❑ Switch cover ([Section 5.10](#))
 - ❑ Keyboard ([Section 5.11](#))
 - ❑ Speaker assembly ([Section 5.12](#))
 - ❑ Display assembly ([Section 5.14](#))

2. Turn the computer upside down with the front toward you.
3. Remove the eight Phillips PM2.5×8.0 screws that secure the top cover to the computer.

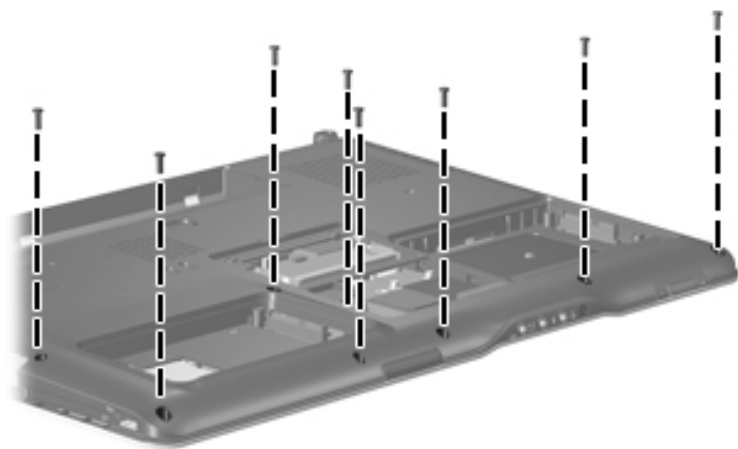


Removing the Top Cover Screws, Part 1

4. Remove the four silver Phillips PM2.5×5.0 screws that secure the top cover to the computer.

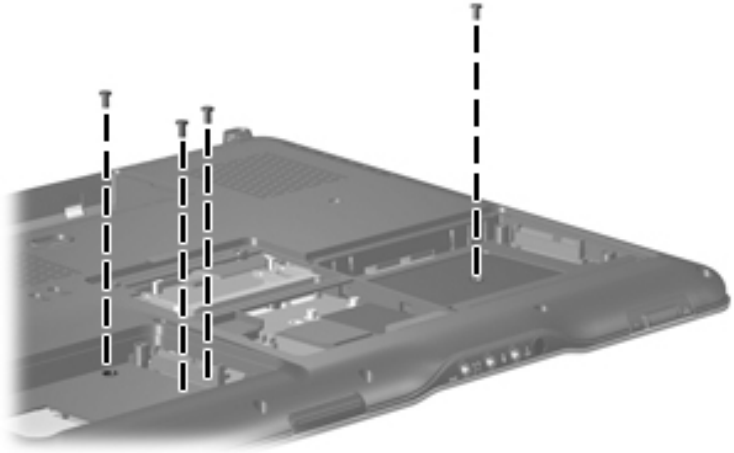


Removing the Top Cover Screws, Part 2

5. Turn the computer right-side up with the front toward you.
6. Disconnect the power button board cable ❶ and the LED board cable ❷ from the low insertion force (LIF) connectors to which they are connected.
7. Release the ZIF connector to which the TouchPad cable is attached and disconnect the TouchPad cable ❸.

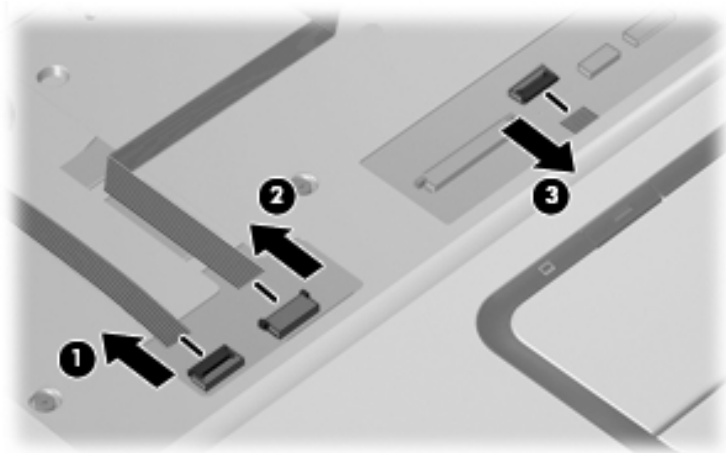


Disconnecting the Top Cover Cables

8. Remove the five Phillips PM2.5×8.0 screws ❶ and the silver Phillips PM2.5×5.0 screw ❷ that secures the top cover to the computer.

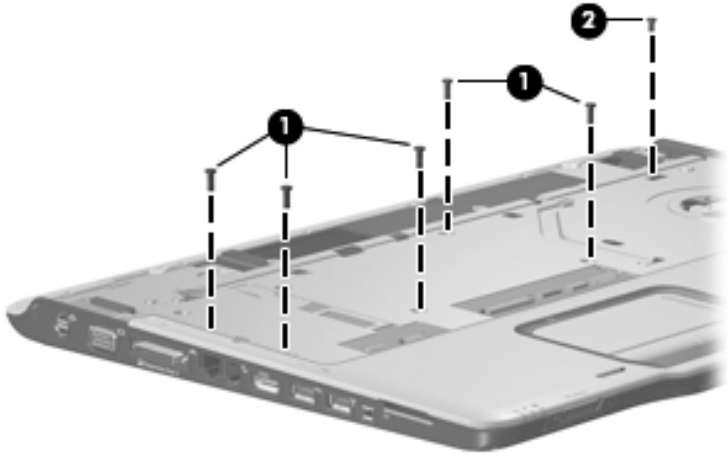

Removing the Top Cover Screws, Part 3

9. Lift the rear edge of the top cover until it disengages from the computer, and remove the top cover.

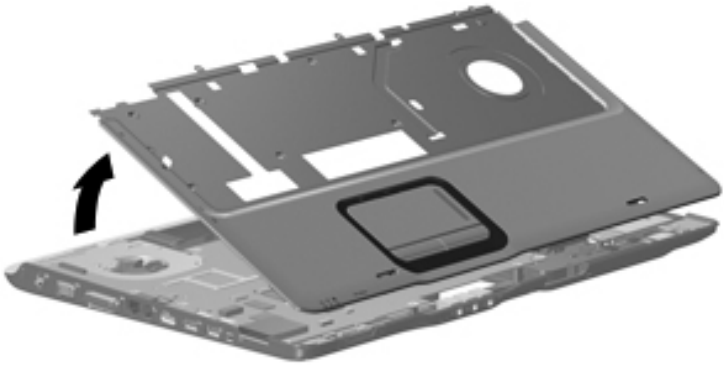

Removing the Top Cover

Reverse the above procedure to install the top cover.

5.16 Wireless Switch Board


Wireless Switch Board Spare Part Number Information

Wireless switch board

432991-001


1. Prepare the computer for disassembly ([Section 5.3](#)) and remove the following components:
 - ❑ Hard drive ([Section 5.4](#))
 - ❑ Optical drive ([Section 5.9](#))
 - ❑ Switch cover ([Section 5.10](#))
 - ❑ Keyboard ([Section 5.11](#))
 - ❑ Speaker assembly ([Section 5.12](#))
 - ❑ Display assembly ([Section 5.14](#))
 - ❑ Top cover ([Section 5.15](#))

2. Release the ZIF connector ❶ to which the wireless switch board cable is connected and disconnect the wireless switch board cable ❷ from the system board.

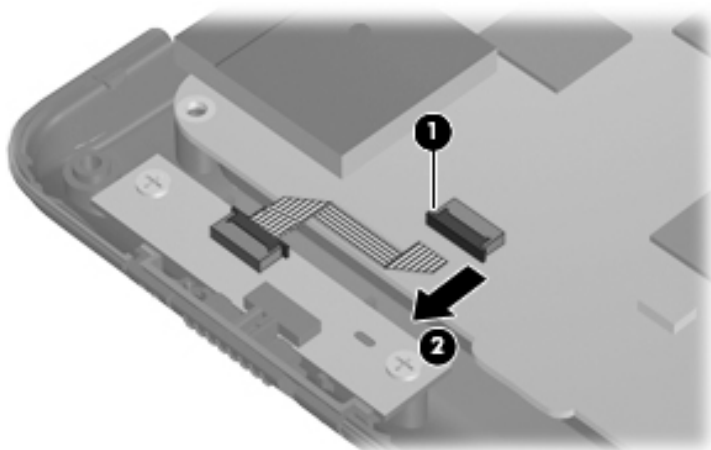

Removing the Wireless Switch Board

3. Remove the two silver Phillips PM2.5×5.0 screws ❶ that secure the wireless switch board to the base enclosure.
4. Remove the wireless switch board ❷.

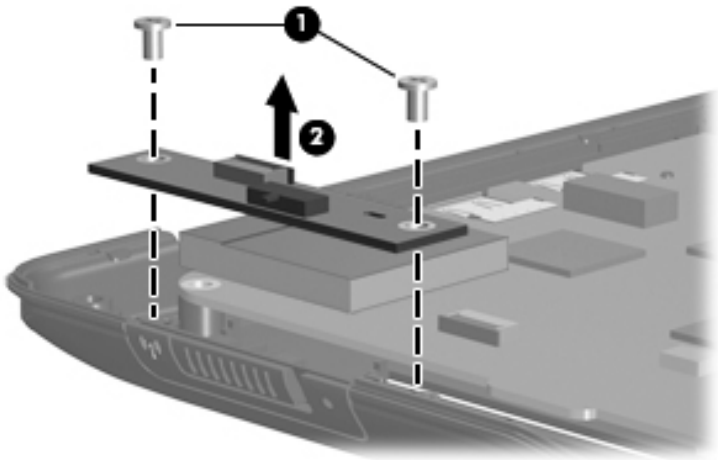

Removing the Wireless Switch Board

Reverse the above procedure to install the wireless switch board.

5.17 Audio Board

Audio Board Spare Part Number Information


Audio board (includes audio board cable and infrared lens)	432986-001
--	------------

1. Prepare the computer for disassembly ([Section 5.3](#)) and remove the following components:
 - ❑ Hard drive ([Section 5.4](#))
 - ❑ Optical drive ([Section 5.9](#))
 - ❑ Switch cover ([Section 5.10](#))
 - ❑ Keyboard ([Section 5.11](#))
 - ❑ Speaker assembly ([Section 5.12](#))
 - ❑ Display assembly ([Section 5.14](#))
 - ❑ Top cover ([Section 5.15](#))

2. Remove the silver Phillips PM2.5×5.0 screw ❶ that secures the audio board to the computer.
3. Slide the audio board ❷ back to disengage the audio connectors from the base enclosure.
4. Remove the audio board ❸.
5. Disconnect the audio board cable ❹ from the system board.



The audio board cable is included with the audio board spare part kit and is also included in the Cable Kit, spare part number 434677-001.

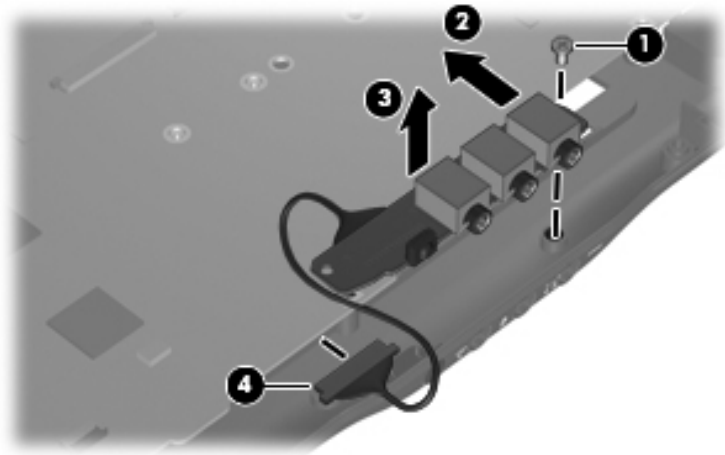

Removing the Audio Board

Reverse the above procedure to install the audio board.

5.18 Bluetooth Module

Bluetooth Module Spare Part Number Information

Bluetooth module (includes Bluetooth module cable)
--

412766-001


1. Prepare the computer for disassembly ([Section 5.3](#)) and remove the following components:
 - ❑ Hard drive ([Section 5.4](#))
 - ❑ Optical drive ([Section 5.9](#))
 - ❑ Switch cover ([Section 5.10](#))
 - ❑ Keyboard ([Section 5.11](#))
 - ❑ Speaker assembly ([Section 5.12](#))
 - ❑ Display assembly ([Section 5.14](#))
 - ❑ Top cover ([Section 5.15](#))

2. Disconnect the Bluetooth module cable ❶ from the system board.



The Bluetooth module cable is included with the Bluetooth module spare part kit and is also included in the Cable Kit, spare part number 434677-001.

3. Route the Bluetooth module cable ❷ under the system board.
4. Remove the two silver Phillips PM2.0×3.0 screws ❸ that secure the Bluetooth module to the base enclosure.
5. Remove the Bluetooth module ❹.

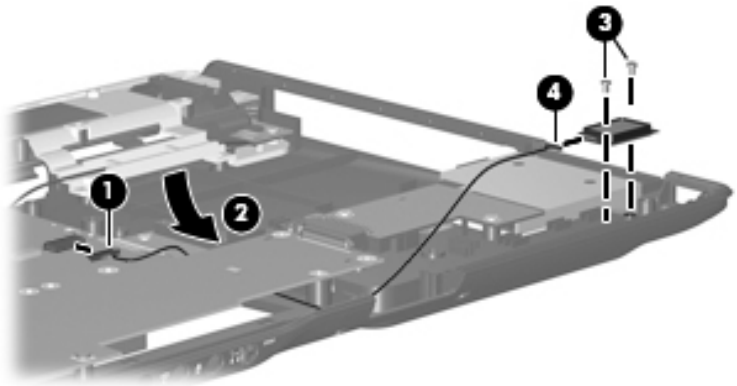

Removing the Bluetooth Module

Reverse the above procedure to install the Bluetooth module.

5.19 USB/Magnetic Board

USB/Magnetic Board Spare Part Number Information

USB/magnetic board (includes USB/magnetic board cable)	432990-001
--	------------


1. Prepare the computer for disassembly ([Section 5.3](#)) and remove the following components:
 - ❑ Hard drive ([Section 5.4](#))
 - ❑ Optical drive ([Section 5.9](#))
 - ❑ Switch cover ([Section 5.10](#))
 - ❑ Keyboard ([Section 5.11](#))
 - ❑ Speaker assembly ([Section 5.12](#))
 - ❑ Display assembly ([Section 5.14](#))
 - ❑ Top cover ([Section 5.15](#))

2. Disconnect the USB/magnetic board cable ❶ from the ExpressCard assembly.



The USB/magnetic board cable is included with the USB/magnetic board spare part kit and is also included in the Cable Kit, spare part number 434677-001.

3. Remove the silver Phillips PM2.5×5.0 screw ❷ that secures the USB/magnetic board to the base enclosure.
4. Remove the USB/magnetic board ❸.

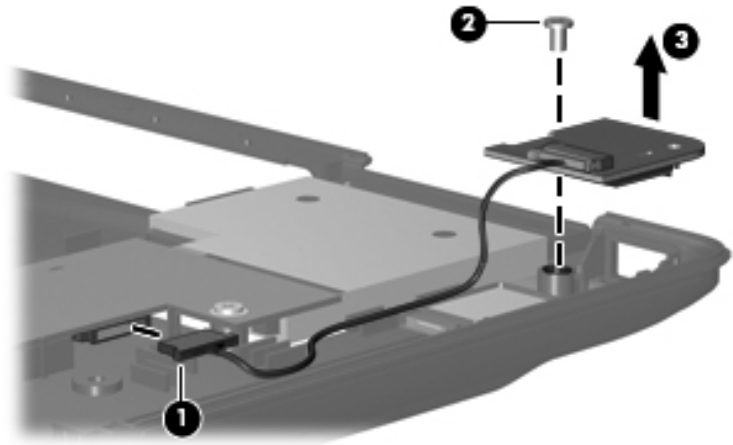

Removing the USB/Magnetic Board

Reverse the above procedure to install the USB/magnetic board.

5.20 ExpressCard Assembly

ExpressCard Assembly Spare Part Number Information

ExpressCard assembly


432988-001

1. Prepare the computer for disassembly ([Section 5.3](#)) and remove the following components:
 - ❑ Hard drive ([Section 5.4](#))
 - ❑ Optical drive ([Section 5.9](#))
 - ❑ Switch cover ([Section 5.10](#))
 - ❑ Keyboard ([Section 5.11](#))
 - ❑ Speaker assembly ([Section 5.12](#))
 - ❑ Display assembly ([Section 5.14](#))
 - ❑ Top cover ([Section 5.15](#))
 - ❑ USB/magnetic board ([Section 5.19](#))

2. Push in on the ExpressCard slot bezel ❶ to release the bezel from the ExpressCard slot.
3. Remove the ExpressCard slot bezel ❷.




The ExpressCard slot bezel is included in the Plastics Kit, spare part number 432981-001.

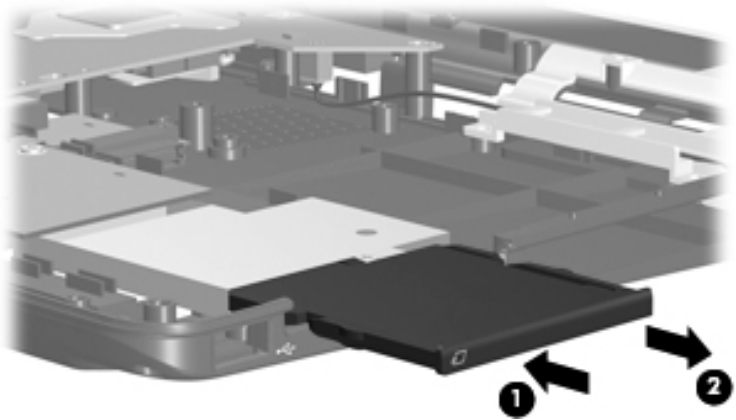

Removing the ExpressCard Slot Bezel

4. Remove the four silver Phillips PM2.5×5.0 screws ❶ that secure the ExpressCard assembly to the system board.
5. Slide the ExpressCard assembly ❷ to the right to disconnect it from the system board.
6. Remove the ExpressCard assembly ❸.

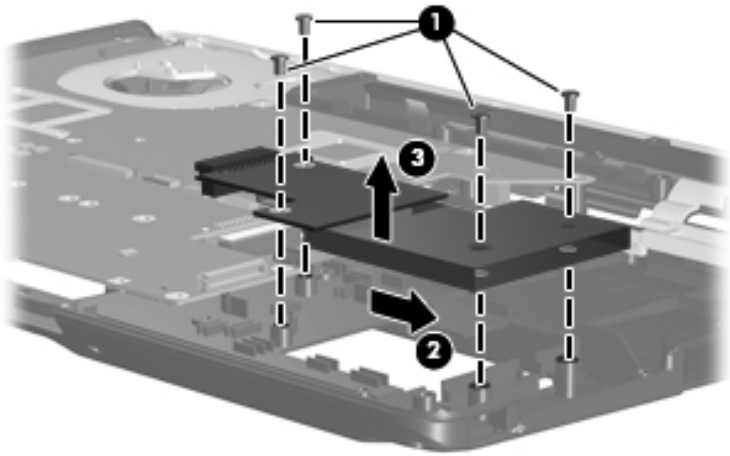

Removing the ExpressCard Assembly

Reverse the above procedure to install the ExpressCard assembly.


5.21 Top Cover Support Trim

Top Cover Support Trim Spare Part Number Information

Top cover support trim	432978-001
------------------------	------------


1. Prepare the computer for disassembly ([Section 5.3](#)) and remove the following components:
 - ❑ Hard drive ([Section 5.4](#))
 - ❑ Optical drive ([Section 5.9](#))
 - ❑ Switch cover ([Section 5.10](#))
 - ❑ Keyboard ([Section 5.11](#))
 - ❑ Speaker assembly ([Section 5.12](#))
 - ❑ Display assembly ([Section 5.14](#))
 - ❑ Top cover ([Section 5.15](#))

2. Turn the computer upside down with the front toward you.
3. Remove the four Phillips PM2.5×8.0 screws that secure the top cover support trim to the computer.

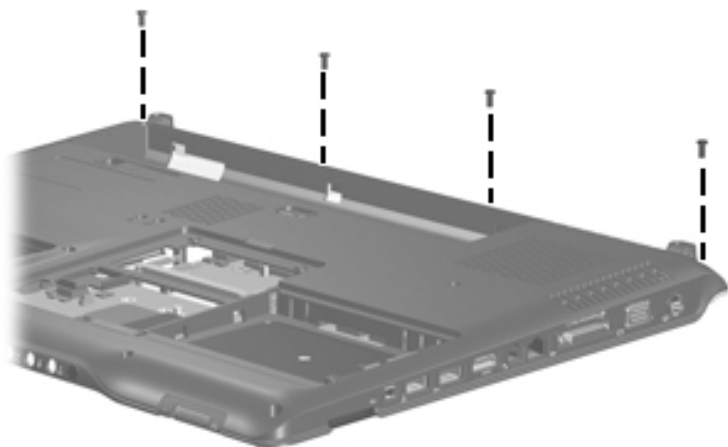

Removing the Top Cover Support Trim Screws

4. Turn the computer right-side up with the front toward you.
5. Remove the Phillips PM2.5×8.0 screw ❶ that secures the top cover support trim to the computer.
6. Remove the top cover support trim ❷.

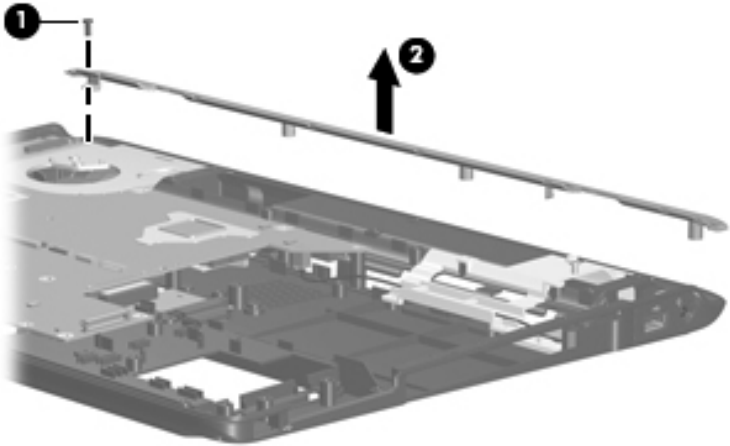

Removing the Top Cover Support Trim

Reverse the above procedure to install the top cover support trim.

5.22 Display Lid Switch Module

Display Lid Switch Module Spare Part Number Information

Display lid switch module


432993-001

1. Prepare the computer for disassembly ([Section 5.3](#)) and remove the following components:
 - ❑ Hard drive ([Section 5.4](#))
 - ❑ Optical drive ([Section 5.9](#))
 - ❑ Switch cover ([Section 5.10](#))
 - ❑ Keyboard ([Section 5.11](#))
 - ❑ Speaker assembly ([Section 5.12](#))
 - ❑ Display assembly ([Section 5.14](#))
 - ❑ Top cover ([Section 5.15](#))
 - ❑ Top cover support trim ([Section 5.21](#))

2. Remove the display lid switch module by firmly pulling it off the fan/heat sink assembly.



The display lid switch module is secured to the fan/heat sink assembly by 2-sided tape. Apply removal force to the middle of the module to remove it.

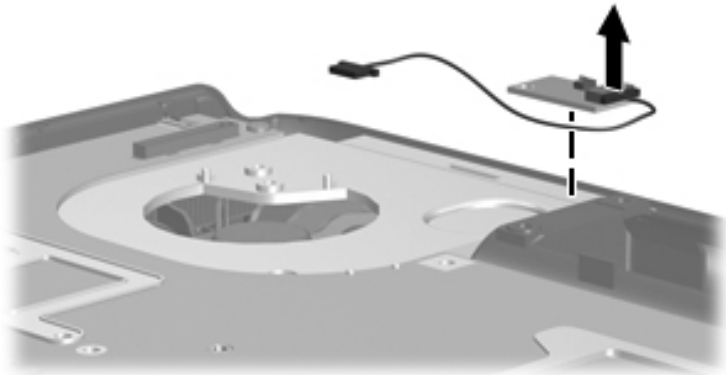

Removing the Display Lid Switch Module



The display lid switch module cable is included with the display lid switch module spare part kit and is also included in the Cable Kit, spare part number 434677-001.

Reverse the above procedure to install the display lid switch module.


5.23 Power Connector Assembly

Power Connector Assembly Spare Part Number Information

Power connector assembly (includes power connector assembly cable and power connector assembly bracket)	432985-001
USB board	432989-001

1. Prepare the computer for disassembly ([Section 5.3](#)) and remove the following components:
 - ❑ Hard drive ([Section 5.4](#))
 - ❑ Optical drive ([Section 5.9](#))
 - ❑ Switch cover ([Section 5.10](#))
 - ❑ Keyboard ([Section 5.11](#))
 - ❑ Speaker assembly ([Section 5.12](#))
 - ❑ Display assembly ([Section 5.14](#))
 - ❑ Top cover ([Section 5.15](#))

2. Remove the two silver Phillips PM2.5×5.0 screws ❶ that secure the power connector assembly bracket to the computer.
3. Remove the power connector assembly bracket ❷.

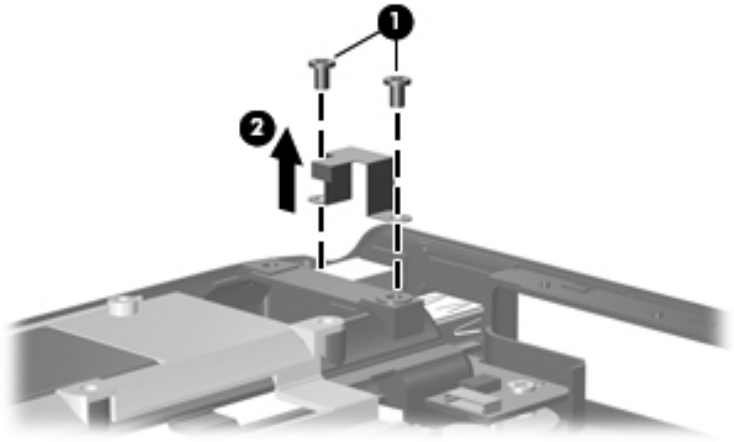


Removing the Power Connector Assembly Bracket

4. Remove the silver Phillips PM2.5×5.0 screw ❶ that secures the USB board to the computer.
5. Remove the USB board ❷.
6. Disconnect the USB board cable ❸ from the USB board and remove the cable from the clips ❹ in the base enclosure.




The USB board cable is included with the USB board spare part kit and is also included in the Cable Kit, spare part number 434677-001.

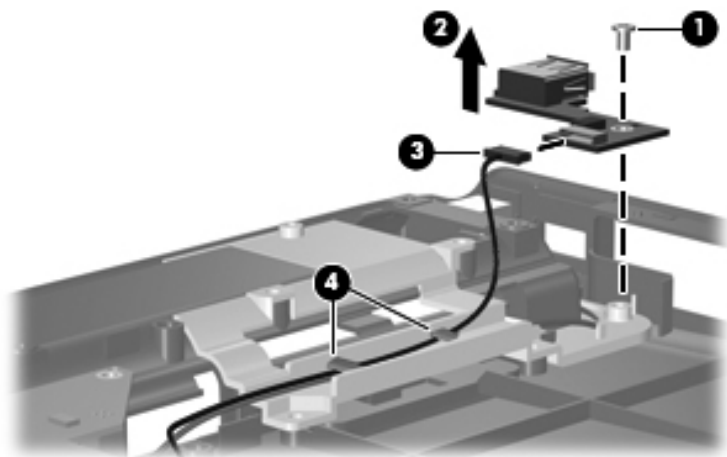

Removing the USB Board

7. Remove the black Phillips PM2.5×5.0 screw ❶ that secures the power connector assembly to the computer.
8. Remove the power connector assembly ❷ from its location in the base enclosure.

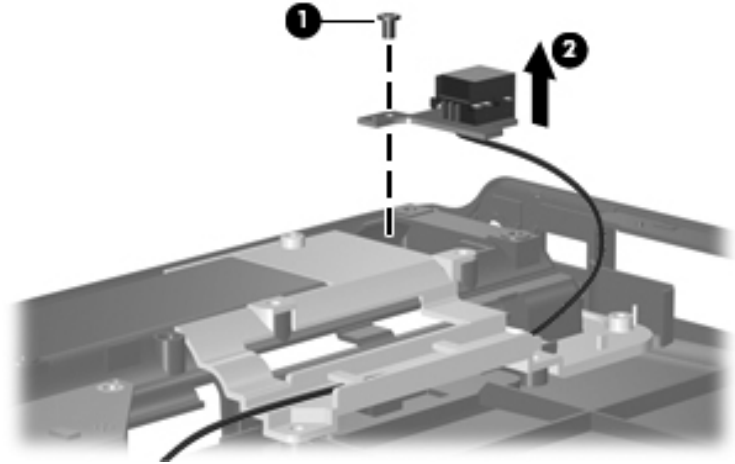

Releasing the Power Connector Assembly

Reverse the above procedure to install the USB board and power connector assembly.

5.24 System Board

System Board Spare Part Number Information

For use with only computer models using Intel processors:

G73 (includes 512-MB of video RAM)	434660-001
G73M (includes 256-MB of video RAM)	434659-001

For use only with UMA computer models using AMD processors	436450-001
For use only with discrete computer models using AMD processors	432945-001




When replacing the system board, ensure that the following components are removed from the defective system board and installed on the replacement system board:

- Memory modules ([Section 5.6](#))
 - RTC battery ([Section 5.7](#))
 - Mini Card module ([Section 5.8](#))
 - Bluetooth module ([Section 5.18](#))
 - ExpressCard assembly ([Section 5.20](#))
 - Optical drive connector module ([Section 5.24](#))
 - Fan/heat sink assembly ([Section 5.25](#))
 - Processor ([Section 5.26](#))
-

1. Prepare the computer for disassembly ([Section 5.3](#)) and remove the following components:


- ☐ Hard drive ([Section 5.4](#))
- ☐ Optical drive ([Section 5.9](#))
- ☐ Switch cover ([Section 5.10](#))
- ☐ Keyboard ([Section 5.11](#))
- ☐ Speaker assembly ([Section 5.12](#))
- ☐ Display assembly ([Section 5.14](#))

- ❑ Top cover ([Section 5.15](#))
 - ❑ Wireless switch board ([Section 5.16](#))
 - ❑ Audio board ([Section 5.17](#))
 - ❑ USB/magnetic board ([Section 5.19](#))
 - ❑ Top cover support trim ([Section 5.21](#))
 - ❑ USB board ([Section 5.23](#))
 - ❑ Power connector assembly ([Section 5.23](#))
2. Turn the computer upside down with the front toward you.
 3. Remove the Phillips PM2.5×8.0 screw that secures the system board to the base enclosure.

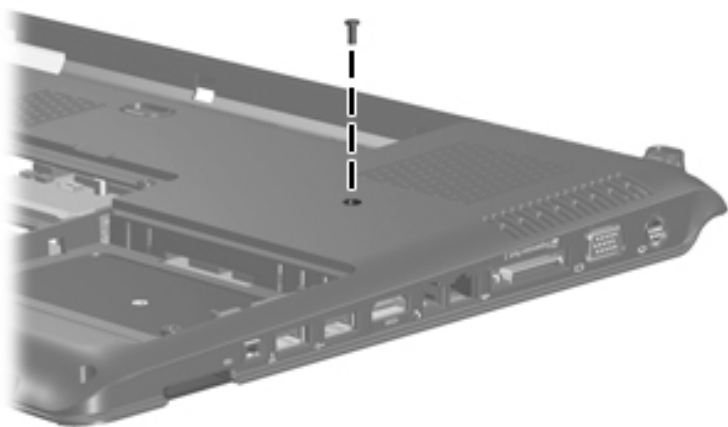

Removing the System Board Screw, Part 1

4. Remove the three Phillips PM2.5×8.0 screws **①** and the three silver Phillips PM2.5×5.0 screws **②** that secure the system board to the base enclosure.

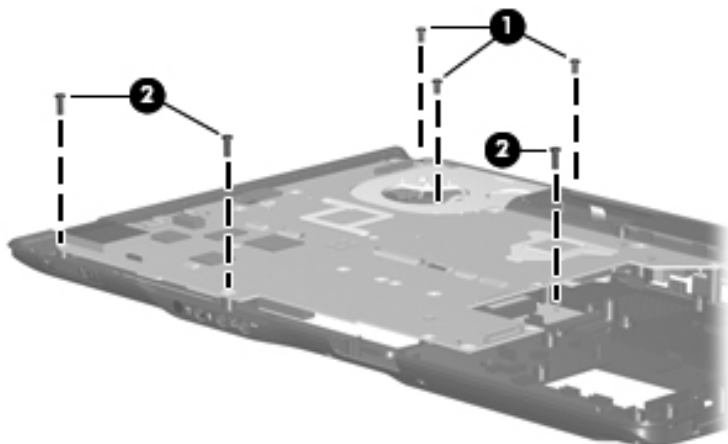


Removing the System Board Screws, Part 2

5. Lift the right side of the system board ❶ until it rests at an angle.
6. Remove the optical drive connector board ❷.




The optical drive connector board is available using spare part number 432992-001.

7. Slide the system board ❸ to the right until the connectors on the left side of the system board disengage from the base enclosure.
8. Remove the system board.

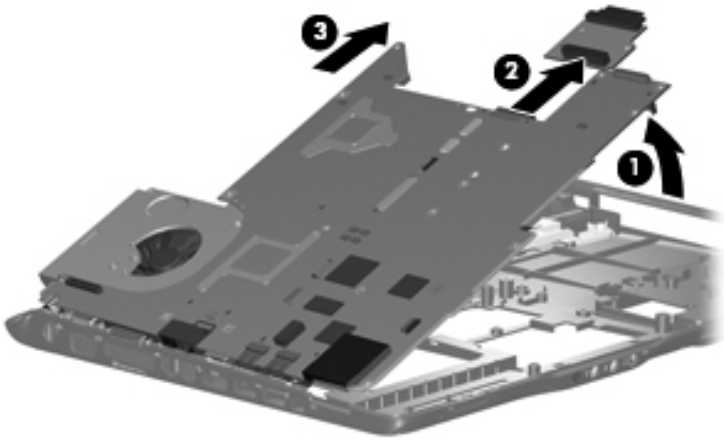

Removing the System Board

9. If it is necessary to replace the power connector assembly or the USB board cable, turn the system board upside down with the front toward you.
10. Disconnect the power connector assembly cable ❶ and the USB board cable ❷ from the system board.

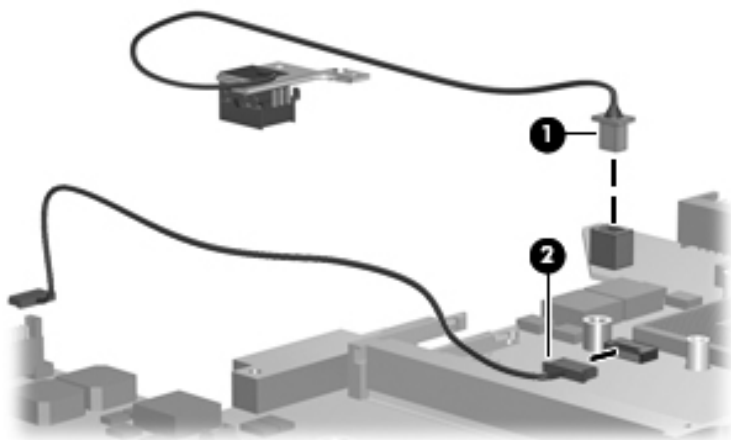

Removing the System Board Cables

Reverse the above procedure to install the system board, power connector assembly, and audio board cable.

5.25 Fan/Heat Sink Assembly

Fan/Heat Sink Assembly Spare Part Number Information


For use only with computer models using Intel processors	434678-001
For use only with computer models using AMD processors	432995-001



When replacing the fan/heat sink assembly, be sure the display lid switch module is removed from the defective fan/heat sink assembly and installed on the replacement fan/heat sink assembly. Refer to [Section 5.22, “Display Lid Switch Module,”](#) for display lid switch module removal information.

1. Prepare the computer for disassembly ([Section 5.3](#)) and remove the following components:
 - ☐ Hard drive ([Section 5.4](#))
 - ☐ Optical drive ([Section 5.9](#))
 - ☐ Switch cover ([Section 5.10](#))
 - ☐ Keyboard ([Section 5.11](#))
 - ☐ Speaker assembly ([Section 5.12](#))
 - ☐ Display assembly ([Section 5.14](#))
 - ☐ Top cover ([Section 5.15](#))
 - ☐ Wireless switch board ([Section 5.16](#))
 - ☐ Audio board ([Section 5.17](#))
 - ☐ USB/magnetic board ([Section 5.19](#))
 - ☐ Top cover support trim ([Section 5.21](#))
 - ☐ USB board ([Section 5.23](#))
 - ☐ Power connector assembly ([Section 5.23](#))
 - ☐ System board ([Section 5.24](#))


2. Turn the system board upside down with the expansion port and external monitor port toward you.
3. Disconnect the fan cable **❶** from the system board.
4. Loosen the four captive Phillips PM2.5×6.0 screws **❷** that secure the fan/heat sink assembly to the system board.
5. Remove the fan/heat sink assembly **❸**.

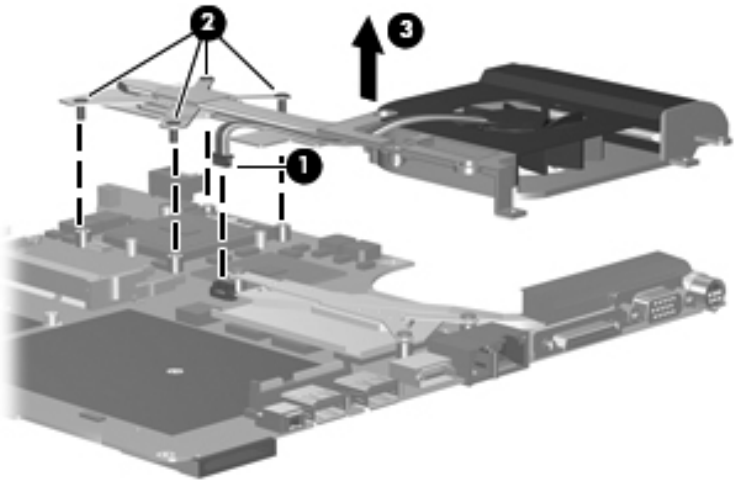

Removing the Fan/Heat Sink Assembly




The thermal pads and thermal paste should be thoroughly cleaned from the surfaces of the fan/heat sink assembly **1**, **2**, and **3**, the system board components **4** and **6**, and the processor **5** each time the fan/heat sink assembly is removed. Thermal pads and thermal paste should be installed on all surfaces before the fan/heat sink assembly is reinstalled. Thermal pads and thermal paste are included with all fan/heat sink assembly, system board, and processor spare part kits.

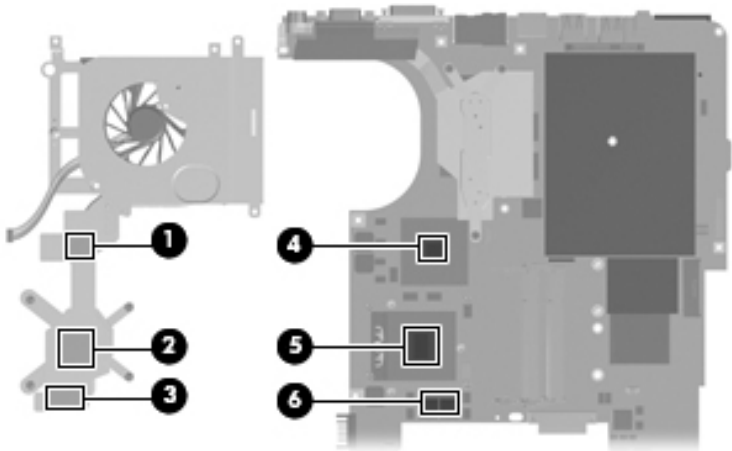

Thermal Pad and Thermal Paste Locations


6. Loosen the three captive silver Phillips PM2.5×5.0 screws **①** that secure the heat sink to the system board.
7. Remove the heat sink **②**.

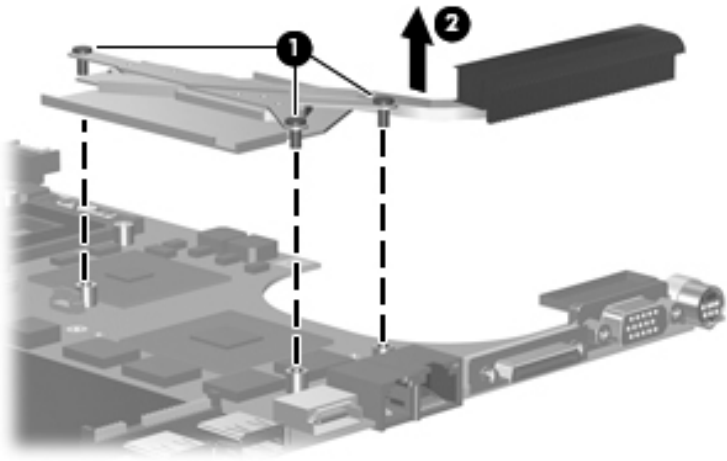

Removing the Heat Sink



The thermal pads and thermal paste should be thoroughly cleaned from the surfaces of the heat sink **1**, **2**, and **3** and the system board components **4**, **5**, and **6**, each time the heat sink is removed. Thermal pads and thermal paste should be installed on all surfaces before the heat sink is reinstalled. Thermal pads and thermal paste are included with all heat sink and system board spare part kits.

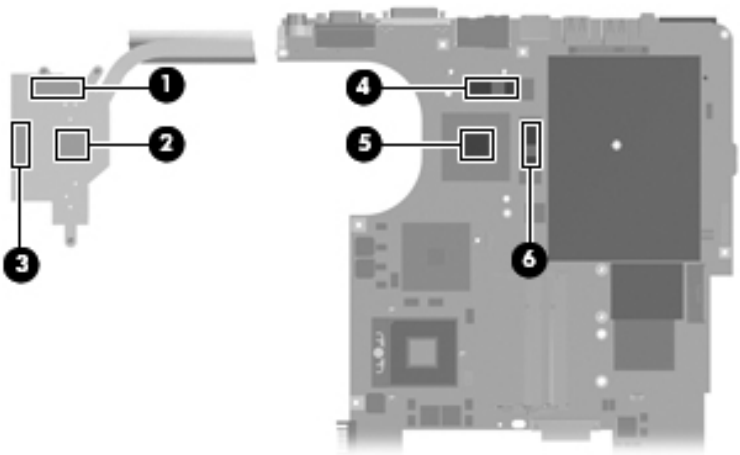

Thermal Pad and Thermal Paste Locations

Reverse the above procedure to install the fan/heat sink assembly.

5.26 Processor

Processor Spare Part Number Information

Processors (include thermal pads and thermal paste)

Intel Core Duo T7200 (2.00-GHz)	434730-001
Intel Core Duo T5600 (1.83-GHz)	434731-011
Intel Core Duo T2250 (1.66-GHz)	436903-001
Intel Core Duo T2300E (1.66-GHz)	419437-001
Intel Core Duo T5200 (1.66-GHz)	436902-001

AMD Turion ML-60 2.0-GHz	436069-001
AMD Turion ML-56 1.8-GHz	431373-001
AMD Turion ML-52 1.6-GHz	431372-001
AMD Turion ML-50 1.6-GHz	431371-001

Mobile AMD Sempron 3500+ (1.8-GHz)	436070-001
------------------------------------	------------


1. Prepare the computer for disassembly ([Section 5.3](#)) and remove the following components:
 - ❑ Hard drive ([Section 5.4](#))
 - ❑ Optical drive ([Section 5.9](#))

- ❑ Switch cover ([Section 5.10](#))
- ❑ Keyboard ([Section 5.11](#))
- ❑ Speaker assembly ([Section 5.12](#))
- ❑ Display assembly ([Section 5.14](#))
- ❑ Top cover ([Section 5.15](#))
- ❑ Wireless switch board ([Section 5.16](#))
- ❑ Audio board ([Section 5.17](#))
- ❑ USB/magnetic board ([Section 5.19](#))
- ❑ Top cover support trim ([Section 5.21](#))
- ❑ USB board ([Section 5.23](#))
- ❑ Power connector assembly ([Section 5.23](#))
- ❑ System board ([Section 5.24](#))
- ❑ Fan/heat sink assembly ([Section 5.25](#))

2. Turn the processor locking screw ❶ one-half turn counterclockwise until you hear a click.
3. Lift the processor ❷ straight up and remove it.



The gold triangle ❸ on the processor should be aligned with the triangle icon ❹ embossed on the processor socket when you install the processor.

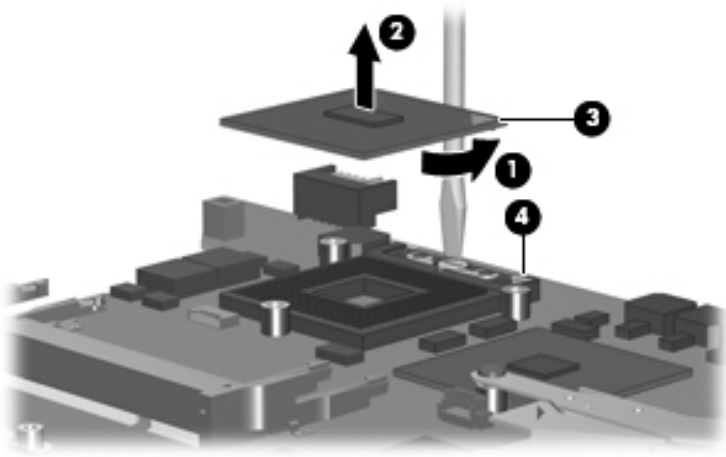

Removing the Processor

Reverse the above procedure to install the processor.

Specifications

This chapter provides physical and performance specifications.

Table 6-1
Computer

Dimensions

With Dual Lamp Display		
Length	28.5 cm	11.22 in
Width	39.6 cm	15.59 in
Height (varies front to rear)	3.2 to 4.2 cm	1.26 to 1.65 in
With Single Lamp Display		
Length	28.5 cm	11.22 in
Width	39.6 cm	15.59 in
Height (varies front to rear)	3.3 to 4.5 cm	1.26 to 1.65 in

Weight (varies by configuration)

With Dual Lamp Display	3.79 kg	8.35 lbs
With Single Lamp Display	3.54 kg	7.80 lbs
Second hard drive adds:	0.13 kg	0.28 lbs
Camera adds:	0.009 kg	0.02 lbs

Stand-alone power requirements

Operating voltage	18.5 V dc —19.0 V dc
Operating current	3.5 A or 4.74 A

Table 6-1
Computer (*Continued*)

Temperature

Operating*	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F

Relative humidity (noncondensing)

Operating	10% to 90%
Nonoperating	5% to 95%, 38.7°C (101.6°F) maximum wet bulb temperature

Maximum altitude (unpressurized)

Operating (14.7 to 10.1 psia)	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating (14.7 to 4.4 psia)	-15 m to 12,192 m	-50 ft to 40,000 ft

Shock

Operating	125 g, 2 ms, half-sine
Nonoperating	200 g, 2 ms, half-sine

Random Vibration

Operating	0.75 g zero-to-peak, 10 Hz to 500 Hz, 0.25 oct/min sweep rate
Nonoperating	1.50 g zero-to-peak, 10 Hz to 500 Hz, 0.5 oct/min sweep rate

*Applicable product safety standards specify thermal limits for plastic surfaces. The computer operates well within this range of temperatures.

Table 6-2
17.0-inch, WSXGA+, TFT Display

Dimensions		
Height	23.00 cm	9.06 in
Width	36.90 cm	14.49 in
Diagonal	43.40 cm	17.09 in
Number of colors		Up to 16.8 million
Contrast ratio		200:1
Brightness		180 nits typical
Pixel resolution		
Pitch	0.197 × 0.197 mm	
Format	1680 × 1050	
Configuration	RGB vertical stripe	
Backlight		Edge lit
Character display		80 × 25
Total power consumption		4 W
Viewing angle		+/-65° horizontal, +/-50° vertical typical

Table 6-3
17.0-inch, WXGA+, TFT Display

Dimensions		
Height	23.00 cm	9.06 in
Width	36.90 cm	14.49 in
Diagonal	43.40 cm	17.09 in
Number of colors		Up to 16.8 million
Contrast ratio		200:1
Brightness		180 nits typical
Pixel resolution		
Pitch	0.259 × 0.259 mm	
Format	1280 × 800	
Configuration	RGB vertical stripe	
Backlight		Edge lit
Character display		80 × 25
Total power consumption		4 W
Viewing angle		+/-40° horizontal, +20/-40° vertical typical

Table 6-4
Hard Drives

	120-GB*	100-GB*	80-GB*
Dimensions			
Height	9.5 mm	9.5 mm	9.5 mm
Width	70 mm	70 mm	70 mm
Weight	102 g	102 g	102 g
Interface type	ATA-5	ATA-5	ATA-5
Transfer rate			
Synchronous (maximum)	100 MB/sec	100 MB/sec	100 MB/sec
Security	ATA security	ATA security	ATA security
Seek times (typical read, including setting)			
Single track	3 ms	3 ms	3 ms
Average	13 ms	13 ms	13 ms
Maximum	24 ms	24 ms	24 ms
Logical blocks [†]	234,433,260	195,364,233	156,301,488
Disk rotational speed	5400 rpm		
Operating temperature	5°C to 55°C (41°F to 131°F)		
 Certain restrictions and exclusions apply. Consult Customer Care for details.			

*1 GB = 1 billion bytes when referring to hard drive storage capacity. Accessible capacity is less. Actual drive specifications may differ slightly.

Table 6-5
Primary 8-cell, Li-Ion Battery

Dimensions

Height	1.83 cm	0.72 in
Width	27.18 cm	10.70 in
Depth	5.23 cm	2.06 in
Weight	0.34 kg	0.75 lb

Energy

Voltage	14.4 V
Amp-hour capacity	4.4 Ah
Watt-hour capacity	63 Wh

Temperature

Operating	5°C to 45°C	41°F to 113°F
Nonoperating	0°C to 60°C	32°F to 140°F

Table 6-6
DVD/CD-RW Combo Drive

Applicable disc	Read:	Write:
	DVD-R, DVD-RW, DVD-ROM (DVD-5, DVD-9, DVD-10, DVD-18), CD-ROM (Mode 1 and 2) CD Digital Audio CD-XA ready (Mode 2, Form 1 and 2) CD-I ready (Mode 2, Form 1 and 2) CD-R, CD-RW Photo CD (single and multisession) CD-Bridge	CD-R and CD-RW
Center hole diameter	1.5 cm (0.59 in)	
Disc diameter		
Standard disc	12 cm (4.72 in)	
Mini disc	8 cm (3.15 in)	

Table 6-6
DVD/CD-RW Combo Drive (Continued)

Disc thickness	1.2 mm (0.047 in)	
Track pitch	0.74 μ m	
Access time	CD media	DVD media
Random	< 110 ms	< 130 ms
Full stroke	< 210 ms	< 225 ms
Audio output level	Line-out, 0.7 V rms	
Cache buffer	2 MB	
Data transfer rate		
CD-R (24X)	3600 KB/s (150 KB/s at 1X CD rate)	
CD-RW (10X)	1500 KB/s (150 KB/s at 1X CD rate)	
CD-ROM (24X)	3600 KB/s (150 KB/s at 1X CD rate)	
DVD (8X)	10,800 KB/s (1352 KB/s at 1X DVD rate)	
Multiword DMA mode 2	16.6 MB/s	
Startup time	< 15 seconds	
Stop time	< 6 seconds	

Table 6-7
DVD±RW/R and
CD-RW Double-Layer Combo Drive

Applicable disc	Read:	Write:
	DVD-R, DVD-RW, DVD-ROM (DVD-5, DVD-9, DVD-10, DVD-18), CD-ROM (Mode 1 and 2) CD Digital Audio CD-XA ready (Mode 2, Form 1 and 2) CD-I ready (Mode 2, Form 1 and 2) CD-R, CD-RW Photo CD (single and multisession) CD-Bridge	CD-R and CD-RW DVD-R and DVD-RW
Center hole diameter	1.5 cm (0.59 in)	
Disc diameter		
Standard disc	12 cm (4.72 in)	
Mini disc	8 cm (3.15 in)	

Table 6-7
DVD±RW/R and
CD-RW Double-Layer Combo Drive (Continued)

Disc thickness	1.2 mm (0.047 in)	
Track pitch	0.74 µm	
Access time	CD media	DVD media
Random	< 175 ms	< 230 ms
Full stroke	< 285 ms	< 335 ms
Audio output level	Audio-out, 0.7 Vrms	
Cache buffer	2 MB	
Data transfer rate		
CD-R (16X)	2,400 KB/s (150 KB/s at 1X CD rate)	
CD-RW (8X)	1,200 KB/s (150 KB/s at 1X CD rate)	
CD-ROM (24X)	3,600 KB/s (150 KB/s at 1X CD rate)	
DVD (8X)	10,800 KB/s (1,352 KB/s at 1X DVD rate)	
DVD-R (4X)	5,400 KB/s (1,352 KB/s at 1X DVD rate)	
DVD-RW (2X)	2,700 KB/s (1,352 KB/s at 1X DVD rate)	
Multiword DMA mode 2	16.6 MB/s	
Startup time	< 15 seconds	
Stop time	< 6 seconds	

Table 6-8
System DMA

Hardware DMA	System Function
DMA0	Not applicable
DMA1	Not applicable
DMA2	Not applicable
DMA3	Not applicable
DMA4	Direct memory access controller
DMA5	Available for ExpressCard
DMA6	Not assigned
DMA7	Not assigned

Table 6-9
System Interrupts

Hardware IRQ	System Function
IRQ0	System timer
IRQ1	Quick Launch buttons
IRQ2	Cascaded
IRQ3	USB2 Enhanced Host Controller—24CD
IRQ4	COM1
IRQ5*	Conexant AC—Link Audio SMBus Controller—24C3 Data Fax Modem with SmartCP
IRQ6	Diskette drive
IRQ7*	Parallel port
IRQ8	System CMOS/real-time clock
IRQ9*	Microsoft ACPI-compliant system
IRQ10*	USB UHCI controller—24C2 GM/GME Graphic Controller Realtek RTL8139 Family PCI fast Ethernet Controller
IRQ11	USB EHCI controller—24CD USB UHCI controller—24C4 USB UHCI controller—24C7 Pro/Wireless 2200BG TI OHCI 1394 host controller TI PCI1410 CardBus controller

*Default configuration



ExpressCard may assert IRQ3, IRQ4, IRQ5, IRQ7, or IRQ20.

Table 6-9
System Interrupts (Continued)

Hardware IRQ	System Function
IRQ12	Synaptics PS/2 port pointing device
IRQ13	Numeric data processor
IRQ14	Primary IDE channel
IRQ15	Secondary IDE channel
IRQ17	Conexant AC -Link Audio
IRQ17	Soft V90 Data Fax Modem with SmartCP
IRQ17	ATi Mobility Radeon Xpress 200 Series
IRQ19	Standard Enhanced PCI to USB Host Controller
IRQ19	Standard OpenHCD USB Host Controller
IRQ19	Standard OpenHCD USB Host Controller
IRQ20	TI 6411 PC1xx21/x515 Cardbus Controller
IRQ20	TI OHCI Compliant IEEE 1394 Host Controller
IRQ21	TI Integrated PC1xx21 FlashMedia Controller
IRQ21	Broadcom 802.11b/g WLAN
IRQ21	Microsoft ACPI-compliant system
IRQ22	Realtek RTL8100CL Family PCI fast Ethernet Controller
IRQ23	SDA Standard Compliant SD Host Controller

*Default configuration



ExpressCard may assert IRQ3, IRQ4, IRQ5, IRQ7, or IRQ20.

Table 6-10
System I/O Addresses

I/O Address (hex)	System Function (shipping configuration)
0x00000000-0x00000CF7	PCI bus
0x00000000-0x00000CF7	Direct memory access controller
0x00000020-0x00000021	Programmable interrupt controller
0x0000002E-0x0000002F	System board resources
0x00000040-0x00000043	System timer
0x00000060-0x00000060	Quick Launch Buttons
0x00000061-0x00000061	System speaker
0x00000062-0x00000062	Microsoft ACPI-Compliant Embedded Controller
0x00000064-0x00000064	Quick Launch Buttons
0x00000066-0x00000066	Microsoft ACPI-Compliant Embedded Controller
0x00000070-0x00000071	System CMOS/real time clock
0x00000072-0x00000073	System board resources
0x00000080-0x0000008F	Direct memory access controller
0x00000092-0x00000092	System board resources
0x000000A0-0x000000A1	Programmable interrupt controller
0x000000B0-0x000000B1	System board resources
0x000000C0-0x000000DF	Direct memory access controller
0x000000F0-0x000000FE	Numeric data processor
0x00000170-0x00000177	Secondary IDE Channel

Table 6-10
System I/O Addresses (Continued)

I/O Address (hex)	System Function (shipping configuration)
0x000001F0-0x000001F7	Primary IDE Channel
0x00000220-0x0000022F	System board resources
0x00000274-0x00000277	ISAPNP Read Data Port
0x00000279-0x00000279	ISAPNP Read Data Port
0x00000280-0x00000293	System board resources
0x00000376-0x00000376	Secondary IDE Channel
0x000003B0-0x000003BB	PCI standard PCI-to-PCI bridge
0x000003B0-0x000003BB	ATI MOBILITY RADEON Xpress 200 Series
0x000003C0-0x000003DF	PCI standard PCI-to-PCI bridge
0x000003C0-0x000003DF	ATI MOBILITY RADEON Xpress 200 Series
0x000003F6-0x000003F6	Primary IDE Channel
0x0000040B-0x0000040B	System board resources
0x000004D0-0x000004D1	System board resources
0x000004D6-0x000004D6	System board resources
0x00000530-0x00000537	System board resources
0x00000870-0x0000087F	System board resources
0x00000A79-0x00000A79	ISAPNP Read Data Port
0x00000C00-0x00000C01	System board resources
0x00000C14-0x00000C14	System board resources
0x00000C50-0x00000C52	System board resources
0x00000C6C-0x00000C6C	System board resources

Table 6-10
System I/O Addresses (Continued)

I/O Address (hex)	System Function (shipping configuration)
0x00000C6F-0x00000C6F	System board resources
0x00000CD4-0x00000CD5	System board resources
0x00000CD6-0x00000CD7	System board resources
0x00000CD8-0x00000CDF	System board resources
0x00000D00-0x0000FFFF	PCI bus
0x00000F40-0x00000F47	System board resources
0x00001080-0x00001080	System board resources
0x00008000-0x0000805F	System board resources
0x00008100-0x000081FF	System board resources
0x00008400-0x0000840F	ATI SMBus
0x00008410-0x0000841F	Standard Dual Channel PCI IDE Controller
0x00009000-0x00009FFF	PCI standard PCI-to-PCI bridge
0x00009000-0x00009FFF	ATI MOBILITY RADEON Xpress 200 Series
0x0000A000-0x0000A0FF	Realtek RTL8139/810x Family Fast Ethernet NIC
0x0000F000-0x0000FFFF	PCI standard PCI-to-PCI bridge
0x0000FD00-0x0000FDFF	Texas Instruments PCIE21/x515 Cardbus Controller
0x0000FE00-0x0000FEFF	Texas Instruments PCIE21/x515 Cardbus Controller

Table 6-11
System Memory Map

Memory Map Address (hex)	System Function (shipping configuration)
0xD4100000-0xD41FFFFFF	PCI standard PCI-to-PCI bridge
0xD4100000-0xD41FFFFFF	ATI MOBILITY RADEON Xpress 200 Series
0xD8000000-0xDBFFFFFF	PCI standard PCI-to-PCI bridge
0xD8000000-0xDBFFFFFF	ATI MOBILITY RADEON Xpress 200 Series
0xFAC00000-0xFEBFFFFFF	PCI standard PCI-to-PCI bridge
0xF6C00000-0xFABFFFFFF	PCI standard PCI-to-PCI bridge
0xD4000000-0xD4000FFF	Standard OpenHCD USB Host Controller
0xD4001000-0xD4001FFF	Standard OpenHCD USB Host Controller
0xD4002000-0xD4002FFF	Standard Enhanced PCI to USB Host Controller
0xD4003000-0xD4003FFF	ATI SMBus
0xFFFF80000-0xFFFFFFFF	System board
0xE0000000-0xE03FFFFFF	System board
0xE0000000-0xE03FFFFFF	System board resources
0x0000-0x0FFF	System board
0xD4208000-0xD42087FF	Texas Instruments OHCI Compliant IEEE 1394 Host Controller
0xD4200000-0xD4203FFF	Texas Instruments OHCI Compliant IEEE 1394 Host Controller
0xD4204000-0xD4205FFF	Broadcom 802.11b/g WLAN
0xFFE0000-0xFFE00000	Texas Instruments PCIE/x515 Cardbus Controller
0xFFE0000-0xFFE00000	Texas Instruments PCIE/x515 Cardbus Controller

Table 6-11
System Memory Map (Continued)

Memory Map Address (hex)	System Function (shipping configuration)
0xF2C00000-0xF6BFFFFF	Texas Instruments PCIxx21/x515 Cardbus Controller
0xD4206000-0xD4207FFF	Texas Instruments PCIxx21 Integrated FlashMedia Controller
0xD4209000-0xD42090FF	SDA Standard Compliant SD Host Controller
0xD4208C00-0xD4208CFF	SDA Standard Compliant SD Host Controller
0xD4208800-0xD42088FF	SDA Standard Compliant SD Host Controller
0xD4209400-0xD42094FF	Realtek RTL8139/810x Family Fast Ethernet NIC
0xD4003400-0xD40034FF	Conexant AC-Link Audio
0xD4003800-0xD40038FF	SoftV90 Data Fax Modem with SmartCP
0xFEC00000-0xFEC00FFF	System board resources
0xFEE00000-0xFEE00FFF	System board resources
0xA0000-0xBFFFFF	PCI bus
0xA0000-0xBFFFFF	PCI standard PCI-to-PCI bridge
0xA0000-0xBFFFFF	ATI MOBILITY RADEON Xpress 200 Series
0xD6000-0xD7FFFF	PCI bus
0xDC000-0xDDFFFF	PCI bus
0xDD000-0xDDFFFF	Texas Instruments PCIxx21/x515 Cardbus Controller
0xE0000-0xFFFFF	System board
0x40000000-0xFFFFFFFF	PCI bus


A

Screw Listing

This appendix provides specification and reference information for the screws used in the computer.


The four Phillips PM3.0×3.0 screws used to secure the hard drive bracket to the hard drive are included in the Hard Drive Bracket Kit, spare part number 434106-001.

 Table A-1
Phillips PM3.0×3.0 Screw

	Color	Qty.	Length	Thread	Head Width
	Silver	4	3.0 mm	3.0 mm	5.0 mm

Where used:


4 screws that secure the hard drive bracket to the hard drive (documented in [Section 5.4](#))

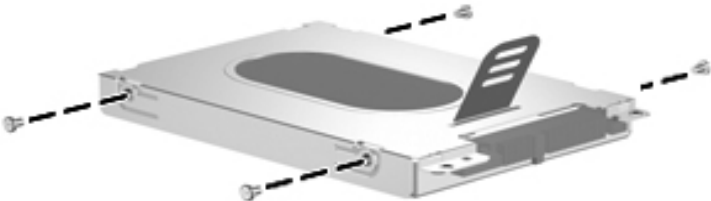

Phillips PM3.0×3.0 Screw Locations


The remaining screws listed in this appendix are available in the Screw Kits, spare part numbers 434676-001 (for use with computers using Intel processors), 432983-001 (for use with computers using AMD processors), and the Display Screw Kit, spare part number 432967-001.

 Table A-2
Captive Phillips PM2.0x5.0 Screw

 mm	Color	Qty.	Length	Thread	Head Width
	Black	6	5.0 mm	2.0 mm	5.0 mm


Where used:

- ❶ Four screws that secure the hard drive covers to the computer (screws are captured on the cover by C-clips; documented in [Section 5.4](#))
- ❷ Two screws that secure the memory module compartment cover to the computer (screws are captured on the cover by C-clips; documented in [Section 5.6](#))

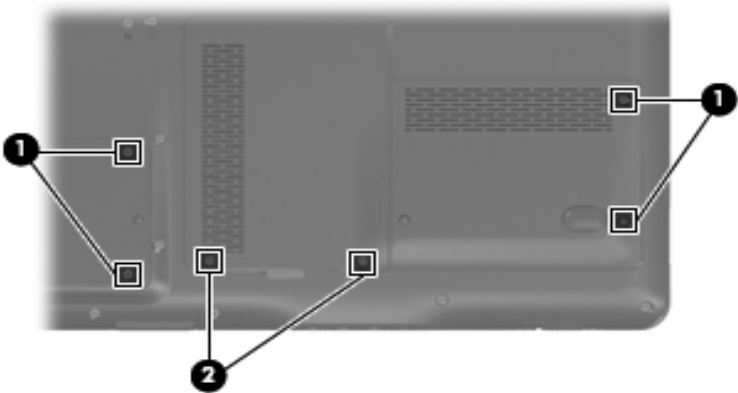


Captive Phillips PM2.0x5.0 Screw Locations

 Table A-3
Phillips PM2.0×11.0 Screw

	Color	Qty.	Length	Thread	Head Width
	Silver	2	11.0 mm	2.0 mm	5.0 mm


Where used:

2 screws that secure the Mini Card module to the computer (documented in [Section 5.8](#))

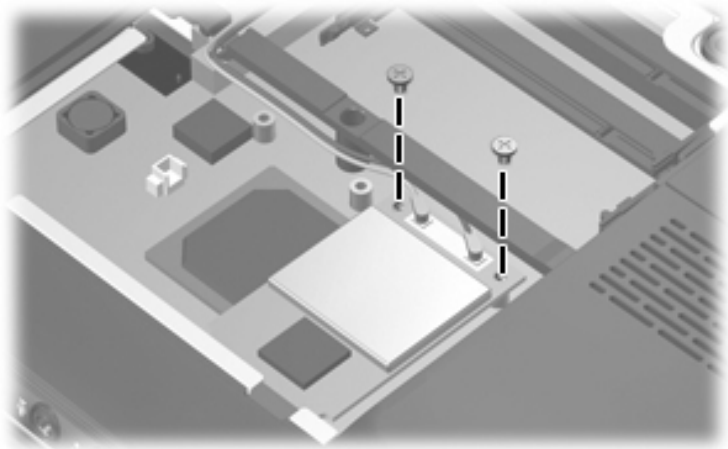


Phillips PM2.0×11.0 Screw Locations

 Table A-4
Phillips PM2.5×8.0 Screw

 mm	Color	Qty.	Length	Thread	Head Width
	Black	38	8.0 mm	2.5 mm	5.0 mm


Where used:

- ① One screw that secures the optical drive to the computer (documented in [Section 5.9](#))
- ② Two screws that secure the display assembly to the computer (documented in [Section 5.14](#))

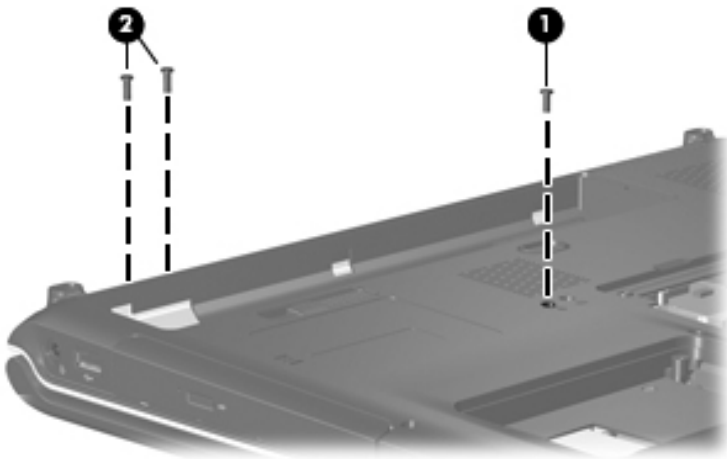


Phillips PM2.5×8.0 Screw Locations

 Table A-4
Phillips PM2.5×8.0 Screw (Continued)

	Color	Qty.	Length	Thread	Head Width
	Black	38	8.0 mm	2.5 mm	5.0 mm


Where used:

2 screws that secure the display assembly to the computer (documented in [Section 5.14](#))

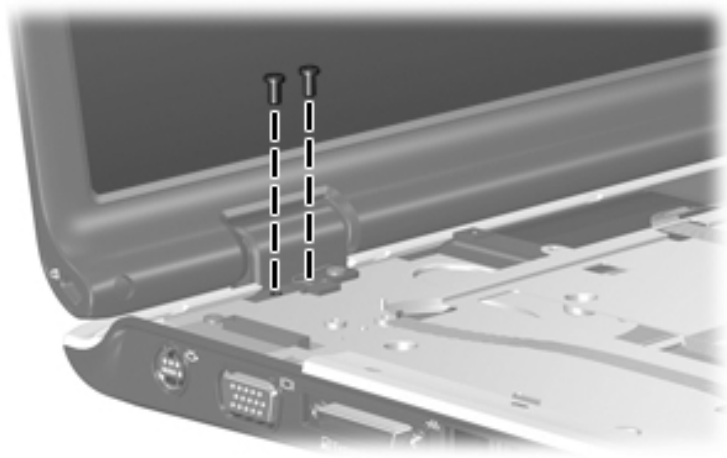


Phillips PM2.5×8.0 Screw Locations

 Table A-4
Phillips PM2.5×8.0 Screw (Continued)

	Color	Qty.	Length	Thread	Head Width
	Black	38	8.0 mm	2.5 mm	5.0 mm

Where used:

5 screws that secure the display bezel to the display enclosure (documented in [Section 5.14](#))

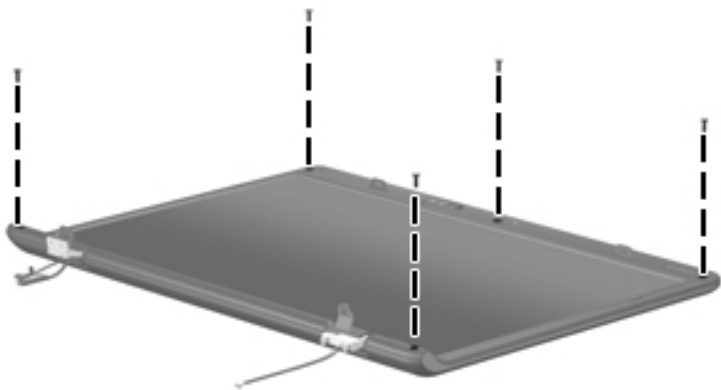


Phillips PM2.5×8.0 Screw Locations

Table A-4
Phillips PM2.5×8.0 Screw (Continued)


 mm	Color	Qty.	Length	Thread	Head Width
	Black	38	8.0 mm	2.5 mm	5.0 mm

Where used:
6 screws that secure the display panel to the display enclosure (documented in [Section 5.14](#))

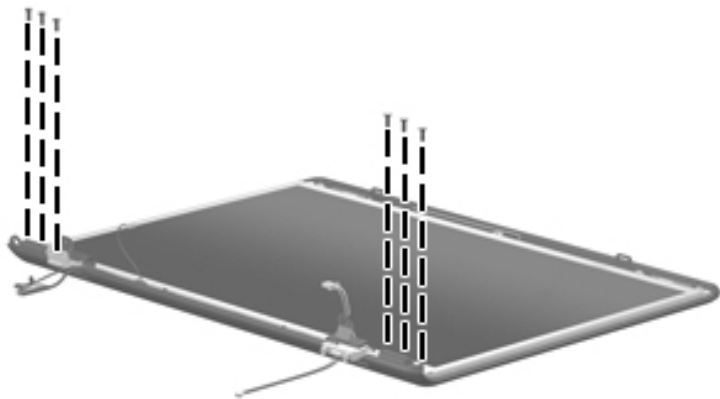


Phillips PM2.5×8.0 Screw Locations

 Table A-4
Phillips PM2.5×8.0 Screw (Continued)

 mm	Color	Qty.	Length	Thread	Head Width
	Black	38	8.0 mm	2.5 mm	5.0 mm


Where used:

8 screws that secure the top cover to the base enclosure (documented in [Section 5.15](#))

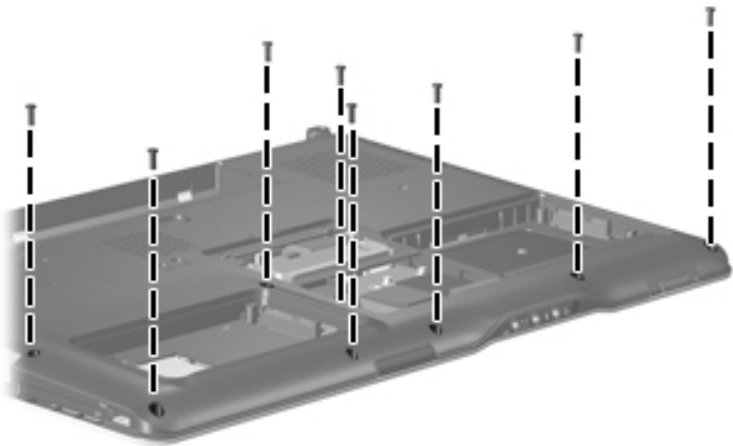


Phillips PM2.5×8.0 Screw Locations

 Table A-4
Phillips PM2.5×8.0 Screw (Continued)

	Color	Qty.	Length	Thread	Head Width
	Black	38	8.0 mm	2.5 mm	5.0 mm


Where used:

5 screws that secure the top cover to the base enclosure (documented in [Section 5.15](#))

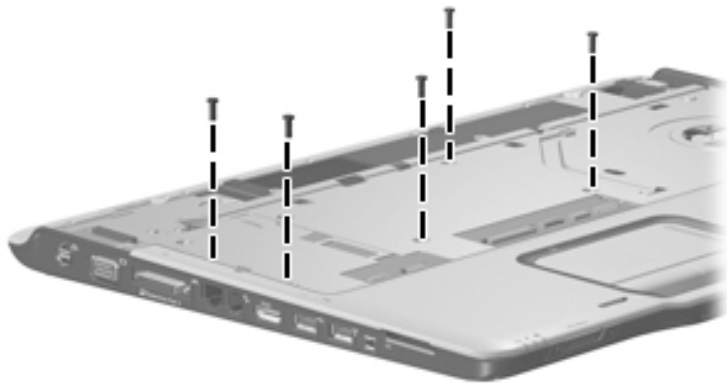


Phillips PM2.5×8.0 Screw Locations

 Table A-4
Phillips PM2.5×8.0 Screw (Continued)

 mm	Color	Qty.	Length	Thread	Head Width
	Black	38	8.0 mm	2.5 mm	5.0 mm


Where used:

- ① Four screws that secure the top cover support trim to the base enclosure (documented in [Section 5.21](#))
- ② One screw that secures the system board to the base enclosure (documented in [Section 5.24](#))

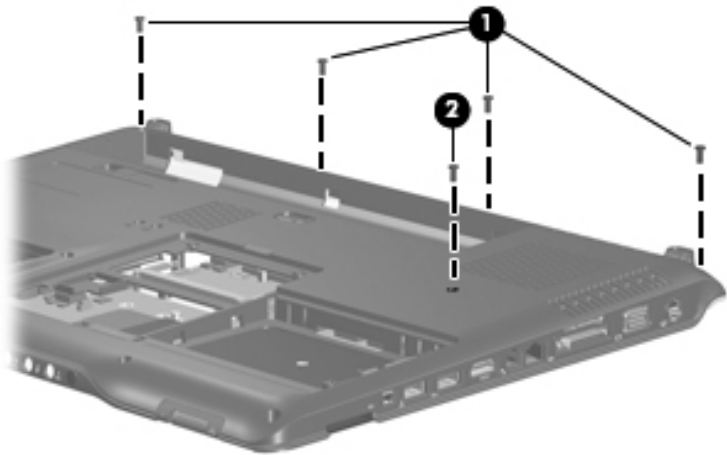


Phillips PM2.5×8.0 Screw Locations

 Table A-4
Phillips PM2.5×8.0 Screw (Continued)

	Color	Qty.	Length	Thread	Head Width
	Black	38	8.0 mm	2.5 mm	5.0 mm


Where used:

One screw that secures the top cover support trim to the base enclosure (documented in [Section 5.21](#))

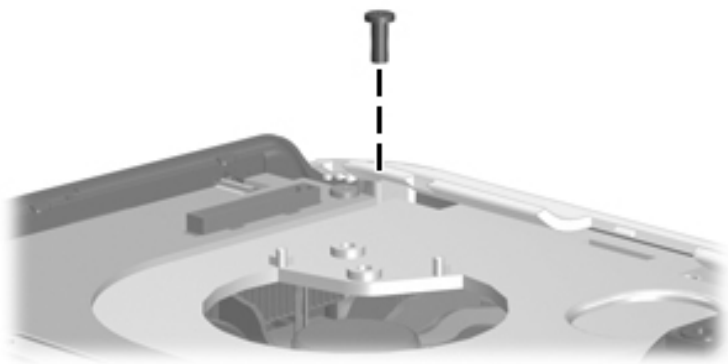


Phillips PM2.5×8.0 Screw Location

 Table A-4
Phillips PM2.5×8.0 Screw (Continued)

	Color	Qty.	Length	Thread	Head Width
	Black	38	8.0 mm	2.5 mm	5.0 mm

Where used:

3 screws that secure the system board to the base enclosure (documented in [Section 5.24](#))

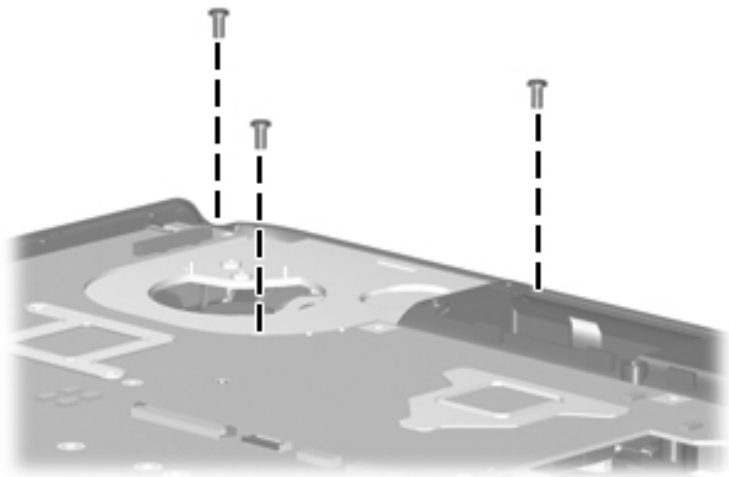


Phillips PM2.5×8.0 Screw Locations

Table A-5
Phillips PM2.0×3.0 Screw

 mm	Color	Qty.	Length	Thread	Head Width
	Silver	8	3.0 mm	2.0 mm	4.0 mm

Where used:

2 screws that secure the optical drive bracket to the optical drive (documented in [Section 5.9](#))

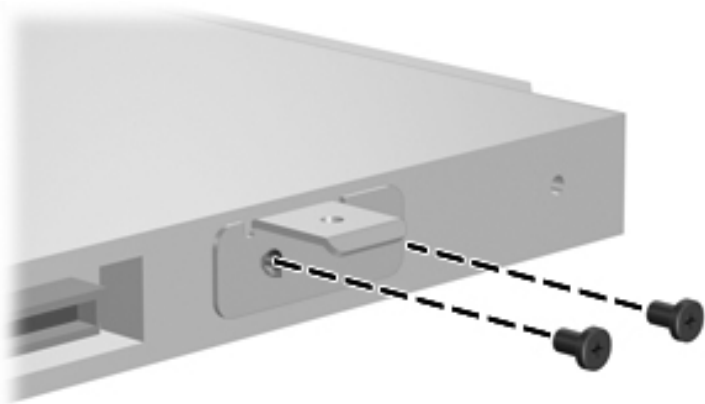

Phillips PM2.0×3.0 Screw Locations

Table A-5
Phillips PM2.0×3.0 Screw (Continued)

 mm 	Color	Qty.	Length	Thread	Head Width
	Silver	8	3.0 mm	2.0 mm	4.0 mm

Where used:

4 screws that secure the display hinges to the display panel (documented in [Section 5.14](#))




Phillips PM2.0×3.0 Screw Locations

Table A-5
Phillips PM2.0×3.0 Screw (Continued)

 mm 	Color	Qty.	Length	Thread	Head Width
	Silver	8	3.0 mm	2.0 mm	4.0 mm

Where used:

2 screws that secure the Bluetooth module to the base enclosure (documented in [Section 5.18](#))

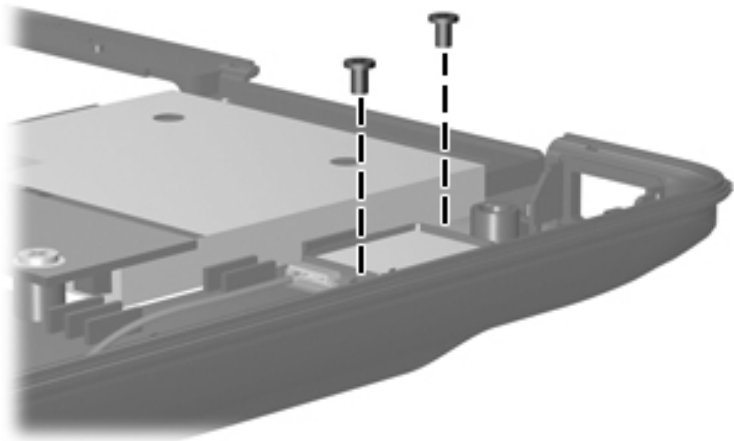


Phillips PM2.0×3.0 Screw Locations

Table A-6
Phillips PM2.0x5.0 Screw

 mm	Color	Qty.	Length	Thread	Head Width
	Silver	6	5.0 mm	2.0 mm	5.0 mm


Where used:

6 screws that secure the switch cover to the computer (documented in [Section 5.10](#))

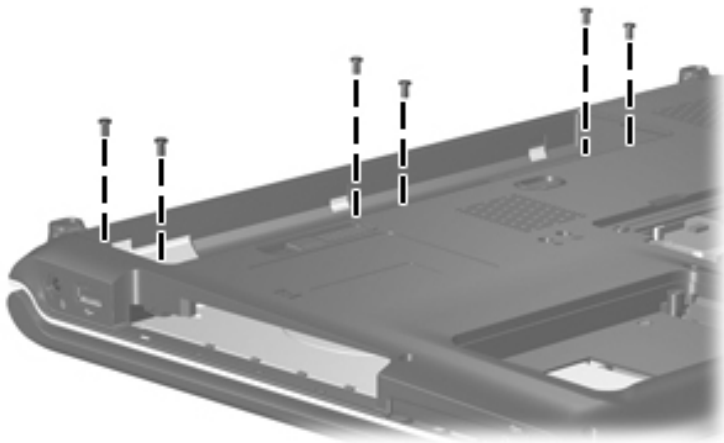


Phillips PM2.0x5.0 Screw Locations

 Table A-7
Phillips PM2.5×7.0 Screw

 mm	Color	Qty.	Length	Thread	Head Width
	Black	1	7.0 mm	2.5 mm	5.0 mm


Where used:

One screw that secures the keyboard to the computer (documented in [Section 5.11](#))

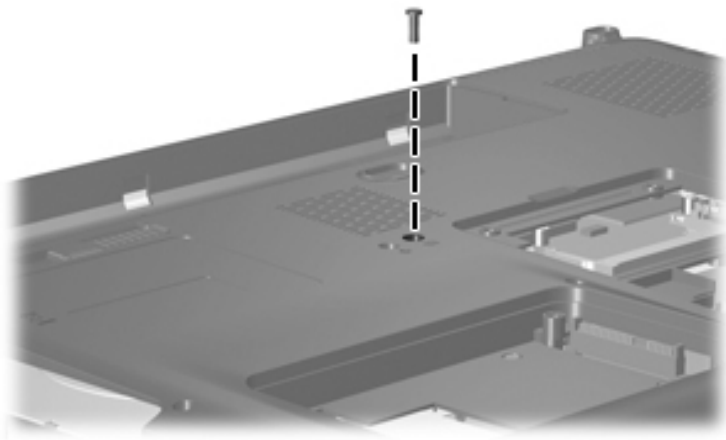

Phillips PM2.5×7.0 Screw Location

 Table A-8
Silver Phillips PM2.5x5.0 Screw

	Color	Qty.	Length	Thread	Head Width
	Silver	28	5.0 mm	2.5 mm	5.0 mm


Where used:

3 screws that secure the keyboard to the computer (documented in [Section 5.11](#))




Silver Phillips PM2.5x5.0 Screw Locations

 Table A-8
Silver Phillips PM2.5×5.0 Screw (Continued)

	Color	Qty.	Length	Thread	Head Width
	Silver	28	5.0 mm	2.5 mm	5.0 mm

Where used:

- ❶ One screw that secures the power button board to the fan/heat sink assembly (documented in [Section 5.13](#))
- ❷ Two screws that secure the display assembly to the computer (documented in [Section 5.14](#))

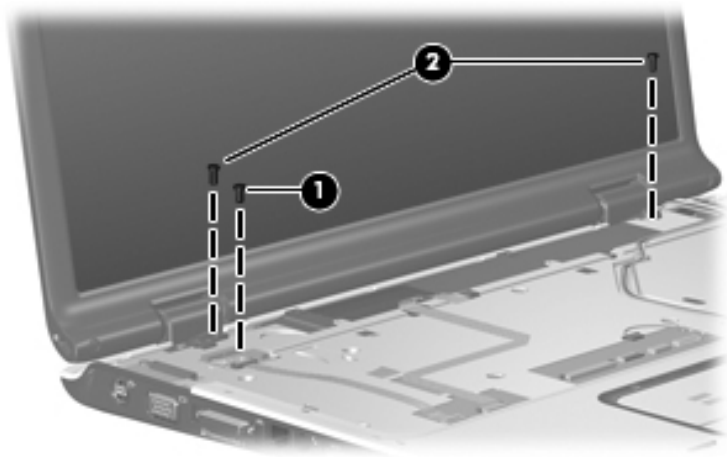


Silver Phillips PM2.5×5.0 Screw Locations

Table A-8
Silver Phillips PM2.5×5.0 Screw (Continued)

 mm	Color	Qty.	Length	Thread	Head Width
	Silver	28	5.0 mm	2.5 mm	5.0 mm


Where used:

4 screws that secure the top cover to the base enclosure (documented in [Section 5.15](#))

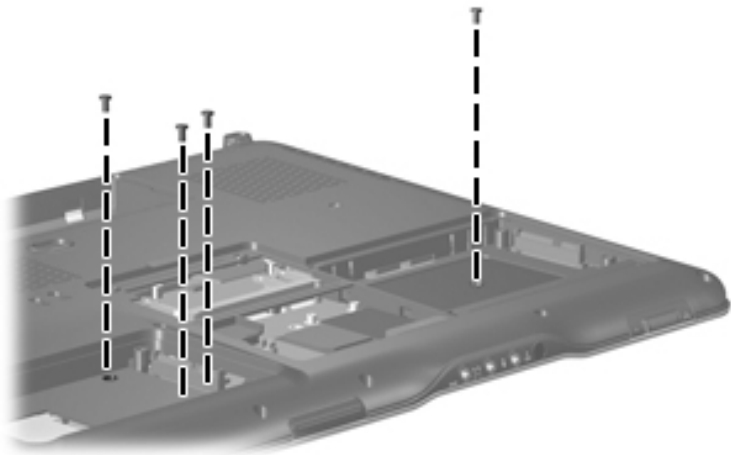


Silver Phillips PM2.5×5.0 Screw Locations

 Table A-8
Silver Phillips PM2.5×5.0 Screw (*Continued*)

 mm	Color	Qty.	Length	Thread	Head Width
	Silver	28	5.0 mm	2.5 mm	5.0 mm


Where used:

One screw that secures the top cover to the base enclosure (documented in [Section 5.15](#))

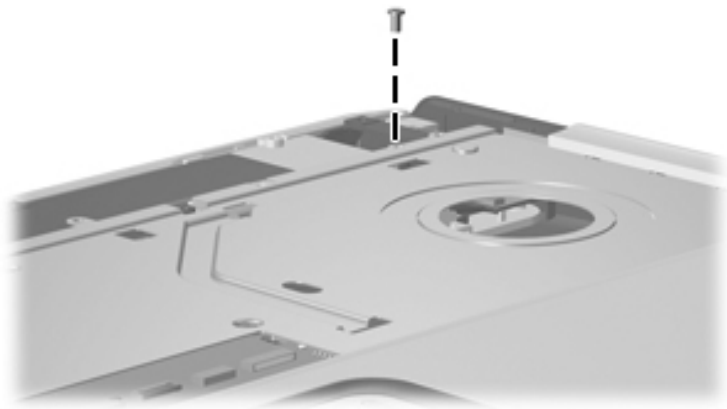


Silver Phillips PM2.5×5.0 Screw Location

 Table A-8
Silver Phillips PM2.5×5.0 Screw (Continued)

 mm	Color	Qty.	Length	Thread	Head Width
	Silver	28	5.0 mm	2.5 mm	5.0 mm


Where used:

- ❶ Two screws that secure the wireless switch board to the base enclosure (documented in [Section 5.16](#))
- ❷ One screw that secures the audio board to the base enclosure (documented in [Section 5.17](#))
- ❸ One screw that secures the USB/magnetic board to the base enclosure (documented in [Section 5.19](#))

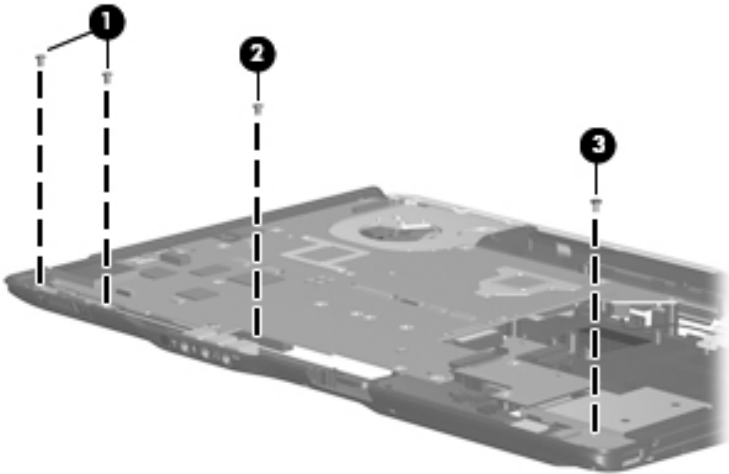


Silver Phillips PM2.5×5.0 Screw Locations

 Table A-8
Silver Phillips PM2.5×5.0 Screw (Continued)

	Color	Qty.	Length	Thread	Head Width
	Silver	28	5.0 mm	2.5 mm	5.0 mm


Where used:

4 screws that secure the ExpressCard assembly to the base enclosure (documented in [Section 5.20](#))

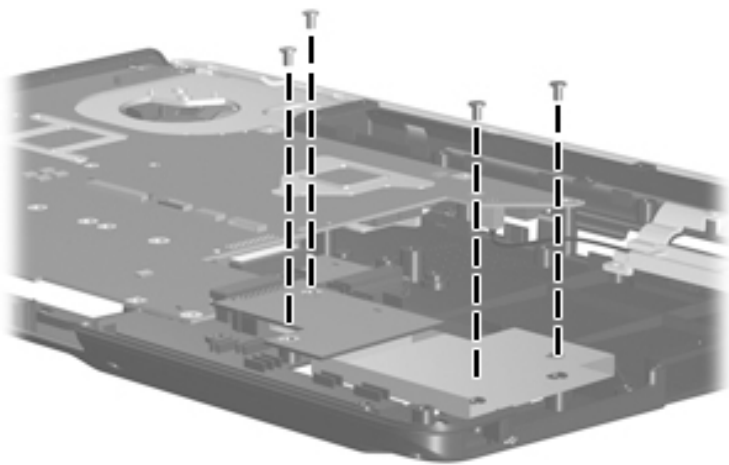


Silver Phillips PM2.5×5.0 Screw Locations

 Table A-8
Silver Phillips PM2.5×5.0 Screw (Continued)

	Color	Qty.	Length	Thread	Head Width
	Silver	28	5.0 mm	2.5 mm	5.0 mm


Where used:

- ❶ Two screws that secure the power connector assembly bracket to the base enclosure (documented in [Section 5.23](#))
- ❷ One screw that secures the USB board to the base enclosure (documented in [Section 5.23](#))

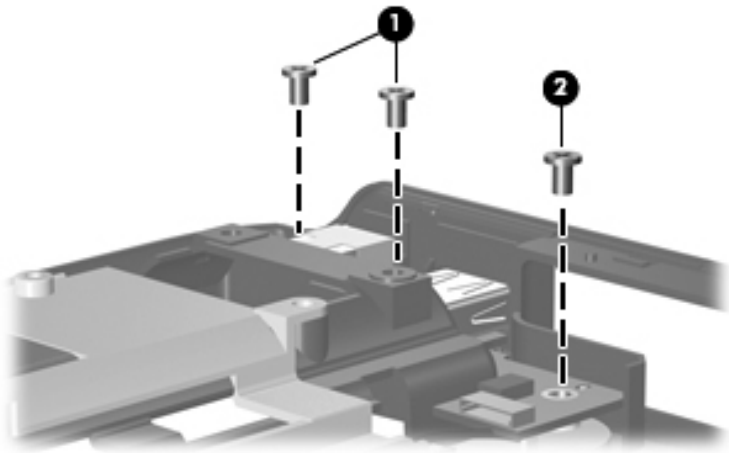


Silver Phillips PM2.5×5.0 Screw Locations

 Table A-8
Silver Phillips PM2.5×5.0 Screw (*Continued*)

 mm	Color	Qty.	Length	Thread	Head Width
	Silver	28	5.0 mm	2.5 mm	5.0 mm


Where used:

3 screws that secure the system board to the base enclosure (documented in [Section 5.24](#))

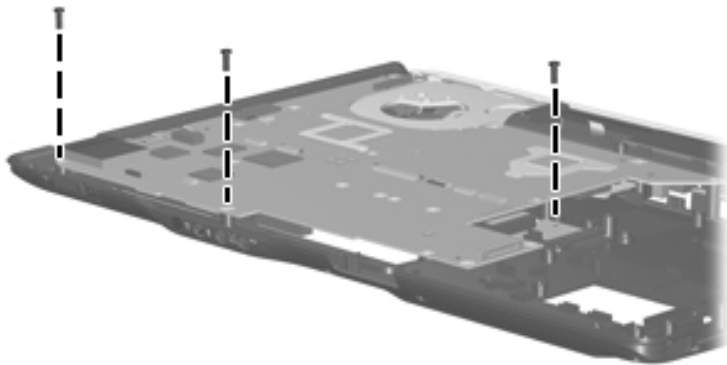


Silver Phillips PM2.5×5.0 Screw Locations

 Table A-8
Silver Phillips PM2.5×5.0 Screw (Continued)

	Color	Qty.	Length	Thread	Head Width
	Silver	28	5.0 mm	2.5 mm	5.0 mm


Where used:

3 screws that secure the heat sink to the system board (documented in [Section 5.25](#))

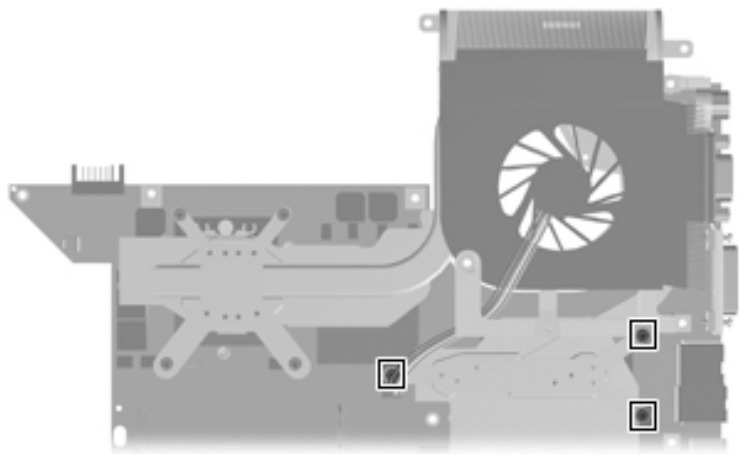


Silver Phillips PM2.5×5.0 Screw Locations

 Table A-9
Black Phillips PM2.5×5.0 Screw

	Color	Qty.	Length	Thread	Head Width
	Black	3	5.0 mm	2.5 mm	5.0 mm


Where used:

Two screws that secure the speaker assembly to the base enclosure (documented in [Section 5.12](#))

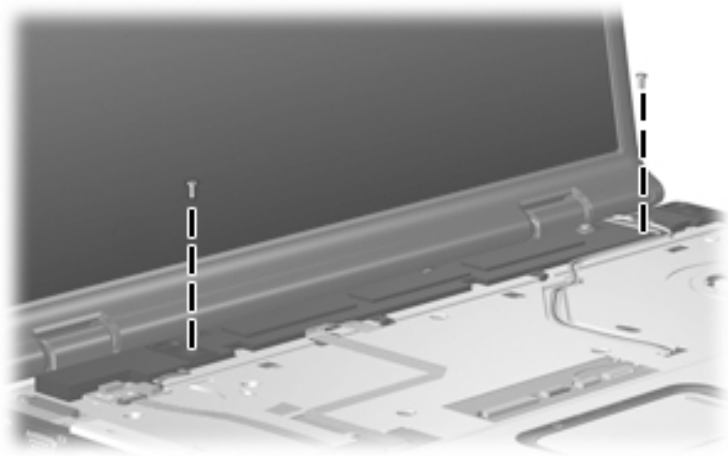


Black Phillips PM2.5×5.0 Screw Locations

 Table A-9
Black Phillips PM2.5×5.0 Screw (Continued)

	Color	Qty.	Length	Thread	Head Width
	Black	3	5.0 mm	2.5 mm	5.0 mm


Where used:

One screw that secures the power connector assembly to the base enclosure (documented in [Section 5.23](#))

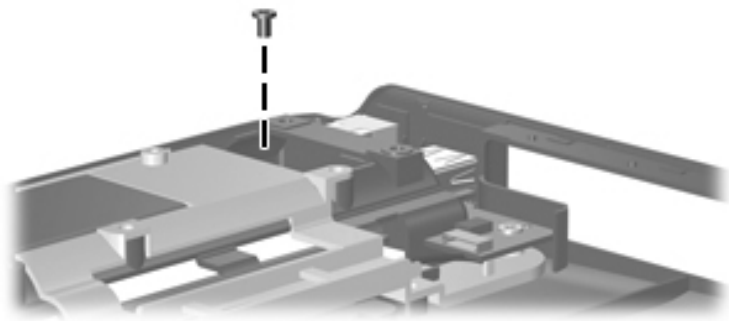


Black Phillips PM2.5×5.0 Screw Location

 Table A-10
Phillips PM2.0×4.0 Screw

	Color	Qty.	Length	Thread	Head Width
	Silver	4	4.0 mm	2.0 mm	5.0 mm


Where used:

4 screws that secure the wireless antenna transceivers to the display enclosure (documented in [Section 5.14](#))

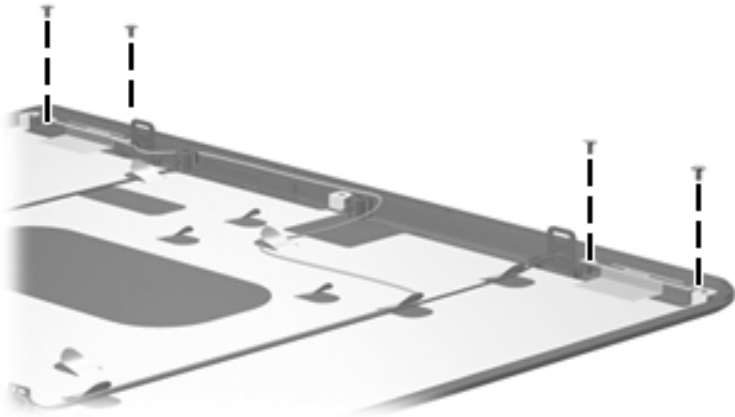


Phillips PM2.0×4.0 Screw Locations

 Table A-11
Phillips PM2.5×6.0 Screw

 mm	Color	Qty.	Length	Thread	Head Width
	Black	4	6.0 mm	2.5 mm	5.0 mm

Where used:

4 screws that secure the fan/heat sink assembly to the system board
(documented in [Section 5.25](#))

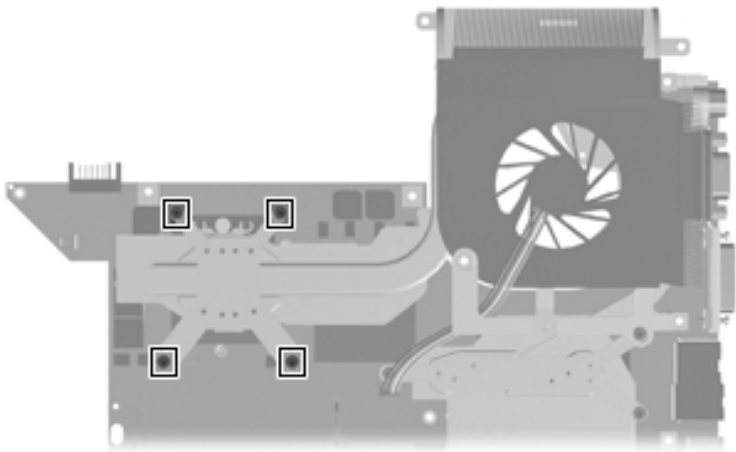

Phillips PM2.5×6.0 Screw Locations

Backup and Recovery

Recovering System Information

Tools provided by the operating system and PC Recovery software are designed to help you with the following tasks for safeguarding your information and restoring it in case of a system failure:

- Back up your information regularly to protect your important system files.
- Make a set of recovery discs (PC Recovery software feature). Recovery discs are used to start up (boot) your computer and restore the operating system and software programs to factory settings in case of system failure or instability.
- Create system restore points (operating system feature). System restore points allow you to reverse undesirable changes to your computer by restoring the computer to an earlier state.
- Recover a program or driver (PC Recovery software feature). This feature helps you reinstall a program or driver without performing a full system recovery.
- Perform a full system recovery (PC Recovery software feature). With PC Recovery, you can recover your full factory image if you experience system failure or instability. PC Recovery works from a dedicated recovery partition on the hard drive or from recovery discs you create.

Backing Up Your Information

When to Back Up

- On a regularly scheduled basis.



Set reminders to back up your information periodically.

- Before the computer is repaired or restored.
- Before you add or modify hardware or software.

Backup Suggestions

- Create system restore points using Windows XP Professional System Restore feature.
- Store personal files in the My Documents folder and back up these folders periodically.
- Back up templates stored in their associated programs.
- Save customized settings in a window, toolbar, or menu bar by taking a screen shot of your settings.

The screen shot can be a time saver if you have to reset your preferences.

To copy the screen and paste it into a Word document:

- a. Display the screen.
- b. Copy the screen:

To copy only the active window, press **alt+fn+prt sc**.

To copy the entire screen, press **fn+prt sc**.

- c. To paste the copied images into a document, open Word, and then select **Edit > Paste**.

Using System Restore Points

When you back up your system, you are creating a system restore point. A system restore point allows you to save and name a snapshot of your hard drive at a specific point in time. You can then recover back to that point if you want to reverse subsequent changes made to your system.



Recovering to an earlier restore point does not affect data files saved or e-mails created since the last restore point.

You also can create additional restore points to provide increased protection for your system files and settings.

When to Create Restore Points

- Before you add or extensively modify software or hardware.
- Periodically, whenever the system is performing optimally.



If you revert to a restore point and then change your mind, you can reverse the restoration.

Create a System Restore Point

1. Select **Start > Help and Support > System Restore**.
The System Restore window opens.
2. Click **Create a restore point**, and then click **Next**.
3. Follow the on-screen instructions.

Restore to a Previous Date and Time

To revert to a restore point (created at a previous date and time), when the computer was functioning optimally:

1. Select **Start > Help and Support > System Restore**.

The System Restore window opens.

2. Click **Restore my computer to an earlier time**, and then click **Next**.
3. Follow the on-screen instructions.

Creating Recovery Discs

PC Recovery Disc Creator creates a set of recovery CDs or DVDs for the computer. Use recovery discs to restore the operating system and software programs to factory settings, in case of system failure or instability.



Handle these discs carefully and keep them in a safe place. The software allows the creation of only one set of recovery discs.

Note the following guidelines before creating recovery discs:

- You will need high quality CD-R, DVD-R, or DVD+R media (purchased separately).



DVD±RW/R and double-layer DVD±RW are not compatible with the PC Recovery Disc Creator software.

- The computer must be connected to AC power during this process.
- Only one set of recovery discs can be created per computer.

- Number each disc before inserting it into the computer optical drive.
- If necessary, you can exit the program before you have finished creating the recovery discs. The next time you open PC Recovery Disc Creator, you will be prompted to continue the disc creation process.

To create a set of recovery discs:

1. Select **Start > All Programs > System Recovery > PC Recovery Disc Creator**.

The PC Recovery Disc Creator tool opens.

2. Click **Next**.



If you are operating the computer on battery power, you will be prompted to connect to AC power before you can go to the next step.

3. Select the type of disc you want to use and click **Next**.
-



The software examines the image and displays the number of blank discs needed to create your recovery discs.

4. Insert the first disc and follow the on-screen instructions to complete the creation of the recovery discs.

Reinstalling Software Programs and Drivers

If a program or driver preinstalled at the factory is accidentally erased or is damaged, the Application and Driver Recovery tool allows you to reinstall it.



Software not provided with this computer must be reinstalled from the disc provided by the manufacturer or downloaded from the manufacturer's Web site.



Before reinstalling the program, be sure it is fully uninstalled.

The Application and Driver Recovery tool replaces corrupted system files and reinstalls deleted system files within the program.

- In most cases, if the program you are reinstalling is still on your computer, the reinstallation process does not affect your personal settings.
- In all cases, if a program has been deleted from your computer, the reinstallation process reinstalls the program or utility to the factory image but cannot restore your personal settings.

Reinstalling Preinstalled Programs and Drivers

1. Remove the program or driver:
-



In some cases, drivers are not listed in the Add or Remove Programs list. If the driver is not listed, it does not need to be removed.

- a. Select **Start > Control Panel > Add or Remove Programs**.
- b. Click the program or driver you want to remove, and then click **Change/Remove**.

2. Select **Start > All Programs > System Recovery > Application and Driver Recovery**.

The Application and Driver Recovery tool opens.

3. Select **Application Installation or Driver Installation**, and then click **Next**.
4. Follow the on-screen instructions to complete the program or driver recovery.
5. Restart the computer if prompted.

Reinstalling Programs from Discs

1. Insert the disc into the optical drive.
2. When the installation wizard opens, follow the installation instructions on the screen.
3. Restart the computer if prompted.

Performing a Recovery

PC Recovery software allows you to repair or restore the system if you experience system failure or instability. PC Recovery works from recovery discs that you create or from a dedicated recovery partition on the hard drive.



Microsoft Windows XP has its own built-in repair features, such as System Restore and driver roll-back capabilities. If you have not already tried these features, try them before using PC Recovery.



PC Recovery only recovers software that was preinstalled at the factory. Software not provided with this computer must be reinstalled from the disc provided by the manufacturer or downloaded from the manufacturer's Web site.

Recovering from the Recovery Discs

To restore the system from the recovery discs:

1. Back up all personal files.
2. Insert the first recovery disc into the optical drive and restart the computer.
3. Follow the on-screen instructions.

Recovering from the Partition on the Hard Drive

You can perform a recovery from the partition on the hard drive from either the Start button or **f11**.

To restore the system from the partition:

1. Access the PC Recovery tool:
 - ❑ To access PC Recovery from the Start button, select **Start > All Programs > System Recovery > PC Recovery**.
 - ❑ To access PC Recovery from **f11**, restart the computer and press **f11** while the “Press <F11> for recovery” message is displayed on the screen.

The PC Recovery tool opens.

2. Select **PC Recovery** and click **Next**.

The computer restarts and the PC Recovery tool opens.

3. Click **OK**.
4. Follow the on-screen instructions to complete the system recovery.

If you want to perform a *destructive* recovery:



A destructive recovery formats the hard drive and restores the computer to its factory state. Select this option only as a last resort.

- a. Click **Advanced Options** on the System Recovery screen.
- b. Select **Destructive Recovery** and follow the on-screen instructions.

Deleting the Recovery Partition on the Hard Drive

The PC Recovery Advanced Options menu provides the option of deleting the recovery partition, which will increase space on the hard drive. Delete the recovery partition only if you have already created recovery discs.



CAUTION: After you create the recovery discs, you can increase space on the hard drive by deleting the recovery partition. However, doing this is not recommended. If you delete this partition, you will lose any information that is on the partition, including the PC Recovery software. Thereafter, you must use the recovery discs to access PC Recovery software.

To delete the recovery partition:

1. If you have not already created recovery discs, create them now.
2. Select **Start > All Programs > System Recovery > PC Recovery**.

The PC Recovery tool opens.

3. Select **PC Recovery** and click **Next**.

The computer restarts and the PC Recovery tools opens.

4. Click **OK**.
5. At the System Recovery screen, click **Advanced Options**.
6. Select **Delete Recovery Partition (not recommended)** and follow the on-screen instructions.

Updating Reinstalled Software

After you perform a system recovery, connect to the Internet to update all reinstalled software.

To access update links for the operating system and other software provided on your computer:

» Select **Start > Help and Support**.

To update optional software, follow the instructions provided by the software manufacturer. Some programs include an update feature you can access from a Help button or menu within the program.

Display Component Recycling



WARNING: The backlight contains mercury. Caution should be exercised when removing and handling the backlight to avoid damaging this component and causing exposure to the mercury.



CAUTION: The procedures in this appendix can result in damage to display components. The only components intended for recycling purposes are the liquid crystal display (LCD) panel and the backlight. Careful handling should be exercised when removing these components.



Materials Disposal

This HP product contains mercury in the display assembly backlight and may require special handling at end-of-life.

Disposal of mercury may be regulated because of environmental considerations. For disposal or recycling information, contact your local authorities or visit the Electronic Industries Alliance (EIA) at <http://www.eiae.org>.

This appendix provides disassembly instructions for the display assembly. The display assembly must be disassembled to gain access to the backlight ❶ and the LCD panel ❷.




Disassembly procedures differ from one display assembly to another. The procedures provided in this appendix are general disassembly instructions. Specific details, such as screw sizes, quantities, and locations, and component shapes and sizes, can vary from one computer model to another.

Refer to [Section 5.14, “Display Assembly,”](#) for display assembly disassembly steps.


Perform the following steps to disassemble the display assembly:

1. Remove all screw covers **1** and screws **2** that secure the display bezel to the display assembly.

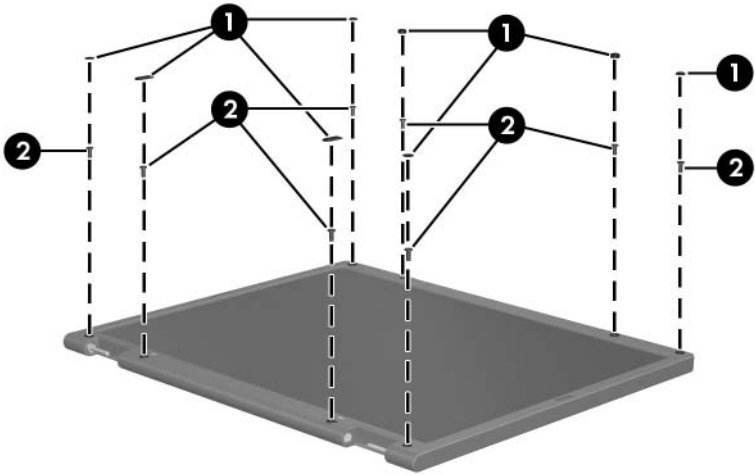


Removing the Display Bezel Screw Covers and Screws

2. Lift up and out on the left and right inside edges ❶ and the top and bottom inside edges ❷ of the display bezel until the bezel disengages from the display assembly.
3. Remove the display bezel ❸.

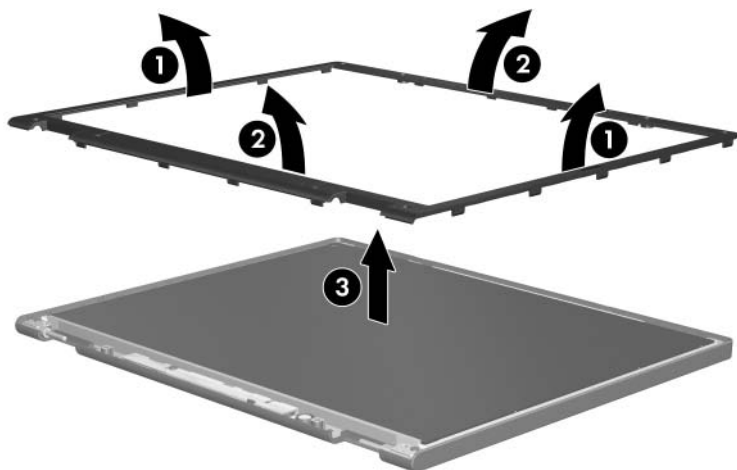


Removing the Display Bezel

4. Disconnect all LCD panel cables ❶ from the display inverter board and remove the inverter board ❷.

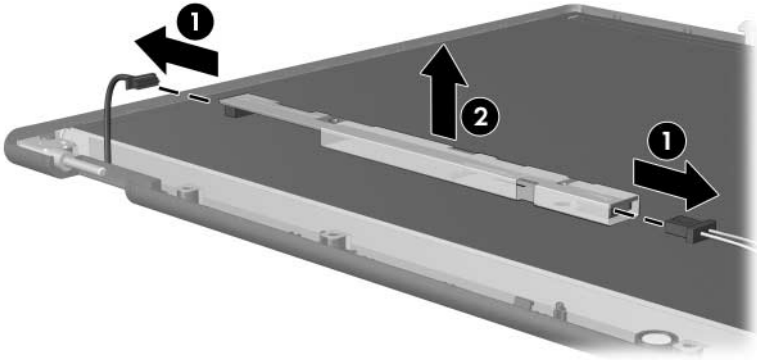

Removing the Display Inverter Board

5. Remove all screws ❶ that secure the LCD panel to the display enclosure.
6. Remove the LCD panel ❷ from the display enclosure.

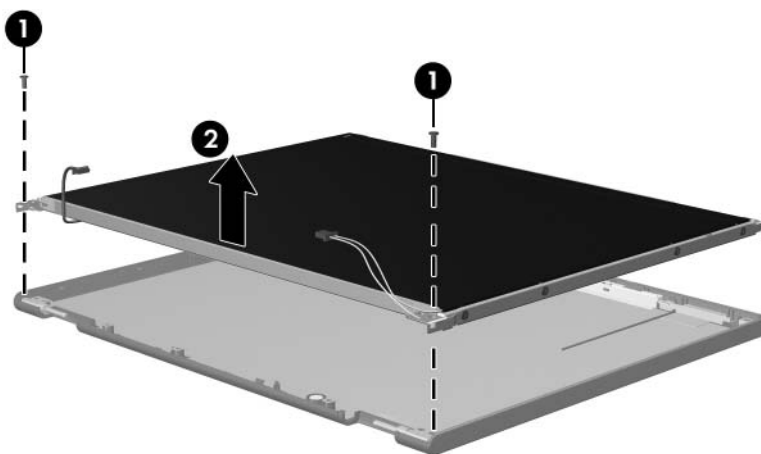


Removing the LCD Panel

7. Turn the LCD panel upside down.
8. Remove all screws that secure the LCD panel frame to the LCD panel.




Removing the LCD Panel Frame Screws

9. Use a sharp-edged tool to cut the tape ❶ that secures the side of the LCD panel to the LCD panel frame.
10. Remove the LCD panel frame ❷ from the display panel.

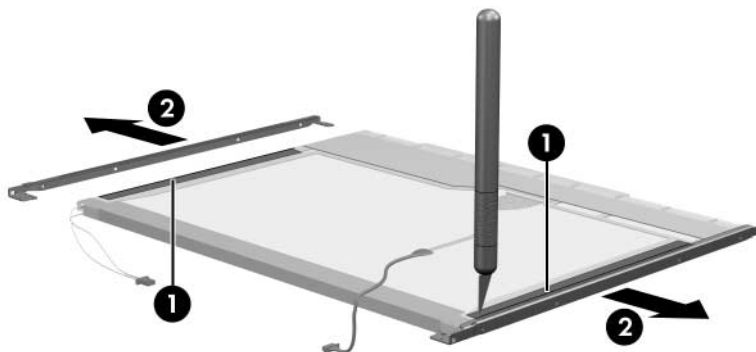


Removing the LCD Panel Frame

11. Remove the screws ❶ that secure the backlight cover to the LCD panel.
12. Lift the top edge of the backlight cover ❷ and swing it forward.
13. Remove the backlight cover.

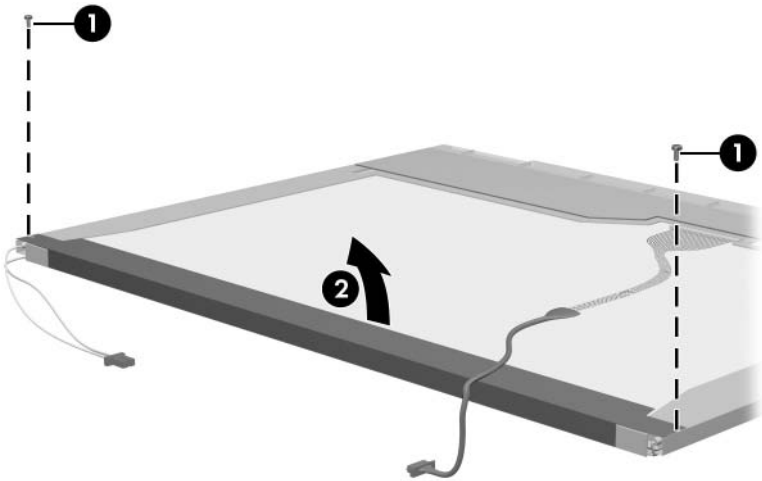


Removing the Backlight Cover

14. Turn the LCD panel right-side up.
15. Remove the backlight cables **1** from the clip **2** in the LCD panel.

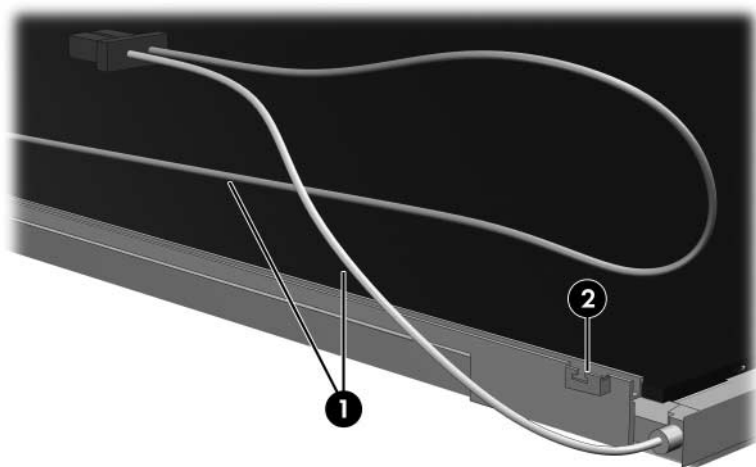

Releasing the Backlight Cables

16. Turn the LCD panel upside down.
17. Remove the backlight frame from the LCD panel.

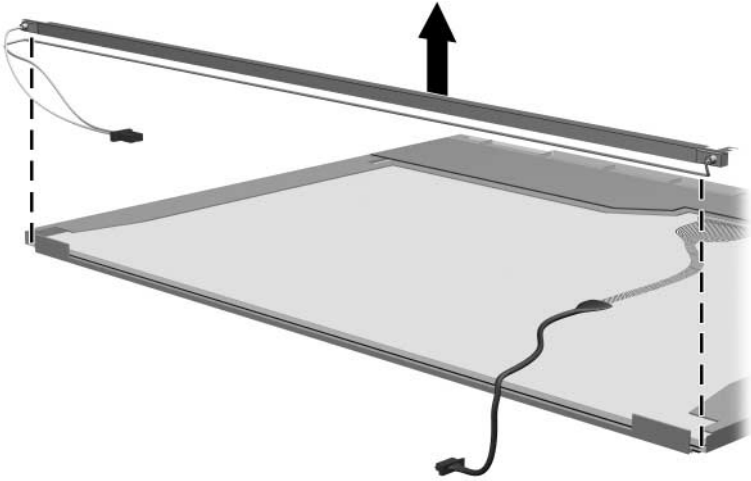


Removing the Backlight Frame




WARNING: The backlight contains mercury. Caution should be exercised when removing and handling the backlight to avoid damaging this component and causing exposure to the mercury.

18. Slide the backlight out of the backlight frame.

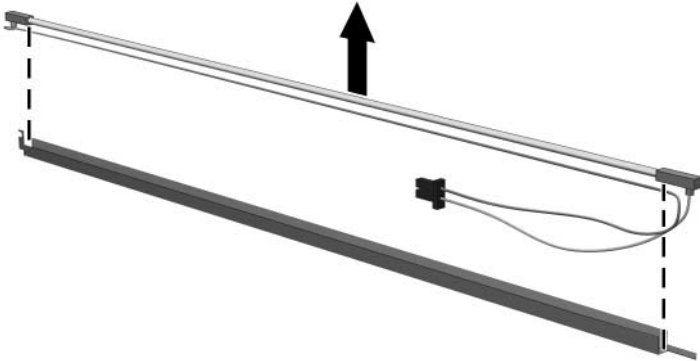


Removing the Backlight

19. Disconnect the display cable ❶ from the LCD panel.
20. Remove the screws ❷ that secure the LCD panel to the LCD rear panel.
21. Release the LCD panel ❸ from the LCD rear panel.
22. Release the tape ❹ that secures the LCD panel to the LCD rear panel.

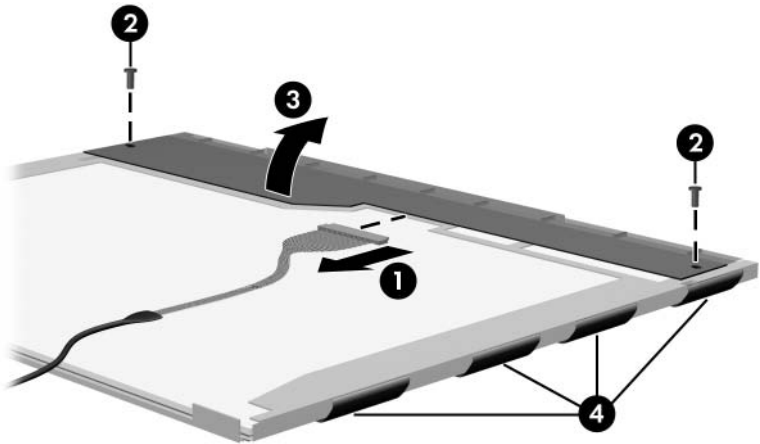

Releasing the LCD Panel

23. Remove the LCD panel.

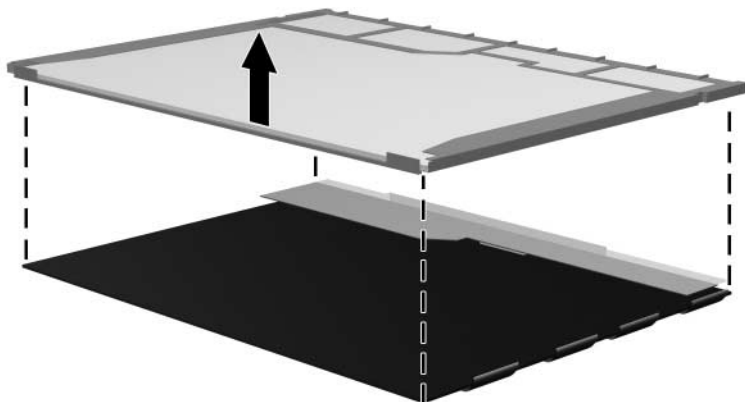


Removing the LCD Panel

24. Recycle the backlight and LCD panel.

D


Connector Pin Assignments

 Table D-1
Universal Serial Bus



Pin	Signal	Pin	Signal
1	+5 VDC	3	Data +
2	Data –	4	Ground

Table D-2
RJ-45 (Network)

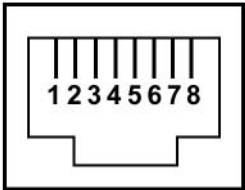


Pin	Signal	Pin	Signal
1	Transmit +	5	Unused
2	Transmit –	6	Receive –
3	Receive +	7	Unused
4	Unused	8	Unused

Table D-3
S-Video-Out




Pin	Signal	Pin	Signal
1	TV-Ground	5	TV-CD
2	TV-CVBS	6	TV-Ground
3	TV-Ground	7	TV-YD
4	TV-Ground		

Table D-4
External Monitor

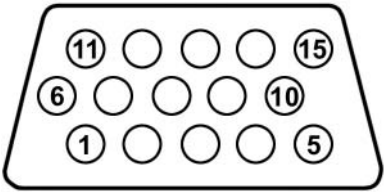


Pin	Signal	Pin	Signal
1	Red analog	9	+5 VDC
2	Green analog	10	Ground
3	Blue analog	11	Monitor detect
4	Not connected	12	DDC 2B data
5	Ground	13	Horizontal sync
6	Ground analog	14	Vertical sync
7	Ground analog	15	DDC 2B clock
8	Ground analog		

Table D-5
RJ-11 (Modem)

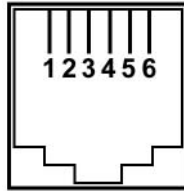


Pin	Signal	Pin	Signal
1	Unused	4	Unused
2	Tip	5	Unused
3	Ring	6	Unused

Table D-6
Audio-In (Microphone)

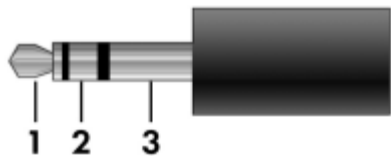

Pin	Signal	Pin	Signal
1	Audio signal in	3	Ground
2	Audio signal in		

Table D-7
Audio-Out (Headphone)

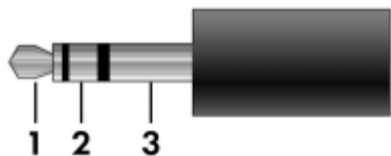

Pin	Signal	Pin	Signal
1	Audio out, left channel	3	Ground
2	Audio out, right channel		

Power Cord Set Requirements

3-Conductor Power Cord Set

The wide range input feature of the computer permits it to operate from any line voltage from 100 to 120 or 220 to 240 volts AC.

The power cord set included with the computer meets the requirements for use in the country where the equipment is purchased.

Power cord sets for use in other countries must meet the requirements of the country where the computer is used.

General Requirements

The requirements listed below are applicable to all countries.

- The length of the power cord set must be at least 1.5 m (5.0 ft) and a maximum of 2.0 m (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 amps and a nominal voltage rating of 125 or 250 V AC, as required by each country's power system.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Country-Specific Requirements

3-Conductor Power Cord Set Requirements

Country/Region	Accredited Agency	Applicable Note Number
Australia	EANSW	1
Austria	OVE	1
Belgium	CEBC	1
Canada	CSA	2
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
Italy	IMQ	1
Japan	METI	3



NOTES:

1. The flexible cord must be <HAR> Type HO5VV-F, 3-conductor, 1.0 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country where it will be used.
2. The flexible cord must be Type SPT-3 or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration.
3. The appliance coupler, flexible cord, and wall plug must bear a "T" mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCT or VCTF, 3-conductor, 1.00 mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V) configuration.

3-Conductor Power Cord Set Requirements (Continued)

Country/Region	Accredited Agency	Applicable Note Number
Korea	EK	4
The Netherlands	KEMA	1
Norway	NEMKO	1
People's Republic of China	CCC	5
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	4
United Kingdom	BSI	1
United States	UL	2

**NOTES:**

1. The flexible cord must be <HAR> Type HO5VV-F, 3-conductor, 1.0 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country where it will be used.
2. The flexible cord must be Type SPT-3 or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration.
3. The appliance coupler, flexible cord, and wall plug must bear a "T" mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCT or VCTF, 3-conductor, 1.00 mm² conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V) configuration.
4. The flexible cord must be Type RVV, 3-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country where it will be used.
5. The flexible cord must be Type VCTF, 3-conductor, 0.75 mm² conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country where it will be used.

Index

1394 port 1–9

A

AC adapter, spare part
numbers 3–26, 3–31, 3–32

analog TV tuner, spare part
number 3–26, 3–31

arrow keys 1–13

audio board

removal 5–56
spare part number 3–5,
3–36, 5–56

audio board cable, illustrated
3–24

audio troubleshooting 2–25

audio-in (microphone) jack
location 1–7

pin assignments D–6

audio-out (headphone) jack
location 1–7

pin assignments D–6

B

backlight cable, disconnection
5–41

backpack, spare part number
3–26, 3–28

base enclosure, spare part
numbers 3–9, 3–35, 3–38

battery

removal 5–5
spare part numbers 3–9,
3–34, 3–37, 3–38, 5–5
specifications 6–6

battery bay 1–20

battery light 1–6

battery release latch 1–20

Bluetooth module

removal 5–58
spare part number 3–5,
3–31, 5–58

Bluetooth module cable,
illustrated 3–24

bottom components 1–20

C

Cable Kit

components 3–25
spare part number 3–17,
3–25, 3–37

cables, service considerations
4–2

camera 1–15

- camera cable
 - disconnection 5–36
 - removal 5–46
 - spare part number 3–19, 3–33, 5–46
- camera module
 - removal 5–40
 - spare part number 3–19, 3–33, 5–40
- caps lock** key 1–13
- caps lock light 1–15
- CMOS clearing 1–4
- components
 - bottom 1–20
 - front 1–6
 - keyboard 1–12
 - left-side 1–8
 - rear 1–8
 - right-side 1–10
 - top 1–14, 1–16, 1–19
- composite S-Video and audio
 - input cable, spare part number 3–26, 3–31
- computer feet, locations 5–11
- Computer Setup
 - Advanced Menu 2–8
 - File Menu 2–6
 - Security Menu 2–6
 - Tools Menu 2–7
- computer specifications 6–1
- connector pin assignments
 - external monitor D–4
 - headphone D–6
 - microphone D–6
 - monitor D–4
 - RJ-11 (modem) D–5
 - RJ-45 (network) D–2
 - S-Video-out D–3
 - Universal Serial Bus (USB) D–1
- connectors, service
 - considerations 4–2
- consumer infrared lens 1–7
- D**
 - design overview 1–22
 - Digital Media Slot 1–9
 - Digital Media Slot light 1–9
 - disassembly sequence chart 5–2
 - diskette drive, OS loading problems 2–23
 - display assembly
 - removal 5–34
 - spare part numbers 3–3, 3–32, 5–34
 - specifications 6–3, 6–4
 - display bezel
 - removal 5–39
 - spare part numbers 3–18, 3–33, 3–38, 5–39
 - Display Cable Kit, spare part number 3–19, 3–33, 5–46
 - display enclosure, spare part numbers 3–19, 3–33
 - display hinge
 - removal 5–43
 - spare part numbers 5–43
 - display hinge cover
 - removal 5–43
 - spare part number 3–19, 3–33, 5–43

- Display Hinge Kit, spare part numbers 3-19, 3-33, 5-43
- display lid latch 1-7
- display lid switch module
 - removal 5-68
 - spare part number 3-5, 3-36, 5-68
- display lid switch module cable
 - disconnection 5-32
 - illustrated 3-24
- display panel
 - removal 5-42
 - spare part numbers 3-19, 3-32, 3-33, 5-42
- Display Screw Kit, spare part number 3-19, 3-33
- docking device,
 - troubleshooting 2-18
- drive light 1-7
- drives, preventing damage 4-3
- DVB-T TV tuner antenna,
 - spare part number 3-26, 3-31
- DVB-T TV tuner, spare part number 3-26, 3-31
- DVD button 1-17
- DVD/CD-RW Combo Drive
 - OS loading problems 2-24
 - precautions 4-3
 - removal 5-19
 - spare part numbers 3-17, 3-21, 3-34, 3-37, 5-19
 - specifications 6-7

- DVD±RW/R and CD-RW Combo Drive
 - OS loading problems 2-24
 - precautions 4-3
 - removal 5-19
 - spare part numbers 3-17, 3-21, 3-34, 5-19
 - specifications 6-9

E

- electrostatic discharge 4-4, 4-8
- expansion port 3 1-9
- ExpressCard assembly
 - removal 5-62
 - spare part number 3-7, 3-36, 5-62
- ExpressCard slot 1-11
- ExpressCard slot bezel
 - illustrated 3-23
 - removal 5-63
- external monitor port
 - location 1-8
 - pin assignments D-4

F

- fan/heat sink assembly
 - removal 5-79
 - spare part numbers 3-7, 3-36, 3-37, 5-79
- features 1-2
- feet, locations 5-11
- flowcharts, troubleshooting
 - no audio 2-25, 2-26
 - no network/modem connection 2-30
 - no OS loading 2-19

- no OS loading from diskette drive 2–23
- no OS loading from hard drive 2–20, 2–21, 2–22
- no OS loading from optical drive 2–24
- no power 2–12, 2–14, 2–15
- no video 2–16, 2–17
- nonfunctioning device 2–27
- nonfunctioning docking device 2–18
- nonfunctioning keyboard 2–28
- nonfunctioning pointing device 2–29
- fn** key 1–13
- front components 1–6
- function keys 1–13
- G**
- grounding equipment and methods 4–7
- H**
- hard drive
 - OS loading problems 2–20
 - precautions 4–3
 - removal 5–7
 - spare part numbers 3–11, 3–20, 3–36, 3–37, 5–7
 - specifications 6–5
- hard drive bay 1–21
- Hard Drive Bracket Kit, spare part number 3–11, 3–20, 3–36, 5–7
- hard drive bracket, removal 5–10
- hard drive cover
 - illustrated 3–23
 - removal 5–8
- Hard Drive Hardware Kit, spare part number 3–38
- HDMI port 1–9
- headphone jack
 - location 1–7
 - pin assignments D–6
- headset, spare part number 3–26, 3–28
- hinge
 - removal 5–43
 - spare part numbers 3–19, 3–33, 5–43
- hinge cover
 - removal 5–43
 - spare part number 3–19, 3–33, 5–43
- I**
- I/O address specifications 6–14
- interrupt specifications 6–12
- inverter
 - removal 5–41
 - spare part numbers 3–19, 3–31, 3–33, 5–41
- K**
- keyboard
 - removal 5–25
 - spare part numbers 3–3, 3–5, 3–34, 3–35, 5–25
 - troubleshooting 2–28

keyboard components 1–12
keypad keys 1–13

L

LED board cable,
 disconnection 5–24
left-side components 1–8
Logo Kit, spare part number
 3–26, 3–35

M

mass storage devices, spare
 part numbers 3–20
media button 1–17
memory module
 removal 5–12
 spare part numbers 3–15,
 3–34, 3–37, 3–38, 5–12
memory module compartment
 1–21
memory module compartment
 cover
 illustrated 3–23
 removal 5–13
microphone
 location 1–15
 removal 5–45
 spare part number 3–19,
 3–33, 5–45
microphone cable,
 disconnection 5–32
microphone jack
 location 1–7
 pin assignments D–6

Mini Card module
 removal 5–16
 spare part numbers 3–11,
 3–13, 3–15, 3–28, 3–29,
 3–30, 5–16
modem jack
 location 1–9
 pin assignments D–5
modem, troubleshooting 2–30
monitor port
 location 1–8
 pin assignments D–4
mouse, spare part number
 3–28

N

network jack
 location 1–9
 pin assignments D–2
network, troubleshooting 2–30
next/fast forward button 1–18
nonfunctioning device,
 troubleshooting 2–18, 2–27
num lock key 1–13
num lock light 1–15

O

optical drive
 location 1–11, 1–21
 OS loading problems 2–24
 precautions 4–3
 removal 5–19
 spare part numbers 3–17,
 3–21, 5–19
 specifications 6–7
optical drive bracket, removal
 5–21

- optical drive connector board
 - removal 5-77
 - spare part number 3-9, 3-36, 5-77

P

- packing precautions 4-5
- password clearing 1-4
- plastic parts 4-2
- Plastics Kit
 - contents 3-23
 - spare part number 3-5, 3-23, 3-35
- play/pause button 1-18
- pointing device,
 - troubleshooting 2-29
- power button 1-15
- power button board
 - removal 5-32
 - spare part number 3-3, 3-36, 5-32
- power connector 1-11
- power connector assembly
 - removal 5-70
 - spare part number 3-9, 3-36, 5-70
- power connector assembly
 - cable, disconnection 5-78
- power cord
 - set requirements E-2
 - spare part numbers 3-27, 3-28
- power light 1-6
- power management features 1-5

- power, troubleshooting 2-12
- previous/rewind button 1-18
- processor
 - removal 5-84
 - spare part numbers 3-7, 3-31, 3-37, 3-38, 5-84

R

- rear components 1-8
- remote control, spare part number 3-26, 3-29
- removal
 - preliminaries 4-1
 - procedures 5-1
- replacement
 - preliminaries 4-1
 - procedures 5-1
- RF cable, spare part number 3-26, 3-31
- RF input adapter cable, spare part number 3-26, 3-31
- right-side components 1-10
- RJ-11 (modem) jack
 - location 1-9
 - pin assignments D-5
- RJ-45 (network) jack
 - location 1-9
 - pin assignments D-2
- RTC battery
 - removal 5-15
 - spare part number 3-11, 3-31, 5-15
- Rubber Feet Kit, spare part number 3-9, 3-35

S

Screw Kit, spare part numbers
3-27, 3-35, 3-37
screw listing A-1
security cable slot 1-8
serial number 3-1, 5-2
service considerations 4-2
Setup Utility 2-1
speaker assembly
removal 5-30
spare part number 3-3,
3-36, 5-30
speaker assembly cable,
disconnection 5-32
speakers 1-15
specifications
battery 6-6
computer 6-1
display 6-3, 6-4
DVD/CD-RW Combo
Drive 6-7
DVD±RW/R and CD-RW
Combo Drive 6-9
hard drive 6-5
I/O addresses 6-14
interrupts 6-12
optical drive 6-7
system DMA 6-11
static shielding materials 4-8
stop button 1-18
S-Video-out jack
location 1-8
pin assignments D-3

switch cover

removal 5-22
spare part number 3-3,
3-35, 5-22

system board

removal 5-74
spare part numbers 3-7,
3-32, 3-37, 3-38, 5-74

system DMA 6-11

T

thermal pad, locations 5-81,
5-83

thermal paste, locations 5-81,
5-83

tools required 4-1

top components 1-14, 1-16,
1-19

top cover

removal 5-47
spare part number 3-5,
3-35, 5-47

top cover support trim

removal 5-65
spare part number 3-5,
3-35, 5-65

TouchPad 1-19

TouchPad buttons 1-19

TouchPad light 1-19

TouchPad on/off button 1-19

TouchPad vertical scroll zone
1-19

transporting precautions 4-5

troubleshooting

audio 2-25
docking device 2-18

- flowcharts 2-9
- keyboard 2-28
- modem 2-30
- network 2-30
- nonfunctioning device
2-18, 2-27
- OS loading 2-19
- overview 2-1
- pointing device 2-29
- power 2-12
- video 2-16
- TV tuner remote control, spare
part number 3-26, 3-31
- U**
- Universal Serial Bus (USB)
port
 - location 1-9, 1-11
 - pin assignments D-1
- unknown password 1-4
- USB board
 - removal 5-70
 - spare part number 3-9,
3-36, 5-70
- USB board cable, illustrated
3-24
- USB digital drive, spare part
number 3-26, 3-28
- USB infrared receiver, spare
part number 3-26, 3-31
- USB travel mouse, spare part
number 3-26, 3-28
- USB/magnetic board
 - removal 5-60
 - spare part number 3-7,
3-36, 5-60
- USB/magnetic board cable,
illustrated 3-24
- V**
- vents 1-21
- video troubleshooting 2-16
- volume mute button 1-15
- volume scroll zone 1-15
- W**
- Windows applications key
1-13
- Windows logo key 1-13
- wireless antenna
 - removal 5-44
 - spare part number 3-19,
3-33, 5-44
- wireless laser mouse, spare
part number 3-26, 3-31
- wireless light 1-7
- wireless switch 1-7
- wireless switch board
 - removal 5-53
 - spare part number 3-5,
3-36, 5-53
- workstation precautions 4-6