

External Media Cards

User Guide

© Copyright 2006 Hewlett-Packard
Development Company, L.P.

SD logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: July 2006

Document Part Number: 416611-001

Table of contents

1 Digital Media Slot cards (select models only)	
Inserting a digital card	2
Stopping or removing a digital card	3
2 ExpressCards	
Configuring an ExpressCard	5
Inserting an ExpressCard	6
Stopping or removing an ExpressCard	8
Index	9

1 Digital Media Slot cards (select models only)

Optional digital cards provide secure data storage and convenient data sharing. These cards are often used with digital media–equipped cameras and PDAs as well as with other computers.

The Digital Media Slot supports the following digital card formats:

- Secure Digital (SD) Memory Card
- MultiMediaCard (MMC)
- Secure Digital Input/Output (SD I/O)
- Memory Stick (MS)
- Memory Stick Pro (MSP)
- xD-Picture Card (XD)
- xD-Picture Card (XD) Type M



CAUTION To avoid damaging the digital card or the computer, do not insert any type of adapter into the Digital Media Slot.



NOTE Your computer may look slightly different from the illustrations in this chapter.

Inserting a digital card



CAUTION To prevent damage to the digital card connectors, use minimal force to insert a digital card.

To insert a digital card:

1. Hold the digital card label-side up, with the connectors facing the computer.
2. Gently slide the card into the Digital Media Slot until the card is seated.

You will hear a sound when the device has been detected.



NOTE The first time you insert a digital card, the “Found New Hardware” message is displayed in the notification area, at the far right of the taskbar.



Stopping or removing a digital card



CAUTION To prevent loss of information or an unresponsive system, stop the digital card before removing it.

To stop or remove a digital card:

1. Close all files and applications that are associated with the digital card.




NOTE To stop data transfer, click **Cancel** in the operating system Copying window.

2. To stop the digital card:
 - a. Double-click the **Safely Remove Hardware** icon in the notification area, at the far right of the taskbar.



NOTE To display the Safely Remove Hardware icon, click the **Show Hidden Icons** icon (< or <<) in the notification area.

- b. Click the digital card listing.
 - c. Click **Stop**.
3. To remove the digital card, press in on the digital card (1), and then remove the card from the slot (2).

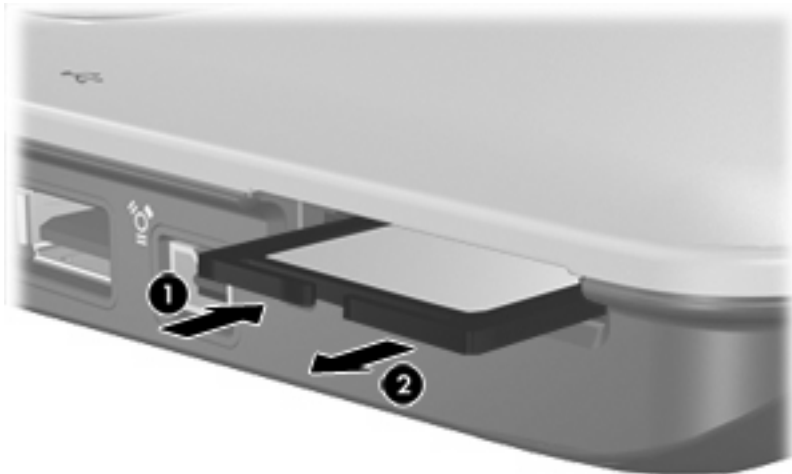

2 ExpressCards

An ExpressCard is a next-generation, high-performance PC Card, which must be inserted into the ExpressCard slot.

Like standard PC Cards, ExpressCards are designed to conform to the standard specifications of the Personal Computer Memory Card International Association (PCMCIA).



NOTE Your computer may look slightly different from the illustrations in this chapter.

Configuring an ExpressCard




CAUTION To prevent loss of support for other ExpressCards, install only the software required for the device. If you are instructed by the ExpressCard manufacturer to install device drivers:

Install only the device drivers for your operating system.

Do not install other software, such as card services, socket services, or enablers, supplied by the ExpressCard manufacturer.

Inserting an ExpressCard

 **CAUTION** To prevent damage to the computer or a PC card, do not insert a PC Card into an ExpressCard slot.

To prevent damage to the connectors:

Use minimal force to insert an ExpressCard.

Do not move or transport the computer when an ExpressCard is in use.

The ExpressCard slot may contain a protective insert. The insert must be removed before you can insert an ExpressCard.


1. To release and remove the ExpressCard insert:
 - a. Press in on the ExpressCard insert **(1)** to unlock it.
 - b. Pull the insert out of the slot **(2)**.



2. To insert an ExpressCard:
 - a. Hold the card label-side up, with the connectors facing the computer.
 - b. Gently slide the card into the ExpressCard slot until the card is seated.You will hear a sound when the device has been detected.




NOTE The first time you insert an ExpressCard, the “Found New Hardware” message is displayed in the notification area, at the far right of the taskbar.

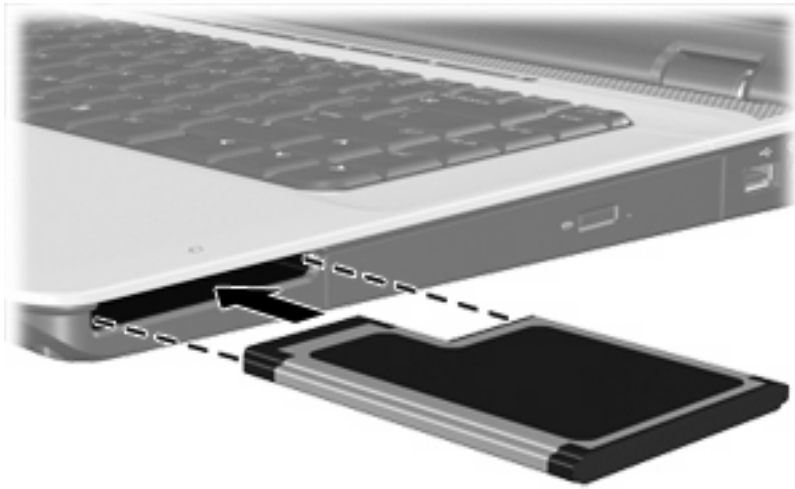

NOTE An inserted ExpressCard uses power even when idle. To conserve power, stop or remove an ExpressCard when it is not in use.

Stopping or removing an ExpressCard

 **CAUTION** To prevent loss of data or an unresponsive system, stop the ExpressCard before removing it.

To stop or remove an ExpressCard:

1. Close all programs and complete all activities that are associated with the ExpressCard.



NOTE To stop a data transfer, click **Cancel** in the operating system Copying window.

2. To stop the ExpressCard:
 - a. Double-click the **Safely Remove Hardware** icon in the notification area, at the far right of the taskbar.



NOTE To display the Safely Remove Hardware icon, click the **Show Hidden Icons** icon (< or <<) in the notification area.

- b. Click the ExpressCard listing.
 - c. Click **Stop**.
3. To release and remove the ExpressCard:
 - a. Gently press in on the ExpressCard **(1)** to unlock it.
 - b. Pull the ExpressCard out of the slot **(2)**.



Index

C

configuring ExpressCards 5

D

digital cards

- defined 1
- inserting 2
- removing 3
- stopping 3

E

ExpressCards

- configuring 5
- defined 5
- inserting 6
- removing 8
- removing insert 6
- stopping 8

