

Notebook Tour

User Guide

© Copyright 2006 Hewlett-Packard
Development Company, L.P.

Microsoft and Windows are U.S. registered
trademarks of Microsoft Corporation.
Bluetooth is a trademark owned by its
proprietor and used by Hewlett-Packard
Company under license. SD logo is a
trademark of its proprietor.

The information contained herein is subject
to change without notice. The only
warranties for HP products and services are
set forth in the express warranty statements
accompanying such products and services.
Nothing herein should be construed as
constituting an additional warranty. HP shall
not be liable for technical or editorial errors
or omissions contained herein.

First Edition: July 2006

Document Part Number: 417606-001

Table of contents

1 Components

Top components	2
TouchPad	2
Lights	3
Buttons, switches, and speakers	5
Keys	7
Hotkey quick reference	7
Front components	9
Rear components	10
Right-side components	11
Left-side components	12
Bottom components	13
Display components	14
Wireless antennae (select models only)	15
Additional hardware components	16
Labels	17

2 Specifications

Operating environment	19
Rated input power	20
Expansion port input/output signals	21

Index	23
-------------	----

1 Components

This chapter explains the hardware features of the computer.

To see a list of hardware installed in the computer:

1. Select **Start > My Computer**.
2. Under **Hard Disk Drives**, click the name of your computer hard drive.
3. In the left pane under **System Tasks**, click **View system information**.
4. Select **Hardware** tab > **Device Manager**.

 
You can also add hardware or modify device configurations using Device Manager.



NOTE Components included in the computer may vary by region and by model. The illustrations in this chapter identify the standard features included in most computer models.

Top components


TouchPad

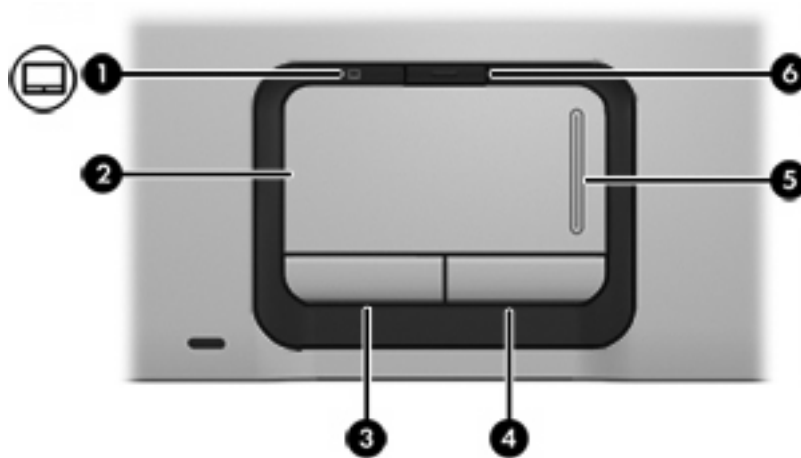

Component	Description
(1) TouchPad light	Blue: TouchPad is enabled. Amber: TouchPad is disabled.
(2) TouchPad*	Moves the pointer and selects or activates items on the screen.
(3) Left TouchPad button*	Functions like the left button on an external mouse.
(4) Right TouchPad button*	Functions like the right button on an external mouse.
(5) TouchPad scroll zone*	Allows you to scroll up or down.
(6) TouchPad on/off button	Enables/disables the TouchPad.

*This table describes factory settings. To view and change pointing device preferences, select **Start > Control Panel > Printers and Other Hardware > Mouse**.

 Lights

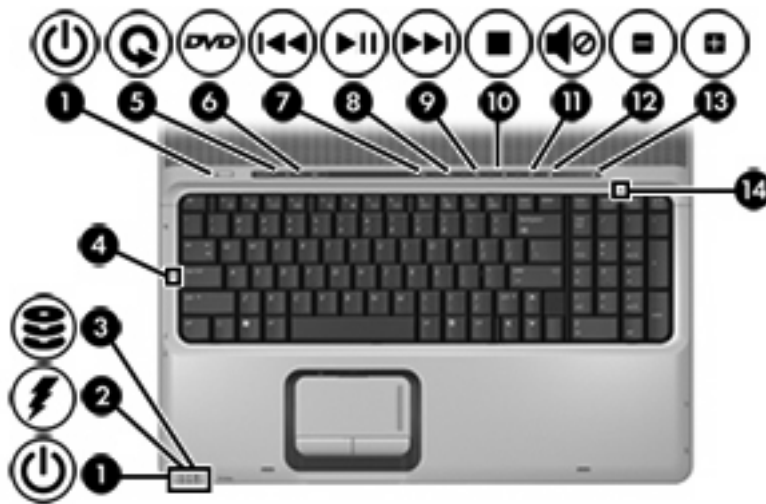



Component	Description
(1) Power lights (2)*	<p>On: The computer is on.</p> <p>Blinking: The computer is in standby.</p> <p>Off: The computer is off or in hibernation.</p>
(2) Battery light	<p>On: A battery is charging.</p> <p>Blinking: A battery that is the only available power source has reached a low-battery condition. When the battery reaches a <i>critical</i> low-battery condition, the battery light begins blinking rapidly.</p> <p>Off: If the computer is plugged into an external power source, the light is turned off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low-battery condition.</p>
(3) Drive light	Blinking: The hard drive or optical drive is being accessed.
(4) Caps lock light	On: Caps lock is on.
(5) Media button light	Blinks once when the media button is pressed.
(6) DVD button light	Blinks once when the DVD button is pressed.
(7) Previous/rewind light	Blinks once when the previous/rewind button is pressed.
(8) Play/pause light	Blinks once when the play/pause button is pressed.
(9) Next/fast forward light	Blinks once when the next/fast forward button is pressed.
(10) Stop light	Blinks once when the stop button is pressed.
(11) Volume mute light	<p>Blue: Computer sound is turned on.</p> <p>Amber: Computer sound is turned off.</p>
(12) Volume down light	Blinking: The volume scroll zone is being used to decrease speaker volume.

Component	Description
(13) Volume up light	Blinking: The volume scroll zone is being used to increase speaker volume.
(14) Num lock light	On: Num lock is on.

*The 2 power lights display the same information. The light on the power button is visible only when the computer is open. The power light on the front of the computer is visible whether the computer is open or closed.

Buttons, switches, and speakers

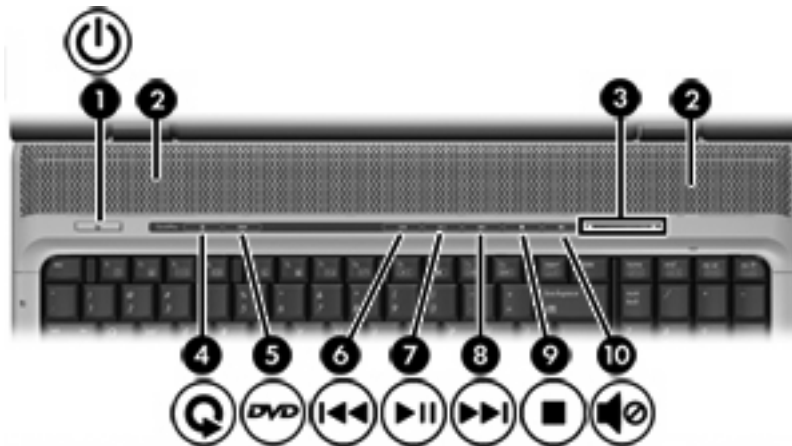


Component	Description
(1) Power button*	<p>When the computer is</p> <ul style="list-style-type: none"> • Off, press to turn on the computer. • On, press to enter hibernation. • In standby, briefly press to exit standby. • In hibernation, briefly press to exit hibernation. <p>If the computer has stopped responding and Microsoft® Windows® shutdown procedures cannot be used, press and hold the power button for at least 5 seconds to turn off the computer.</p>
(2) Speakers (2)	Produce sound.
(3) Volume scroll zone	<p>Adjusts speaker volume. Slide your finger to the left to decrease volume and to the right to increase volume. You can also tap the minus sign on the scroll zone to decrease volume, or tap the plus sign on the scroll zone to increase volume.</p>
(4) Media button	<p>If QuickPlay is not installed and the computer is</p> <ul style="list-style-type: none"> • On, opens the music program or Media menu, which allows you to select a multimedia program. • Off, does not function. • In standby, resumes from standby into Windows. <p>If QuickPlay is installed and the computer is</p> <ul style="list-style-type: none"> • On, opens the music program or Media menu, which allows you to select a multimedia program. • Off, opens the music program or the Media menu, which allows you to select a multimedia program. • In standby, resumes from standby into Windows.
	<p> NOTE The media button does not affect the procedure for restoring from hibernation.</p>

Component	Description
(5) DVD button	<p>When the computer is</p> <ul style="list-style-type: none"> On, opens the default DVD program to start a DVD in the optical drive. Off, opens QuickPlay to start a DVD in the optical drive. If the QuickPlay software is not installed, the DVD button starts Windows. In hibernation, opens QuickPlay to start a DVD in the optical drive. If QuickPlay is not installed, the computer resumes from hibernation.
(6) Previous/rewind button	<p>When a disc is playing in the optical drive:</p> <ul style="list-style-type: none"> Plays the previous track or chapter, when pressed once. Rewinds when pressed with the fn key.
(7) Play/pause button	<p>When a disc is in the optical drive and is</p> <ul style="list-style-type: none"> Not playing, plays the disc. Playing, pauses the disc.
(8) Next/fast forward button	<p>When a disc is playing in the optical drive:</p> <ul style="list-style-type: none"> Plays the next track or chapter, when pressed once. Fast forwards when pressed with the fn key.
(9) Stop button	<p>When a disc is playing in the optical drive, stops the current disc activity.</p>
(10) Volume mute button	<p>Mutes and restores speaker sound.</p>
<p>*This table describes factory settings. For information about changing factory settings, refer to the user guides located in the Help and Support Center.</p>	



NOTE Refer to the QuickPlay online Help for details on using QuickPlay.

 Keys

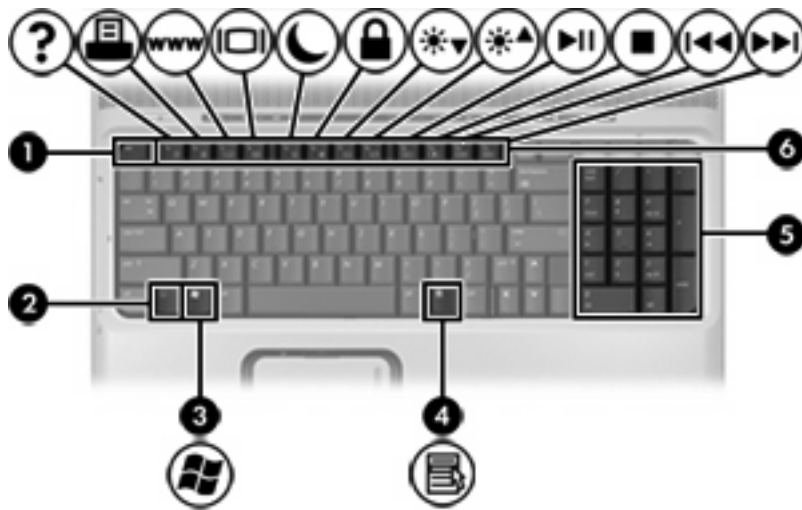

Component	Description
(1) esc key	Displays system information when pressed in combination with the fn key.
(2) fn key	Executes frequently used system functions when pressed in combination with a function key or the esc key.
(3) Windows logo key	Displays the Microsoft Windows Start menu.
(4) Windows applications key	Displays a shortcut menu for items beneath the pointer.
(5) Integrated numeric keypad keys	Can be used like the keys on an external numeric keypad.
(6) Function keys	Execute frequently used system functions when pressed in combination with the fn key.

Hotkey quick reference

To perform this function	Press
Display information.	fn+esc
Open the Help and Support Center.	fn+f1
Open the Print Options window.	fn+f2
Open a Web browser.	fn+f3
Alternate between computer display and external display.	fn+f4
Initiate standby.	fn+f5
Initiate QuickLock.	fn+f6
Decrease screen brightness.	fn+f7
Increase screen brightness.	fn+f8
Play, pause, or resume an audio CD or a DVD.	fn+f9

To perform this function	Press
Stop an audio CD or a DVD.	fn+f10
Play the previous track or section on an audio CD or a DVD.	fn+f11
Play the next track or section on an audio CD or a DVD.	fn+12

Front components





Component	Description
(1) Wireless switch	Turns the wireless feature on or off, but does not create a wireless connection.
(2) Wireless light	<p>Blue: An integrated wireless device, such as a wireless local area network (LAN) device and/or a Bluetooth® device, is turned on.</p> <p>Amber: All wireless devices are turned off.</p>
(3) Consumer infrared lens	Receives a signal from the HP Remote Control.
(4) Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
(5) Audio-out (headphone) jack	Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.
(6) Audio-out (headphone) S/PDIF jack	Provides enhanced audio performance, including surround sound and other high-end audio output.
(7) Display release latch	Opens the computer.




NOTE A wireless network must be set up in order to establish a wireless connection.

Rear components




Component	Description
Vent	<p data-bbox="798 430 1228 462">Enables airflow to cool internal components.</p> <p data-bbox="798 483 1436 630"> CAUTION To prevent overheating, do not obstruct vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or thick rugs or clothing, to block airflow.</p> <p data-bbox="798 661 1436 787"> NOTE The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>

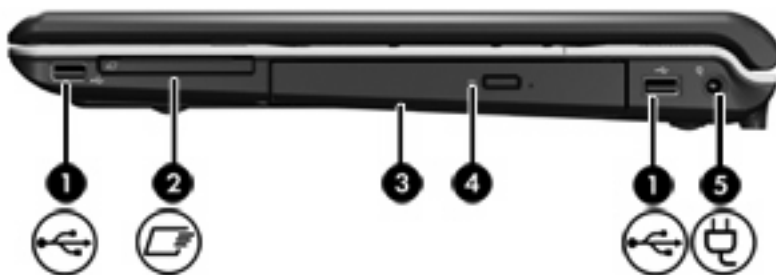 


Right-side components




Component	Description
(1) USB ports (2)	Connect optional USB devices.
(2) ExpressCard slot	Supports optional ExpressCard/54 cards.
(3) Optical drive	Reads an optical disc.
(4) Optical drive light	Blinking: The optical drive is being accessed.
(5) Power connector	Connects an AC adapter.

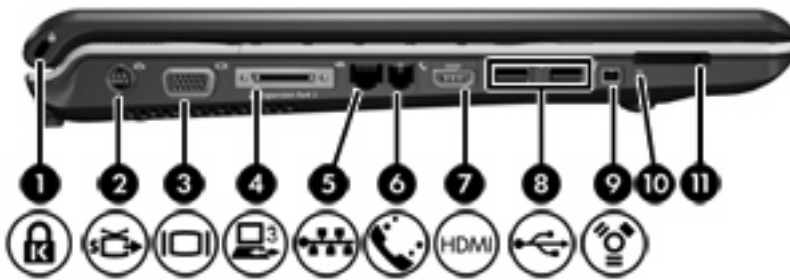 

Left-side components




Component	Description
(1) Security cable slot	Attaches an optional security cable to the computer.  NOTE The security cable is designed to act as a deterrent, but may not prevent the computer from being mishandled or stolen.
(2) S-Video-out jack	Connects an optional S-Video device such as a television, VCR, camcorder, overhead projector, or video capture card.
(3) External monitor port	Connects an external VGA monitor or projector.
(4) Expansion port 3	Connects the computer to an optional expansion product.  NOTE The computer has only one expansion port. The term <i>expansion port 3</i> describes the type of expansion port.
(5) RJ-45 (network) jack	Connects a network cable.  NOTE The RJ-45 (network) jack provides Gigabit Ethernet functionality.
(6) RJ-11 (modem) jack	Connects a modem cable.
(7) HDMI port (select models only)	Connects an optional video or audio device such as a high-definition television, set-top box, DVD player, or any compatible digital or audio component.
(8) USB ports (2)	Connect optional USB devices.
(9) 1394 port	Connects an optional IEEE 1394 or 1394a device, such as a camcorder.
(10) Digital Media Slot light	On: A digital card is being accessed.
(11) Digital Media Slot	Supports the following optional digital card formats: Secure Digital (SD) Memory Card, MultiMediaCard (MMC), Secure Digital Input/Output (SD I/O), Memory Stick (MS), Memory Stick Pro (MSP), xD-Picture Card (XD), xD-Picture Card (XD) Type M.

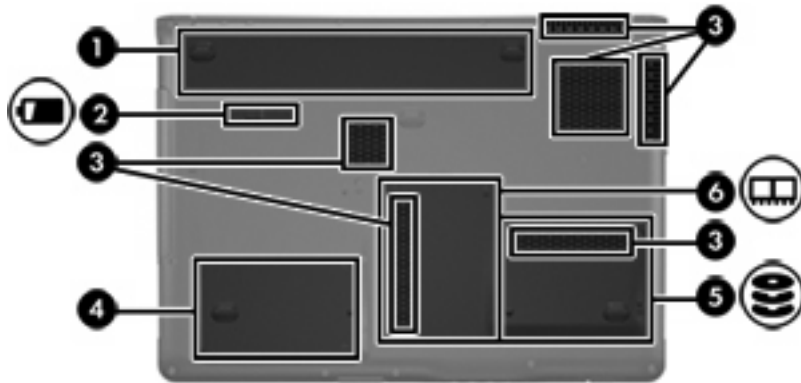 
Bottom components



Component	Description
(1) Battery bay	Holds the battery.
(2) Battery release latch	Releases the battery from the battery bay.
(3) Vents (6)	Enable airflow to cool internal components.
	<p> CAUTION To prevent overheating, do not obstruct vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or thick rugs or clothing, to block airflow.</p> <p> NOTE The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>
(4) Secondary hard drive bay	Holds an optional secondary hard drive.
(5) Primary hard drive bay	Holds the primary hard drive.
(6) Memory module compartment	Contains the memory module slots.

 Display components

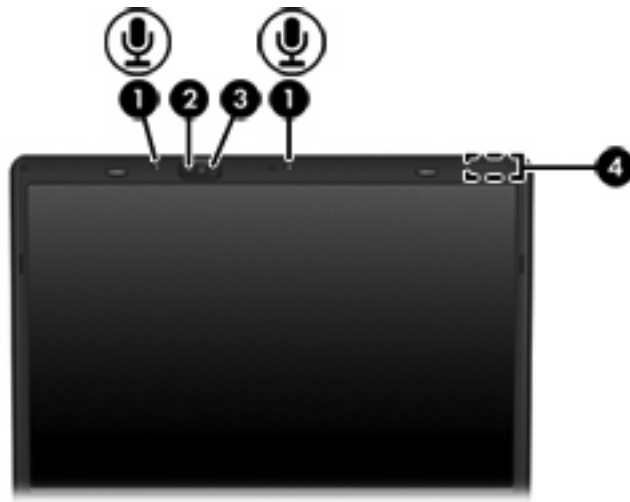

Component	Description
(1) Internal microphones (2) (select models only)	Record sound.  NOTE A microphone icon next to each microphone opening indicates that the computer has internal microphones.
(2) Integrated camera light (select models only)	On: The integrated camera is in use.
(3) Integrated camera (select models only)	Records video and captures still photos.
(4) Internal display switch	Turns off the display and initiates standby if the display is closed while the power is on.

Wireless antennae (select models only)

On select computer models, at least 2 antennae send and receive signals from one or more wireless devices. These antennae are not visible from the outside of the computer.

To see wireless regulatory notices, refer to your region's section of the *Regulatory, Safety and Environmental Notices* located in the Help and Support Center.



NOTE For optimal transmission, keep the areas immediately around the antennae free from obstructions.

Additional hardware components



Component	Description
(1) Power cord*	Connects an AC adapter to an AC outlet.
(2) AC adapter	Converts AC power to DC power.
(3) Battery*	Powers the computer when the computer is not plugged into external power.
(4) Modem cable (select models only)*	Connects the internal modem to an RJ-11 telephone jack or to a country-specific modem adapter.
(5) Country-specific modem cable adapter (select models only)	Adapts the modem cable to a non-RJ-11 telephone jack.

*Modem cables, batteries, and power cords vary in appearance by region and country.

Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

- Service tag—Provides the product brand and series name, serial number (s/n), and product number (p/n) of your computer. Have this information available when you contact Customer Care. The service tag label is affixed to the bottom of the computer.
- Microsoft Certificate of Authenticity—Contains the Microsoft® Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed to the bottom of the computer.
- Modem approval label—Provides regulatory information about the modem and lists the agency approval markings required by some of the countries in which the modem has been approved for use. You may need this information when traveling internationally. The modem approval label is affixed inside the hard drive bay.
- Wireless certification label(s) (select models only)—Provide information about optional wireless devices and the approval markings of some of the countries in which the devices have been approved for use. An optional device may be a wireless local area network (WLAN) device or an optional Bluetooth® device. If your computer model includes one or more wireless devices, one or more certification labels are included with your computer. You may need this information when traveling internationally. Wireless certification labels are affixed inside the memory module compartment.

2 Specifications

Operating environment

The operating environment information in the following table may be helpful if you plan to use or transport the computer in extreme environments.

Factor	Metric	U.S.
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	10% to 90%
Nonoperating	5% to 95%	5% to 95%
Maximum altitude (unpressurized)		
Operating (14.7 to 10.1 psia*)	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating (14.7 to 4.4 psia*)	-15 m to 12,192 m	-50 ft to 40,000 ft

*Pounds per square inch absolute (psia) is another unit of measurement for altitude.

Rated input power

The power information in this section may be helpful if you plan to travel internationally with your computer.

The computer operates on DC power, which can be supplied by an AC or a DC power source. Although the computer can be powered from a stand-alone DC power source, it should be powered only with an AC adapter or a DC power source supplied and approved by HP for the computer.

The computer is capable of accepting DC power within the following specifications.

Input power	Rating
Operating voltage	19.0 V dc
Operating current	4.74 A

This product is designed for IT power systems in Norway with phase-to-phase voltage not exceeding 240 V rms.

Expansion port input/output signals

The signal information in this section may be helpful if you plan to use an optional expansion product that connects to the expansion port 3 on the computer. (The computer has only one expansion port. The term expansion port 3 describes the type of expansion port.)

The following table identifies the input and output signals supported by the expansion port 3 on the computer.

Feature	Support
USB 2.0	Yes
Gigabit Ethernet	Yes
IEEE 1394 (4-pin port)	No
Consumer infrared (for optional remote control only)	Yes
Power inputs	65-W to 90-W maximum
Composite TV	Yes
S-Video TV	Yes
Component TV	Yes
S/PDIF audio	Yes
DVI	No
Headphone/speaker audio-out	Yes
Microphone audio-in	Yes
VGA	Yes
Power button	Yes
Volume control (up/down)	Yes
Mute/unmute status	Yes

Index

Symbols/Numerics

1394 port, identifying 12

A

AC adapter, identifying 16
altitude specifications 19
antennae 15
applications key, Windows 7
audio-in (microphone) jack,
identifying 9
audio-out (headphone) jack,
identifying 9
audio-out (headphone) S/PDIF
jack, identifying 9

B

battery
identifying 16
battery bay 13, 17
battery light, identifying 3
battery release latch,
identifying 13
bays
battery 13, 17
hard drive 13
Bluetooth label 17
buttons
DVD 6
media 5
next/fast forward 6
play/pause 6
power 5
previous/rewind 6
stop 6
TouchPad 2
TouchPad on/off 2
volume mute 6

C

cable
RJ-11 (modem) 16
camera, identifying 14
caps lock light, identifying 3
Certificate of Authenticity label 17
compartments
memory module 13
components
bottom 13
display 14
front 9
left-side 12
rear 10
right-side 11
top 2
connector, power 11
cord, power, identifying 16

D

Digital Media Slot light,
identifying 12
Digital Media Slot, identifying 12
display release latch,
identifying 9
display switch, identifying 14
drive light, identifying 3
drives
hard 13
optical 11
DVD button light, identifying 3
DVD button, identifying 6

E

environmental specifications 19
esc key, identifying 7
expansion port, identifying 12
expansion port, input/output
signals 21
ExpressCard slot, identifying 11

external monitor port,
identifying 12

F

fn key, identifying 7
function keys, identifying 7

H

hard drive bay, identifying 13
HDMI port, identifying 12
headphone (audio-out) jack 9
headphone (audio-out) S/PDIF
jack 9
hotkeys, quick reference 7
humidity specifications 19

I

IEEE 1394 port, identifying 12
infrared lens, identifying 9
integrated camera light,
identifying 14
integrated camera, identifying 14
internal display switch,
identifying 14
internal microphones,
identifying 14

J

jacks
audio-in (microphone) 9
audio-out (headphone) 9
audio-out (headphone) S/
PDIF 9
RJ-11 (modem) 12
RJ-45 (network) 12
S-Video-out 12

K

keypad keys, identifying 7

- keys
 - esc 7
 - fn 7
 - function 7
 - keypad 7
 - Windows applications 7
 - Windows logo 7

L

- labels
 - Bluetooth 17
 - Microsoft Certificate of Authenticity 17
 - modem approval 17
 - regulatory 17
 - service tag 17
 - wireless certification 17
 - WLAN 17
- latch, battery release 13
- lights
 - battery 3
 - caps lock 3
 - Digital Media Slot 12
 - drive 3
 - DVD button 3
 - integrated camera 14
 - media button 3
 - mute 3
 - next/fast forward 3
 - num lock 4
 - optical drive 11
 - play/pause 3
 - power 3
 - previous/rewind 3
 - stop 3
 - TouchPad 2
 - volume down 3
 - volume mute 3
 - volume up 4
 - wireless 9

M

- media activity buttons, identifying 6
- media activity lights, identifying 3
- media button light, identifying 3
- media button, identifying 5
- memory module compartment, identifying 13
- microphone (audio-in) jack 9

- Microsoft Certificate of Authenticity label 17
- modem approval label 17
- modem cable adapter 16
- monitor port, external 12
- mute button, identifying 6
- mute light, identifying 3

N

- next/fast forward button, identifying 6
- next/fast forward light, identifying 3
- num lock light, identifying 4

O

- operating environment specifications 19
- operating system
 - Microsoft Certificate of Authenticity label 17
 - Product Key 17
- optical drive light, identifying 11
- optical drive, identifying 11

P

- play/pause button, identifying 6
- play/pause light, identifying 3
- ports
 - 1394 12
 - expansion 12
 - external monitor 12
 - HDMI 12
 - USB 11, 12
- power button, identifying 5
- power connector, identifying 11
- power cord 16
- power lights, identifying 3
- Previous/rewind button, identifying 6
- previous/rewind light, identifying 3
- Product Key 17
- product name and number, computer 17

R

- rated input power specifications 20
- regulatory information
 - modem approval label 17

- regulatory label 17
- wireless certification labels 17
- release latch, battery 13
- RJ-11 (modem) cable 16
- RJ-11 (modem) jack, identifying 12
- RJ-45 (network) jack, identifying 12

S

- S-Video-out jack, identifying 12
- scrolling regions, TouchPad 2
- security cable slot, identifying 12
- serial number, computer 17
- service tag 17
- slots
 - Digital Media 12
 - ExpressCard 11
 - memory module 13
 - security cable 12
- speakers, identifying 5
- specifications
 - operating environment 19
 - rated input power 20
- stop button, identifying 6
- stop light, identifying 3

T

- temperature specifications 19
- TouchPad
 - buttons 2
 - identifying 2
 - scrolling regions 2
- TouchPad light, identifying 2
- TouchPad on/off button 2
- traveling with the computer
 - environmental specifications 20
 - modem approval label 17
 - wireless certification labels 17

U

- USB ports, identifying 11, 12

V

- vents, identifying 10, 13
- volume down light, identifying 3
- volume mute button, identifying 6
- volume mute light, identifying 3
- volume scroll zone, identifying 5
- volume up light, identifying 4

W

Windows applications key,
identifying 7

Windows logo key, identifying 7

wireless antennae 15

wireless certification label 17

wireless light, identifying 9

wireless switch, identifying 9

WLAN device 17

WLAN label 17

