

Notebook Tour

User Guide

© Copyright 2006 Hewlett-Packard
Development Company, L.P.

Microsoft and Windows are U.S. registered
trademarks of Microsoft Corporation.
Bluetooth is a trademark owned by its
proprietor and used by Hewlett-Packard
Company under license. SD logo is a
trademark of its proprietor.

The information contained herein is subject
to change without notice. The only
warranties for HP products and services are
set forth in the express warranty statements
accompanying such products and services.
Nothing herein should be construed as
constituting an additional warranty. HP shall
not be liable for technical or editorial errors
or omissions contained herein.

First Edition: July 2006

Document Part Number: 416621-001

Table of contents

1 Components

Top components	2
TouchPad	2
Lights	3
Buttons, switches, and speakers	4
Keys	5
Hotkey quick reference	5
Front components	7
Rear components	8
Right-side components	9
Left-side components	10
Bottom components	11
Display components	12
Wireless antennae (select models only)	13
Additional hardware components	14
Labels	15

2 Specifications

Operating environment	17
Rated input power	18
Expansion port input/output signals	19

Index	21
-------------	----

1 Components

This chapter explains the hardware features of the computer.

To see a list of hardware installed in the computer:

1. Select **Start > My Computer**.
2. Under **Hard Disk Drives**, click the name of your computer hard drive.
3. In the left pane under **System Task**, click **View system information**.
4. Select **Hardware** tab > **Device Manager**.

 
You can also add hardware or modify device configurations using Device Manager.



NOTE Components included in the computer may vary by region and by model. The illustrations in this chapter identify the standard features included in most computer models.

Top components


TouchPad

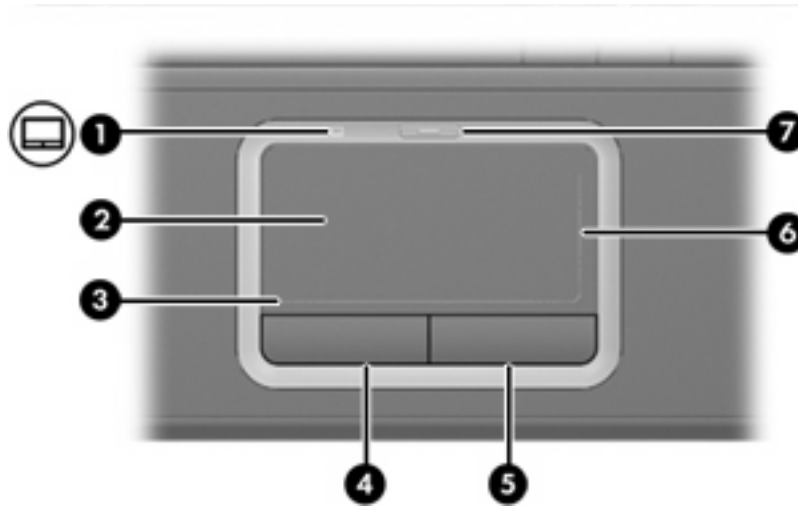

Component	Description
(1) TouchPad light	Blue: TouchPad is enabled. Amber: TouchPad is disabled.
(2) TouchPad*	Moves the pointer and selects or activates items on the screen.
(3) TouchPad horizontal scroll zone*	Allows you to scroll left or right.
(4) Left TouchPad button*	Functions like the left button on an external mouse.
(5) Right TouchPad button*	Functions like the right button on an external mouse.
(6) TouchPad vertical scroll zone*	Allows you to scroll up or down.
(7) TouchPad on/off button	Enables/disables the TouchPad.

*This table describes factory settings. To view and change pointing device preferences, select **Start > Control Panel > Printers and Other Hardware > Mouse**.

 
Lights

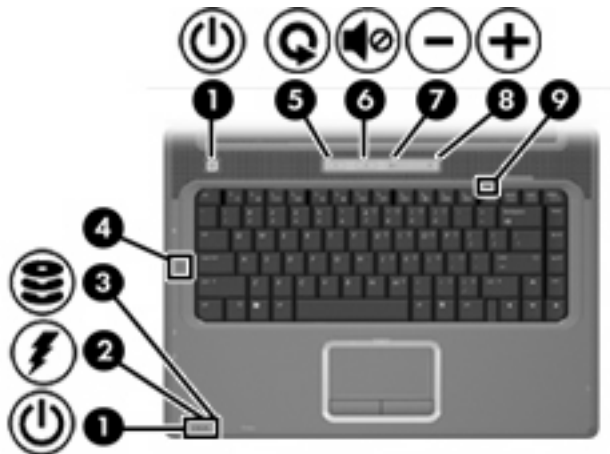


Component	Description
(1) Power lights (2)*	<p>On: The computer is on.</p> <p>Blinking: The computer is in standby.</p> <p>Off: The computer is off or in hibernation.</p>
(2) Battery light	<p>On: A battery is charging.</p> <p>Blinking: A battery that is the only available power source has reached a low-battery condition. When the battery reaches a <i>critical</i> low-battery condition, the battery light begins blinking rapidly.</p> <p>Off: If the computer is plugged into an external power source, the light is turned off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low-battery condition.</p>
(3) Drive light	Blinks when the hard drive or optical drive is being accessed.
(4) Caps lock light	On: Caps lock is on.
(5) Media button light	Blinks once when the media button has been pressed.
(6) Volume mute light	<p>Blue: Computer sound is turned on.</p> <p>Amber: Computer sound is turned off.</p>
(7) Volume down light	Blinking: The volume scroll zone is being used to decrease speaker volume.
(8) Volume up light	Blinking: The volume scroll zone is being used to increase speaker volume.
(9) Num lock light	On: Num lock is on or the embedded numeric keypad is enabled.

*The 2 power lights display the same information. The light on the power button is visible only when the computer is open. The power light on the front of the computer is visible whether the computer is open or closed.

 
Buttons, switches, and speakers

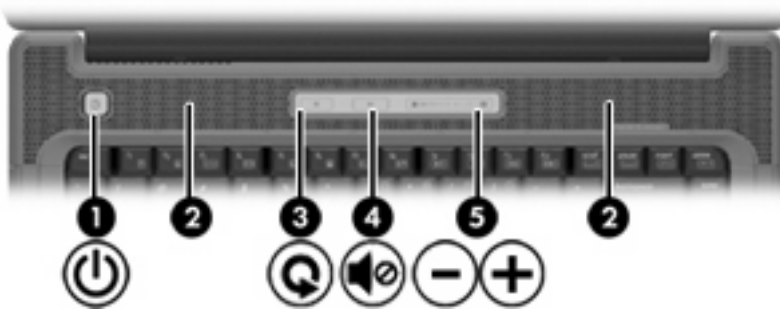

Component	Description
<p>(1) Power button*</p>	<p>When the computer is</p> <ul style="list-style-type: none"> Off, press to turn on the computer. On, press to enter hibernation. In standby, briefly press to exit standby. In hibernation, briefly press to exit hibernation. <p>If the computer has stopped responding and Microsoft® Windows® shutdown procedures cannot be used, press and hold the power button for at least 5 seconds to turn off the computer.</p>
<p>(2) Speakers (2)</p>	<p>Produce sound.</p>
<p>(3) Media button</p>	<p>If QuickPlay is not installed and the computer is</p> <ul style="list-style-type: none"> On, opens the music program or Media menu, which allows you to select a multimedia program. Off, does not function. In standby, resumes from standby into Windows. <p>If QuickPlay is installed and the computer is</p> <ul style="list-style-type: none"> On, opens the music program or Media menu, which allows you to select a multimedia program. Off, opens the music program or the Media menu, which allows you to select a multimedia program. In standby, resumes from standby into Windows. <p> NOTE The media button does not affect the procedure for restoring from hibernation.</p>
<p>(4) Volume mute button</p>	<p>Mutes and restores speaker sound.</p>
<p>(5) Volume scroll zone</p>	<p>Adjusts speaker volume. Slide your finger to the left to decrease volume and to the right to increase volume. You can also tap the minus sign on the scroll zone to decrease volume, or you can tap the plus sign on the scroll zone to increase volume.</p>

*This table describes factory settings. For information about changing factory settings, refer to the user guides located in the Help and Support Center.

 Keys

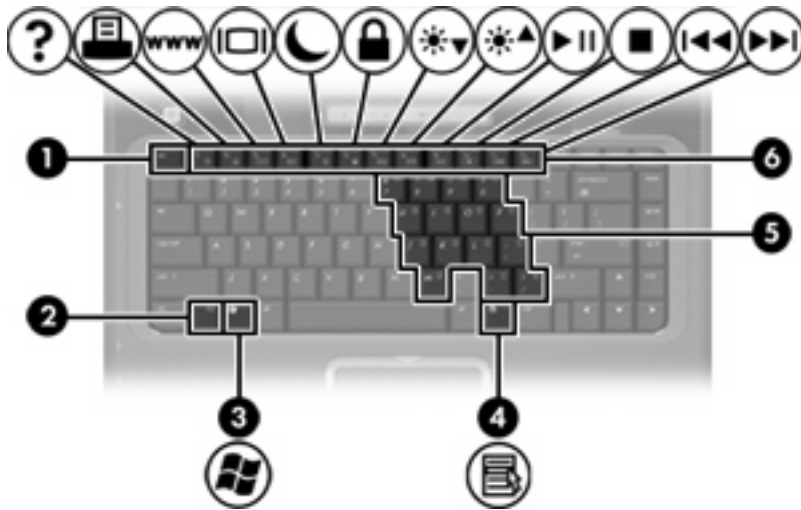


Component	Description
(1) esc key	Displays system information when pressed in combination with the fn key.
(2) fn key	Executes frequently used system functions when pressed in combination with a function key or the esc key.
(3) Windows logo key	Displays the Microsoft Windows Start menu.
(4) Windows applications key	Displays a shortcut menu for items beneath the pointer.
(5) Embedded numeric keypad keys	Can be used like the keys on an external numeric keypad.
(6) Function keys	Execute frequently used system functions when pressed in combination with the fn key.

Hotkey quick reference

To perform this function	Press
Display information.	fn+esc
Open the Help and Support Center.	fn+f1
Open the Print Options window.	fn+f2
Open a Web browser.	fn+f3
Alternate between computer display and external display.	fn+f4
Initiate standby.	fn+f5
Initiate QuickLock.	fn+f6
Decrease screen brightness.	fn+f7
Increase screen brightness.	fn+f8
Play, pause, or resume an audio CD or a DVD.	fn+f9

To perform this function	Press
Stop an audio CD or a DVD.	fn+f10
Play the previous track or section on an audio CD or a DVD.	fn+f11
Play the next track or section on an audio CD or a DVD.	fn+12

 Front components

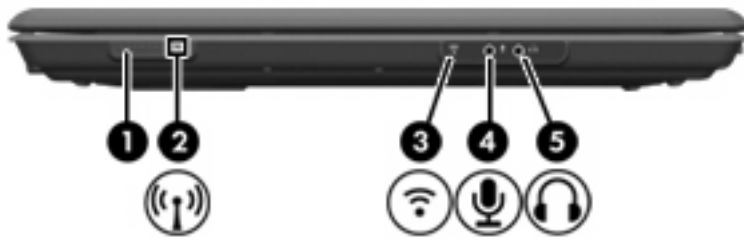



Component	Description
(1) Wireless switch	Turns the wireless feature on or off, but does not create a wireless connection.
(2) Wireless light	<p>Blue: An integrated wireless device, such as a wireless local area network (LAN) device and/or a Bluetooth® device, is turned on.</p> <p>Amber: All wireless devices are turned off.</p>
(3) Consumer infrared lens (select models only)	Receives a signal from the HP Remote Control.
(4) Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
(5) Audio-out (headphone) jack	Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.




NOTE A wireless network must be set up in order to establish a wireless connection.

Rear components




Component	Description
Vent	<p data-bbox="810 457 1230 485">Enables airflow to cool internal components.</p> <p data-bbox="810 512 1437 653"> CAUTION To prevent overheating, do not obstruct vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or thick rugs or clothing, to block airflow.</p> <p data-bbox="810 688 1437 800"> NOTE The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>

 
Right-side components

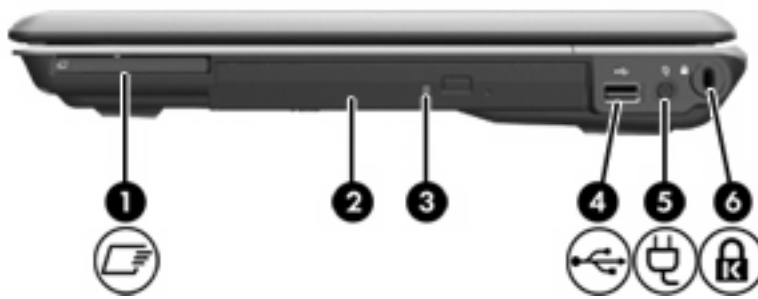

Component	Description
(1) ExpressCard slot	Supports optional ExpressCard/54 cards.
(2) Optical drive	Reads an optical disc.
(3) Optical drive light	Blinking: The optical drive is being accessed.
(4) USB port (select models only)	Connects an optional USB device.
(5) Power connector	Connects an AC adapter.
(6) Security cable slot	Attaches an optional security cable to the computer.


 **NOTE** The security cable is designed to act as a deterrent, but may not prevent the computer from being mishandled or stolen.

 Left-side components

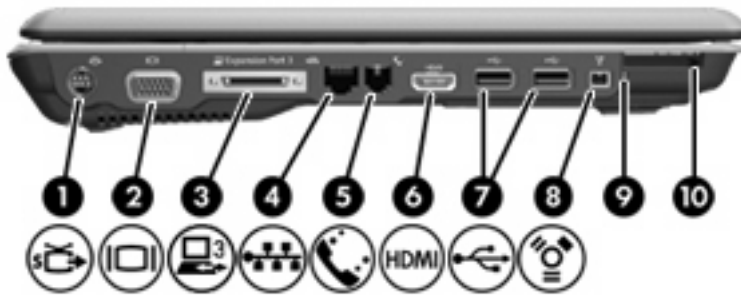

Component	Description
(1) S-Video-out jack	Connects an optional S-Video device such as a television, VCR, camcorder, overhead projector, or video capture card.
(2) External monitor port	Connects an external VGA monitor or projector.
(3) Expansion port 3	Connects the computer to an optional expansion product. <div style="display: flex; align-items: center;"> <p>NOTE The computer has only one expansion port. The term <i>expansion port 3</i> describes the type of expansion port.</p> </div>
(4) RJ-45 (network) jack	Connects a network cable.
(5) RJ-11 (modem) jack	Connects a modem cable.
(6) HDMI port (select models only)	Connects an optional audio or video device, such as a high-definition television, set-top box, DVD player, or any compatible digital or audio device.
(7) USB ports (2)	Connect optional USB devices.
(8) 1394 port (select models only)	Connects an optional IEEE 1394 or 1394a device, such as a camcorder.
(9) Memory Reader light (select models only)	On: A digital card is being accessed.
(10) Memory Reader (select models only)	Supports the following optional digital card formats: Secure Digital (SD) Memory Card, MultiMediaCard (MMC), Secure Digital Input/Output (SD I/O), Memory Stick (MS), Memory Stick Pro (MSP), xD-Picture Card (XD), xD-Picture Card (XD) Type M.

 
Bottom components

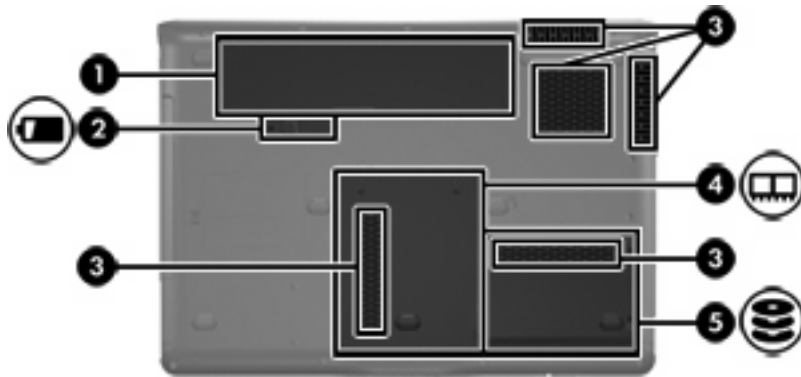

Component	Description
(1) Battery bay	Holds the battery.
(2) Battery release latch	Releases the battery from the battery bay.
(3) Vents (5)	Enable airflow to cool internal components.
	<p>CAUTION To prevent overheating, do not obstruct vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or thick rugs or clothing, to block airflow.</p> <p>NOTE The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>
(4) Memory module compartment	Contains the memory module slots.
(5) Hard drive bay	Holds the hard drive.

Display components



Component	Description
(1) Internal microphones (2) (select models only)	Record sound.  NOTE If there is a microphone icon next to each microphone opening, your computer has internal microphones.
(2) Internal display switch	Turns off the display and initiates standby if the display is closed while the power is turned on.

Wireless antennae (select models only)

On select computer models, at least 2 antennae send and receive signals from one or more wireless devices. These antennae are not visible from the outside of the computer.

To see wireless regulatory notices, refer to your region's section of the *Regulatory, Safety and Environmental Notices* located in the Help and Support Center.



NOTE For optimal transmission, keep the areas immediately around the antennae free from obstructions.

Additional hardware components



Component	Description
(1) Power cord*	Connects an AC adapter to an AC outlet.
(2) AC adapter	Converts AC power to DC power.
(3) Battery*	Powers the computer when the computer is not plugged into external power.
(4) Modem cable* (select models only)	Connects the internal modem to an RJ-11 telephone jack or to a country-specific modem adapter.
(5) Country-specific modem cable adapter (select models only)	Adapts the modem cable to a non-RJ-11 telephone jack.

*Modem cables, battery packs, and power cords vary in appearance by region and country.

Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

- Service tag—Provides the product brand and series name, serial number (s/n), and product number (p/n) of your computer. Have this information available when you contact Customer Care. The service tag label is affixed to the bottom of the computer.
- Microsoft Certificate of Authenticity—Contains the Microsoft® Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed to the bottom of the computer.
- Modem approval label—Provides regulatory information about the modem and lists the agency approval markings required by some of the countries in which the modem has been approved for use. You may need this information when traveling internationally. The modem approval label is affixed inside the hard drive bay.
- Wireless certification label(s) (select models only)—Provide information about optional wireless devices and the approval markings of some of the countries in which the devices have been approved for use. An optional device may be a wireless local area network (WLAN) device or an optional Bluetooth® device. If your computer model includes one or more wireless devices, one or more certification labels are included with your computer. You may need this information when traveling internationally. Wireless certification labels are affixed to the bottom of the computer.

2 Specifications

Operating environment

The operating environment information in the following table may be helpful if you plan to use or transport the computer in extreme environments.

Factor	Metric	U.S.
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	10% to 90%
Nonoperating	5% to 95%	5% to 95%
Maximum altitude (unpressurized)		
Operating (14.7 to 10.1 psia*)	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating (14.7 to 4.4 psia*)	-15 m to 12,192 m	-50 ft to 40,000 ft

*Pounds per square inch absolute (psia) is another unit of measurement for altitude.

Rated input power

The power information in this section may be helpful if you plan to travel internationally with your computer.

The computer operates on DC power, which can be supplied by an AC or a DC power source. Although the computer can be powered from a stand-alone DC power source, it should be powered only with an AC adapter or a DC power source supplied and approved by HP for the computer.

The computer is capable of accepting DC power within the following specifications.

Input power	Rating
Operating voltage	18.5 V dc — 19.0 V dc
Operating current	3.5 A or 4.74 A

This product is designed for IT power systems in Norway with phase-to-phase voltage not exceeding 240 V rms.

Expansion port input/output signals

The signal information in this section may be helpful if you plan to use an optional expansion product that connects to the expansion port 3 on the computer. (The computer has only one expansion port. The term expansion port 3 describes the type of expansion port.)

The following table identifies the input and output signals supported by the expansion port 3 on the computer.

Feature	Support
USB 2.0	Yes
Gigabit Ethernet	Yes
IEEE 1394 (4-pin port)	No
Consumer infrared (for optional remote control only) (select models only)	Yes
Power inputs	65-W to 90-W maximum
Composite TV	Yes
S-Video TV	Yes
Component TV	Yes
DVI	No
Headphone/speaker audio-out	Yes
Microphone audio-in	Yes
VGA	Yes
Power button	Yes
Volume control (up/down)	Yes
Mute/unmute	Yes

Index

Symbols/Numerics

1394 port, identifying 10

A

AC adapter, identifying 14
altitude specifications 17
antennae 13
applications key, Windows 5
audio-in (microphone) jack,
identifying 7
audio-out (headphone) jack,
identifying 7

B

battery bay 11, 15
battery light, identifying 3
battery pack
identifying 14
battery release latch,
identifying 11
bays
battery 11, 15
hard drive 11
Bluetooth label 15
buttons
media 4
power 4
TouchPad 2
TouchPad on/off 2
volume mute 4

C

cable
RJ-11 (modem) 14
caps lock light, identifying 3
Certificate of Authenticity label 15
compartments
memory module 11
components
bottom 11

display 12

front 7

left-side 10

rear 8

right-side 9

top 2

connector, power 9

cord, power, identifying 14

D

display switch, identifying 12

drive light, identifying 3

drives

hard 11

optical 9

E

environmental specifications 17

esc key, identifying 5

expansion port, identifying 10

expansion port; input/output
signals 19

ExpressCard slot, identifying 9

external monitor port,
identifying 10

F

fn key, identifying 5

function keys, identifying 5

H

hard drive bay, identifying 11

HDMI port, identifying 10

headphone (audio-out) jack 7

hotkeys, quick reference 5

humidity specifications 17

I

IEEE 1394 port, identifying 10

infrared lens, identifying 7

internal display switch,

identifying 12

internal microphones,

identifying 12

J

jacks

audio-in (microphone) 7

audio-out (headphone) 7

RJ-11 (modem) 10

RJ-45 (network) 10

S-Video-out 10

K

keypad keys, identifying 5

keys

esc 5

fn 5

function 5

keypad 5

Windows applications 5

Windows logo 5

L

labels

Bluetooth 15

Microsoft Certificate of
Authenticity 15

modem approval 15

regulatory 15

service tag 15

wireless certification 15

WLAN 15

latch, battery release 11

lights

battery 3

caps lock 3

drive 3

media button 3

Memory Reader 10

- mute 3
- num lock 3
- optical drive 9
- power 3
- TouchPad 2
- volume down 3
- volume mute 3
- volume up 3
- wireless 7

M

- media button light, identifying 3
- media button, identifying 4
- memory module compartment, identifying 11
- Memory Reader light, identifying 10
- Memory Reader, identifying 10
- microphone (audio-in) jack 7
- Microsoft Certificate of Authenticity label 15
- modem approval label 15
- modem cable adapter 14
- monitor port, external 10
- mute button, identifying 4
- mute light, identifying 3

N

- num lock light, identifying 3

O

- operating environment specifications 17
- operating system
 - Microsoft Certificate of Authenticity label 15
 - Product Key 15
- optical drive light, identifying 9
- optical drive, identifying 9

P

- ports
 - 1394 10
 - expansion 10
 - external monitor 10
 - HDMI 10
 - USB 9, 10
- power button, identifying 4
- power connector, identifying 9
- power cord 14
- power lights, identifying 3

- Product Key 15
- product name and number, computer 15

R

- rated input power specifications 18
- regulatory information
 - modem approval label 15
 - regulatory label 15
 - wireless certification labels 15
- release latch, battery 11
- RJ-11 (modem) cable 14
- RJ-11 (modem) jack, identifying 10
- RJ-45 (network) jack, identifying 10

S

- S-Video-out jack, identifying 10
- scrolling regions, TouchPad 2
- security cable slot, identifying 9
- serial number, computer 15
- service tag 15
- slots
 - ExpressCard 9
 - memory module 11
 - Memory Reader 10
 - security cable 9
- speakers, identifying 4
- specifications
 - operating environment 17
 - rated input power 18

T

- temperature specifications 17
- TouchPad
 - buttons 2
 - identifying 2
 - scrolling regions 2
- TouchPad light, identifying 2
- TouchPad on/off button 2
- traveling with the computer
 - environmental specifications 18
 - modem approval label 15
 - wireless certification labels 15

U

- USB ports, identifying 9, 10

V

- vents, identifying 8, 11
- volume down light, identifying 3
- volume mute button, identifying 4
- volume mute light, identifying 3
- volume scroll zone, identifying 4
- volume up light, identifying 3

W

- Windows applications key, identifying 5
- Windows logo key, identifying 5
- wireless antennae 13
- wireless certification label 15
- wireless light, identifying 7
- wireless switch, identifying 7
- WLAN device 15
- WLAN label 15

