

User Guide

© Copyright 2006 Hewlett-Packard Development Company, L.P.

Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation. Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. Intel is a trademark or registered trademark of Intel Corporation or its subsidiaries in the United States and other countries. Java is a U.S. trademark of Sun Microsystems, Inc.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: March 2006

Document Part Number: 406808-001

## **Table of contents**

#### 1 Computer Setup access

#### 2 Computer Setup defaults

#### 3 Computer Setup menus

	File menu	. 5
	Security menu	. 6
	Diagnostics menu	
	System Configuration menu	. 7
ndex		9

ENWW

iv ENWW

## 1 Computer Setup access

Computer Setup is a preinstalled, ROM-based utility that can be used even when the operating system is not working or will not load.



**NOTE** Some of the Computer Setup menu items listed in this guide may not be supported by your computer.

**NOTE** Pointing devices are not supported in Computer Setup. You must use the keyboard to navigate and make selections.

**NOTE** An external keyboard connected by USB can be used with Computer Setup only if USB legacy support is enabled.

The information and settings in Computer Setup are accessed from the File, Security, Diagnostics, and System Configuration menus.

1. Open Computer Setup by turning on or restarting the computer, and then pressing f10 while the "F10 = ROM Based Setup" message is displayed in the lower-left corner of the screen.

In Computer Setup, the following shortcuts are available:

- To change the language, press f2.
- To view navigation information, press f1.
- To close open dialog boxes and return to the main Computer Setup screen esc.
- 2. Select the Files, Security, Diagnostics, or System Configuration menu.
- 3. To exit Computer Setup, choose one of the following methods:
  - To exit Computer Setup without saving your preferences, use the arrow keys to select File > Ignore Changes and Exit. Then follow the instructions on the screen.
  - To save your preferences and exit Computer Setup, use the arrow keys to select File > Save Changes and Exit. Then follow the instructions on the screen.

Your preferences go into effect when the computer restarts.

ENWW 1

# 2 Computer Setup defaults

To return all settings in Computer Setup to the values that were set at the factory:

1. Open Computer Setup by turning on or restarting the computer, and then pressing f10 while the "F10 = ROM Based Setup" message is displayed in the lower-left corner of the screen.

In Computer Setup, the following shortcuts are available:

- To change the language, press f2.
- To view navigation information, press f1.
- To close open dialog boxes and return to the main Computer Setup screen esc.
- 2. Use the arrow keys to select **File > Restore defaults**, and then press enter.
- 3. When the confirmation dialog box opens, press f10.
- 4. Select the **Restore defaults** check box, and then press enter.
- 5. To confirm the restoration, press f10.
- 6. To save your preferences and exit Computer Setup, use the arrow keys to select File > Save Changes and Exit. Then follow the instructions on the screen.

Your preferences go into effect when the computer restarts.



**NOTE** Your password and security settings are not changed when you restore the factory default settings.

ENWW 3

# 3 Computer Setup menus

The menu tables in this section provide an overview of Computer Setup options.



**NOTE** Some of the Computer Setup menu items listed in this chapter may not be supported by your computer.

#### File menu

Select	To Do This	
System information	View identification information for the computer and the battery packs in the system.	
	<ul> <li>View specification information for the processor, cache and memory size, system ROM, video revision, and keyboard controller version.</li> </ul>	
Restore defaults	Replace the configuration settings in Computer Setu with factory default settings. (Password and security settings are not changed when you restore the factor default settings.)	
Ignore changes and exit	Cancel changes entered during the current session. Then exit and restart the computer.	
Save changes and exit	Save changes entered during the current session. Then exit and restart the computer. Your changes go into effect when the computer restarts.	

ENWW File menu

5

# **Security menu**

Select	To Do This		
Setup password	Enter, change, or delete a setup password.		
Power-On password	Enter, change, or delete a power-on password.		
Password options	Enable/disable stringent security.		
	<ul> <li>Enable/disable password requirement on computer restart.</li> </ul>		
DriveLock passwords	<ul> <li>Enable/disable DriveLock on any computer hard drive and optional MultiBay hard drives.</li> </ul>		
	Change a DriveLock user or master password.		
	NOTE DriveLock settings are accessible only when you enter Computer Setup by turning on (not restarting) the computer.		
Smart Card security	Enable/disable support for smart card and Java™ Card power-on authentication.		
	NOTE Power-on authentication for smart cards is supported only on computers with optional smart card readers.		
TPM Embedded Security	Enable/disable support for TPM (Trusted Platform Module) Embedded Security, which protects the computer from unauthorized access to owner functions in Embedded Security for ProtectTools. For more information, refer to the <i>ProtectTools Security Manager Reference Guide</i> located in the Help and Support Center, or refer to Credential Manager for ProtectTools online Help.		
System IDs	Enter user-defined computer asset and ownership tag.		
Disk Sanitizer	Run Disk Sanitizer to destroy all existing data on the primary hard drive. The following options are available:		
	Fast: Runs the Disk Sanitizer erase cycle once.		
	<ul> <li>Optimum: Runs the Disk Sanitizer erase cycle 3 times.</li> </ul>		
	<ul> <li>Custom: Allows you to select the desired number of Disk Sanitizer erase cycles from a list.</li> </ul>		
	CAUTION If you run Disk Sanitizer, the data on the primary hard drive is destroyed permanently.		

### **Diagnostics menu**

Select	To Do This	
Memory Check	Run a comprehensive check on system memory.	
Hard Drive Self-Test options	Run a comprehensive self-test on any hard drive in the system or on any optional MultiBay hard drive.	

# **System Configuration menu**

Select	To Do This
Language (or press f2)	Change the Computer Setup language.
Boot options	• Set f9, f10, and f12 delay when starting up.
	Enable/disable CD-ROM boot.
	Enable/disable Floppy boot.
	<ul> <li>Enable/disable internal network adapter boot and set the boot mode (PXE or RPL).</li> </ul>
	<ul> <li>Enable/disable MultiBoot, which sets a boot order that can include most boot devices in the system.</li> </ul>
	Set the boot order.
Device configurations	Swap the functions of the fn key and left ctrl key.
	<ul> <li>Enable/disable multiple standard pointing devices at startup. (To set the computer to support only a single, usually nonstandard, pointing device at startup, select <b>Disable</b>.)</li> </ul>
	<ul> <li>Enable/disable USB legacy support. When enabled, USB legacy support allows</li> </ul>
	<ul> <li>A USB keyboard, mouse, and hub to work in Computer Setup even when a Microsoft® Windows® operating system is not loaded.</li> </ul>
	<ul> <li>The computer to start from bootable USB devices, including a hard drive, diskette drive diskette, or optical drive connected by a USB port to the computer or to an optional docking device (select models only).</li> </ul>
	Automatic/disable Intel SpeedStep Technology.
	<ul> <li>Select a parallel port mode: EPP (Enhanced Parallel Port), standard, bidirectional, or ECP (Enhanced Capabilities Port).</li> </ul>
	<ul> <li>Enable/disable BIOS DMA data transfers (select models only)</li> </ul>
	Enable/disable the system fan when connected to an AC outlet.

ENWW Diagnostics menu 7

Select	To Do This			
	•	Enable/disable Intel or AMD PSAE Execution Disable. When enabled, the processor can disable some virus code execution, which helps to improve computer security.		
	•	Enable/disable LAN Power Save. When enabled, saves power by turning off the LAN when not in use.		
	•	Enable/disable SATA Native Support.		
	•	Enable/disable Dual Core CPU.		
	•	Enable/disable Secondary Battery Fast Charge.		
Built-In Device Options	•	Enable/disable embedded WWAN Device Radio.		
	•	Enable/disable embedded WLAN Device Radio.		
	•	Enable/disable embedded Bluetooth® Device Radio.		
	•	Enable/disable LAN/WLAN Switching. When enabled, switches to a WLAN when a LAN is either unavailable or disconnected.		
	•	Enable/disable Wake on LAN from Off.		
	•	Enable/disable the ambient light sensor.		
Port Options	•	Enable/disable the serial port.		
	•	Enable/disable the parallel port.		
• Enable		Enable/disable the flash media reader.		
	•	Enable/disable the USB port.		
		CAUTION Disabling the USB port also disables MultiBay devices and ExpressCard devices on the advanced port replicator.		
	•	Enable/disable the 1394 port.		
	•	Enable/disable the cardbus slot.		
	•	Enable/disable the ExpressCard slot.		
	•	Enable/disable the infrared port.		

## Index

B	pointing devices 7
boot options 7 boot order 7	R restore defaults 3
C Computer Setup    accessing 1    Diagnostics menu 7    File menu 5    restoring defaults 3    Security menu 6    System Configuration menu 7  D Diagnostics menu 7 drives, boot order 7  E Execution Disable 8	S Security menu 6 setup utility accessing 1 Diagnostics menu 7 File menu 5 restoring defaults 3 Security menu 6 System Configuration menu 7 SpeedStep Technology 7 System Configuration menu 7 system fan 7 system information 5
File menu 5	USB legacy support 7
H hard drive test 7	
Intel SpeedStep 7	
L LAN Power Save 8 language, changing in Computer Setup 7	
M memory check 7	
parallel port mode 7 passwords 6	

ENWW Index 9

10 Index ENWW

