

## Remote Control (Select Models Only)

---

User Guide

© Copyright 2007 Hewlett-Packard  
Development Company, L.P.

Windows and Windows Vista are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: January 2007

Document part Number: 437363-001

# Table of contents

<b>1 Remote control component functions</b>	
<b>2 Button quick reference</b>	
<b>3 Inserting the battery</b>	
<b>4 Troubleshooting the remote control</b>	
<b>5 Regulatory Notices</b>	
European Union Notices .....	8
Battery disposal .....	9
<b>Index .....</b>	<b>10</b>



# 1 Remote control component functions

The infrared lens on the remote control links the remote control to the computer. The link requires a line-of-sight path between the infrared lens on the remote control and the infrared lens on the computer.

Things to remember:

- The remote control operates within Windows® and QuickPlay (select computer models only). Each button responds according to which application is active.



---

**NOTE** For information on using QuickPlay, refer to the QuickPlay online Help.









---












- Some remote control buttons perform the same functions as computer buttons. For example, the power button on the remote control and the power button on the computer have the same functions and can be used interchangeably.
- Some remote control buttons perform the same functions as computer hotkeys. Refer to the computer user guide for information on supported hotkeys.
- Other remote control buttons provide functions that are not duplicated by computer buttons or preset key combinations.









## 2 Button quick reference

This section provides information on the button functions of the remote control.

Button	Function in Windows	Function in QuickPlay (select models only)
	<ul style="list-style-type: none"> <li>When the computer is off, press the button to start Windows.</li> <li>When the computer is on, press the button to emulate the computer power button. Refer to the computer user guide for information.</li> <li>When the computer is in the Sleep state, briefly press the button to exit Sleep.</li> <li>When the computer is in Hibernation, briefly press the button to exit Hibernation.</li> </ul>	Press the button to shut down the computer.
	Press the button to switch the computer image between the computer display and an external display.	Press the button to switch the computer image between the computer display and an external display.
	Launches the QuickPlay program (for models with QuickPlay preinstalled). Launches the DVDPlay program (for models with DVDPlay preinstalled).	Press the button to open the QuickPlay menu.
	Press the button to launch the DVD playback feature of the QuickPlay program (select computer models only).	<ul style="list-style-type: none"> <li>If a DVD is playing, press the button to open the DVD disc menu.</li> <li>If a DVD is not playing, press the button to open the QuickPlay DVD player.</li> </ul>
	<p>If the computer uses Windows Vista™ Premium or Windows Vista Ultimate, press the button to open the Media Center main menu. The Windows Media Center button has no function with other operating systems.</p> <p> <b>NOTE</b> Refer to the label on the bottom of the computer to determine the operating system.</p>	<p>If the computer uses Windows Vista Premium or Windows Vista Ultimate, press the button to open the Media Center main menu. The Windows Media Center button has no function with other operating systems.</p> <p> <b>NOTE</b> Refer to the label on the bottom of the computer to determine the operating system.</p>
	<ul style="list-style-type: none"> <li>Press to emulate the <b>pg up</b> key on a keyboard.</li> <li>Press to change channels in ascending order.</li> </ul>	<ul style="list-style-type: none"> <li>Press to emulate the <b>pg up</b> key on a keyboard.</li> <li>Press to change channels in ascending order.</li> </ul>


Button	Function in Windows	Function in QuickPlay (select models only)
Stop 	Press the button to stop the current media activity, such as playing, rewinding, etc.	Press the button to stop the current media activity, such as playing, rewinding, etc.
Rewind 	Press the button to rewind the selected media.	Press the button to rewind the selected media.
Play/Pause 	<ul style="list-style-type: none"> <li>When media is not playing, press the button to play the media.</li> <li>When media is playing, press the button to pause the media.</li> </ul>	<ul style="list-style-type: none"> <li>When media is not playing, press the button to play the media.</li> <li>When media is playing, press the button to pause the media.</li> </ul>
Fast Forward 	Press the button to fast forward the selected media.	Press the button to fast forward the selected media.
Channel/ Page Down 	<ul style="list-style-type: none"> <li>Press to emulate the <b>pg dn</b> key on a keyboard.</li> <li>Press to change channels in descending order.</li> </ul>	<ul style="list-style-type: none"> <li>Press to emulate the <b>pg dn</b> key on a keyboard.</li> <li>Press to change channels in descending order.</li> </ul>
Previous 	Press the button to go back to the previous track or chapter.	Press the button to go back to the previous track or chapter.
Up 	Navigation. Press the button to scroll up.	Navigation. Press the button to scroll up.
Next 	Press the button to go to the next track or chapter.	Press the button to go to the next track or chapter.
Left 	Navigation. Press the button to scroll left.	Navigation. Press the button to scroll left.
Ok 	Navigation. Press the button to select an item on the screen.	Navigation. Press the button to select an item on the screen.
Right 	Navigation. Press the button to scroll right.	Navigation. Press the button to scroll right.

Button	Function in Windows	Function in QuickPlay (select models only)
Back 	Press the button to emulate the “back” function of the backspace key command in the active application.	<ul style="list-style-type: none"> <li>When in music mode, press the button to move up one directory level in the My Music window.</li> <li>When in DVD mode, this button is inactive.</li> </ul>
Down 	Navigation. Press the button to scroll down.	Navigation. Press the button to scroll down.
Information 	Press to display system information.	Press to display information and settings for QuickPlay programs.
Volume Down 	Press the button to decrease system volume.	Press the button to decrease system volume.
Mute 	<ul style="list-style-type: none"> <li>Press the button to mute system volume.</li> <li>If the volume is muted, press the button to restore system volume.</li> </ul>	<ul style="list-style-type: none"> <li>Press the button to mute system volume.</li> <li>If the volume is muted, press the button to restore system volume.</li> </ul>
Volume Up 	Press the button to increase system volume.	Press the button to increase system volume.

\* If the computer has been set up to require a logon password, you may be asked to log on to Windows. QuickPlay or DVDPlay launches after you log on. Refer to the QuickPlay or the DVD Play online Help for more information.




## 3 Inserting the battery

 **WARNING!** There is risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.


To insert the battery into the remote control, follow these instructions:

1. On the back of the remote control, lift the battery compartment cover (1) and remove it (2).

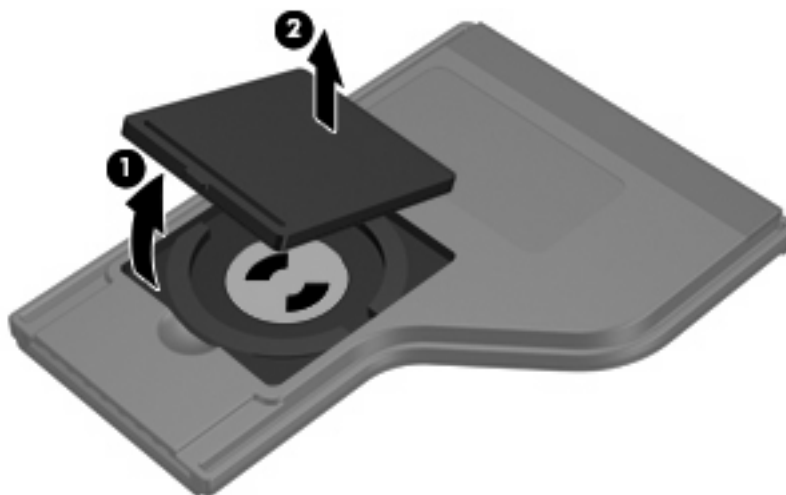

2. With the positive side of the battery facing up, insert the battery into the compartment (1).

3. Align the battery compartment cover (2) with the battery compartment and press down to close the cover (3).

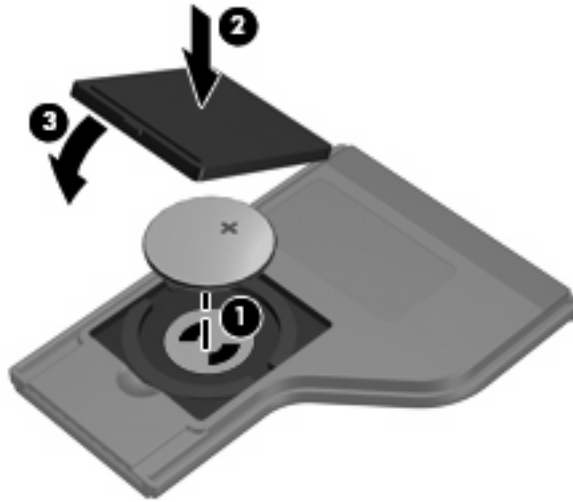

# 4 Troubleshooting the remote control

Refer to the following table for help in troubleshooting remote control problems.

Problem	Possible solution
My remote control is not working.	<ul style="list-style-type: none"><li data-bbox="716 653 1465 701">• Be sure that you have a clear line of sight from the remote control to the IR port on the computer or expansion product.</li><li data-bbox="716 728 1465 777">• Be sure that you are within range of the IR port on the computer or expansion product.</li><li data-bbox="716 804 1465 852">• Be sure that the battery is properly installed and has a charge. Replace the battery if necessary.</li><li data-bbox="716 879 1465 926">• Be sure that you are using the remote control with a supported computer or expansion product.</li></ul>

# 5 Regulatory Notices

## European Union Notices

This product complies with the following EU Directive:

- EMC Directive 89/336/EEC

Compliance with these directives implies conformity to applicable harmonized European standards (European Norms) which are listed on the EU Declaration of Conformity issued by Hewlett-Packard for this product or product family.

This compliance is indicated by the following conformity marking placed on the product:

- This CE marking is valid for non-telecommunications products and for EU harmonized telecommunications products, such as Bluetooth®.



- This CE marking is valid for EU non-harmonized telecommunications products.



\*If applicable, a notified body number is used. Refer to the regulatory label provided on this product.

Hewlett-Packard GmbH, HQ-TRE, Herrenberger Strasse 140, 71034 Boeblingen, Germany

## Battery disposal



**WARNING!** When a battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for computer battery disposal.

---



# Index

- B**
  - back button 4
  - battery disposal notice 9
  - battery, inserting 5
  - buttons
    - back 4
    - channel/page down 3
    - channel/page up 2
    - down 4
    - DVD 2
    - fast forward 3
    - information 4
    - left 3
    - Media 2
    - mute 4
    - next 3
    - Ok 3
    - play/pause 3
    - power 2
    - previous 3
    - quick reference 2
    - rewind 3
    - right 3
    - stop 3
    - switch screens 2
    - up 3
    - volume down 4
    - volume up 4
    - Windows Media Center 2
- C**
  - channel/page down button 3
  - channel/page up button 2
- D**
  - down button 4
  - DVD button 2
- F**
  - fast forward button 3
- I**
  - information button 4
  - infrared lens 1
  - inserting battery 5
- L**
  - left button 3
- M**
  - Media button 2
  - mute button 4
- N**
  - next button 3
  - notices, regulatory 8
- O**
  - Ok button 3
- P**
  - play/pause button 3
  - power button 2
  - previous button 3
- Q**
  - QuickPlay 1
- R**
  - regulatory notices 8
  - rewind button 3
  - right button 3
- S**
  - stop button 3
  - switch screens button 2
- T**
  - troubleshooting 7
- U**
  - up button 3
- V**
  - volume down button 4
  - volume up button 4
- W**
  - Windows Media Center button 2

