

Multimedia

User Guide

© Copyright 2007 Hewlett-Packard
Development Company, L.P.

Windows is a U.S. registered trademark of
Microsoft Corporation.

The information contained herein is subject
to change without notice. The only
warranties for HP products and services are
set forth in the express warranty statements
accompanying such products and services.
Nothing herein should be construed as
constituting an additional warranty. HP shall
not be liable for technical or editorial errors
or omissions contained herein.

First Edition: January 2007

Document Part Number: 430384-001

Table of contents

1 Multimedia hardware

Using the audio features	1
Using the audio-in (microphone) jack	3
Using the audio-out (headphone) jack	3
Using the S/PDIF digital audio headphone jack	4
Adjusting the volume	5
Using the Quick Launch buttons	6
Using the video features	7
Using the external monitor port	7
Using the S-Video-out jack	7
Using the HDMI port (select models only)	8
Using the camera	10
Adjusting camera properties	11
Using the optical drive	12
Identifying the installed optical drive	12
Inserting an optical disc	13
Removing an optical disc when running on battery or external power	14
Removing an optical disc when no computer power is available	15
Using the media activity functions	16
Using the media activity hotkeys	16
Using the media activity buttons	17

2 Multimedia software

Locate and install software	19
Using multimedia software	20
Preventing playback disruptions	21
Protecting the CD or DVD write process	21
Changing DVD region settings	22
Observing the copyright warning	23

Index	24
--------------------	-----------

1 Multimedia hardware


Using the audio features

The following illustration and table describe the audio features of the computer.



NOTE Your computer may look slightly different from the illustration in this section.



Component	Description
(1) Internal microphones (2)	Record sound.  NOTE A microphone icon next to the microphone opening indicates that the computer has an internal microphone.
(2) Speakers (2)	Produce sound.
(3) Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.

Component	Description
(4) Audio-out (headphone) jack	Connects optional powered stereo speakers, headphones, ear buds, a headset, or television audio.
(5) Audio-out (headphone) S/PDIF jack	Provides enhanced audio performance, including surround sound and other high-end audio output.
(6) Volume mute button	Mutes and restores speaker sound.
(7) Volume scroll zone	Adjusts speaker volume. Slide your finger to the left to decrease volume and to the right to increase volume. You can also tap the minus sign on the scroll zone to decrease volume, or you can tap the plus sign on the scroll zone to increase volume.

Using the audio-in (microphone) jack

The computer is equipped with a stereo (dual-channel) microphone jack that supports a stereo array and monaural microphone. Using sound recording software with external microphones allows for stereo recordings and stereo playbacks.



NOTE When connecting a microphone to the microphone jack, use a microphone with a 3.5-mm plug.

Using the audio-out (headphone) jack



WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset.



CAUTION To prevent possible damage to an external device, do not plug a single sound channel (monaural) connector into the headphone jack.

In addition to connecting headphones, the headphone jack is used to connect the audio input function of an audio/video device such as a television or VCR.



NOTE When connecting a device to the headphone jack, use only a 3.5-mm stereo plug.

NOTE When a device is connected to the headphone jack, the speakers are disabled.

Using the S/PDIF digital audio headphone jack

S/PDIF (Sony/Phillips Digital Interface), or digital audio, provides enhanced audio performance, including surround sound and other high-end audio output.

The second headphone jack allows two users to connect and listen to computer sound. For digital audio connections, connect the S/PDIF digital audio cable to the digital audio connector on your audio/video equipment.



NOTE In order to use S/PDIF with the headphone jack, you will need an optional mini TOS link cable and/or adapter.

 
Adjusting the volume

You can adjust the volume using the following controls:

- Computer volume buttons:
 - To mute or restore volume, press the mute button.
 - To decrease volume, slide your finger across the volume scroll zone from right to left.
 - To increase volume, slide your finger across the volume scroll zone from left to right.



NOTE The tapping sound made by the volume button is enabled at the factory. You can disable the sound in the Setup Utility (f10).

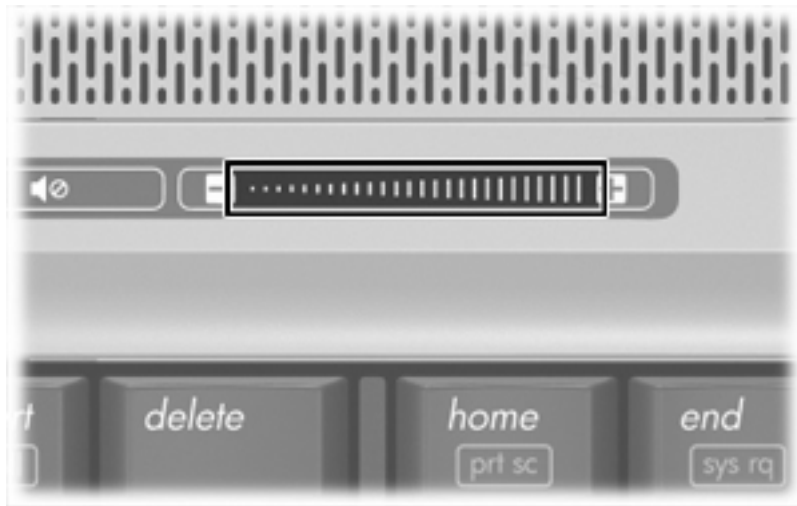

- Windows® volume control:
 - a. Click the **Volume** icon in the notification area, at the far right of the taskbar.
 - b. Increase or decrease the volume by moving the slider up or down. Click the **Mute** icon to mute the volume.

– or –

- a. Right-click the **Volume** icon in the notification area, and then click **Open Volume Mixer**.
- b. In the Device column, increase or decrease the volume by moving the slider up or down. You can also mute the volume by clicking the **Mute** icon.

If the Volume icon is not displayed in the notification area, follow these steps to add it:

- a. Right-click in the notification area, and then click **Properties**.
 - b. Click the **Notification Area** tab.
 - c. Under System icons, select the **Volume** check box.
 - d. Click **OK**.
- Program volume control:

 
Volume can also be adjusted within some programs.

Using the Quick Launch buttons



NOTE The tapping sound made by the Quick Launch buttons is enabled at the factory. You can disable the sound in the Setup Utility (f10).

The media button (1) and the DVD button (2) functions vary by model and installed software. With these buttons, you can watch DVD movies, listen to music, and view pictures.

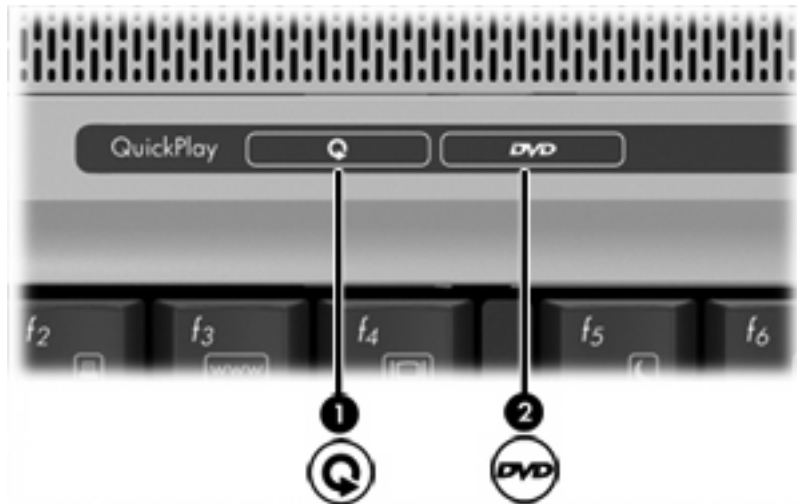

Pressing the media button launches the QuickPlay program.

Pressing the DVD button launches the DVD playback feature of the QuickPlay program.



NOTE If the computer has been set up to require a logon password, you may be asked to log on to Windows. QuickPlay launches automatically after you log on. Refer to the QuickPlay online Help for more information.

Using the video features

The computer includes several ways to transmit audio and video signals to an external display:

- External monitor port that connects a television, monitor, or projector
- S-Video-out jack that connects a range of advanced video components
- HDMI port (select models only) that connects standard, enhanced, or high-definition video or audio components



NOTE Use only one type of video or audio connection at a time. For example, if you connect an external monitor cable and an S-Video cable, the computer will not simultaneously display the video and audio content to an external display.

Using the external monitor port

The external monitor port connects an external display device, such as an external monitor or a projector, to the computer.

To connect a display device, connect the device cable to the external monitor port.



NOTE If a properly connected external display device does not display an image, press **fn+f4** to transfer the image to the device.

Using the S-Video-out jack

The 7-pin S-Video-out jack connects the computer to an optional S-Video device such as a television, VCR, camcorder, overhead projector, or video capture card.

 
The computer can support one S-Video device connected to the S-Video-out jack, while simultaneously supporting an image on the computer display or any other supported external display.



NOTE To transmit video signals through the S-Video-out jack, you need an S-Video cable (purchased separately). If you are playing a DVD movie on your computer and displaying it on your television (combining audio and video functions), you also need a standard audio cable (purchased separately) to connect the headphone jack. Both of these cables are available from most electronics retailers.

To connect a video device to the S-Video-out jack:

1. Plug one end of the S-Video cable into the S-Video-out jack on the computer.

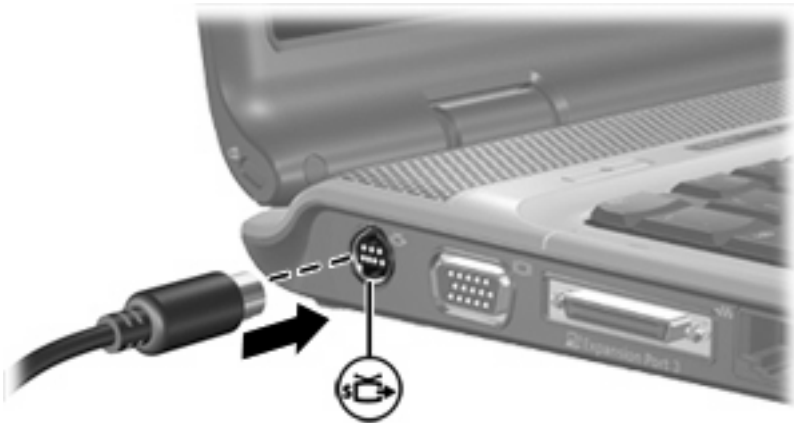

2. Connect the other end of the cable to the video device, according to the device manufacturer's instructions.
3. Press **fn+f4** to switch the image between the display devices connected to the computer.



NOTE If the computer is connected to an optional expansion product, and the S-Video-out jack is inaccessible, connect the S-Video cable to the S-Video-out jack on the expansion product.

Using the HDMI port (select models only)

Select computer models include an HDMI (High Definition Multimedia Interface) port. The HDMI port connects the computer to an optional video or audio device, such as a high-definition television, or any compatible digital or audio component.

The computer can support one HDMI device connected to the HDMI port, while simultaneously supporting an image on the computer display or any other supported external display.



NOTE To transmit video signals through the HDMI port, you need an HDMI cable (purchased separately), available from most electronics retailers.

To connect a video or audio device to the HDMI port:

1. Plug one end of the HDMI cable into the HDMI port on the computer.



2. Connect the other end of the cable to the video device, according to the device manufacturer's instructions.
3. Press **fn+f4** to switch the image between the display devices connected to the computer.

Using the camera

Select computer models include an integrated camera, located on the top of the display. The camera can be used with a variety of software for the following functions:

- Capturing video
- Streaming video with instant message software
- Taking still photos



NOTE For information about using software designed for use with the integrated camera, refer to the online Help for that software.

The camera light (1) turns on when video software accesses the camera (2).



For optimum performance, observe the following guidelines while using the integrated camera:

- Be sure that you have the latest version of an instant message program before attempting a video conversation.
- Your integrated camera may not work properly across some network firewalls. If you are having trouble viewing or sending video to someone on another LAN or outside your network firewall, contact your Internet service provider for assistance.
- Whenever possible, place bright light sources behind the camera and out of the picture area.

Adjusting camera properties

You can adjust the following camera properties:

- **Brightness**—Controls the amount of light that is incorporated into the image. A higher brightness setting creates a brighter image; a lower brightness setting creates a darker image.
- **Contrast**—Controls the difference between lighter and darker areas on the image. A higher contrast setting intensifies the image; a lower contrast setting maintains more of the original information's dynamic range but leads to a flatter image.
- **Hue**—Controls the aspect of color that distinguishes it from another color (what makes a color red, green, or blue). Hue is distinct from saturation, which measures the intensity of the hue.
- **Saturation**—Controls the strength of color in the final image. A higher saturation setting creates a bolder image; a lower saturation setting creates a more subtle image.
- **Sharpness**—Controls the definition of edges in an image. A higher sharpness setting creates a more defined image; a lower sharpness setting creates a softer image.
- **Gamma**—Controls the contrast affecting the mid-level grays or midtones of an image. Adjusting the gamma of an image allows you to change the brightness values of the middle range of gray tones without dramatically altering the shadows and highlights. A lower gamma setting makes grays look black, and makes dark colors even darker.

The Properties dialog box is accessible from various programs that use the integrated camera, usually from a configuration, settings, or properties menu.

Using the optical drive

The optical drive allows you to play, copy, and create CDs or DVDs, depending on the type of optical drive and software installed on your computer.

Identifying the installed optical drive

- ▲ Select **Start > Computer**.

 
Inserting an optical disc

1. Turn on the computer.
2. Press the release button (1) on the drive bezel to release the media tray.
3. Pull out the tray (2).
4. Hold the disc by the edges to avoid touching the flat surfaces and position the disc label-side up over the tray spindle.



NOTE If the tray is not fully accessible, tilt the disc carefully to position it over the spindle.

5. Gently press the disc (3) down onto the tray spindle until the disc snaps into place.

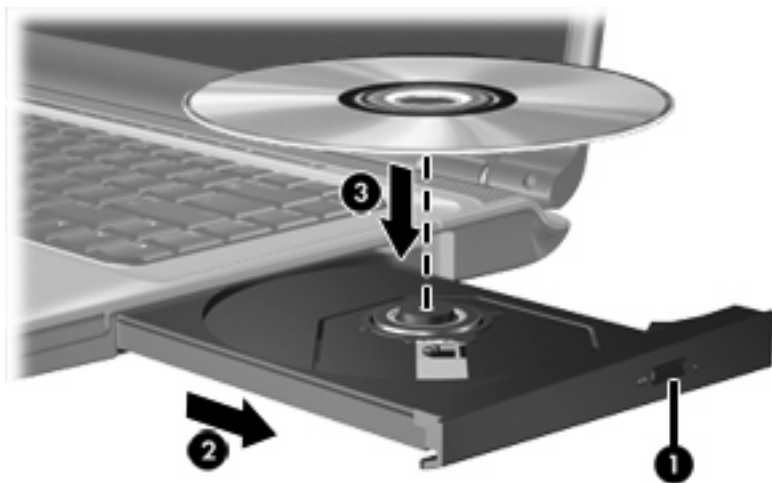

6. Close the media tray.



 
NOTE After you insert a disc, a short pause is normal. If you have not selected a media player, an AutoPlay dialog box opens. It prompts you to select how you want to use the media content.

Removing an optical disc when running on battery or external power

1. Press the release button **(1)** on the drive bezel to release the media tray, and then gently pull out the tray **(2)** until it stops.
2. Remove the disc **(3)** from the tray by gently pressing down on the spindle while lifting the outer edges of the disc. Hold the disc by the edges and avoid touching the flat surfaces.



NOTE If the tray is not fully accessible, tilt the disc carefully as you remove it.

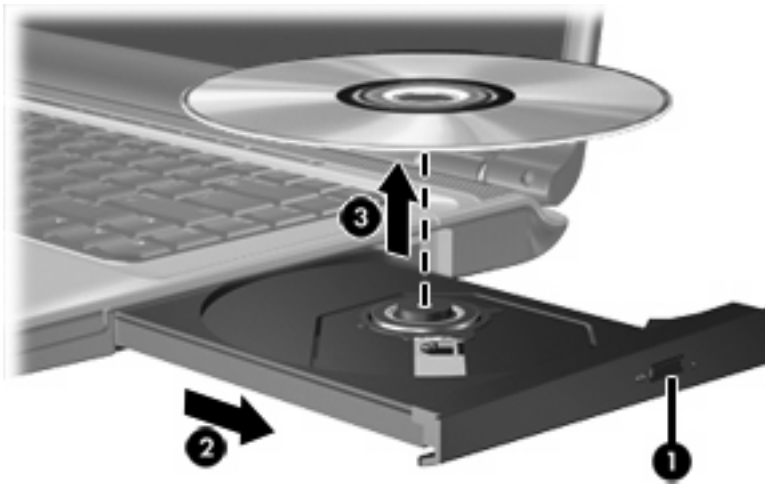


3. Close the media tray and place the disc in a protective case.

Removing an optical disc when no computer power is available

1. Insert the end of a paper clip (1) into the release access in the front bezel of the drive.
2. Press in gently on the paper clip until the tray is released, and then pull out the tray (2) until it stops.
3. Remove the disc (3) from the tray by gently pressing down on the spindle while lifting the outer edges of the disc. Hold the disc by the edges and avoid touching the flat surfaces.



 NOTE If the tray is not fully accessible, tilt the disc carefully as you remove it.

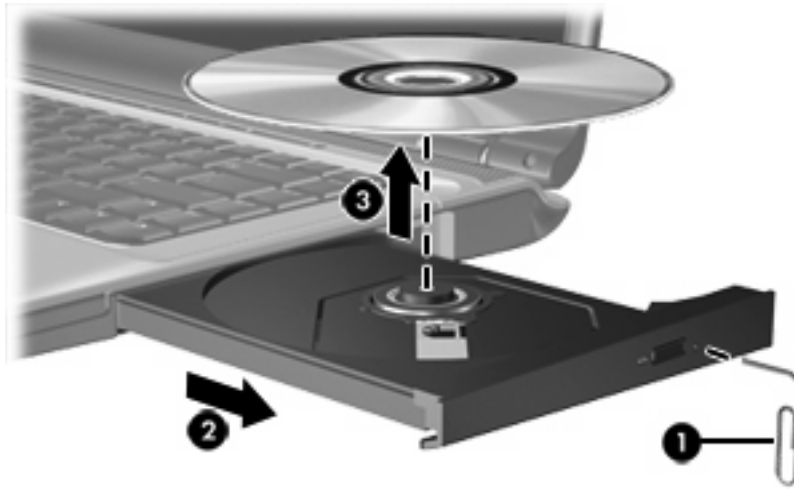

4. Close the media tray and place the disc in a protective case.

Using the media activity functions

The media activity hotkeys and the media activity buttons (select models only) control the play of an audio CD or a DVD that is inserted into the optical drive.

 
Using the media activity hotkeys

Media activity hotkeys are combinations of the **fn** key (1) and any of the 4 function keys:



NOTE To control the play of a video CD, use the media activity controls in your video CD player program.

- To play, pause, or resume an inserted audio CD or a DVD, press **fn+f9 (2)**.
- To stop an inserted audio CD or a DVD that is playing, press **fn+f10 (3)**.
- To play the previous track of an audio CD or the previous chapter of a DVD that is playing, press **fn+f11 (4)**.
- To play the next track of an audio CD or the next chapter of a DVD that is playing, press **fn+f12 (5)**.

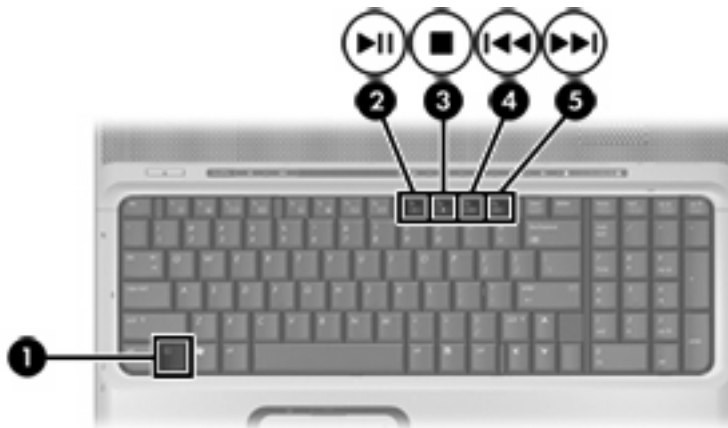


Using the media activity buttons



NOTE The tapping sound made by the media activity buttons is enabled at the factory. You can disable the sound in the Setup Utility (f10).

 The following illustration and table describe the media activity buttons.

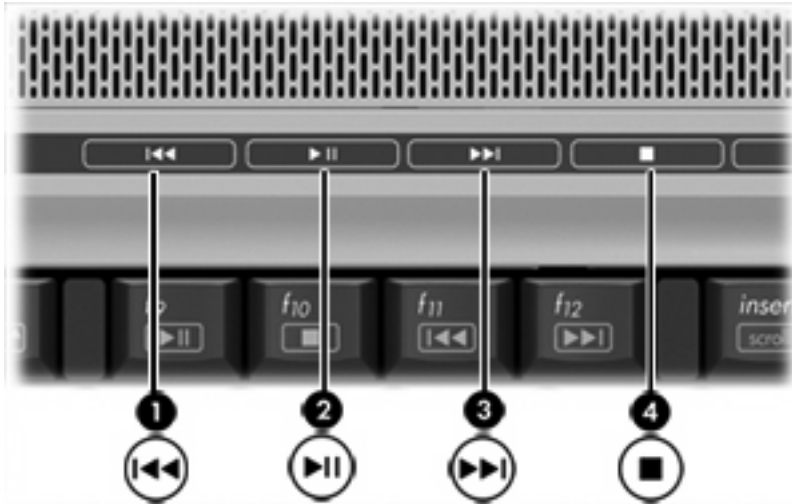

Component	Description
(1) Previous/rewind button	When a disc is playing in the optical drive: <ul style="list-style-type: none">Plays the previous track or chapter, when pressed once.Rewinds when press with the fn key.
(2) Play/pause button	When a disc is in the optical drive and is <ul style="list-style-type: none">Not playing, plays the disc.Playing, pauses the disc.
(3) Next/fast forward button	When a disc is playing in the optical drive: <ul style="list-style-type: none">Plays the next track or chapter, when pressed once.Fast forwards when press with the fn key.
(4) Stop button	When a disc is playing in the optical drive, stops the current disc activity.

2 Multimedia software

The computer includes preinstalled multimedia software. Some computer models also include additional multimedia software on an optical disc.

Depending on the hardware and software included with the computer, the following multimedia tasks may be supported:

- Playing digital media, including audio and video CDs, audio and video DVDs, and Internet radio
- Creating or copying data CDs
- Creating, editing, and burning audio CDs
- Creating, editing, and burning a video or movie to a DVD or video CD



NOTE For details about using software included with the computer, refer to the software manufacturer's instructions, which may be provided on disc, as online Help files, or on the software manufacturer's Web site.

Locate and install software

The computer includes a range of software that may be

- **Preinstalled on your hard drive.** To locate and install the ready-to-use software preinstalled on your computer:
 - a. Select **Start > All Programs**.
 - b. Double-click the program you want to install.
- **Provided on CD or DVD.** To install a software application from a disc:
 - a. Insert the disc into your optical drive.
 - b. When the installation wizard opens, follow the on-screen instructions.
 - c. Restart the computer if prompted to do so.

Using multimedia software

1. Select **Start > All Programs**, and then open the multimedia program you want to use. For example, if you want to use Windows Media Player to play an audio CD, click **Windows Media Player**.



NOTE Some programs may be located in subfolders.

2. Insert the media disc, such as an audio CD, into the optical drive.
3. Follow the instructions on the screen.

– or –

1. Insert the media disc, such as an audio CD, into the optical drive.
An AutoPlay dialog box opens.
2. Click a multimedia task from the list of tasks.

Preventing playback disruptions

To reduce the possibility of playback disruption:

- Save your work and close all open programs before playing a CD or a DVD.
- Do not connect or disconnect hardware while playing a disc.

Do not initiate Hibernation or Sleep while playing a disc. Otherwise, you may see a warning message asking if you want to continue. If this message is displayed, click **No**. After you click No:

- Playback may resume.
– or –
- Playback may stop and the screen may clear. To return to playing the CD or DVD, press the power button and then restart the disc.

Protecting the CD or DVD write process



CAUTION To prevent loss of information or damage to a disc:

Before writing to a disc, connect the computer to a reliable external power source. Do not write to a disc while the computer is running on battery power.

Before writing to a disc, close all open programs except the disc software you are using.

Do not copy directly from a source disc to a destination disc or from a network drive to a destination disc. Instead, copy from a source disc or network drive to your hard drive, and then copy from your hard drive to the destination disc.

Do not use the computer keyboard or move the computer while the computer is writing to a disc. The write process is sensitive to vibration.

Changing DVD region settings

Most DVDs that contain copyrighted files also contain region codes. The region codes help protect copyrights internationally.

You can play a DVD containing a region code only if the region code on the DVD matches the region setting on your DVD drive.



CAUTION The region settings on your DVD drive can be changed only 5 times.

The region setting you select the fifth time becomes the permanent region setting on the DVD drive.

The number of allowable region changes remaining on the drive is displayed in the Changes remaining box on the DVD Region tab. The number in the field includes the fifth and permanent change.

To change settings through the operating system:

1. Select **Start > Computer > System properties**.
2. In the left pane, click **Device Manager**.



NOTE Windows includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing applications, running utilities, or changing Windows settings. Refer to Windows online Help for more information.

3. Click the "+" sign next to **DVD/CD-ROM drives**.
4. Right-click the DVD drive for which you want to change region settings, and then click **Properties**.
5. Make the desired changes on the **DVD Region** tab.
6. Click **OK**.

Observing the copyright warning

It is a criminal offense, under applicable copyright laws, to make unauthorized copies of copyright-protected material, including computer programs, films, broadcasts, and sound recordings. Do not use this computer for such purposes.

Index

- A**
 - audio features 1
 - audio-in (microphone) jack 1, 3
 - audio-out (headphone) jack 2, 3
- B**
 - buttons
 - previous/rewind 17
 - volume mute 2, 5
- C**
 - camera
 - identifying 10
 - properties 11
 - CD
 - inserting 13
 - playing 21
 - protecting 21
 - removing, with power 14
 - removing, without power 15
 - writing to 21
 - copyright warning 23
- D**
 - DVD
 - changing region setting 22
 - inserting 13
 - playing 21
 - protecting 21
 - removing, with power 14
 - removing, without power 15
 - writing to 21
 - DVD button, identifying 6
 - DVD region settings 22
- E**
 - earbuds 2
 - external monitor port 7
- H**
 - HDMI port
 - connecting 8
 - identifying 8
 - headphone jack 2
- I**
 - internal microphones 1
- J**
 - jacks
 - audio-in (microphone) 1, 3
 - audio-out (headphone) 2, 3
 - audio-out (headphone) S/PDIF 2
 - S-Video-out 7
- M**
 - media activity buttons, identifying 17
 - media activity hotkeys, identifying 16
 - media button, identifying 6
 - microphone jack 1
 - microphones, internal 1
 - microphones, supported 3
 - monitor, connecting 7
 - multimedia software
 - described 18
 - using 20
 - mute button 2, 5
- O**
 - optical disc
 - inserting 13
 - removing, with power 14
 - removing, without power 15
 - writing to 21
 - optical drive
 - playing 21
 - protecting 21
- P**
 - ports
 - external monitor 7
 - HDMI 8
 - previous/rewind button 17
 - programs
 - multimedia 18
 - using 20
 - projector, connecting 7
 - protecting playback 21
- Q**
 - Quick Launch buttons, identifying 6
 - QuickPlay 6
- R**
 - region codes, DVD 22
- S**
 - S-Video-out jack
 - connecting 7
 - identifying 7
 - S/PDIF digital audio 4
 - S/PDIF jack 2
 - software
 - multimedia 18
 - using 20
 - speakers 1
- T**
 - TV 3
- V**
 - VCR 3
 - volume mute button 2, 5

volume scroll zone 2, 5
volume, adjusting 5

