

TouchPad and Keyboard

User Guide

© Copyright 2007 Hewlett-Packard
Development Company, L.P.

Windows is a U.S. registered trademark of
Microsoft Corporation.

The information contained herein is subject
to change without notice. The only
warranties for HP products and services are
set forth in the express warranty statements
accompanying such products and services.
Nothing herein should be construed as
constituting an additional warranty. HP shall
not be liable for technical or editorial errors
or omissions contained herein.

First Edition: January 2007

Document Part Number: 430383-001

Table of contents

1 TouchPad

Using the TouchPad	2
Connecting an external mouse	2
Setting TouchPad preferences	2

2 Keyboard

Hotkeys	3
Using hotkeys	4
Displaying system information (fn+esc)	4
Opening Help and Support (fn+f1)	4
Opening the Print Options window (fn+f2)	4
Opening a Web browser (fn+f3)	4
Switch the screen image (fn+f4)	5
Initiating Hibernation (fn+f5)	6
Initiating QuickLock (fn+f6)	6
Decreasing screen brightness (fn+f7)	6
Increasing screen brightness (fn+f8)	6
Play, pause or resume an audio CD or a DVD (fn+f9)	7
Stop an audio CD or a DVD (fn+f10)	7
Play previous track or section of an audio CD or a DVD (fn+f11)	7
Play next track or section of an audio CD or a DVD (fn+f12)	7


3 Keypads

Using an external numeric keypad	8
Enabling or disabling num lock mode as you work	9

Index	10
--------------------	-----------

1 TouchPad

The following illustration and table describe the computer TouchPad.

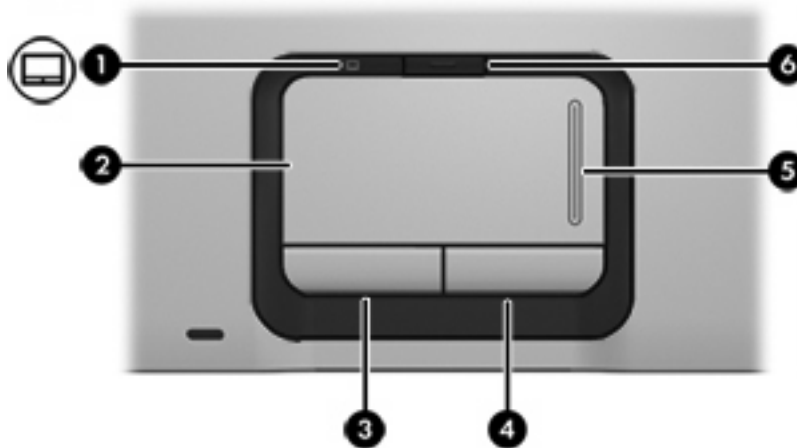

Component	Description
(1) TouchPad light	Blue: TouchPad is enabled. Amber: TouchPad is disabled.
(2) TouchPad*	Moves the pointer and selects or activates items on the screen.
(3) Left TouchPad button*	Functions like the left button on an external mouse.
(4) Right TouchPad button*	Functions like the right button on an external mouse.
(5) TouchPad scroll zone*	Allows you to scroll up or down.
(6) TouchPad on/off button	Enables/disables the TouchPad.

*This table describes factory settings. To view and change TouchPad preferences, select **Start > Control Panel > Hardware and Sound > Mouse**.

Using the TouchPad

To move the pointer, slide your finger across the TouchPad surface in the direction you want the pointer to go. Use the TouchPad buttons as you would the corresponding buttons on an external mouse. To scroll up and down using the TouchPad vertical scroll zone, slide your finger up or down over the lines.



NOTE If you are using the TouchPad to move the pointer, you must lift your finger off the TouchPad before moving it to the scroll zone. Simply sliding your finger from the TouchPad to the scroll zone will not activate the scrolling function.

Connecting an external mouse

You can connect an external USB mouse to the computer using one of the USB ports on the computer. A USB mouse can also be connected to the system using the ports on an optional expansion product.

Setting TouchPad preferences

To access Mouse Properties, select **Start > Control Panel > Hardware and Sound > Mouse**.

Use Mouse Properties in Windows® to customize settings for pointing devices, such as button configuration, click speed, and pointer options.

2 Keyboard

Hotkeys

Hotkeys are combinations of the **fn** key (1) and either the **esc** key (2) or one of the function keys (3).

The icons on the **f1** through **f12** keys represent the hotkey functions. Hotkey functions and procedures are discussed in the following sections.



To perform this function	Press
Display system information.	fn+esc
Open Help and Support.	fn+f1
Open the Print Options window.	fn+f2
Open a Web browser.	fn+f3
Alternate between computer display and external display.	fn+f4
Initiate Hibernation.	fn+f5
Initiate QuickLock.	fn+f6
Decrease screen brightness.	fn+f7
Increase screen brightness.	fn+f8
Play, pause, or resume an audio CD or a DVD.	fn+f9
Stop an audio CD or a DVD.	fn+f10

To perform this function	Press
Play the previous track or section on an audio CD or a DVD.	fn+f11
Play the next track or section on an audio CD or a DVD.	fn+f12

Using hotkeys

To use a hotkey command on the computer keyboard, either

- Briefly press the **fn** key, and then briefly press the second key of the hotkey command.
– or –
- Press and hold down the **fn** key, briefly press the second key of the hotkey command, and then release both keys at the same time.

Displaying system information (fn+esc)

Press **fn+esc** to display information about system hardware components and the system BIOS version number.

In the Windows **fn+esc** display, the version of the system BIOS (basic input-output system) is displayed as the BIOS date. On some computer models, the BIOS date is displayed in decimal format. The BIOS date is sometimes called the system ROM version number.

Opening Help and Support (fn+f1)

Press **fn+f1** to open Help and Support.

In addition to providing information about your Windows operating system, Help and Support provides the following information and tools:

- Information about your computer, such as model and serial number, installed software, hardware components, and specifications.
- Answers to questions about using your computer.
- Tutorials to help you learn to use the computer and Windows features.
- Updates for the Windows operating system, drivers, and the software provided on your computer.
- Checkups for computer functionality.
- Automated and interactive troubleshooting, repair solutions, and system recovery procedures.
- Links to HP support specialists.

Opening the Print Options window (fn+f2)

Press **fn+f2** to open the Print Options window of the active Windows application.

Opening a Web browser (fn+f3)

Press **fn+f3** to open your Web browser.

Until you have set up your Internet or network services, the **fn+f3** hotkey opens the Windows Internet Connection Wizard.

After you have set up your Internet or network services and your Web browser home page, you can press **fn+f3** to quickly access your home page and the Internet.

Switch the screen image (fn+f4)

Press **fn+f4** to switch the screen image among display devices connected to the system. For example, if a monitor is connected to the computer, each time you press **fn+f4** the image switches among the computer display, the monitor display, and a simultaneous display on both the computer and the monitor.

Most external monitors receive video information from the computer using the external VGA video standard. The **fn+f4** hotkey can also alternate images among other devices receiving video information from the computer, such as S-Video devices.

The following video transmission types, with examples of devices that use them, are supported by the **fn+f4** hotkey:

- LCD (computer display)
- External VGA (most external monitors)
- S-Video (televisions, camcorders, VCRs, and video capture cards with S-Video-in jacks, on select models)
- HDMI (high-definition television or any compatible digital or audio component on select models)
- Composite video (televisions, camcorders, VCRs, and video capture cards with composite-video-in jacks)



NOTE Composite video devices can be connected to the system only by using an optional expansion product.

Initiating Hibernation (fn+f5)

Press **fn+f5** to initiate Hibernation.

When Hibernation is initiated, your information is saved to a hibernation file on the hard drive and the computer turns off.



CAUTION To reduce the risk of information loss, save your work before initiating Hibernation.

The computer must be on before you initiate Hibernation.

To exit Hibernation, briefly press the power button.

The function of the **fn+f5** hotkey can be changed. For example, you can set the **fn+f5** hotkey to initiate Sleep instead of Hibernation.

Initiating QuickLock (fn+f6)

Press **fn+f6** to initiate the QuickLock security feature.

QuickLock protects your information by displaying the operating system Log On window. While the Log On window is displayed, the computer cannot be accessed until a Windows user password or a Windows administrator password is entered.



NOTE Before you can use QuickLock, you must set a Windows user password or a Windows administrator password. For instructions, refer to Help and Support.

To use QuickLock, press **fn+f6** to display the Log On window and lock the computer. Then follow the instructions on the screen to enter your Windows user password or your Windows administrator password and access the computer.

Decreasing screen brightness (fn+f7)

Press **fn+f7** to decrease screen brightness. Hold down the hotkey to decrease the brightness level incrementally.

Increasing screen brightness (fn+f8)

Press **fn+f8** to increase screen brightness. Hold down the hotkey to increase the brightness level incrementally.

Play, pause or resume an audio CD or a DVD (fn+f9)

The **fn+f9** hotkey functions only when an audio CD or a DVD is inserted. If the audio CD or the DVD is

- Not playing, press **fn+f9** to begin or resume the play.
- Playing, press **fn+f9** to pause the play.

Stop an audio CD or a DVD (fn+f10)

Press **fn+f10** to stop the play of an audio CD or a DVD.

Play previous track or section of an audio CD or a DVD (fn+f11)

While an audio CD or a DVD is playing, press **fn+f11** to play the previous track of the CD or the previous section of the DVD.

Play next track or section of an audio CD or a DVD (fn+f12)

While an audio CD or a DVD is playing, press **fn+f12** to play the next track of the CD or the next section of the DVD.

3 Keypads

The computer includes an integrated numeric keypad. An optional external numeric keypad or keyboard can also be attached.



Using an external numeric keypad

Keys on most external numeric keypads function differently according to whether num lock mode is on or off. (Num lock is turned off at the factory.) For example:

- When num lock is on, most keypad keys type numbers.
- When num lock is off, most keypad keys function like the arrow, page up, or page down keys.

When num lock on an external keypad is turned on, the num lock light on the computer is turned on. When num lock on an external keypad is turned off, the num lock light on the computer is turned off.

Enabling or disabling num lock mode as you work

To turn num lock on or off on an external keypad as you work:

- ▲ Press the **num lock** key on the external keypad, not on the computer.

Index

B

- buttons
 - TouchPad 1
 - TouchPad on/off 1

C

- composite video 5

D

- display
 - image, switching 5
 - screen brightness hotkeys 6

F

- fn key 3
- function keys 3

H

- Help and Support hotkey 4
- Hibernation hotkey 6
- hotkeys
 - audio CD or DVD controls 7
 - decreasing screen brightness 6
 - description 3
 - displaying system information 4
 - increasing screen brightness 6
 - initiating Hibernation 6
 - initiating QuickLock 6
 - opening Help and Support 4
 - opening Print Options window 4
 - opening Web browser 4
 - switching screen image 5
 - using 4

K

- keyboard hotkeys, identifying 3

- keypad, integrated
 - identifying 8

M

- media controls, hotkeys 7
- mouse, external
 - connecting 2
 - setting preferences 2

P

- Print Options window hotkey 4

Q

- QuickLock hotkey 6

S

- S-Video 5
- screen brightness hotkeys 6
- screen image, switching 5
- scroll zone, TouchPad 1
- system information hotkey 4

T

- TouchPad
 - identifying 1
 - setting preferences 2
 - using 2
- TouchPad buttons, identifying 1
- TouchPad light, identifying 1
- TouchPad on/off button, identifying 1
- TouchPad scroll zone, identifying 1

V

- video transmission types 5

W

- Web browser hotkey 4

