

Notebook Tour

User Guide

© Copyright 2007 Hewlett-Packard
Development Company, L.P.

Microsoft and Windows are U.S. registered
trademarks of Microsoft Corporation.
Bluetooth is a trademark owned by its
proprietor and used by Hewlett-Packard
Company under license. SD logo is a
trademark of its proprietor.

The information contained herein is subject
to change without notice. The only
warranties for HP products and services are
set forth in the express warranty statements
accompanying such products and services.
Nothing herein should be construed as
constituting an additional warranty. HP shall
not be liable for technical or editorial errors
or omissions contained herein.

First Edition: January 2007

Document Part Number: 430382-001

Table of contents

1 Components

Top components	2
TouchPad	2
Lights	3
Buttons, switches, and speakers	5
Keys	6
Hotkey quick reference	6
Front components	8
Rear components	9
Right-side components	10
Left-side components	11
Bottom components	12
Display components	13
Wireless antennae (select models only)	14
Additional hardware components	15
Labels	16

2 Specifications

Operating environment	17
Rated input power	18
Expansion port input/output signals	19

Index	20
-------------	----

1 Components

This chapter explains the hardware features of the computer.

To see a list of hardware installed in the computer:

1. Select **Start > Computer > System properties**.
2. In the left pane, click **Device Manager**.


You can also add hardware or modify device configurations using Device Manager.



NOTE Components included in the computer may vary by region and by model. The illustrations in this chapter identify the standard features included in most computer models.

Top components


TouchPad

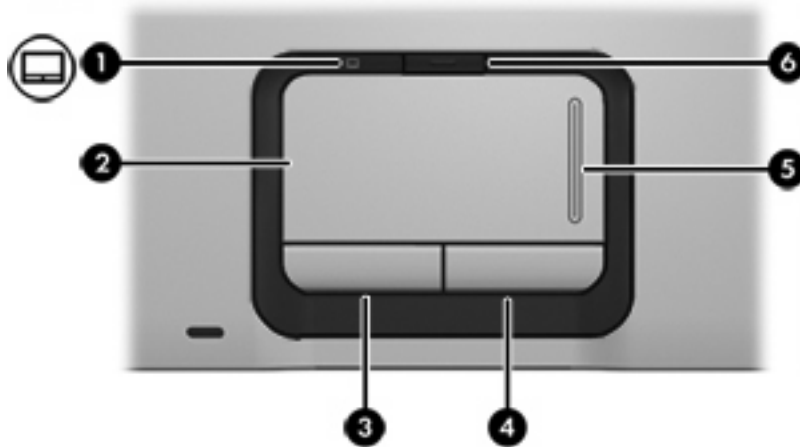

Component	Description
(1) TouchPad light	Blue: TouchPad is enabled. Amber: TouchPad is disabled.
(2) TouchPad*	Moves the pointer and selects or activates items on the screen.
(3) Left TouchPad button*	Functions like the left button on an external mouse.
(4) Right TouchPad button*	Functions like the right button on an external mouse.
(5) TouchPad scroll zone*	Allows you to scroll up or down.
(6) TouchPad on/off button	Enables/disables the TouchPad.

*This table describes factory settings. To view and change pointing device preferences, select **Start > Control Panel > Hardware and Sound > Mouse**.

Lights

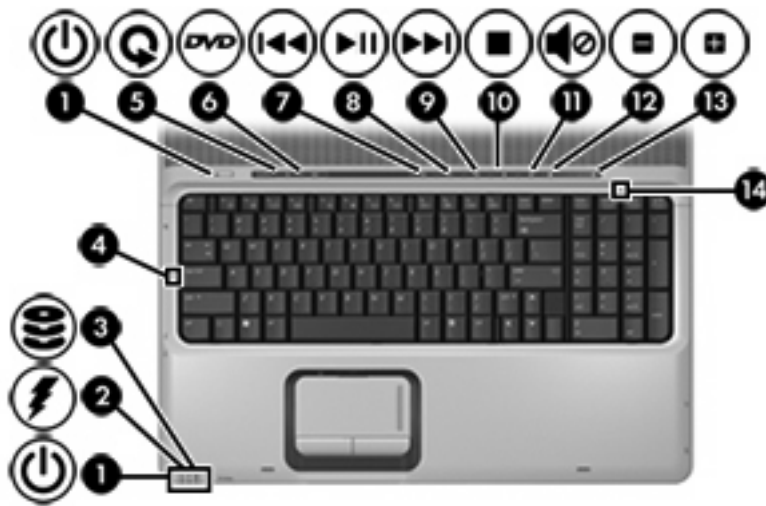




Component	Description
(1) Power lights (2)*	<p>On: The computer is on.</p> <p>Blinking: The computer is in the Sleep state.</p> <p>Off: The computer is off or in Hibernation.</p>
(2) Battery light	<p>On: A battery is charging.</p> <p>Blinking: A battery that is the only available power source has reached a low battery level. When the battery reaches a critical battery level, the battery light begins blinking rapidly.</p> <p>Off: If the computer is plugged into an external power source, the light is turned off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level.</p>
(3) Drive light	Blinking: The hard drive or optical drive is being accessed.
(4) Caps lock light	On: Caps lock is on.
(5) Media button light	Blinks once when the media button is pressed.
(6) DVD button light	Blinks once when the DVD button is pressed.
(7) Previous/rewind light	Blinks once when the previous/rewind button is pressed.
(8) Play/pause light	Blinks once when the play/pause button is pressed.
(9) Next/fast forward light	Blinks once when the next/fast forward button is pressed.
(10) Stop light	Blinks once when the stop button is pressed.
(11) Volume mute light	<p>Blue: Computer sound is turned on.</p> <p>Amber: Computer sound is turned off.</p>
(12) Volume down light	Blinking: The volume scroll zone is being used to decrease speaker volume.

Component	Description
(13) Volume up light	Blinking: The volume scroll zone is being used to increase speaker volume.
(14) Num lock light	On: Num lock is on.

*The 2 power lights display the same information. The light on the power button is visible only when the computer is open. The power light on the front of the computer is visible whether the computer is open or closed.

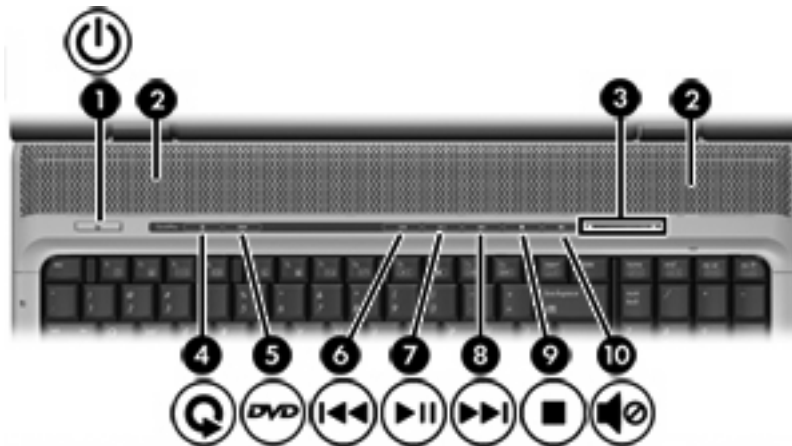Buttons, switches, and speakers




Component	Description
(1) Power button*	<p>When the computer is off, press the power button to turn on the computer.</p> <p>If the computer has stopped responding and Windows® shutdown procedures cannot be used, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, select Start > Control Panel > System and Maintenance > Power Options.</p>
(2) Speakers (2)	Produce sound.
(3) Volume scroll zone	Adjusts speaker volume. Slide your finger to the left to decrease volume and to the right to increase volume. You can also tap the minus sign on the scroll zone to decrease volume, or tap the plus sign on the scroll zone to increase volume.
(4) Media button	<p>Launches the QuickPlay program.</p> <p> NOTE If the computer has been set up to require a logon password, you may be asked to log on to Windows. QuickPlay launches after you log on. Refer to the QuickPlay online Help for more information.</p>
(5) DVD button	<p>Launches the DVD playback feature of the QuickPlay program.</p> <p> NOTE If the computer has been set up to require a logon password, you may be asked to log on to Windows. QuickPlay launches after you log on. Refer to the QuickPlay online Help for more information.</p>
(6) Previous/rewind button	<p>When a disc is playing in the optical drive:</p> <ul style="list-style-type: none"> Plays the previous track or chapter, when pressed once. Rewinds when pressed with the fn key.
(7) Play/pause button	<p>When a disc is in the optical drive and is</p> <ul style="list-style-type: none"> Not playing, plays the disc. Playing, pauses the disc.

Component	Description
(8) Next/fast forward button	When a disc is playing in the optical drive: <ul style="list-style-type: none"> Plays the next track or chapter, when pressed once. Fast forwards when pressed with the fn key.
(9) Stop button	When a disc is playing in the optical drive, stops the current disc activity.
(10) Volume mute button	Mutes and restores speaker sound.

*This table describes factory settings. For information about changing factory settings, refer to the user guides located in Help and Support.

Keys

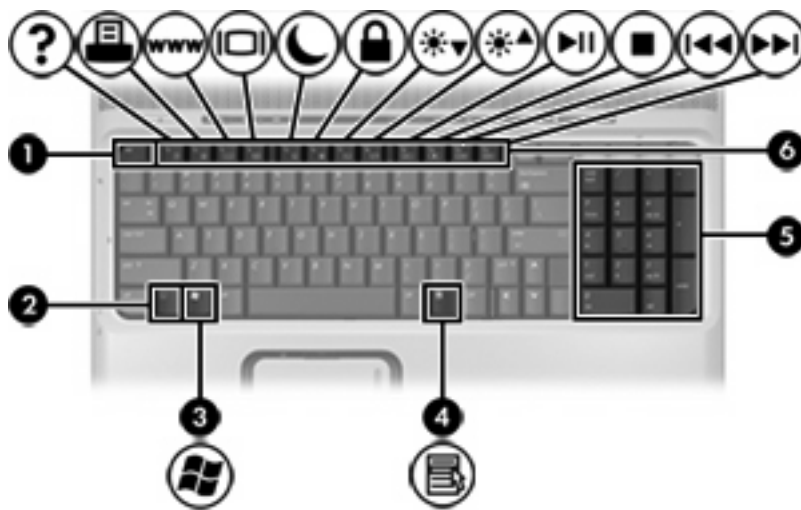


Component	Description
(1) esc key	Displays system information when pressed in combination with the fn key.
(2) fn key	Executes frequently used system functions when pressed in combination with a function key or the esc key.
(3) Windows logo key	Displays the Windows Start menu.
(4) Windows applications key	Displays a shortcut menu for items beneath the pointer.
(5) Integrated numeric keypad keys	Can be used like the keys on an external numeric keypad.
(6) Function keys	Execute frequently used system functions when pressed in combination with the fn key.

Hotkey quick reference

To perform this function	Press
Display information.	fn+esc

To perform this function	Press
Open Help and Support.	fn+f1
Open the Print Options window.	fn+f2
Open a Web browser.	fn+f3
Alternate between computer display and external display.	fn+f4
Initiate Hibernation.	fn+f5
Initiate QuickLock.	fn+f6
Decrease screen brightness.	fn+f7
Increase screen brightness.	fn+f8
Play, pause, or resume an audio CD or a DVD.	fn+f9
Stop an audio CD or a DVD.	fn+f10
Play the previous track or section on an audio CD or a DVD.	fn+f11
Play the next track or section on an audio CD or a DVD.	fn+f12

Front components

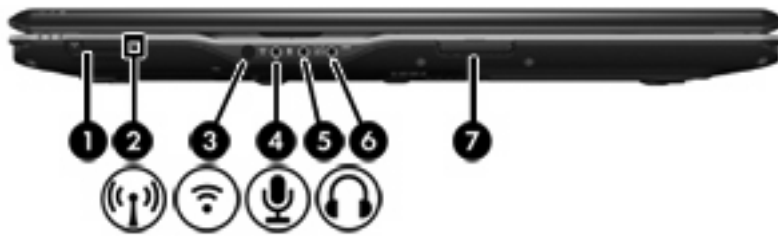



Component	Description
(1) Wireless switch	Turns the wireless feature on or off, but does not create a wireless connection.
(2) Wireless light	<p>Blue: An integrated wireless device, such as a wireless local area network (LAN) device and/or a Bluetooth® device, is turned on.</p> <p>Amber: All wireless devices are turned off.</p>
(3) Consumer infrared lens	Receives a signal from the HP Remote Control.
(4) Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
(5) Audio-out (headphone) jack	Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.
(6) Audio-out (headphone) S/PDIF jack	Provides enhanced audio performance, including surround sound and other high-end audio output.
(7) Display release latch	Opens the computer.




NOTE A wireless network must be set up in order to establish a wireless connection.

Rear components




Component	Description
Vent	<p data-bbox="831 436 1254 464">Enables airflow to cool internal components.</p> <hr/> <p data-bbox="831 491 1476 632"> CAUTION To prevent overheating, do not obstruct vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or thick rugs or clothing, to block airflow.</p> <hr/> <p data-bbox="831 667 1476 793"> NOTE The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>

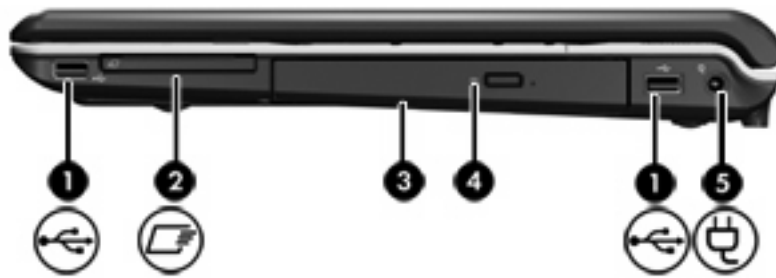


Right-side components




Component	Description
(1) USB ports (2)	Connect optional USB devices.
(2) ExpressCard slot	Supports optional ExpressCard/54 cards.
(3) Optical drive	Reads an optical disc.
(4) Optical drive light	Blinking: The optical drive is being accessed.
(5) Power connector	Connects an AC adapter.

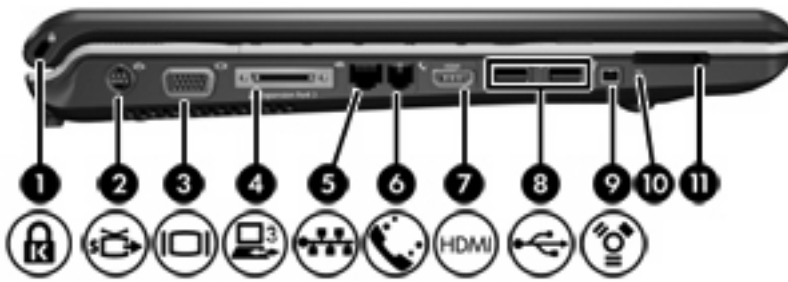

Left-side components




Component	Description
(1) Security cable slot	Attaches an optional security cable to the computer.  NOTE The security cable is designed to act as a deterrent, but may not prevent the computer from being mishandled or stolen.
(2) S-Video-out jack	Connects an optional S-Video device such as a television, VCR, camcorder, overhead projector, or video capture card.
(3) External monitor port	Connects an external VGA monitor or projector.
(4) Expansion port 3	Connects the computer to an optional expansion product.  NOTE The computer has only one expansion port. The term <i>expansion port 3</i> describes the type of expansion port.
(5) RJ-45 (network) jack	Connects a network cable.  NOTE The RJ-45 (network) jack provides Gigabit Ethernet functionality.
(6) RJ-11 (modem) jack	Connects a modem cable.
(7) HDMI port (select models only)	Connects an optional video or audio device, such as a high-definition television, or any compatible digital or audio component.
(8) USB ports (2)	Connect optional USB devices.
(9) 1394 port	Connects an optional IEEE 1394 or 1394a device, such as a camcorder.
(10) Digital Media Slot light	On: A digital card is being accessed.
(11) Digital Media Slot	Supports the following optional digital card formats: Secure Digital (SD) Memory Card, MultiMediaCard (MMC), Secure Digital Input/Output (SD I/O), Memory Stick (MS), Memory Stick Pro (MSP), xD-Picture Card (XD), xD-Picture Card (XD) Type M.

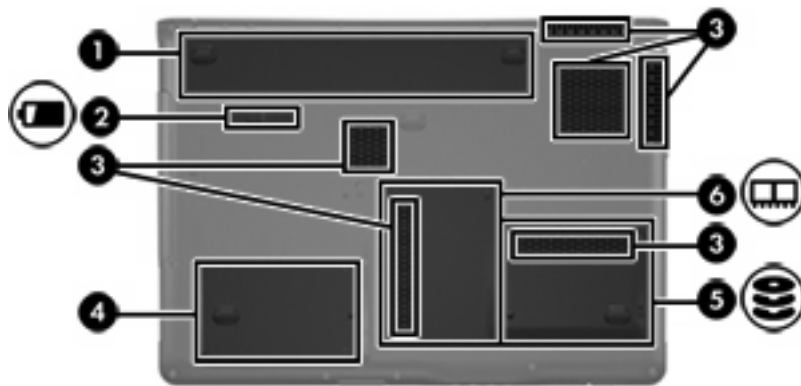
Bottom components



Component	Description
(1) Battery bay	Holds the battery.
(2) Battery release latch	Releases the battery from the battery bay.
(3) Vents (6)	Enable airflow to cool internal components.
	<p> CAUTION To prevent overheating, do not obstruct vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or thick rugs or clothing, to block airflow.</p> <p> NOTE The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p>
(4) Secondary hard drive bay	Holds an optional secondary hard drive.
(5) Primary hard drive bay	Holds the primary hard drive.
(6) Memory module compartment	Contains the memory module slots.

Display components

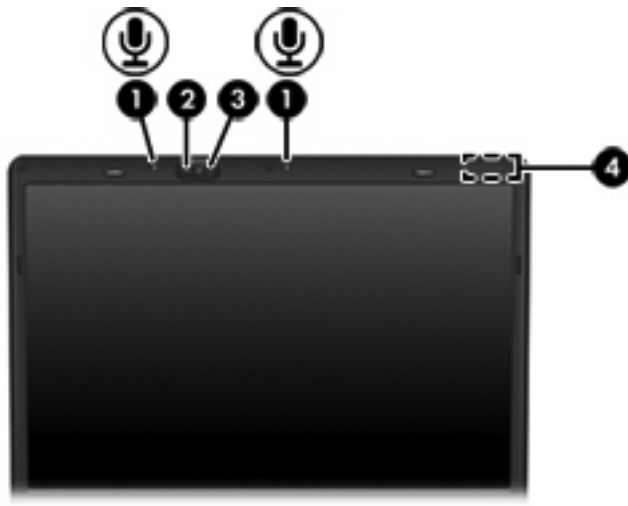

Component	Description
(1) Internal microphones (2) (select models only)	Record sound.  NOTE A microphone icon next to each microphone opening indicates that the computer has internal microphones.
(2) Integrated camera light (select models only)	On: The integrated camera is in use.
(3) Integrated camera (select models only)	Records video and captures still photos.
(4) Internal display switch	Turns off the display and initiates Sleep if the display is closed while the power is on.

Wireless antennae (select models only)

On select computer models, at least 2 antennae send and receive signals from one or more wireless devices. These antennae are not visible from the outside of the computer.

To see wireless regulatory notices, refer to your country's section of the *Regulatory, Safety and Environmental Notices* located in Help and Support.



NOTE For optimal transmission, keep the areas immediately around the antennae free from obstructions.

Additional hardware components



Component	Description
(1) Power cord*	Connects an AC adapter to an AC outlet.
(2) AC adapter	Converts AC power to DC power.
(3) Battery*	Powers the computer when the computer is not plugged into external power.

*Batteries and power cords vary in appearance by region and country.

Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

- Service tag—Provides the product brand and series name, serial number (s/n), and product number (p/n) of your computer. Have this information available when you contact Customer Care. The service tag label is affixed to the bottom of the computer.
- Microsoft Certificate of Authenticity—Contains the Microsoft® Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed to the bottom of the computer.
- Modem approval label—Provides regulatory information about the modem and lists the agency approval markings required by some of the countries in which the modem has been approved for use. You may need this information when traveling internationally. The modem approval label is affixed inside the hard drive bay.
- Wireless certification label(s) (select models only)—Provide information about optional wireless devices and the approval markings of some of the countries in which the devices have been approved for use. An optional device may be a wireless local area network (WLAN) device or an optional Bluetooth® device. If your computer model includes one or more wireless devices, one or more certification labels are included with your computer. You may need this information when traveling internationally. Wireless certification labels are affixed inside the memory module compartment.

2 Specifications

Operating environment

The operating environment information in the following table may be helpful if you plan to use or transport the computer in extreme environments.

Factor	Metric	U.S.
Temperature		
Operating	5°C to 35°C	41°F to 95°F
Nonoperating	-20°C to 60°C	-4°F to 140°F
Relative humidity (noncondensing)		
Operating	10% to 90%	10% to 90%
Nonoperating	5% to 95%	5% to 95%
Maximum altitude (unpressurized)		
Operating (14.7 to 10.1 psia*)	-15 m to 3,048 m	-50 ft to 10,000 ft
Nonoperating (14.7 to 4.4 psia*)	-15 m to 12,192 m	-50 ft to 40,000 ft

*Pounds per square inch absolute (psia) is another unit of measurement for altitude.

Rated input power

The power information in this section may be helpful if you plan to travel internationally with your computer.

The computer operates on DC power, which can be supplied by an AC or a DC power source. Although the computer can be powered from a stand-alone DC power source, it should be powered only with an AC adapter or a DC power source supplied and approved by HP for the computer.

The computer is capable of accepting DC power within the following specifications.

Input power	Rating
Operating voltage	19.0 V dc
Operating current	4.74 A

This product is designed for IT power systems in Norway with phase-to-phase voltage not exceeding 240 V rms.

Expansion port input/output signals

The signal information in this section may be helpful if you plan to use an optional expansion product that connects to the expansion port 3 on the computer. (The computer has only one expansion port. The term expansion port 3 describes the type of expansion port.)

The following table identifies the input and output signals supported by the expansion port 3 on the computer.

Feature	Support
USB 2.0	Yes
Gigabit Ethernet	Yes
IEEE 1394 (4-pin port)	No
Consumer infrared (for optional remote control only)	Yes
Power inputs	65-W to 90-W maximum
Composite TV	Yes
S-Video TV	Yes
Component TV	Yes
S/PDIF audio	Yes
DVI	No
Headphone/speaker audio-out	Yes
Microphone audio-in	Yes
VGA	Yes
Power button	Yes
Volume control (up/down)	Yes
Mute/unmute status	Yes

Index

Symbols/Numerics

1394 port, identifying 11

A

AC adapter, identifying 15
altitude specifications 17
antennae 14
applications key, Windows 6
audio-in (microphone) jack, identifying 8
audio-out (headphone) jack, identifying 8
audio-out (headphone) S/PDIF jack, identifying 8

B

battery
 identifying 15
battery bay 12, 16
battery light, identifying 3
battery release latch, identifying 12
bays
 battery 12, 16
 hard drive 12
Bluetooth label 16
buttons
 DVD 5
 media 5
 next/fast forward 6
 play/pause 5
 power 5
 previous/rewind 5
 stop 6
 TouchPad 2
 TouchPad on/off 2
 volume mute 6

C

camera, identifying 13

caps lock light, identifying 3
Certificate of Authenticity label 16
compartments
 memory module 12
components
 bottom 12
 display 13
 front 8
 left-side 11
 rear 9
 right-side 10
 top 2
connector, power 10
cord, power, identifying 15

D

Digital Media Slot light, identifying 11
Digital Media Slot, identifying 11
display release latch, identifying 8
display switch, identifying 13
drive light, identifying 3
drives
 hard 12
 optical 10
DVD button light, identifying 3
DVD button, identifying 5

E

environmental specifications 17
esc key, identifying 6
expansion port, identifying 11
expansion port, input/output signals 19
ExpressCard slot, identifying 10
external monitor port, identifying 11

F

fn key, identifying 6
function keys, identifying 6

H

hard drive bay, identifying 12
HDMI port, identifying 11
headphone (audio-out) jack 8
headphone (audio-out) S/PDIF jack 8
Hibernation hotkey 7
hotkeys, quick reference 6
humidity specifications 17

I

IEEE 1394 port, identifying 11
infrared lens, identifying 8
initiating Hibernation 7
initiating Sleep 13
integrated camera light, identifying 13
integrated camera, identifying 13
internal display switch, identifying 13
internal microphones, identifying 13

J

jacks
 audio-in (microphone) 8
 audio-out (headphone) 8
 audio-out (headphone) S/PDIF 8
 RJ-11 (modem 11
 RJ-45 (network 11
 S-Video-out 11

K

keypad keys, identifying 6

- keys
 - esc 6
 - fn 6
 - function 6
 - keypad 6
 - Windows applications 6
 - Windows logo 6
- L**
- labels
 - Bluetooth 16
 - Microsoft Certificate of Authenticity 16
 - modem approval 16
 - regulatory 16
 - service tag 16
 - wireless certification 16
 - WLAN 16
- latch, battery release 12
- lights
 - battery 3
 - caps lock 3
 - Digital Media Slot 11
 - drive 3
 - DVD button 3
 - integrated camera 13
 - media button 3
 - mute 3
 - next/fast forward 3
 - num lock 4
 - optical drive 10
 - play/pause 3
 - power 3
 - previous/rewind 3
 - stop 3
 - TouchPad 2
 - volume down 3
 - volume mute 3
 - volume up 4
 - wireless 8
- M**
- media activity buttons, identifying 5
- media activity lights, identifying 3
- media button light, identifying 3
- media button, identifying 5
- memory module compartment, identifying 12
- microphone (audio-in) jack 8
- Microsoft Certificate of Authenticity label 16
- modem approval label 16
- monitor port, external 11
- mute button, identifying 6
- mute light, identifying 3
- N**
- next/fast forward button, identifying 6
- next/fast forward light, identifying 3
- num lock light, identifying 4
- O**
- operating environment specifications 17
- operating system
 - Microsoft Certificate of Authenticity label 16
 - Product Key 16
- optical drive light, identifying 10
- optical drive, identifying 10
- P**
- play/pause button, identifying 5
- play/pause light, identifying 3
- ports
 - 1394 11
 - expansion 11
 - external monitor 11
 - HDMI 11
 - USB 10, 11
- power button, identifying 5
- power connector, identifying 10
- power cord 15
- power lights, identifying 3
- Previous/rewind button, identifying 5
- previous/rewind light, identifying 3
- Product Key 16
- product name and number, computer 16
- R**
- rated input power specifications 18
- regulatory information
 - modem approval label 16
 - regulatory label 16
 - wireless certification labels 16
- release latch, battery 12
- RJ-11 (modem) jack, identifying 11
- RJ-45 (network) jack, identifying 11
- S**
- S-Video-out jack, identifying 11
- scrolling regions, TouchPad 2
- security cable slot, identifying 11
- serial number, computer 16
- service tag 16
- slots
 - Digital Media 11
 - ExpressCard 10
 - memory module 12
 - security cable 11
- speakers, identifying 5
- specifications
 - operating environment 17
 - rated input power 18
- stop button, identifying 6
- stop light, identifying 3
- T**
- temperature specifications 17
- TouchPad
 - buttons 2
 - identifying 2
 - scrolling regions 2
- TouchPad light, identifying 2
- TouchPad on/off button 2
- traveling with the computer
 - environmental specifications 18
 - modem approval label 16
 - wireless certification labels 16
- U**
- USB ports, identifying 10, 11
- V**
- vents, identifying 9, 12
- volume down light, identifying 3
- volume mute button, identifying 6
- volume mute light, identifying 3
- volume scroll zone, identifying 5
- volume up light, identifying 4

W

- Windows applications key,
 identifying 6
- Windows logo key, identifying 6
- wireless antennae 14
- wireless certification label 16
- wireless light, identifying 8
- wireless switch, identifying 8
- WLAN device 16
- WLAN label 16

