HP Deskjet D2400 series

Reference Guide מדריך עזר





Windows: For information on setting up the printer, refer to the Setup Guide. For information on using the printer, see the Help that was placed on your computer when you installed your printer.

> Macintosh: לקבלת מידע על חיבור המדפסת והגדרתה, עיין במדריך ההתקנה. לקבלת מידע על השימוש במדפסת, עיין בעזרה שהותקנה במחשב בעת התקנת המדפסת.

> > זקוק לעזרה נוספת?

Windows: לקבלת מידע על חיבור המדפסת והגדרתה,

עיין במדריך ההתקנה. לקבלת מידע על השימוש במדפסת, עיין בעזרה שהותקנה במחשב בעת התקנת המדפסת.

Macintosh: For information on setting up the printer, refer to the Setup Guide. For information on using the printer, see the Help that was placed on your computer when you installed your printer.

Need more help?



🕑 w	ww.hp.com/support	
-----	-------------------	--

Africa (English speaking)	+27 11 2345872
Afrique (francophone)	+33 1 4993 9230
021 67 22 80	اليزائر
Argentina (Buenos Aires)	54-11-4708-1600
Argentina	0-800-555-5000
Australia	www.hp.com/support/australia
Österreich	www.hp.com/support
17212049	البحرين
België	www.hp.com/support
Belgique	www.hp.com/support
Brasil (Sao Paulo)	55-11-4004-7751
Brasil	0-800-709-7751
Canada	1-(800)-474-6836 (1-800 hp invent)
Central America & The Caribbean	www.hp.com/support
Chile	800-360-999
中国	www.hp.com/support/china
Colombia (Bogotá)	571-606-9191
Colombia	01-8000-51-4746-8368
Costa Rica	0-800-011-1046
Česká republika	810 222 222
Danmark	www.hp.com/support
Ecuador (Andinatel)	1-999-119 🕾 800-711-2884
Ecuador (Pacifitel)	1-800-225-528 2 800-711-2884
(02) 6910602	يمر
El Salvador	800-6160
España	www.hp.com/support
France	www.hp.com/support
Deutschland	www.hp.com/support
Ελλάδα (από το εξωτερικό)	+ 30 210 6073603
Ελλάδα (εντός Ελλάδας)	801 11 75400
Ελλάδα (από Κύπρο)	800 9 2654
Guatemala	1-800-711-2884
香港特別行政區	www.hp.com/support/hongkong
Magyarország	06 40 200 629
India	www.hp.com/support/india
Indonesia	www.hp.com/support
+971 4 224 9189	العراق
+971 4 224 9189	الكريث
+971 4 224 9189	قيدان
+971 4 224 9189	فطر
+971 4 224 9189	اليىن
Ireland	www.hp.com/support
1-700-503-048	שראל
Italia	www.hp.com/support
Jamaica	1-800-711-2884

日本	www.hp.com/support/japan
0800 222 47	الأردن
한국	www.hp.com/support/korea
Luxembourg	www.hp.com/support
Malaysia	www.hp.com/support
Mauritius	(262) 262 210 404
México (Ciudad de México)	55-5258-9922
México	01-800-472-68368
081 005 010	لمغرب
Nederland	www.hp.com/support
New Zealand	www.hp.com/support
Nigeria	(01) 271 2320
Norge	www.hp.com/support
24791773	لىمىان ئىسان
Panamá	1-800-711-2884
Paraguay	009 800 54 1 0006
Perú	0-800-10111
Philippines	www.hp.com/support
Polska	0801 800 235
Portugal	www.hp.com/support
Puerto Rico	1-877-232-0589
República Dominicana	1-800-711-2884
Reunion	0820 890 323
România	0801 033 390
Россия (Москва)	+7 495 7773284
Россия (Санкт-Петербург)	+7 812 3324240
800 897 1415	نسعريية
Singapore	www.hp.com/support/singapore
Slovensko	0850 111 256
South Africa (RSA)	0860 104 771
Suomi	www.hp.com/support
Sverige	www.hp.com/support
Switzerland	www.hp.com/support
臺灣	www.hp.com/support/taiwan
ไทย	www.hp.com/support
071 891 391	ونىن
Trinidad & Tobago	1-800-711-2884
Türkiye	+90 (212)291 38 65
Україна	(044) 230-51-06
600 54 47 47	لإمارات العربية المتحدة
United Kingdom	www.hp.com/support
United States	1-(800)-474-6836 (1-800 hp invent)
Uruguay	0004-054-177
Venezuela (Caracas)	58-212-278-8666
Venezuela	0-800-474-68368
Viêt Nam	www.hp.com/support

Notice

The information contained in this document is subject to change without notice. All rights reserved. Reproduction, adaptation, or translation of this material is prohibited without prior written permission of Hewlett-Packard, except as allowed under copyright laws. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

הודעה:

המידע הכלול במסמך זה כפוף לשינויים ללא הודעה מוקדמת. כל הזכויות שמורות. שכפול, עיבוד או תרגום של חומר זה אסור ללא קבלת אישור מראש בכתב מטעם Hewlett-Packard, למעט כפי שמתירים זאת חוקי זכויות היוצרים. האחריות היחידה למוצרים ולשירותים של HP מפורטת בהצהרות האחריות המפורשות הנלוות למוצרים ולשירותים אלה. אין לפרש דבר מן האמור במסמך זה כהענקת אחריות נוספת. חברת HP לא תישא באחריות לשגיאות או השמטות מסיבות טכניות או בעקבות עריכה.

Installation help

No power?

Verify the following:

- The printer power cord is connected to an electrical outlet.
- The power cord is firmly connected to the power supply or adapter.
- The power supply is firmly connected to the printer.



Windows installation help

No plug and play?

- Make sure the printer is connected and is turned on.
- Make you sure you connect the USB cable between the printer and your computer only after you are prompted.
- Make sure the USB cable is firmly attached to your computer and the printer.
- Attach the USB cable directly to your computer instead of through a USB hub.



Printer help

Printer prints on multiple sheets at once

If this happens, check the following:

- Paper weight: Use paper that is within the recommended specifications.
 Letter Paper: 65 to 90 g/m² (16 to 24 lb)
 Legal Paper: 70 to 90 g/m² (20 to 24 lb)
 Envelopes: 70 to 90 g/m² (20 to 24 lb)
 Cards: Up to 200 g/m² (110-lb index maximum)
 Photo Paper: Up to 280 g/m² (75-lb index maximum)
- Paper tray: Reload the paper into the paper tray, pushing the paper until you feel resistance, and then slide the paper guide firmly against the edge of the paper stack.

Printer does not feed paper

Try one or more of the following solutions:

- · Reduce the number of sheets in the input tray.
- · Remove paper from the input tray, and reload it.
- Use only one type of paper at a time.
- Use a different type of paper.

Paper jam

- 1. Remove the paper from the paper tray.
- If you are printing labels, verify that a label did not become detached from the label sheet while passing through the printer.
- 3. Turn off the printer.
- 4. Disconnect the printer power cord from the electrical outlet.
- 5. Remove the rear access door. Press the handle to the right, and then pull out the door.



6. Remove the paper jam from the back of the printer, and then replace the rear access door securely.

Print job stuck in queue (Windows)

If the printer stops printing before the job is complete, the print job might be stalled in the print queue.

- Verify that you are using the default printer to print your documents. Check the **Printers** or **Printers and Faxes** folder on your computer and make sure your printer icon has a check mark next to it. If you have multiple icons of the same printer, delete the extra icons.
- Make sure that your printer is not set to pause printing. Right-click the printer icon and check the shortcut menu.
- If the print service has stopped responding, locate the Administrative Tools folder on your computer, doubleclick Services, and then double-click Print Spooler. Click Stop, and then click Start to restart the print service.

Photosmart Essential button - no

response

If nothing happens when you press the Photosmart Essential button, install the HP Photosmart Software that came with your printer. If it is installed, restart your computer.



- If the paper jam cannot be removed from the back of the printer, raise the printer cover, remove the paper jam from the front of the printer, and then lower the cover.
- 8. Reload paper in the paper tray.
- 9. Reconnect the printer power cord to the electrical outlet.
- 10. Turn on the printer.
- 11. Reprint the document.

Minimum system requirements

For information on minimum system requirements, see the Readme.

Ink from the cartridges is used in the printing process in a number of different ways, including in the initialization process, which prepares the device and cartridges for printing, and in printhead servicing, which keeps print nozzles clear and ink flowing smoothly. In addition, some residual ink is left in the cartridge after it is used. For more information, see www.hp.com/go/inkusage.

Englis

עזרה לתהליך ההתקנה

אין מתח חשמלי?

ודא כי:

- . כבל החשמל של המדפסת מחובר לשקע חשמל.
- כבל החשמל מחובר היטב לספק כוח או למתאם.
 - ספק הכוח מחובר היטב למדפסת.



Windows עזרה להתקנת

הכנס-הפעל אינו פועל?

- ודא שהמדפסת מחוברת ומופעלת.
- הקפד לחבר את כבל ה-USB בין המדפסת למחשב רק לאחר שתופיע ההנחיה המתאימה.
 - ודא שכבל ה-USB מחובר היטב למחשב ולמדפסת.
- חבר את כבל ה-USB למחשב ישירות, ולא דרך רכזת USB.



עזרה למדפסת

המדפסת מדפיסה על מספר גיליונות בבת אחת

במקרה כזה, הקפד לבצע את הפעולות הבאות:

- משקל הנייר: השתמש בנייר שתואם את המפרט המומלץ. נייר Lette: 65 עד 30 גר׳/מ״ר (16 עד 24 ליברה) נייר Lette: 70 עד 30 גר׳/מ״ר (20 עד 24 ליברה) מעטפות: 70 עד 30 גר׳/מ״ר (20 עד 24 ליברה) כרטיסיות: עד 200 גר׳/מ״ר (כרטיסיות – עד 110 ליברה) נייר תצלומים: עד 280 גר׳/מ״ר (כרטיסיות – עד 75 ליברה)
 - מגש הנייר: טען מחדש את הנייר לתוך מגש הנייר. דחף את הנייר עד שתרגיש התנגדות, ולאחר מכן החלק את מכוון הנייר בחוזקה עד שיישען על קצה ערימת הנייר.

אין הזנת דפים לתוך המדפסת

- נסה אחד מהפתרונות הבאים או כמה מהם:
- הפחת את מספר הגיליונות במגש הקלט.
- הוצא נייר ממגש הקלט, וטען אותו שוב.
- השתמש רק בסוג אחד של נייר בו-זמנית.
 - השתמש בסוג אחר של נייר.

חסימת נייר

- .1 הוצא את הנייר ממגש הנייר.
- אם אתה מדפיס מדבקות, ודא שאף מדבקה לא הופרדה מגיליון המדבקות במהלך המעבר במדפסת.
 - 3. כבה את המדפסת.
 - נתק את כבל החשמל של המדפסת משקע החשמל.
- הסר את דלת הגישה האחורית. לחץ על הידית מצד ימין ולאחר מכן שלוף את הדלת החוצה.



 הוצא את הנייר התקוע מהחלק האחורי של המדפסת והחזר את דלת הגישה האחורית למקומה.



- אם לא ניתן לשחרר את הנייר התקוע מהחלק האחורי של המדפסת, הרם את מכסה המדפסת, הוצא את הנייר התקוע מחזית המדפסת, ולאחר מכן הורד את המכסה.
 - 8. טען שוב נייר במגש הנייר.
 - חבר שוב את כבל החשמל של המדפסת לשקע החשמל.
 - 10. הפעל את המדפסת.
 - .11 הדפס את המסמך מחדש.

עבודת הדפסה תקועה בתור (Windows)

אם המדפסת מפסיקה להדפיס לפני שעבודת ההדפסה הסתיימה, ייתכן שעבודת ההדפסה התעכבה בתור ההדפסות.

- ודא שאתה משתמש במדפסת ברירת המחדל להדפסת המסמכים שלך. בדוק את התיקייה מדפסות או מדפסות ופקסים במחשב וודא שלצד סמל המדפסת מופיע סימן ביקורת. אם יש מספר סמלים של אותה מדפסת, מחק את הסמלים המיותרים.
 - ודא שהמדפסת אינה מוגדרת להשהיית ההדפסה. לחץ לחיצה ימנית על סמל המדפסת ובדוק את תפריט הקיצור.
 - אם שירות ההדפסה הפסיק להגיב, אתר את תיקיית כלי ניהול במחשב, לחץ לחיצה כפולה על ישירותיםי, ולאחר מכן לחץ לחיצה כפולה על Spooler (הדפסה ברקע). לחץ על הספק, ולאחר מכן לחץ על הפעל כדי להפעיל מחדש את שירות ההדפסה.

לחצן Photosmart Essential – אין תגובה

אם לא קורה דבר כאשר אתה לוחץ על לחצן Photosmart Essential, התקן את תוכנת HP Photosmart שנלוותה למדפסת. אם התוכנה כבר מותקנת, הפעל מחדש את המחשב.



דרישות מערכת מינימליות

למידע על דרישות מערכת מינימליות, עיין בקובץ ה-Readme. דיו מהמחסניות משמש בתהליך ההדפסה במספר דרכים שונות, לרבות בתהליך האתחול, אשר מכין את ההתקן ואת המחסניות להדפסה. וכן בטיפול בראשי ההדפסה, אשר מונע חסימות בחרירי

ההדפסה ומבטיח זרימה קולחת של דיו. בנוסף, ייתכנו שיירים של דיו במחסנית לאחר השימוש. לקבלת מידע נוסף, ראה www.hp.com/go/inkusage

דרישות כוח

|--|

Power supply	Input voltage	Input frequency
HP Deskjet D240	0 series	
0957-2231	100 to 240 Vac (± 10%)	50/60 Hz (± 3 Hz)

Power consumption

Less than 1 watt maximum when off Less than 3 watts in power save mode 20 watts maximum average when printing

Operating environment

Recommended operating conditions Termperature: 15° to 30°C (59° to 86°F) Humidity: 20 to 80% RH non-condensing Maximum operating conditions Termperature: 5° to 40°C (41° to 104°F) Humidity: 15 to 80% RH non-condensing Maximum shipping conditions Termperature: -40° to 60°C (-40° to 140°F) Humidity: 5 to 90% RH non-condensing

תדר הזנה	מתח הזנה	ספק כוח
	HP Des	skjet D2400 series
Hz 50/60 (Hz 3 ±)	100 עד 100 Vac 240 עד (10% ±)	0957-2231

צריכת חשמל

פחות מ-1 ואט במצב כבוי פחות מ-3 וואט במצב חיסכון בחשמל מקסימום 20 ואט בממוצע בעת הדפסה

סביבת הפעלה

תנאי הפעלה מומלצים טמפרטורה: "260 עד "300 לחות: %20 עד %80 לחות יחסית ללא עיבוי תנאי הפעלה מקסימליים לחות: %15 עד %80 לחות יחסית ללא עיבוי תנאי משלוח מקסימליים טמפרטורה: "40-6 לחות יחסית ללא עיבוי לחות: %5 עד %90 לחות יחסית ללא עיבוי

HP printer limited warranty statement

HP product	Duration of limited warranty
Software Media	90 days
Printer	1 year
Print or Ink cartridges	Until the HP ink is depleted or the "end of warranty" date printed on the cartridge has been reached, whichever occurs first. This warranty does not cover HP ink products that have been refilled, remanufactured, refurbished, misused, or tampered with.
Accessories	1 year unless otherwise stated

A. Extent of limited warranty

- Hewlett-Packard (HP) warrants to the end-user customer that the HP products specified above will be free from defects in materials and workmanship for the duration specified above, which duration begins on the date of purchase by the customer.
- 2. For software products, HP's limited warranty applies only to a failure to execute programming instructions. HP does not warrant that the operation of any product will be interrupted or error free.
- 3. HP's limited warranty covers only those defects that arise as a result of normal use of the product, and does not cover any other problems, including those that arise as a result of:
 - a. Improper maintenance or modification;
 - b. Software, media, parts, or supplies not provided or supported by HP;
 - c. Operation outside the product's specifications;
 - d. Unauthorized modification or misuse.
- 4. For HP printer products, the use of a non-HP cartridge or a refilled cartridge does not affect either the warranty to the customer or any HP support contract with the customer. However, if printer failure or damage is attributable to the use of a non-HP or refilled cartridge or an expired ink cartridge, HP will charge its standard time and materials charges to service the printer for the particular failure or damage.
- If HP receives, during the applicable warranty period, notice of a defect in any product which is covered by HP's warranty, HP shall either repair or replace the product, at HP's option.
- 6. If HP is unable to repair or replace, as applicable, a defective product which is covered by HP's warranty, HP shall, within a reasonable time after being notified of the defect, refund the purchase price for the product.
- 7. HP shall have no obligation to repair, replace, or refund until the customer returns the defective product to HP.
- Any replacement product may be either new or like-new, provided that it has functionality at least equal to that of the product being replaced.
- 9. HP products may contain remanufactured parts, components, or materials equivalent to new in performance.
- 10. HP's Limited Warranty Statement is valid in any country where the covered HP product is distributed by HP. Contracts for additional warranty services, such as on-site service, may be available from any authorized HP service facility in countries where the product is distributed by HP or by an authorized importer.
- B. Limitations of warranty
 - TO THE EXTENT ALLOWED BY LOCAL LAW, NEITHER HP NOR ITS THIRD PARTY SUPPLIERS MAKES ANY OTHER WARRANTY OR CONDITION OF ANY KIND, WHETHER EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, AND FITNESS FOR A PARTICULAR PURPOSE.
- C. Limitations of liability
 - 1. To the extent allowed by local law, the remedies provided in this Warranty Statement are the customer's sole and exclusive remedies.
 - 2. TO THE EXTENT ALLOWED BY LOCAL LAW, EXCEPT FOR THE OBLIGATIONS SPECIFICALLY SET FORTH IN THIS WARRANTY STATEMENT, IN NO EVENT SHALL HP OR ITS THIRD PARTY SUPPLIERS BE LIABLE FOR DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER BASED ON CONTRACT, TORT, OR ANY OTHER LEGAL THEORY AND WHETHER ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
- D. Local law
 - 1. This Warranty Statement gives the customer specific legal rights. The customer may also have other rights which vary from state to state in the United States, from province to province in Canada, and from country to country elsewhere in the world.
 - 2. To the extent that this Warranty Statement is inconsistent with local law, this Warranty Statement shall be deemed modified to be consistent with such local law. Under such local law, certain disclaimers and limitations of this Warranty Statement may not apply to the customer. For example, some states in the United States, as well as some governments outside the United States (including provinces in Canada), may:
 - a. Preclude the disclaimers and limitations in this Warranty Statement from limiting the statutory rights of a consumer (e.g., the United Kingdom);
 - b. Otherwise restrict the ability of a manufacturer to enforce such disclaimers or limitations; or
 - c. Grant the customer additional warranty rights, specify the duration of implied warranties which the manufacturer cannot disclaim, or allow limitations on the duration of implied warranties.
 - 3. THE TERMS IN THIS WARRANTY STATEMENT, EXCEPT TO THE EXTENT LAWFULLY PERMITTED, DO NOT EXCLUDE, RESTRICT, OR MODIFY, AND ARE IN ADDITION TO, THE MANDATORY STATUTORY RIGHTS APPLICABLE TO THE SALE OF THE HP PRODUCTS TO SUCH CUSTOMERS.

HP Limited Warranty

Dear Customer,

You will find below the name and address of the HP entity responsible for the performance of the HP Limited Warranty in your country.

You may have additional statutory rights against the seller based on your purchase agreement. Those rights are not in any way affected by this HP Limited Warranty.

Ireland: Hewlett-Packard Ireland Ltd. 30 Herbert Street IRL-Dublin 2 United Kingdom: Hewlett-Packard Ltd, Cain Road, Bracknell, GB-Berks RG12 1HN

כתב אחריות מוגבלת למדפסת HP

מוצר HP	תקופת האחריות המוגבלת
מדיית תוכנה	90 יום
מדפסת	1 שנה
מחסניות הדפסה או דיו ,	עד להתרוקנות הדיו של HP או לתאריך "סיום האחריות" (end of warranty) המודפס על גבי המחסנית - המוקדם מביניהם. אחריות זו אינה מכסה מוצרי דיו של HP אשר מולאו מילוי חוזר, יוצרו מחדש, שופצו, או שנעשה בהם שימוש לרעה או שחובלו.
אביזרים	1 שנה, אלא אם צוין אחרת

א. גבולות האחריות המוגבלת

- חברת Hewlett-Packard) מתחייבת בפני הלקוח, משתמש הקצה, כי במוצרי HP המוזכרים לעיל לא יהיו פגמים בחומר ובעבודה למשך התקופה המצוינת לעיל, המתחילה במועד הרכישה.
 - גני מוצרי תוכנה, האחריות המוגבלת של חברת HP חלה רק במקרה של כשל בביצוע הוראות תכנות. חברת HP אינה מתחייבת כי פעולתו של מוצר כלשהו תהיה רציפה או נטולת שגיאות.
 - 3. האחריות המוגבלת של HP מכסה רק פגמים המופיעים כתוצאה משימוש רגיל במוצר, ואינה מכסה בעיות אחרות כלשהן, כולל אלה הנגרמות כתוצאה מ:
 - א. תחזוקה לא נאותה או הכנסת שינויים;
 - ב. תוכנה, מדיה, חלפים או פריטים מתכלים שלא סופקו על-ידי HP או לא נתמכים על-ידה; או
 - ג. הפעלה החורגת מהוראות מפרט המוצר.
 - ד. שינוי או שימוש לרעה, שלא באישור.
- 4. לגבי מוצרי מדפסת של HP, השימוש במחסנית שאינה מתוצרת HP או במחסנית שמולאה מילוי חוזר אינו משפיע על האחריות כלפי הלקוח או על חוזה תמיכה כלשהו מול הלקוח. יחד עם זאת, והיה והתקלה או הנזק למדפסת ייוחסו לשימוש במחסנית דיו שלא מתוצרת HP או שמולאה מילוי חוזר, יחויב הלקוח בעלויות הרגילות של תיקון המדפסת מבחינת זמן וחומרים.
 - 5. היה ובמהלך תקופת האחריות תקבל חברת HP הודעה על פגם במוצר חומרה המכוסה במסגרת האחריות, החברה תתקן או תחליף את המוצר הפגום – לפי בחירתה.
- 6. היה ולא יהיה בידי החברה לתקן או להחליף בהתאם למקרה מוצר פגום המכוסה במסגרת האחריות, תשיב החברה ללקוח את סכום הרכישה בתוך פרק זמן סביר ממועד ההודעה על הפגם.
 - 7. חברת HP לא תהיה מחויבת לתקן, להחליף או להעניק החזר כספי כאמור, אלא לאחר שיחזיר הלקוח את המוצר הפגום לידיה.
- 8. המוצר שיינתן ללקוח כנגד החזרת המוצר הפגום יהיה חדש או כמו-חדש, ובלבד שטיב פעולתו יהיה זהה לזה של המוצר המוחזר, אם לא טוב יותר.
 - 9. מוצרי HP עשויים לכלול חלקים, רכיבים או חומרים שעובדו מחדש, שרמת ביצועם תהיה זהה לזו של מוצרים חדשים.
- 10.הצהרת האחריות המוגבלת של HP תקפה בכל מדינה בה מוצר HP המכוסה מופץ על-ידי HP. חוזים לגבי שירותי אחריות נוספים, כגון שירות באתר הלקוח, ניתנים על ידי מרכזי השירות המורשים של HP במדינות שבהם המוצר מופץ על ידי החברה עצמה או על ידי יבואן מורשה.
 - ב. הגבלות על האחריות

ככל שמתיר זאת החוק המקומי, חברת HP או מי מספקיה אינם מעניקים אחריות או תנאי מכל סוג שהוא, בין במפורש או מכללא, או תנאים מכללא הנוגעים לסחירות המוצר, לאיכות משביעת-רצון ולהתאמת המוצר למטרה מסוימת.

- ג. הגבלות על החבות
- 1. ככל שמתיר זאת החוק המקומי, הסעדים המצוינים בהצהרת אחריות זה הנם סעדיו היחידים והבלעדיים של הלקוח.
- ככל שמתיר זאת החוק המקומי, למעט ההתחייבויות המפורטות בכתב אחריות זה, לא יהיו חברת HP ומי מספקיה אחראיים, בכל מקרה שהוא, לנזקים ישירים, עקיפים, מיוחדים, תוצאתיים, בין מכוח חוזה, נזיקין או כל תיאוריה משפטית אחרת, ובין אם ייוודע להם על האפשרות לנזקים שכאלה.
 - ד. חוק מקומי
- כתב אחריות זה מעניק ללקוח זכויות משפטיות ספציפיות. ללקוח עשויות להיות זכויות אחרות, המשתנות ממדינה למדינה בארה"ב, ממחוז למחוז בקנדה, וממדינה למדינה בשאר העולם.
 - 2. ככל שכתב אחריות זה אינו עולה בקנה אחד עם החוק המקומי, יהיה הוא נתון לשינויים לצורך התאמתו לחוק המקומי. ייתכן שהגבלות וויתורים מסוימים הניתנים ללקוח במסגרת כתב אחריות זה לא יהיו תקפים על פי החוק המקומי. לדוגמה, מדינות מסוימות בארה"ב, וכן ממשלים מסוימים מחוץ לארה"ב (לרבות מחוזות בקנדה), רשאים:
 - א. למנוע מהוויתורים וההגבלות הנזכרים בכתב אחריות זה להגביל את זכויותיו החוקתיות של הלקוח (לדוגמה, באנגליה);
 - ב. להגביל בדרך אחרת את יכולת היצרן לאכוף הגבלות או ויתורים כאלה; או
 - ג. להעניק ללקוח זכויות אחריות נוספות, לציין משך אחריות מכללא שהיצרן אינו יכול להעניק, או לאפשר הגבלות על משך האחריות מכללא.
- 3. תנאי האחריות הכלולים בהצהרת אחריות זו, למעט במידה המותרת על-פי כל דין, אינם שוללים, אינם מגבילים ואינם משנים את זכויות החובה הסטטוטוריות החלות על מכירת המוצרים של HP ללקוחות כאמור, אלא הם מהווים תוספת לאותן זכויות.

This page left intentionally blank.

This page left intentionally blank.

Regulatory information

Regulatory model identification number

For regulatory identification purposes, your product is assigned a Regulatory Model Number. The Regulatory Model Number for your product is VCVRA-0702. This regulatory number should not be confused with the marketing name (HP Deskjet D2400) or product numbers (CB614A etc.).

מידע תקינה

מס׳ הזיהוי של הדגם לצורכי תקינה

כדי לזהות את המוצר למטרות תקינה, הוקצה למוצר שלך מספר דגם לצורכי תקינה. מספר הדגם לתקינה של המוצר שלך הוא VCVRA-0702. אין לטעות בין מספר זה לבין השם השיווקי (HP Deskjet D2400) או מספרי המוצר (CB614A וכו׳).

Find information

Windows: Troubleshooting, product specifications, legal notices, environmental, and additional regulatory information are included in the Help that was placed on your computer when you installed your printer.

Macintosh: Troubleshooting, product specifications, legal notices, environmental, and additional regulatory information are included in the Help that was placed on your computer when you installed your printer.

איתור מידע

Windows: פתרון בעיות, מפרט המוצר, הודעות משפטיות, מידע סביבתי ומידע תקינה נוסף כלולים בעזרה והותקנו במחשב בעת התקנת המדפסת.

Macintosh: פתרון בעיות, מפרט המוצר, הודעות משפטיות, מידע סביבתי ומידע תקינה נוסף כלולים בעזרה והותקנו במחשב בעת התקנת המדפסת.