 
 


HP CM8060/CM8050 Color MFP with Edgeline Technology PS – Printing

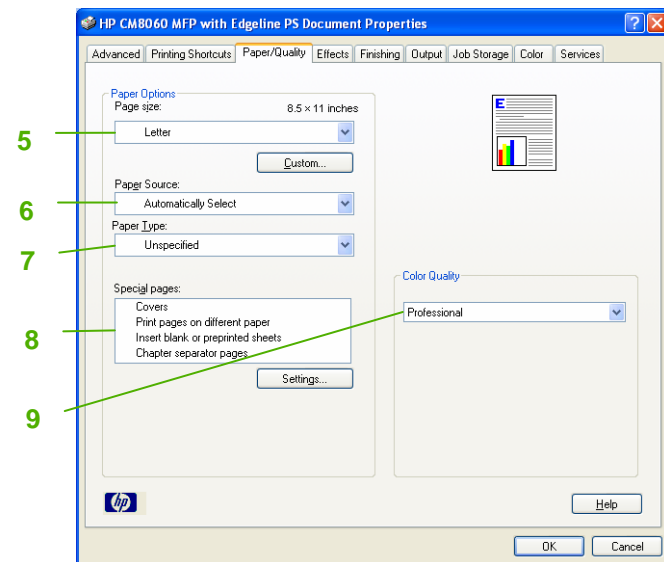

How do I	Steps to perform
1 Access the printer driver.	Click on File , Print in your application, and choose Properties .
2 Use a printing shortcut	Click on the Printing Shortcuts tab. Select one of the defined shortcuts or custom printing shortcuts, and then click OK to print the job with the specific printer-driver settings.
3 Create a custom printing shortcut	Select one of the defined shortcuts as a base. Select the appropriate print settings on the Printing Shortcuts tab, or by using the settings on any of the Printing Preferences tabs. Click Save As , type a name for the custom printing shortcut, and then click OK .
4 Get help for any printing option.	Click the question mark (4a), then click on a print control to display a pop-up help message for that control or click Help (4b) for on-line help.

How do I	Steps to perform
5 Select a page size.	Click on the Paper/Quality tab, and then click the Paper size drop-down menu, then select a paper size. Click Custom if the paper size you want is not in the menu.
6 Select a paper source.	Click the Paper Source drop-down menu, then select a paper tray. Use Manual Feed for printing special media such as transparencies, labels, or envelopes.
7 Select a paper type.	Click the Paper Type drop-down menu, then select a paper type.
8 Select special pages	Select an option in the Special pages list box, and then click Settings . Use the Settings dialog box to control the settings for the special pages of the print job.
9 Select color quality	Click the Color Quality drop-down menu, then select a color quality.


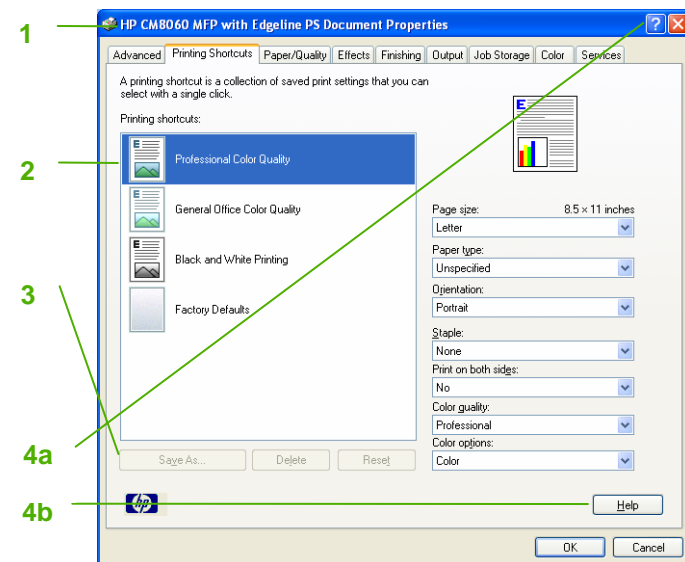


HP CM8060/CM8050 Color MFP with Edgeline Technology PS – Printing




How do I	Steps to perform
10 Scale a page to fit on a selected paper size.	Click on the Effects tab, click on the Print Document On , select a paper size, and then click Scale to Fit .
11 Print a watermark.	Click on the Watermarks drop-down menu, and then select an existing watermark.
12 Add or edit watermarks (the printer driver must be stored on your PC for this to work).	Click Edit . Highlight an existing watermark and make adjustments to its angle and font attributes. Click New to add a new watermark, and then type in a new name. Click OK to save the settings.


How do I	Steps to perform
13 Print on both sides (Duplex).	Click on the Finishing tab, and then click Print on Both Sides . If you will bind the document along the top, click Flip Pages Up .
14 Print multiple pages per sheet.	Select a number (between 1 and 16) in the Pages Per Sheet drop down menu. Click Print Page Borders to add a box around each printed page. You can also change the Page Order .
15 Select page orientation.	Select an option in the Orientation box. In addition to the Portrait and Landscape orientation options, you can select the Rotate by 180 degrees check box. This creates a landscape or portrait orientation in which the image is rotated 180°. This setting is useful for printing prepunched paper.

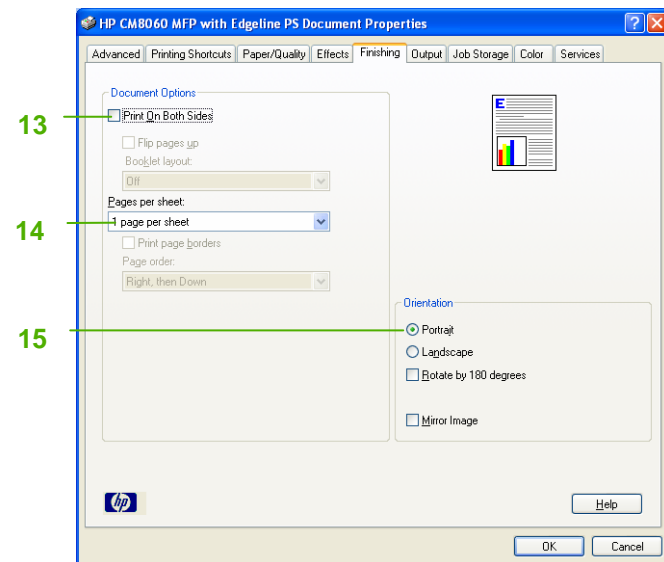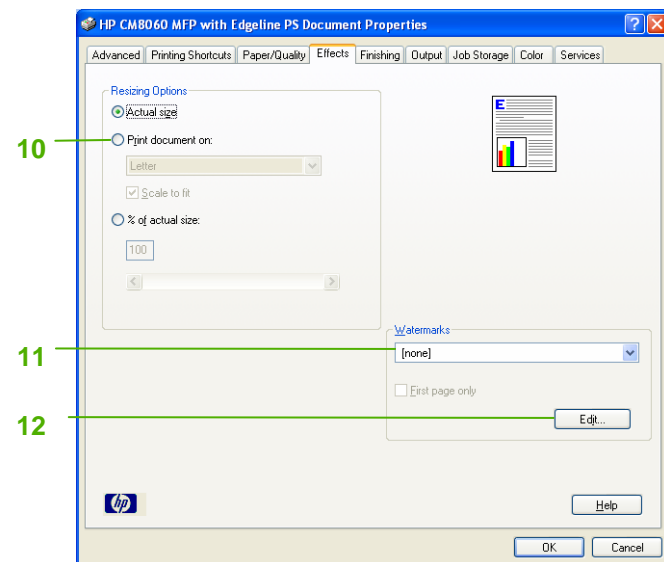  

How do I	Steps to perform
16 Select staple output options.	Click on the Output tab. Use the Output Options drop-down menu to determine whether the print job should be stapled. The available output options depends on the accessory output bin or optional finisher installed on the device.
17 Select image shift settings.	Click Image Shift Settings to open the Image Shift dialog box. Use the Image Shift dialog box to shift the image on the page. This is useful when binding the document or using 3-hole punch.
18 Select output bin.	Use the Output Bin Options to determine where the print job should exit the device. The available output bin options depends on the accessory output bin or optional finisher installed on the device.

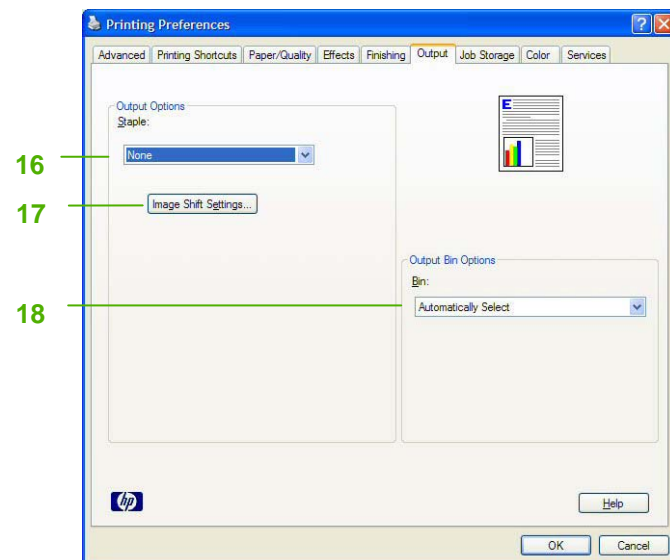 

How do I	Steps to perform
19 Select advanced printing options.	Click on the Advanced tab. Select options under the Paper/Output , Graphic , or Document Options sections. Click a current setting to activate a drop-down list or spin box where you can enter a new value. Click OK when finished. For example, to change the order of pages as they print, click the arrow by Layout Options, and then select Page Order: Front to Back (page 1 is on the top of the stack) or Back to Front (page 1 is on the bottom of the stack).

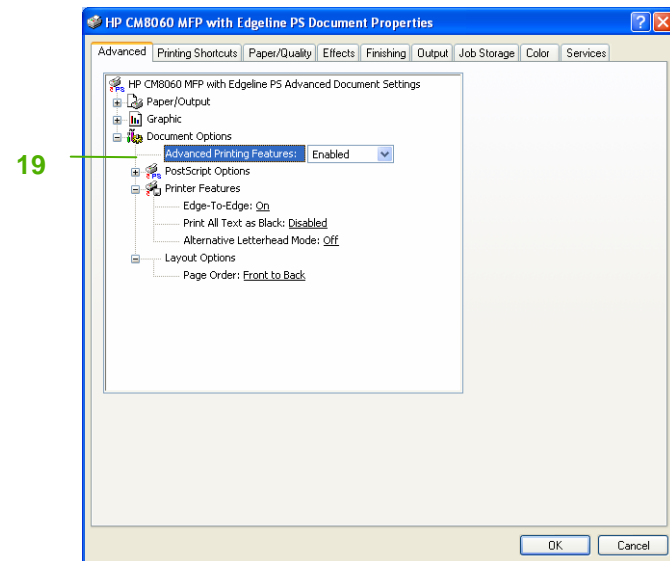 

HP CM8060/CM8050 Color MFP with Edgeline Technology PS – Printing



How do I	Steps to perform
20 Specify job storage mode.	Click the Job Storage tab. Use the Job Storage Mode options to store documents at the device and then control their printing at the device control panel. Select a mode from the Job Storage Mode area.
21 Make a job private (must select Personal Job or Stored Job).	Select the PIN to Print box, then type a four-digit PIN number in the box provided. The stored job is sent to the device, where the user must type the four-digit PIN on the control panel to retrieve the stored job.
22 Display job information (must select job storage mode other than Off).	The Display Job ID when printing option opens a pop-up dialog box when the job-storage print job is printed. The dialog box shows the user name and job name that are associated with the stored print job, as well as the device name, port, and location.
23 Specify the job user name (must select Display Job ID when printing).	Select User name to use the default Windows user name or select Custom and enter a custom value in the text box.
24 Specify job name (must select Display Job ID when printing)	Select Automatic to use the existing job name, application name, or timestamp. Select Custom to specify a custom name in the provided text box. Select a value from the If job name exists drop-down list to specify what happens a job with the same name already exists in the device. You can choose to overwrite the job or add an incremented number to the new job name to make the name unique.

