

Notebook Tour

User Guide

© Copyright 2007 Hewlett-Packard
Development Company, L.P.

Microsoft and Windows are U.S. registered
trademarks of Microsoft Corporation.
Bluetooth is a trademark owned by its
proprietor and used by Hewlett-Packard
Company under license. SD Logo is a
trademark of its proprietor.

The information contained herein is subject
to change without notice. The only
warranties for HP products and services are
set forth in the express warranty statements
accompanying such products and services.
Nothing herein should be construed as
constituting an additional warranty. HP shall
not be liable for technical or editorial errors
or omissions contained herein.

Second Edition: June 2007

Document Part Number: 438897-002

Product notice

This user guide describes features that are common to most models. Some features may not be available on your computer.

Table of contents

1 Identifying hardware

2 Components

| | |
|--|----|
| Top components | 2 |
| TouchPad | 2 |
| Lights | 3 |
| Buttons, speakers and fingerprint reader | 4 |
| Keys | 6 |
| Hotkey quick reference | 6 |
| Front components | 8 |
| Rear components | 9 |
| Right-side components | 10 |
| Left-side components | 11 |
| Bottom components | 13 |
| Display components | 14 |
| Wireless antennae (select models only) | 15 |
| Additional hardware components | 16 |


3 Labels

| | |
|-------------|----|
| Index | 18 |
|-------------|----|

1 Identifying hardware

To see a list of hardware installed in the computer, follow these steps:

1. Select **Start > Computer > System properties**.
2. In the left pane, click **Device Manager**.

 **NOTE:** Windows® includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing applications, running utilities, or changing Windows settings. Refer to Windows online Help for more information.

You can also add hardware or modify device configurations using Device Manager.

2 Components

Top components

TouchPad



| Component | Description |
|------------------------------------|---|
| (1) TouchPad light | <ul style="list-style-type: none">• Blue: TouchPad is enabled.• Amber: TouchPad is disabled. |
| (2) TouchPad* | Moves the pointer and selects or activates items on the screen. |
| (3) Left TouchPad button* | Functions like the left button on an external mouse. |
| (4) TouchPad on/off button | Enables/disables the TouchPad. |
| (5) TouchPad vertical scroll zone* | Scrolls up or down. |
| (6) Right TouchPad button* | Functions like the right button on an external mouse. |

*This table describes factory settings. To view and change pointing device preferences, select **Start > Control Panel > Hardware and Sound > Mouse**.

Lights



| Component | Description |
|-----------------------------|---|
| (1) Power lights (2)* | <ul style="list-style-type: none"> On: The computer is on. Blinking: The computer is in the Sleep state. Off: The computer is off or in Hibernation. |
| (2) Battery light | <ul style="list-style-type: none"> On: A battery is charging. Blinking: A battery that is the only available power source has reached a low battery level or a critical battery level. Off: If the computer is plugged into an external power source, the light is turned off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level. |
| (3) Drive light | Blinking: The hard drive or optical drive is being accessed. |
| (4) Caps lock light | On: Caps lock is on. |
| (5) Media button light | Blinks once when the media button is pressed. |
| (6) DVD button light | Blinks once when the DVD button is pressed. |
| (7) Previous/rewind light | Blinks once when the previous/rewind button is pressed. |
| (8) Play/pause light | Blinks once when the play/pause button is pressed. |
| (9) Next/fast forward light | Blinks once when the next/fast forward button is pressed. |
| (10) Stop light | Blinks once when the stop button is pressed. |
| (11) Volume mute light | <ul style="list-style-type: none"> Blue: Computer sound is turned on. Amber: Computer sound is turned off. |
| (12) Volume down light | Blinking: The volume scroll zone is being used to decrease speaker volume. |

| Component | Description |
|----------------------|--|
| (13) Volume up light | Blinking: The volume scroll zone is being used to increase speaker volume. |
| (14) Num lock light | On: Num lock is on or the embedded numeric keypad is enabled. |

*The 2 power lights display the same information. The light on the power button is visible only when the computer is open. The power light on the front of the computer is visible whether the computer is open or closed.

Buttons, speakers and fingerprint reader




| Component | Description |
|-------------------|---|
| (1) Power button* | <ul style="list-style-type: none"> When the computer is off, press the button to turn on the computer. When the computer is on, press the button to initiate Sleep. When the computer is in the Sleep state, press the button briefly to exit Sleep. When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>If the computer has stopped responding and Windows® shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, select Start > Control Panel > System and Maintenance > Power Options.</p> |

| Component | Description |
|------------------------------|--|
| (2) Speakers (2) | Produce sound. |
| (3) Media button | <ul style="list-style-type: none"> • Launches the QuickPlay program (for models with QuickPlay preinstalled). • Launches the DVDPlay program (for models with DVDPlay preinstalled). <p>NOTE: If the computer has been set up to require a logon password, you may be asked to log on to Windows. QuickPlay or DVDPlay launches after you log on. Refer to the QuickPlay or DVDPlay online Help for more information.</p> |
| (4) DVD button | <p>Launches the DVD playback feature of the QuickPlay program.</p> <p>NOTE: If the computer has been set up to require a logon password, you may be asked to log on to Windows. QuickPlay launches after you log on. Refer to the QuickPlay online Help for more information.</p> |
| (5) Previous/rewind button | <ul style="list-style-type: none"> • Plays the previous track or chapter when the button is pressed once. • Rewinds media when the button is pressed simultaneously with the fn key. |
| (6) Play/pause button | Plays or pauses the disc. |
| (7) Next/fast forward button | <ul style="list-style-type: none"> • Plays the next track or chapter when the button is pressed once. • Fast forwards media when pressed simultaneously with the fn key. |
| (8) Stop button | Stops the disc. |
| (9) Volume mute button | Mutes and restores speaker sound. |
| (10) Volume scroll zone | Adjusts speaker volume. Slide your finger to the left to decrease volume and to the right to increase volume. You can also tap the minus sign on the scroll zone to decrease volume, or tap the plus sign on the scroll zone to increase volume. |
| (11) Fingerprint reader | Allows a fingerprint logon to Windows, instead of a password logon. |

*This table describes factory settings. For information about changing factory settings, refer to the user guides located in Help and Support.

Keys

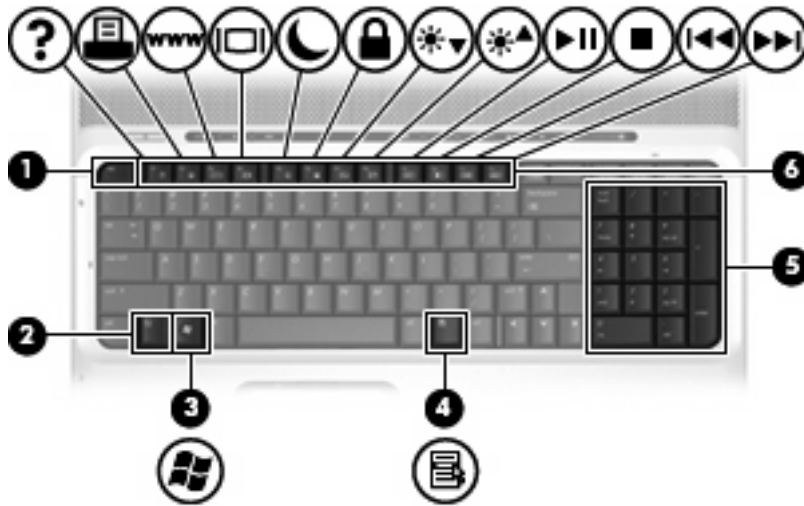


| Component | Description |
|------------------------------------|--|
| (1) <code>esc</code> key | Displays system information when pressed in combination with the <code>fn</code> key. |
| (2) <code>fn</code> key | Executes frequently used system functions when pressed in combination with a function key or the <code>esc</code> key. |
| (3) Windows logo key | Displays the Windows Start menu. |
| (4) Windows applications key | Displays a shortcut menu for items beneath the pointer. |
| (5) Integrated numeric keypad keys | Can be used like the keys on an external numeric keypad. |
| (6) Function keys | Execute frequently used system functions when pressed in combination with the <code>fn</code> key. |

Hotkey quick reference

| Function | Hotkey |
|--|---------------------|
| Display system information. | <code>fn+esc</code> |
| Open Help and Support. | <code>fn+f1</code> |
| Open the Print Options window. | <code>fn+f2</code> |
| Open a Web browser. | <code>fn+f3</code> |
| Alternate between computer display and external display. | <code>fn+f4</code> |
| Initiate Hibernation. | <code>fn+f5</code> |
| Initiate QuickLock. | <code>fn+f6</code> |
| Decrease screen brightness. | <code>fn+f7</code> |
| Increase screen brightness. | <code>fn+f8</code> |
| Play, pause, or resume an audio CD or a DVD. | <code>fn+f9</code> |

| Function | Hotkey |
|---|--------|
| Stop an audio CD or a DVD. | fn+f10 |
| Play the previous track or section on an audio CD or a DVD. | fn+f11 |
| Play the next track on an audio CD or a DVD. | fn+f12 |

Front components

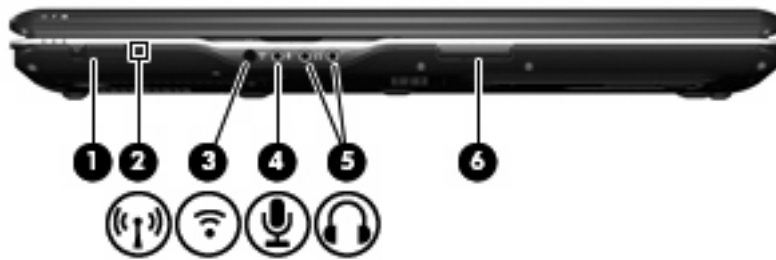


| Component | Description |
|-------------------------------------|---|
| (1) Wireless switch | Turns the wireless feature on or off, but does not create a wireless connection. NOTE: To establish a wireless connection, a wireless network must already be set up. |
| (2) Wireless light | <ul style="list-style-type: none">Blue: An integrated wireless device, such as a wireless local area network (LAN) device and/or a Bluetooth® device, is turned on.Amber: An integrated wireless device is turned off. |
| (3) Consumer infrared lens | Receives a signal from a remote control device, such as an HP Remote Control. |
| (4) Audio-in (microphone) jack | Connects an optional computer headset microphone, stereo array microphone, or monaural microphone. |
| (5) Audio-out (headphone) jacks (2) | Produce sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio. |
| (6) Display release latch | Opens the computer. |

Rear components




| Component | Description |
|-----------|---|
| Vent | <p data-bbox="794 457 1214 478">Enables airflow to cool internal components.</p> <p data-bbox="794 506 1465 611">CAUTION: To prevent overheating, do not obstruct vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or thick rugs or clothing, to block airflow.</p> <p data-bbox="794 638 1465 709">NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p> |

Right-side components

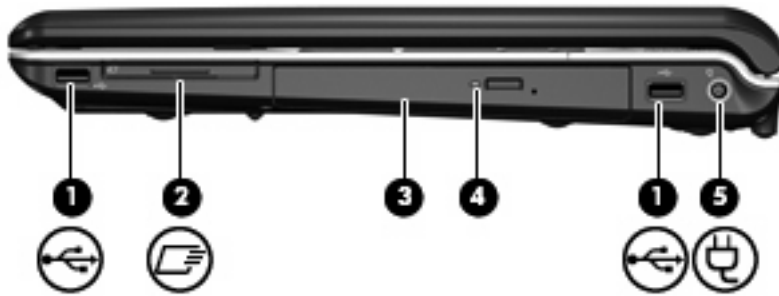

| Component | Description |
|---|--|
| (1) USB ports (1 or 2, depending on computer model) | Connect optional USB devices. |
| (2) ExpressCard slot | Supports optional ExpressCard/54 cards. |
| (3) Optical drive | Reads optical discs and, on select models, also writes to optical discs. |
| (4) Optical drive light | Blinking: The optical drive is being accessed. |
| (5) Power connector | Connects an AC adapter. |


Left-side components

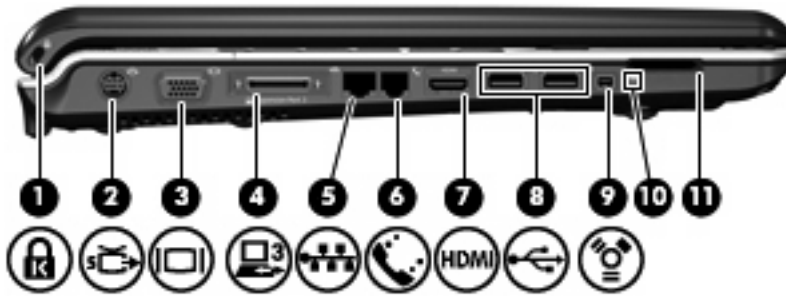

| Component | Description |
|--|--|
| (1) Security cable slot | Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but may not prevent the computer from being mishandled or stolen. |
| (2) S-Video-out jack | Connects an optional S-Video device such as a television, VCR, camcorder, overhead projector, or video capture card. |
| (3) External monitor port | Connects an external VGA monitor or projector. |
| (4) Expansion port 3 | Connects the computer to an optional docking device or optional expansion product. NOTE: The computer has only one expansion port. The term <i>expansion port 3</i> describes the type of expansion port. |
| (5) RJ-45 (network) jack | Connects a network cable. |
| (6) RJ-11 (modem) jack | Connects a modem cable. |
| (7) HDMI port (select models only) | Connects an optional video or audio device, such as a high-definition television, or any compatible digital or audio component. NOTE: Depending on your computer model, the computer may include an HDMI port or a USB port. |
| (8) USB port (1 or 2, depending on computer model) | Connects an optional USB device. |
| (9) 1394 port (select models only) | Connects an optional IEEE 1394 or 1394a device, such as a camcorder. |
| (10) Digital Media Slot light (select models only) | On: A digital card is being accessed. |
| (11) Digital Media Slot (select models only) | Supports the following optional digital card formats: <ul style="list-style-type: none"> • Memory Stick (MS) • Memory Stick Pro (MSP) • MultiMediaCard (MMC) • Secure Digital Input/Output (SD I/O) • Secure Digital (SD) Memory Card • xD-Picture Card (XD) |

| Component | Description |
|-----------|---|
| | <ul style="list-style-type: none"><li data-bbox="818 226 1145 254">• xD-Picture Card (XD) Type H<li data-bbox="818 275 1145 302">• xD-Picture Card (XD) Type M |

Bottom components

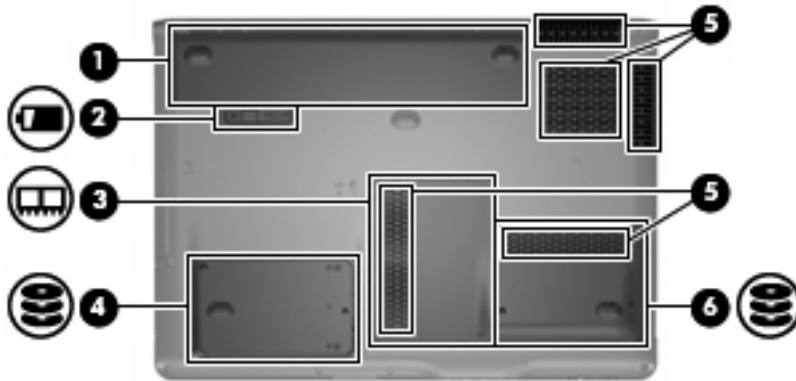

| Component | Description |
|-------------------------------|--|
| (1) Battery bay | Holds the battery. |
| (2) Battery release latch | Releases the battery from the battery bay. |
| (3) Memory module compartment | Contains the memory module slots. |
| (4) Secondary hard drive bay | Holds an optional secondary hard drive. |
| (5) Vents (5) | Enable airflow to cool internal components. CAUTION: To prevent overheating, do not obstruct vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or thick rugs or clothing, to block airflow. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation. |
| (6) Hard drive bay | Holds the hard drive. |

Display components




| Component | Description |
|--|--|
| (1) Internal display switch | Turns off the display if the display is closed while the computer is on. |
| (2) Internal microphones (2) | Record sound. NOTE: If there is a microphone icon next to each microphone opening, your computer has internal microphones. |
| (3) Integrated camera light (select models only) | On: The integrated camera is in use. |
| (4) Integrated camera (select models only) | Records video and captures still photographs. |

Wireless antennae (select models only)

On select computer models, at least 2 antennae send and receive signals from one or more wireless devices. These antennae are not visible from the outside of the computer.

To see wireless regulatory notices, refer to your country's section of the *Regulatory, Safety and Environmental Notices* located in Help and Support.



 **NOTE:** For optimal transmission, keep the areas immediately around the antennae free from obstructions.

Additional hardware components



| Component | Description |
|-----------------|---|
| (1) Power cord* | Connects an AC adapter to an AC outlet. |
| (2) AC adapter | Converts AC power to DC power. |
| (3) Battery* | Powers the computer when the computer is not plugged into external power. |

*Batteries and power cords vary in appearance by region and country.

3 Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

- Service tag—Provides the product brand and series name, serial number (s/n), and product number (p/n) of your computer. Have this information available when you contact technical support. The service tag label is affixed to the bottom of the computer.
- Microsoft® Certificate of Authenticity—Contains the Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed inside the battery bay.
- Modem approval label—Provides regulatory information about the modem and lists the agency approval markings required by some of the countries in which the modem has been approved for use. You may need this information when traveling internationally. The modem approval label is affixed inside the memory module compartment.
- Wireless certification label(s) (select models only)—Provide information about optional wireless devices and the approval markings of some of the countries in which the devices have been approved for use. An optional device may be a wireless local area network (WLAN) device or an optional Bluetooth® device. If your computer model includes one or more wireless devices, one or more certification labels are included with your computer. You may need this information when traveling internationally. Wireless certification labels are affixed inside the memory module compartment.

Index

Symbols/Numerics

1394 port, identifying 11

A

AC adapter, identifying 16
antennae 15
applications key, Windows 6
audio-in (microphone) jack,
identifying 8
audio-out (headphone) jacks,
identifying 8

B

battery bay 17
battery bay, identifying 13
battery light, identifying 3
battery release latch,
identifying 13
battery, identifying 16
bays
battery 13, 17
hard drive 13
optional secondary hard
drive 13

Bluetooth label 17

buttons

DVD 5
media 5
next/fast forward 5
play/pause 5
power 4
previous/rewind 5
stop 5
TouchPad 2
TouchPad on/off 2
volume mute 5

C

camera, identifying 14
caps lock light, identifying 3

Certificate of Authenticity label 17
compartment, memory
module 13
components
additional hardware 16
bottom 13
display 14
front 8
left-side 11
rear 9
right-side 10
top 2
connector, power 10
cord, power 16

D

Digital Media Slot light,
identifying 11
Digital Media Slot, identifying 11
display release latch,
identifying 8
display switch, identifying 14
drive light, identifying 3
DVD button light, identifying 3
DVD button, identifying 5

E

esc key, identifying 6
expansion port, identifying 11
ExpressCard slot, identifying 10
external monitor port,
identifying 11

F

fingerprint reader, identifying 5
fn key, identifying 6
function keys, identifying 6

H

hard drive bay, identifying 13

HDMI port, identifying 11
headphone (audio-out) jacks 8
Hibernation hotkey 6
hotkeys, quick reference 6

I

IEEE 1394 port, identifying 11
infrared lens, identifying 8
initiating Hibernation 6
integrated camera light,
identifying 14
integrated camera, identifying 14
internal display switch,
identifying 14
internal microphones,
identifying 14

J

jacks
audio-in (microphone) 8
audio-out (headphone) 8
RJ-11 (modem) 11
RJ-45 (network) 11
S-Video-out 11

K

keypad keys, identifying 6
keys
esc 6
fn 6
function 6
keypad 6
Windows applications 6
Windows logo 6

L

labels
Bluetooth 17
Microsoft Certificate of
Authenticity 17

- modem approval 17
- regulatory 17
- service tag 17
- wireless certification 17
- WLAN 17
- latch, battery release 13
- lights
 - battery 3
 - caps lock 3
 - Digital Media Slot 11
 - drive 3
 - DVD button 3
 - integrated camera 14
 - media button 3
 - mute 3
 - next/fast forward 3
 - num lock 4
 - optical drive 10
 - play/pause 3
 - power 3
 - previous/rewind 3
 - stop 3
 - TouchPad 2
 - volume down 3
 - volume mute 3
 - volume up 4
 - wireless 8

M

- media activity buttons, identifying 5
- media activity lights, identifying 3
- media button light, identifying 3
- media button, identifying 5
- memory module compartment, identifying 13
- microphone (audio-in) jack 8
- Microsoft Certificate of Authenticity label 17
- modem approval label 17
- monitor port, external 11
- mute button, identifying 5
- mute light, identifying 3

N

- next/fast forward button, identifying 5
- next/fast forward light, identifying 3
- num lock light, identifying 4

O

- operating system
 - Microsoft Certificate of Authenticity label 17
 - Product Key 17
- optical drive light, identifying 10
- optical drive, identifying 10

P

- play/pause button, identifying 5
- play/pause light, identifying 3
- ports
 - 1394 11
 - expansion 11
 - external monitor 11
 - HDMI 11
 - USB 10, 11
- power button, identifying 4
- power connector, identifying 10
- power cord, identifying 16
- power lights, identifying 3
- previous/rewind button, identifying 5
- previous/rewind light, identifying 3
- Product Key 17
- product name and number, computer 17

R

- regulatory information
 - modem approval label 17
 - regulatory label 17
 - wireless certification labels 17
- RJ-11 (modem) jack, identifying 11
- RJ-45 (network) jack, identifying 11

S

- S-Video-out jack, identifying 11
- scrolling regions, TouchPad 2
- secondary hard drive bay, identifying 13
- security cable slot, identifying 11
- serial number, computer 17
- service tag 17
- slots
 - Digital Media 11
 - ExpressCard 10

- memory module 13
- security cable 11
- speakers, identifying 5
- stop button, identifying 5
- stop light, identifying 3

T

- TouchPad
 - buttons 2
 - identifying 2
 - scrolling regions 2
- TouchPad light, identifying 2
- TouchPad on/off button 2
- traveling with the computer
 - modem approval label 17
 - wireless certification labels 17

U

- USB ports, identifying 10, 11

V

- vents, identifying 9, 13
- volume down light, identifying 3
- volume mute button, identifying 5
- volume mute light, identifying 3
- volume scroll zone, identifying 5
- volume up light, identifying 4

W

- Windows applications key, identifying 6
- Windows logo key, identifying 6
- wireless antennae 15
- wireless certification label 17
- wireless light, identifying 8
- wireless switch, identifying 8
- WLAN device 17
- WLAN label 17

