

Notebook Tour

User Guide

© Copyright 2007 Hewlett-Packard
Development Company, L.P.

Microsoft and Windows are U.S. registered
trademarks of Microsoft Corporation. SD
Logo is a trademark of its proprietor.

The information contained herein is subject
to change without notice. The only
warranties for HP products and services are
set forth in the express warranty statements
accompanying such products and services.
Nothing herein should be construed as
constituting an additional warranty. HP shall
not be liable for technical or editorial errors
or omissions contained herein.

First Edition: July 2007

Document Part Number: 445819-001

Safety warning notice

-
- ⚠ **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).
-

Table of contents

1 Identifying hardware

2 Components

Product notice	2
Top components	2
Keys	2
TouchPad	3
Buttons, speakers, and volume controls	4
Lights	5
Display components	6
Front components	7
Right-side components	8
Left-side components	9
Bottom components	10
Wireless antennae (select models only)	11
Additional hardware components	12

3 Labels


Index	14
-------------	----

1 Identifying hardware

To see a list of hardware installed in the computer, follow these steps:

1. Select **Start > Computer > System properties**.
2. In the left pane, click **Device Manager**.

You can also add hardware or modify device configurations using Device Manager.

 **NOTE:** Windows® includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing applications, running utilities, or changing Windows settings. Refer to Windows Help for more information.


2 Components

Product notice

This user guide describes features that are common to most models. Some features may not be available on your computer.


Top components

Keys

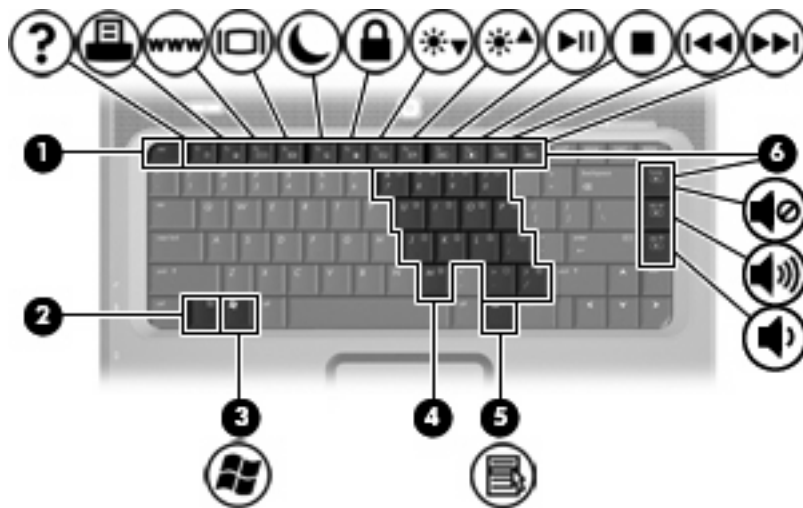

Component	Description
(1) <code>esc</code> key	Displays system information when pressed in combination with the <code>fn</code> key.
(2) <code>fn</code> key	Executes frequently used system functions when pressed in combination with a function key or the <code>esc</code> key.
(3) Windows logo key	Displays the Windows Start menu.
(4) Windows applications key	Displays a shortcut menu for items beneath the pointer.
(5) Embedded numeric keypad keys	Can be used like the keys on an external numeric keypad.
(6) Function keys	Execute frequently used system functions when pressed in combination with the <code>fn</code> key.


TouchPad

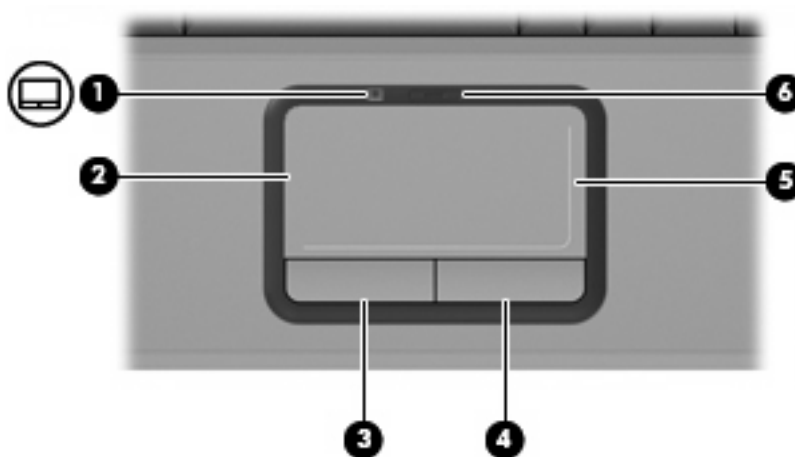

Component	Description
(1) TouchPad light	<ul style="list-style-type: none">• Amber: TouchPad is enabled.• Blue: TouchPad is disabled.
(2) TouchPad*	Moves the pointer and selects or activates items on the screen.
(3) Left TouchPad button*	Functions like the left button on an external mouse.
(4) Right TouchPad button*	Functions like the right button on an external mouse.
(5) TouchPad vertical scroll zone*	Scrolls up or down.
(6) TouchPad on/off button	Enables/disables the TouchPad.

*This table describes factory settings. To view and change pointing device preferences, select **Start > Control Panel > Hardware and Sound > Mouse**.

Buttons, speakers, and volume controls

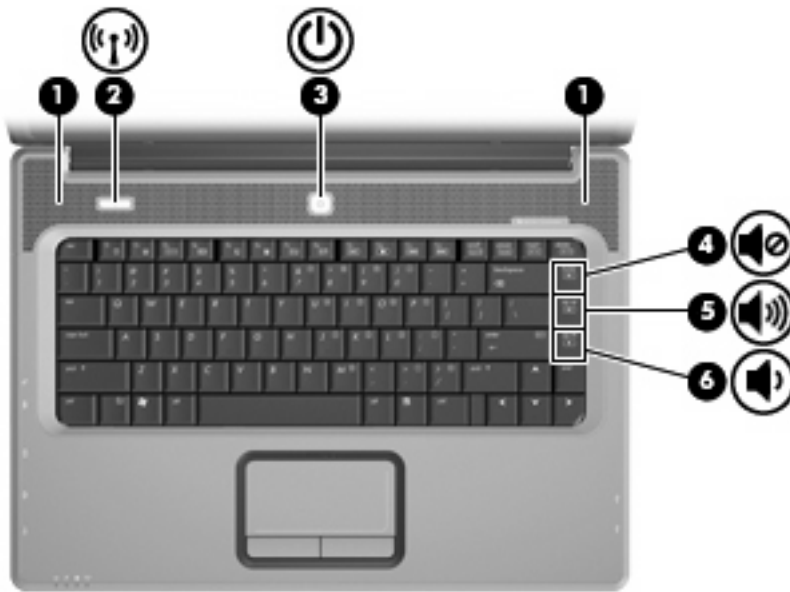

Component	Description
(1) Speakers (2)	Produce sound.
(2) Wireless button	Turns the wireless feature on or off, but does not create a wireless connection. NOTE: To establish a wireless connection, a wireless network must already be set up.
(3) Power button*	<ul style="list-style-type: none"> When the computer is off, press the button to turn on the computer. When the computer is on, press the button to initiate Sleep. When the computer is in the Sleep state, press the button briefly to exit Sleep. When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>If the computer has stopped responding and Windows® shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, select Start > Control Panel > System and Maintenance > Power Options.</p>
(4) Volume mute hotkey	Press fn+home to mute and restore speaker sound.
(5) Volume up hotkey	Press fn+pg up to increase speaker volume.
(6) Volume down hotkey	Press fn+pg dn to decrease speaker volume.

*This table describes factory settings. For information about changing factory settings, refer to the user guides located in Help and Support.

Lights




Component	Description
(1) Wireless lights* (2)	<ul style="list-style-type: none"> Amber: An integrated wireless device, such as a wireless local area network (LAN) device, is turned on. Blue: An integrated wireless device is turned off.
(2) Caps lock light	On: Caps lock is on.
(3) Power lights† (2)	<ul style="list-style-type: none"> On: The computer is on. Blinking: The computer is in the Sleep state. Off: The computer is off or in Hibernation.
(4) Battery light	<ul style="list-style-type: none"> On: A battery is charging. Blinking: A battery that is the only available power source has reached a low battery level or a critical battery level. Off: If the computer is plugged into an external power source, the light is turned off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level.
(5) Drive light	Blinking: The hard drive or optical drive is being accessed.
(6) Num lock light	On: Num lock is on or the embedded numeric keypad is enabled.

*The 2 wireless lights display the same information. The light on the wireless button is visible only when the computer is open. The wireless light on the front of the computer is visible whether the computer is open or closed.

†The 2 power lights display the same information. The light on the power button is visible only when the computer is open. The power light on the front of the computer is visible whether the computer is open or closed.

Display components

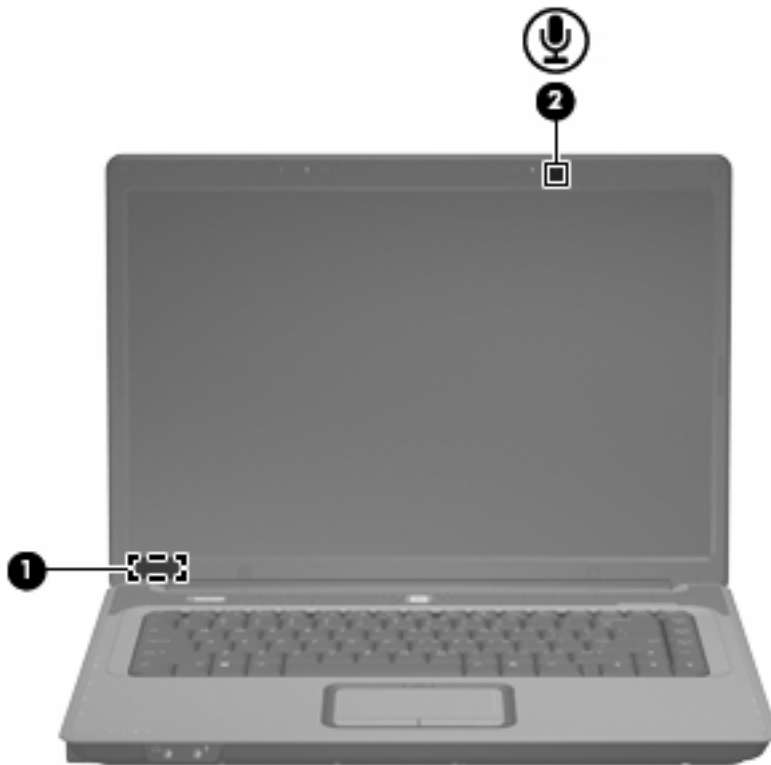


Component	Description
(1) Internal display switch	Turns off the display if the display is closed while the computer is turned on.
(2) Internal microphone	Records sound.

Front components



Component	Description
(1) Audio-out (headphone) jack	Produces system sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.
(2) Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.


Right-side components

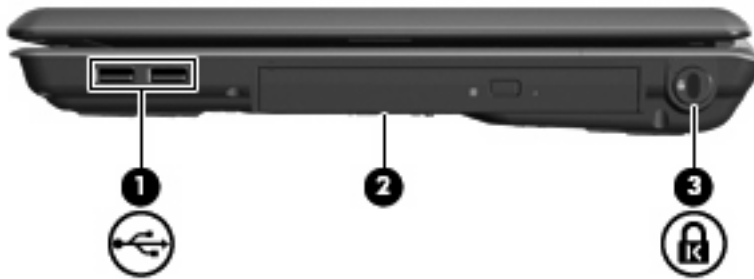

Component	Description
(1) USB ports (2)	Connect optional USB devices.
(2) Optical drive	Reads optical discs and, on select models, also writes to optical discs.
(3) Security cable slot	Attaches an optional security cable to the computer.


NOTE: The security cable is designed to act as a deterrent, but may not prevent the computer from being mishandled or stolen.

Left-side components

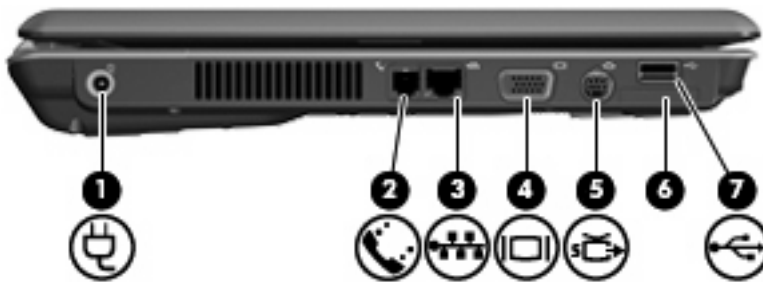

Component	Description
(1) Power connector	Connects an AC adapter.
(2) RJ-11 (modem) jack	Connects an optional modem cable.
(3) RJ-45 (network) jack	Connects a network cable.
(4) External monitor port	Connects an external VGA monitor or projector.
(5) S-Video-out jack	Connects an optional S-Video device such as a television, VCR, camcorder, overhead projector, or video capture card.
(6) Digital Media Slot	Supports the following optional digital card formats: Secure Digital (SD) Memory Card, MultiMediaCard (MMC), Memory Stick (MS), Memory Stick Pro (MSP), xD-Picture Card (XD).
(7) USB port	Connects an optional USB device.

Bottom components

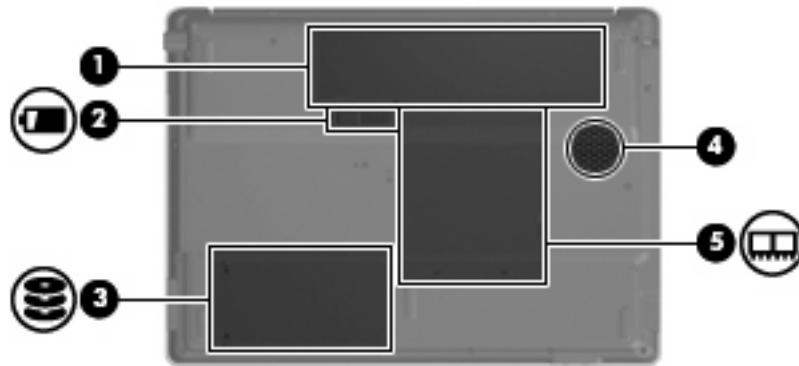


Component	Description
(1) Battery bay	Holds the primary battery.
(2) Battery release latch	Releases the battery from the battery bay.
(3) Hard drive bay	Holds the hard drive.
(4) Vent	Enables airflow to cool internal components. CAUTION: To prevent overheating, do not block vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or thick rugs or clothing, to block airflow. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(5) Memory module compartment	Contains the memory module slots.

Wireless antennae (select models only)

On select computer models, at least 2 antennae send and receive signals from one or more wireless devices. These antennae are not visible from the outside of the computer.



 **NOTE:** For optimal transmission, keep the areas immediately around the antennae free from obstructions.

To see wireless regulatory notices, refer to the section of the *Regulatory, Safety and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.

Additional hardware components



Component	Description
(1) Power cord*	Connects an AC adapter to an AC outlet.
(2) AC adapter	Converts AC power to DC power.
(3) Battery*	Powers the computer when the computer is not plugged into external power.

*Batteries and power cords vary in appearance by region and country.

3 Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

- Service tag—Provides the product brand and series name, serial number (s/n), and product number (p/n) of your computer. Have this information available when you contact technical support. The service tag label is affixed to the bottom of the computer.
- Microsoft® Certificate of Authenticity—Contains the Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed inside the battery bay.
- Modem approval label—Provides regulatory information about the modem and lists the agency approval markings required by some of the countries in which the modem has been approved for use. You may need this information when traveling internationally. The modem approval label is affixed inside the memory module compartment.
- Wireless certification label(s) (select models only)—Provide information about optional wireless devices and the approval markings of some of the countries in which the devices have been approved for use. An optional device may be a wireless local area network (WLAN) device. If your computer model includes one or more wireless devices, one or more certification labels are included with your computer. You may need this information when traveling internationally. Wireless certification labels are affixed inside the memory module compartment.

Index

- A**
 - AC adapter, identifying 12
 - antennae 11
 - applications key, Windows 2
 - audio-in (microphone) jack 7
 - audio-out (headphone) jack 7
- B**
 - battery bay 10, 13
 - battery light, identifying 5
 - battery release latch 10
 - battery, identifying 12
 - bays
 - battery 10, 13
 - hard drive 10
 - buttons
 - power 4
 - TouchPad 3
 - TouchPad on/off 3
 - wireless 4
- C**
 - caps lock light 5
 - Certificate of Authenticity label 13
 - compartments, memory
 - module 10
 - components
 - additional hardware 12
 - bottom 10
 - display 6
 - front 7
 - left-side 9
 - right-side 8
 - top 2
 - connector, power 9
 - cord, power 12
- D**
 - Digital Media Slot 9
 - display switch, internal 6
- drive light, identifying 5
- drive, optical 8
- E**
 - esc key, identifying 2
 - external monitor port 9
- F**
 - fn key, identifying 2
 - function keys, identifying 2
- H**
 - hard drive bay, identifying 10
 - headphone (audio-out) jack 7
 - hotkeys
 - mute 4
 - volume 4
- I**
 - IEC 60950 compliance iii
 - internal display switch,
 - identifying 6
 - internal microphone, identifying 6
- J**
 - jacks
 - audio-in (microphone) 7
 - audio-out (headphone) 7
 - RJ-11 (modem) 9
 - RJ-45 (network) 9
 - S-Video-out 9
- K**
 - keypad keys, identifying 2
 - keys
 - esc 2
 - fn 2
 - function 2
 - keypad 2
- Windows applications 2
- Windows logo 2
- L**
 - labels
 - Microsoft Certificate of Authenticity 13
 - modem approval 13
 - regulatory 13
 - service tag 13
 - wireless certification 13
 - WLAN 13
 - latch, battery release 10
 - lights
 - battery 5
 - caps lock 5
 - drive 5
 - num lock 5
 - power 5
 - TouchPad 3
 - wireless 5
 - lock, security cable 8
- M**
 - memory module compartment 10
 - microphone (audio-in) jack 7
 - microphone, internal 6
 - Microsoft Certificate of Authenticity label 13
 - modem approval label 13
 - monitor port, external 9
 - mute hotkey 4
- N**
 - network (RJ-45) jack 9
 - num lock light 5

- O**
- operating system
 - Microsoft Certificate of Authenticity label 13
 - Product Key 13
- optical drive, identifying 8
- P**
- ports
 - external monitor 9
 - USB 8, 9
- power button, identifying 4
- power connector 9
- power cord, identifying 12
- power light 5
- Product Key 13
- product name and number, computer 13
- R**
- regulatory information
 - modem approval label 13
 - regulatory label 13
 - wireless certification labels 13
- release latch, battery 10
- RJ-11 (modem) jack 9
- RJ-45 (network) jack 9
- S**
- S-Video-out jack 9
- safety considerations iii
- scrolling regions, TouchPad 3
- security cable slot 8
- serial number, computer 13
- service tag 13
- slots
 - Digital Media 9
 - memory module 10
 - security cable 8
- speakers, identifying 4
- switch, internal display 6
- T**
- temperature, safety considerations iii
- TouchPad
 - buttons 3
 - identifying 3
 - scrolling regions 3
- TouchPad light, identifying 3
- TouchPad on/off button 3
- traveling with the computer
 - modem approval label 13
 - wireless certification labels 13
- U**
- USB ports, identifying 8, 9
- V**
- vents
 - identifying 10
 - precautions iii
- volume hotkeys 4
- W**
- Windows applications key, identifying 2
- Windows logo key, identifying 2
- wireless antennae 11
- wireless button 4
- wireless certification label 13
- wireless light 5
- WLAN device 13
- WLAN label 13

