

Notebook Tour

User Guide

© Copyright 2007 Hewlett-Packard
Development Company, L.P.

Microsoft and Windows are U.S. registered
trademarks of Microsoft Corporation.
Bluetooth is a trademark owned by its
proprietor and used by Hewlett-Packard
Company under license. SD Logo is a
trademark of its proprietor.

The information contained herein is subject
to change without notice. The only
warranties for HP products and services are
set forth in the express warranty statements
accompanying such products and services.
Nothing herein should be construed as
constituting an additional warranty. HP shall
not be liable for technical or editorial errors
or omissions contained herein.

First Edition: June 2007

Document Part Number: 443052-001

Safety warning notice

-
- ⚠ **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).
-

Table of contents

1 Identifying hardware

2 Components

| | |
|---|----|
| Product notice | 3 |
| Display components | 3 |
| Top components | 4 |
| Top-left buttons and lights | 4 |
| Top-right buttons, lights, and fingerprint reader | 5 |
| HP Dockable Media Center remote control | 6 |
| TouchPad | 13 |
| Keys | 14 |
| Front components | 15 |
| Rear components | 16 |
| Rear left-side components | 16 |
| Rear right-side components | 17 |
| Right-side components | 18 |
| Left-side components | 19 |
| Bottom components | 20 |
| Wireless antennae | 21 |
| Additional hardware components | 22 |

3 Labels

| | |
|-------------|----|
| Index | 24 |
|-------------|----|

1 Identifying hardware

To see a list of hardware installed in the computer, follow these steps:

1. Select **Start > Computer > System properties**.
2. In the left pane, click **Device Manager**.

You can also add hardware or modify device configurations using Device Manager.

 **NOTE:** Windows® includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing applications, running utilities, or changing Windows settings. Refer to Windows Help for more information.

2 Components

Product notice

This user guide describes features that are common to most models. Some features may not be available on your computer.

Display components



| Component | Description |
|------------------------------|--|
| (1) Speakers (4) | Produce sound. |
| (2) Internal microphones (2) | Record sound. NOTE: If there is a microphone icon next to each microphone opening, your computer has internal microphones. |
| (3) HP Webcam light | On: The integrated camera is in use. |
| (4) HP Webcam | Records video and captures still photographs. |
| (5) HP Webcam rotator | Tilts the camera vertically. |
| (6) Internal display switch | Turns off the display if the display is closed while the computer is on. |

Top components

Top-left buttons and lights




| Component | Description |
|-------------------|--|
| (1) Power button* | <ul style="list-style-type: none">When the computer is off, press the button to turn on the computer.When the computer is on, press the button to initiate Sleep.When the computer is in the Sleep state, press the button briefly to exit Sleep.When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>If the computer has stopped responding and Windows® shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, select Start > Control Panel > System and Maintenance > Power Options.</p> |
| (2) Power light | <ul style="list-style-type: none">On: The computer is on.Blinking: The computer is in the Sleep state.Off: The computer is off or in Hibernation. |
| (3) Media button | <ul style="list-style-type: none">Opens the QuickPlay program (for models with QuickPlay preinstalled).Opens the DVDPlay program (for models with DVDPlay preinstalled). <p>NOTE: If the computer has been set up to require a logon password, you may be asked to log on to Windows. QuickPlay or DVDPlay opens after you log on. Refer to the QuickPlay or DVDPlay software Help for more information.</p> |

| Component | Description |
|----------------------------------|---|
| (4) DVD button | Opens the DVD playback feature of the QuickPlay program. NOTE: If the computer has been set up to require a logon password, you may be asked to log on to Windows. QuickPlay opens after you log on. Refer to the QuickPlay software Help for more information. |
| (5) TV play button | Opens the TV module within the QuickPlay program. |
| (6) Previous/rewind button | <ul style="list-style-type: none"> Plays the previous track or chapter when the button is pressed once. Rewinds media when the button is pressed simultaneously with the fn key. |
| (7) Stop button | Stops playback. |
| (8) Play/pause button | Plays or pauses media. |
| (9) Next/fast forward button | <ul style="list-style-type: none"> Plays the next track or chapter when the button is pressed once. Fast forwards media when the button is pressed simultaneously with the fn key. |
| (10) Theater mode button | Dims the lights on the computer. |
| (11) Remote control eject button | Ejects the remote control. |
| (12) Caps lock light | On: Caps lock is on. |

*This table describes factory settings. For information about changing factory settings, refer to the user guides located in Help and Support.

Top-right buttons, lights, and fingerprint reader

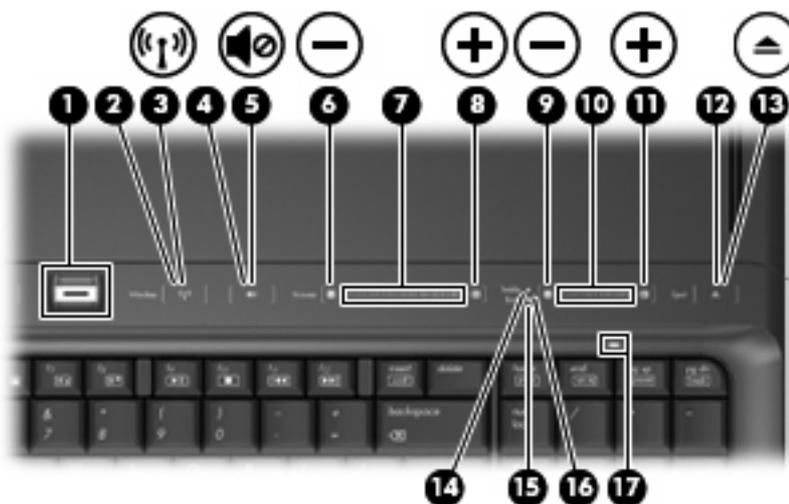


| Component | Description |
|------------------------|---|
| (1) Fingerprint reader | Allows a fingerprint logon to Windows, instead of a password logon. |

| Component | Description |
|---|---|
| (2) Wireless button | Turns the wireless feature on or off, but does not create a wireless connection. NOTE: To establish a wireless connection, a wireless network must already be set up. |
| (3) Wireless light | <ul style="list-style-type: none"> Blue: An integrated wireless device, such as a wireless local area network (LAN) device and/or a Bluetooth® device, is turned on. Amber: An integrated wireless device is turned off. |
| (4) Volume mute button | Mutes and restores speaker sound. |
| (5) Volume mute light | <ul style="list-style-type: none"> Blue: Computer sound is turned on. Amber: Computer sound is turned off. |
| (6) Volume down light | Blinking: The volume scroll zone is being used to decrease speaker volume. |
| (7) Volume scroll zone | Adjusts speaker volume. Slide your finger to the left to decrease volume and to the right to increase volume. You can also tap the minus sign on the scroll zone to decrease volume, or tap the plus sign on the scroll zone to increase volume. |
| (8) Volume up light | Blinking: The volume scroll zone is being used to increase speaker volume. |
| (9) Treble or bass volume down light (select models only) | Blinking: The volume scroll zone is being used to decrease treble or bass volume. |
| (10) Treble or bass volume scroll zone (select models only) | Adjusts treble or bass volume. Slide your finger to the left to decrease volume and to the right to increase volume. You can also tap the minus sign on the scroll zone to decrease volume, or tap the plus sign on the scroll zone to increase volume. |
| (11) Treble or bass volume up light (select models only) | Blinking: The volume scroll zone is being used to increase treble or bass volume. |
| (12) Optical drive button | Releases the media tray. |
| (13) Optical drive light | Blinking: The optical drive is being accessed. |
| (14) Treble light (select models only) | On: The treble volume function is on. |
| (15) Bass light (select models only) | On: The bass volume function is on. |
| (16) Treble/bass button (select models only) | Alternates between treble and bass volume controls. |
| (17) Num lock light | On: Num lock is on or the embedded numeric keypad is enabled. |

HP Dockable Media Center remote control


 **NOTE:** Refer to the illustration that most closely matches your remote control.

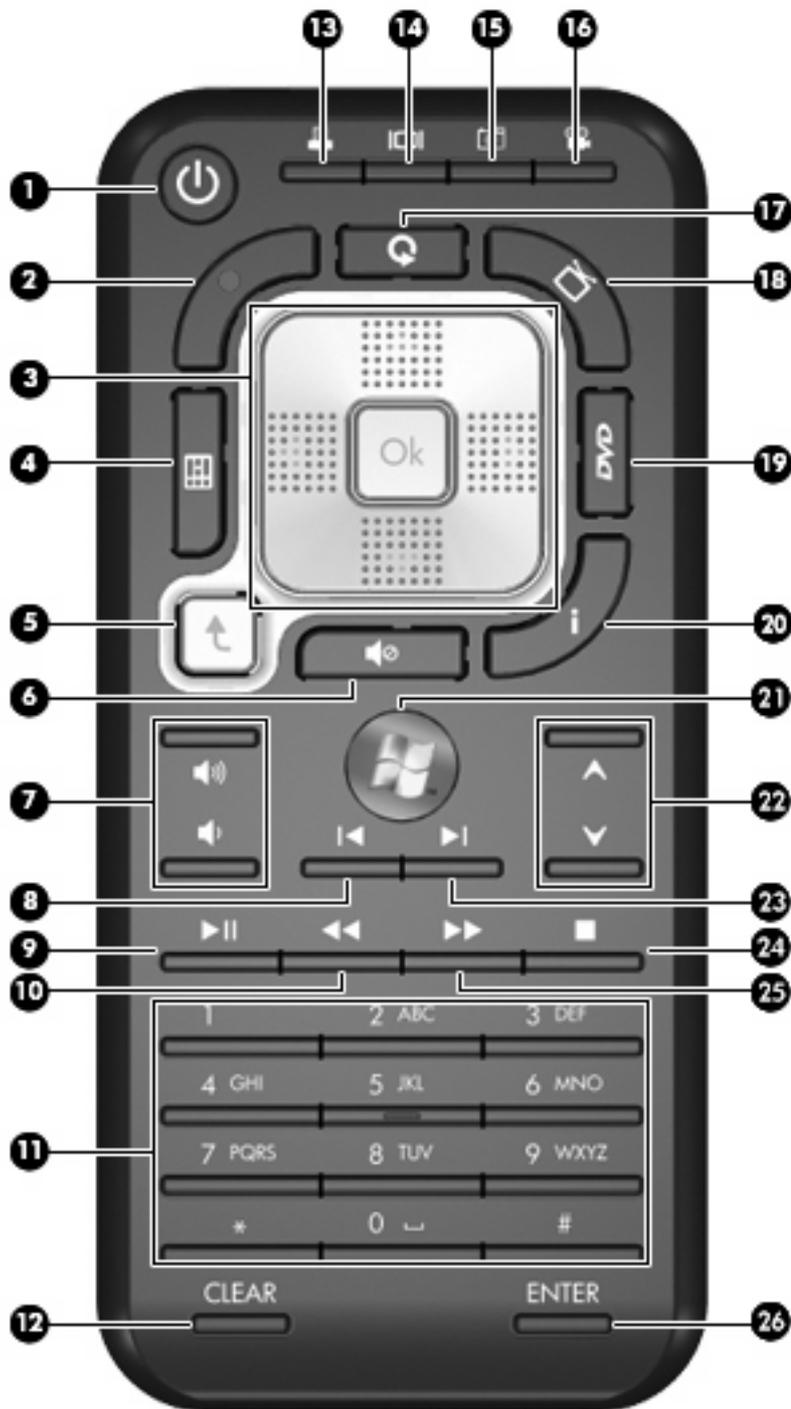

| Button | Description |
|-----------|---|
| (1) Power | <ul style="list-style-type: none"> If the computer is off, press the Power button to turn the computer on. If the computer is on, press the Power button to initiate Sleep. <p>NOTE: Press the Sleep button again to exit the Sleep state.</p> |

| Button | Description |
|---------------------|---|
| (2) Recorded TV | Opens the Recorded TV window where all your recorded TV programs are stored. From this window, you can search for and play back a recorded program. |
| (3) Arrow, OK | <ul style="list-style-type: none"> • Press an arrow to move between menus, windows, or activities. Pressing an arrow button also moves the pointer to select actions within the Windows Media Center windows. • Press the OK button to select a desired action. The OK button functions like the Enter button. If you are watching live TV, press the OK button to go to the previous channel. Press the OK button again to switch back to the original channel you were watching. |
| (4) Guide | Opens the electronic television Program Guide. Internet access may be required. |
| (5) Enter | Enters or selects the desired action, menu, or window option. |
| (6) Mute | Turns off computer sound. The word “Mute” is displayed on the screen when Mute is turned on. |
| (7) Volume | Increases and decreases computer sound. |
| (8) Replay | <ul style="list-style-type: none"> • Moves backward 7 seconds in live TV. • Moves backward 12 hours in the Program Guide. |
| (9) Play | Plays the selected media. |
| (10) Rewind | <ul style="list-style-type: none"> • Rewinds the selected media. To increase the rewinding speed, press the button again. <p>NOTE: The Rewind button does not work with MP3 files and may not work with some video files.</p> <ul style="list-style-type: none"> • Moves the video backward. • Moves a live TV program to the beginning of the 30-minute pause buffer. • Moves the television Program Guide back 3 hours. • When you press the Rewind button and then press the Play button, instant replay is deactivated. |
| (11) Keypad | <p>Changes channels or enters text into a text box.</p> <p>NOTE: Each time you press a number button, a different character (letter) is displayed. Press the Enter button to select a character.</p> |
| (12) Clear | Clears or deletes the last character entered. |
| (13) Print | Prints pictures that you select in the My Pictures window. This button does not print files from Windows Explorer. |
| (14) Switch screens | Switches the computer image between the computer display and an external display. |
| (15) Snapshot | Captures a picture of the computer screen and saves it to the clipboard. |
| (16) Theater mode | Dims the lights on the computer. |
| (17) QuickPlay | Opens QuickPlay. |

| Button | Description |
|------------------|---|
| (18) Live TV | <ul style="list-style-type: none"> Moves a TV program forward to the end of the pause buffer and resumes playing live TV. When you pause a TV program, press the button to move forward to live TV. Opens the media software and then begins playing live TV in full-screen mode. |
| (19) DVD menu | Opens the main menu on a DVD movie, if available. |
| (20) Information | <ul style="list-style-type: none"> Displays available information about a selected media file, such as a TV program summary or music artist information. Displays options to rotate or print your pictures. <p>NOTE: You may need to be connected to the Internet to receive some media information.</p> <p>NOTE: Some media may not include this information.</p> |
| (21) Start | Opens the Windows Media Center main menu. |
| (22) Change/page | <ul style="list-style-type: none"> Changes TV channels or moves pages up (+) and down (-), depending on the available options. Moves to the next DVD chapter. |
| (23) Skip | <ul style="list-style-type: none"> Advances 30 seconds in live TV or in a recorded program. Advances one music track in a CD. Advances 12 hours in the television Program Guide. |
| (24) Stop | Stops the selected media. When you press the button while you are watching TV, the Windows Media Center pause buffer continues to record in the background. |
| (25) Forward | <ul style="list-style-type: none"> Moves the selected video media forward. To increase the fast forwarding speed, press the Forward button up to 3 times. <p>NOTE: The Forward button may not work with some video files.</p> <ul style="list-style-type: none"> Moves MP3 music files forward. Moves a video forward. Moves the television Program Guide forward 3 hours. |
| (26) Enter | Enters or selects the desired action, menu, or window option. |

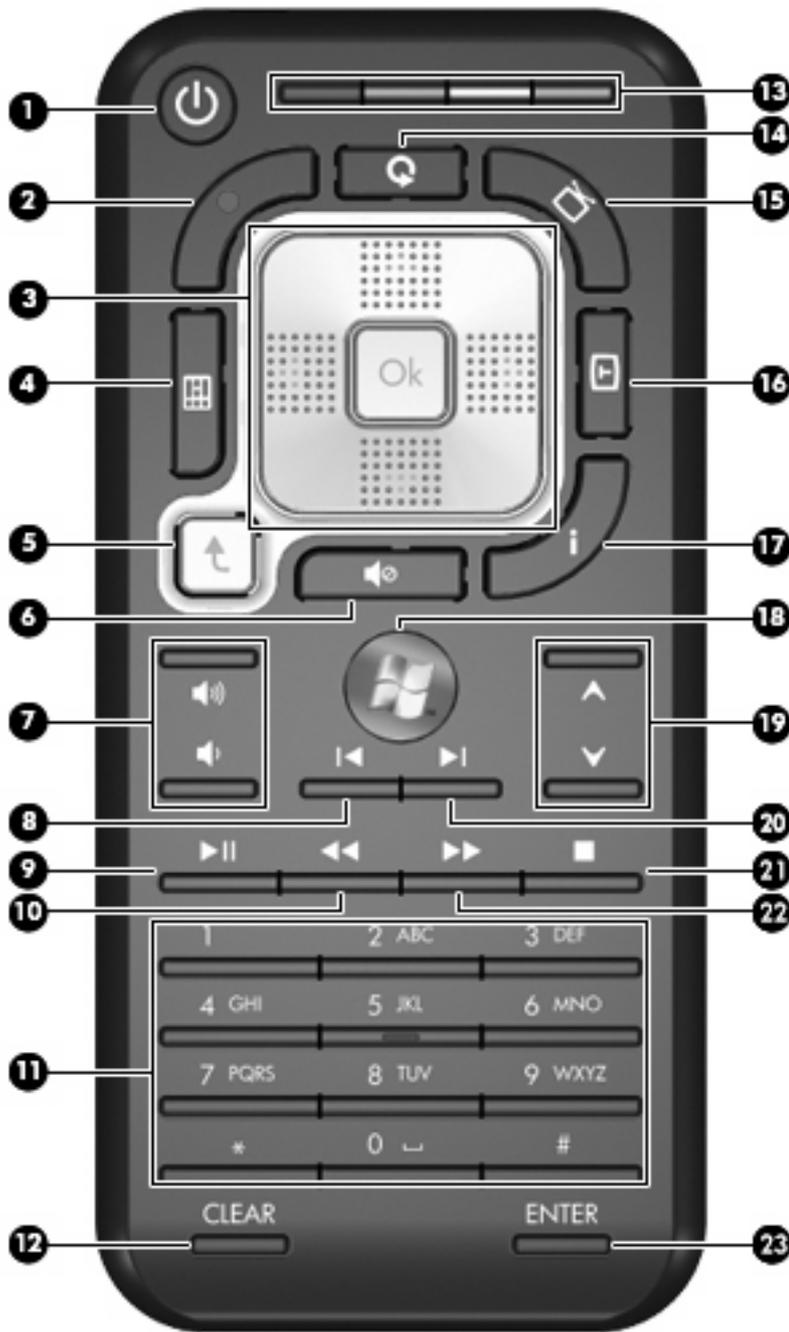

| Button | Description |
|-----------------|---|
| (1) Power | <ul style="list-style-type: none"> If the computer is off, press the Power button to turn the computer on. If the computer is on, press the Power button to initiate Sleep. <p>NOTE: Press the Sleep button again to exit the Sleep state.</p> |
| (2) Recorded TV | <p>Opens the Recorded TV window where all your recorded TV programs are stored. From this window, you can search for and play back a recorded program.</p> |

| Button | Description |
|-----------------------|---|
| (3) Arrow, OK | <ul style="list-style-type: none"> Press an arrow to move between menus, windows, or activities. Pressing an arrow button also moves the pointer to select actions within the Windows Media Center windows. Press the OK button to select a desired action. The OK button functions like the Enter button. If you are watching live TV, press the OK button to go to the previous channel. Press the OK button again to switch back to the original channel you were watching. |
| (4) Guide | Opens the electronic television Program Guide. Internet access may be required. |
| (5) Enter | Enters or selects the desired action, menu, or window option. |
| (6) Mute | Turns off computer sound. The word "Mute" is displayed on the screen when Mute is turned on. |
| (7) Volume | Increases and decreases computer sound. |
| (8) Replay | <ul style="list-style-type: none"> Moves backward 7 seconds in live TV. Moves backward 12 hours in the Program Guide. |
| (9) Play | Plays the selected media. |
| (10) Rewind | <ul style="list-style-type: none"> Rewinds the selected media. To increase the rewinding speed, press the button again. <p>NOTE: The Rewind button does not work with MP3 files and may not work with some video files.</p> <ul style="list-style-type: none"> Moves the video backward. Moves a live TV program to the beginning of the 30-minute pause buffer. Moves the television Program Guide back 3 hours. When you press the Rewind button and then press the Play button, instant replay is deactivated. |
| (11) Keypad | <p>Changes channels or enter text into a text box.</p> <p>NOTE: Each time you press a number button, a different character (letter) is displayed. Press the Enter button to select a character.</p> |
| (12) Clear | Clears or deletes the last character entered. |
| (13) Teletext buttons | Shortcut buttons that allow retrieval of information. |
| (14) QuickPlay | Opens QuickPlay. |
| (15) Live TV | <ul style="list-style-type: none"> Moves a TV program forward to the end of the pause buffer and resumes playing live TV. When you pause a TV program, press the button to move forward to live TV. Opens the media software, and then begins playing live TV in full-screen mode. |
| (16) Teletext | Displays the teletext menu. |

| Button | Description |
|------------------|---|
| (17) Information | <ul style="list-style-type: none"> • Displays available information about a selected media file, such as a TV program summary or music artist information. • Displays options to rotate or print your pictures. <p>NOTE: You may need to be connected to the Internet to receive some media information.</p> <p>NOTE: Some media may not include this information.</p> |
| (18) Start | Opens the Windows Media Center main menu. |
| (19) Change/page | <ul style="list-style-type: none"> • Changes TV channels or moves pages up (+) and down (-), depending on the available options. • Moves to the next DVD chapter. |
| (20) Skip | <ul style="list-style-type: none"> • Advances 30 seconds in live TV or in a recorded program. • Advances one music track in a CD. • Advances 12 hours in the television Program Guide. |
| (21) Stop | Stops the selected media. When you press the button while you are watching TV, the Windows Media Center pause buffer continues to record in the background. |
| (22) Forward | <ul style="list-style-type: none"> • Moves the selected video media forward. To increase the fast forwarding speed, press the Forward button up to 3 times. <p>NOTE: The Forward button may not work with some video files.</p> <ul style="list-style-type: none"> • Moves MP3 music files forward. • Moves a video forward. • Moves the television Program Guide forward 3 hours. |
| (23) Enter | Enters or selects the desired action, menu, or window option. |


TouchPad



| Component | Description |
|----------------------------|---|
| (1) TouchPad light | <ul style="list-style-type: none">• Blue: TouchPad is enabled.• Amber: TouchPad is disabled. |
| (2) TouchPad* | Moves the pointer and selects or activates items on the screen. |
| (3) Left TouchPad button* | Functions like the left button on an external mouse. |
| (4) TouchPad on/off button | Enables/disables the TouchPad. |
| (5) TouchPad scroll zone* | Scrolls up or down. |
| (6) Right TouchPad button* | Functions like the right button on an external mouse. |


*This table describes factory settings. To view and change pointing device preferences, select **Start > Control Panel > Hardware and Sound > Mouse**.

Keys

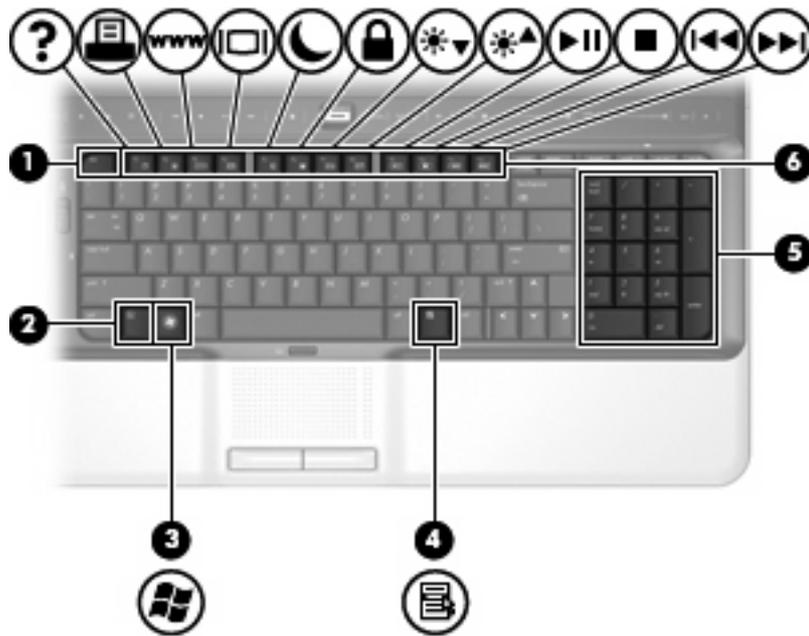

| Component | Description |
|------------------------------------|--|
| (1) <code>esc</code> key | Displays system information when pressed in combination with the <code>fn</code> key. |
| (2) <code>fn</code> key | Executes frequently used system functions when pressed in combination with a function key or the <code>esc</code> key. |
| (3) Windows logo key | Displays the Windows Start menu. |
| (4) Windows applications key | Displays a shortcut menu for items beneath the pointer. |
| (5) Integrated numeric keypad keys | Can be used like the keys on an external numeric keypad. |
| (6) Function keys | Execute frequently used system functions when pressed in combination with the <code>fn</code> key. |


Front components

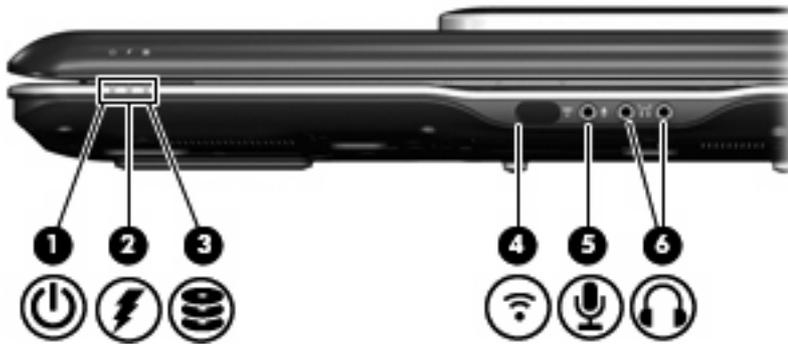

| Component | Description |
|-------------------------------------|---|
| (1) Power light | <ul style="list-style-type: none"> On: The computer is on. Blinking: The computer is in the Sleep state. Off: The computer is off or in Hibernation. |
| (2) Battery light | <ul style="list-style-type: none"> On: A battery is charging. Blinking: A battery that is the only available power source has reached a low battery level or a critical battery level. Off: If the computer is plugged into an external power source, the light is turned off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level. |
| (3) Drive light | Blinking: The hard drive or optical drive is being accessed. |
| (4) Consumer infrared lens | Receives a signal from the remote control. |
| (5) Audio-in (microphone) jack | Connects an optional computer headset microphone, stereo array microphone, or monaural microphone. |
| (6) Audio-out (headphone) jacks (2) | Produce sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio. |


Rear components

Rear left-side components

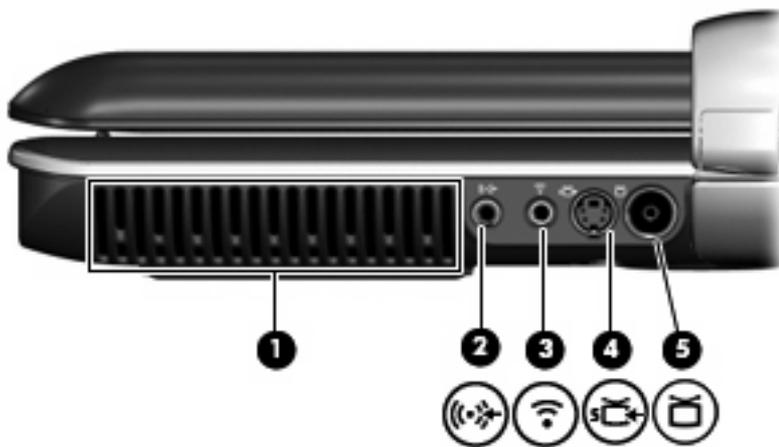


| Component | Description |
|--------------------------------|--|
| (1) Vent | Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation. |
| (2) Infrared (IR) emitter jack | Connects the computer to your cable or satellite set-top box. |
| (3) TV audio line-in jack | Connects a cable or satellite set-top box to the TV tuner for high-quality audio. |
| (4) S-Video-in jack | Connects a cable or satellite set-top box to the TV tuner for high-quality video. |
| (5) RF coaxial cable jack | Connects a coaxial cable or TV antenna. NOTE: The computer is shipped with an RF coaxial cable adapter. Depending on your computer model, the adapter may be required for proper setup. |

Rear right-side components

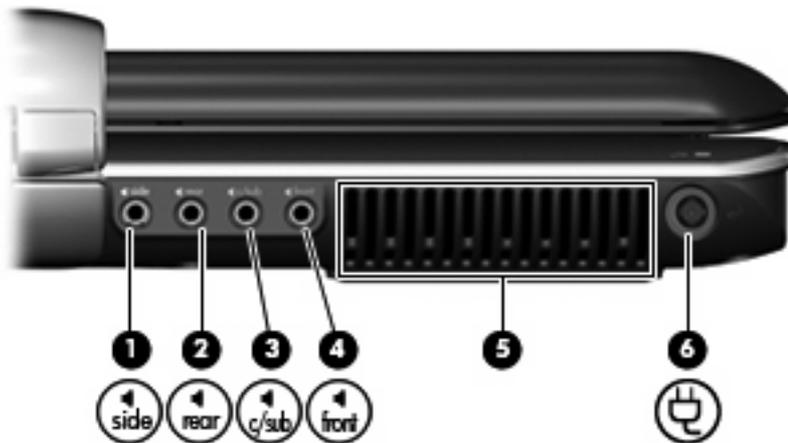


| Component | Description |
|---|--|
| (1) Left- and right-side analog channel output jack | Connects optional audio speakers for left- and right-side audio output. |
| (2) Rear left- and right-side analog channel output jack | Connects optional audio speakers for rear left- and right-side audio output. |
| (3) Center channel and subwoofer analog channel output jack | Connects an optional audio speaker for center channel and subwoofer audio output. |
| (4) Front left- and right-side analog channel output jack | Connects optional audio speakers for front left- and right-side audio output. |
| (5) Vent | Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation. |
| (6) Power connector | Connects an AC adapter. |

Right-side components

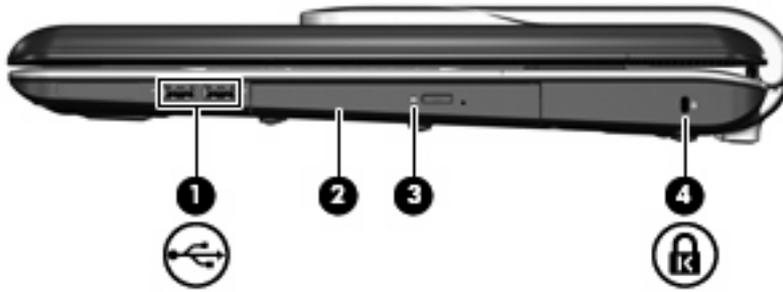


| Component | Description |
|-------------------------|---|
| (1) USB ports (2) | Connect optional USB devices. |
| (2) Optical drive | Reads optical discs and, on select models, also writes to optical discs. |
| (3) Optical drive light | Blinking: The optical drive is being accessed. |
| (4) Security cable slot | Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen. |

Left-side components

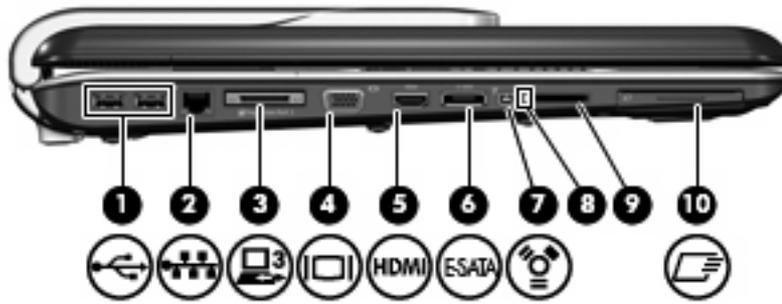

| Component | Description |
|------------------------------|--|
| (1) USB ports (2) | Connect optional USB devices. |
| (2) RJ-45 (network) jack | Connects a network cable. |
| (3) Expansion port 3 | Connects the computer to an optional docking device or expansion product. NOTE: The computer has only one expansion port. The term <i>expansion port 3</i> describes the type of expansion port. |
| (4) External monitor port | Connects an external VGA monitor or projector. |
| (5) HDMI port | Connects an optional video or audio device, such as a high-definition television, or any compatible digital or audio component. |
| (6) eSATA port | Connects high-performance eSATA components, such as an eSATA external hard drive. |
| (7) 1394 port | Connects an optional IEEE 1394 or 1394a device, such as a camcorder. |
| (8) Digital Media Slot light | On: A digital card is being accessed. |
| (9) Digital Media Slot | Supports the following optional digital card formats: <ul style="list-style-type: none"> • Memory Stick (MS) • Memory Stick Pro (MSP) • MultiMediaCard (MMC) • Secure Digital Input/Output (SD I/O) • Secure Digital (SD) Memory Card • xD-Picture Card (XD) |
| (10) ExpressCard slot | Supports optional ExpressCard cards. |

Bottom components

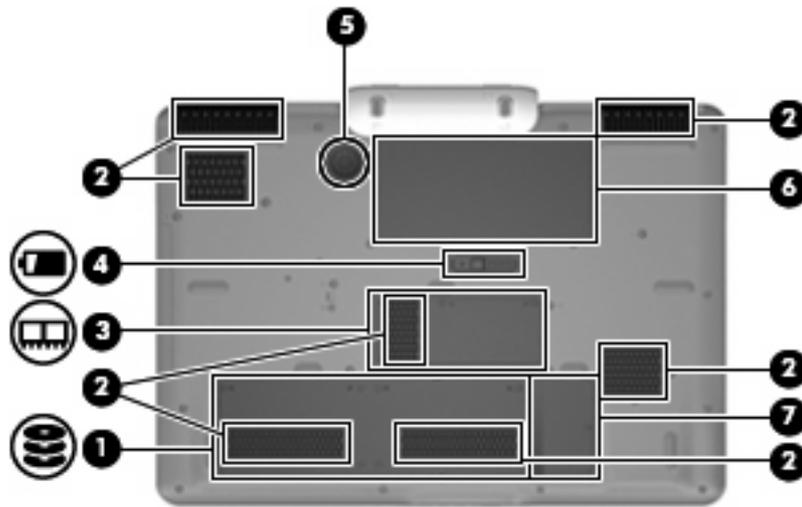

| Component | Description |
|--|---|
| (1) Hard drive bay | <p>Holds the hard drives.</p> <p>NOTE: Depending on your computer model, the computer may have 1 or 2 hard drives.</p> |
| (2) Vents (7) | <p>Enable airflow to cool internal components.</p> <p>NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.</p> |
| (3) Memory module compartment | Contains the memory module slots. |
| (4) Battery release latch | Releases the battery from the battery bay. |
| (5) Subwoofer | Contains the subwoofer speaker. |
| (6) Battery bay | Holds the battery. |
| (7) Mini Card compartment (select models only) | <p>Holds a wireless LAN device.</p> <p>NOTE: To prevent an unresponsive system and the display of a warning message, replace with only a Mini Card device authorized for use in the computer by the governmental agency that regulates wireless devices in your country. If you replace the device and then receive a warning message, remove the device to restore computer functionality. Then contact technical support by selecting Start > Help and Support > Contact support.</p> |

Wireless antennae

Depending on the computer model, there may be 2 or 3 wireless antennae.



| Component | Description |
|--|--|
| WLAN antennae (2 or 3)* | Send and receive wireless signals to communicate with wireless local area networks (WLAN). |
| *The antennae are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennae free from obstructions. | |

To see wireless regulatory notices, refer to the section of the *Regulatory, Safety and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.

Additional hardware components



| Component | Description |
|------------------------------|--|
| (1) Power cord* | Connects an AC adapter to an AC outlet. |
| (2) AC adapter | Converts AC power to DC power. |
| (3) IR emitter cable | Connects the computer to your cable or satellite set-top box. When connected, you can change channels on the set-top box using the remote control. |
| (4) Battery* | Powers the computer when the computer is not plugged into external power. |
| (5) Remote control* | Used to change channels and navigate. |
| (6) TV tuner antenna* | Receives digital and analog broadcast signals. |
| (7) Remote control batteries | Power the remote control. |
| (8) RF coaxial cable adapter | Connects the RF coaxial cable to the computer. |

*Batteries, power cords, antennae, and remote controls vary in appearance by region and country.

3 Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer:

- Service tag—Provides the product brand and series name, serial number (s/n), and product number (p/n) of your computer. Have this information available when you contact technical support. The service tag label is affixed to the bottom of the computer.
- Microsoft® Certificate of Authenticity—Contains the Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed inside the battery bay.
- Wireless certification label(s) (select models only)—Provide information about optional wireless devices and the approval markings of some of the countries in which the devices have been approved for use. An optional device may be a wireless local area network (WLAN) device or an optional Bluetooth® device. If your computer model includes one or more wireless devices, one or more certification labels are included with your computer. You may need this information when traveling internationally. Wireless certification labels are affixed inside the memory module compartment.

Index

Symbols/Numerics

1394 port, identifying 19

A

AC adapter, identifying 22
analog channel output jacks,
identifying 17
antennae
 TV tuner 22
 wireless 21
applications key, Windows 14
audio-in (microphone) jack,
identifying 15
audio-out (headphone) jacks,
identifying 15

B

bass light, identifying 6
bass volume down light,
identifying 6
bass volume up light,
identifying 6
batteries
 computer 22
 remote control 22
battery bay 23
battery bay, identifying 20
battery light, identifying 15
battery release latch,
identifying 20
bays
 battery 20, 23
 hard drive 20
Bluetooth label 23
buttons
 DVD 5
 eject, remote control 5
 media 4
 next/fast forward 5
 optical drive 6

play/pause 5
power 4
previous/rewind 5
remote control eject 5
stop 5
theater mode 5
TouchPad 13
TouchPad on/off 13
treble 6
TV play 5
volume mute 6
wireless 6

C

cables, IR emitter cable 22
camera light, identifying 3
camera rotator, identifying 3
camera, identifying 3
caps lock light, identifying 5
Certificate of Authenticity label 23
compartments
 memory module 20
 Mini Card 20
components
 additional hardware 22
 bottom 20
 display 3
 front 15
 left-side 19
 rear 16
 right-side 18
 top 4
connector, power 17
cord, power 22

D

Digital Media Slot light,
identifying 19
Digital Media Slot, identifying 19
display switch, identifying 3

drive light, identifying 15
DVD button, identifying 5

E

eject button, remote control,
identifying 5
eSATA port, identifying 19
esc key, identifying 14
expansion port, identifying 19
ExpressCard slot, identifying 19
external monitor port,
identifying 19

F

fingerprint reader, identifying 5
fn key, identifying 14
function keys, identifying 14

H

hard drive bay, identifying 20
HDMI port, identifying 19
headphone (audio-out) jacks 15
HP Dockable Media Center remote
control, identifying 6
HP Webcam light, identifying 3
HP Webcam rotator, identifying 3
HP Webcam, identifying 3

I

IEEE 1394 port, identifying 19
infrared emitter jack,
identifying 16
infrared lens, identifying 15
internal display switch,
identifying 3
internal microphones,
identifying 3
IR emitter cable, identifying 22
IR emitter jack, identifying 16

J

jacks

- analog channel output jacks 17
- audio-in (microphone) 15
- audio-out (headphone) 15
- IR emitter 16
- RF coaxial cable 16
- RJ-45 (network) 19
- S-Video-in 16
- TV audio line-in 16

K

keypad keys, identifying 14 keys

- esc 14
- fn 14
- function 14
- keypad 14
- Windows applications 14
- Windows logo 14

L

labels

- Bluetooth 23
- Microsoft Certificate of Authenticity 23
- regulatory 23
- service tag 23
- wireless certification 23
- WLAN 23

latch, battery release 20

lights

- bass 6
- bass volume down 6
- bass volume up 6
- battery 15
- caps lock 5
- Digital Media Slot 19
- drive 15
- HP Webcam 3
- mute 6
- num lock 6
- optical drive 6, 18
- power 4, 15
- TouchPad 13
- treble 6
- treble volume down 6
- treble volume up 6
- volume down 6

volume mute 6

volume up 6

wireless 6

M

- media activity buttons, identifying 5
- media button, identifying 4
- memory module compartment, identifying 20
- microphone (audio-in) jack 15
- microphones, internal, identifying 3
- Microsoft Certificate of Authenticity label 23
- Mini Card compartment, identifying 20
- monitor port, external 19
- mute button, identifying 6
- mute light, identifying 6

N

- next/fast forward button, identifying 5
- num lock light, identifying 6

O

- operating system
 - Microsoft Certificate of Authenticity label 23
 - Product Key 23
- optical drive button, identifying 6
- optical drive light, identifying 6, 18
- optical drive, identifying 18

P

- play/pause button, identifying 5
- ports
 - 1394 19
 - eSATA 19
 - expansion 19
 - external monitor 19
 - HDMI 19
 - USB 18, 19
- power button, identifying 4
- power connector, identifying 17
- power cord, identifying 22
- power lights, identifying 4, 15
- previous/rewind button, identifying 5

- Product Key 23
- product name and number, computer 23

R

- regulatory information
 - regulatory label 23
 - wireless certification labels 23
- remote control batteries, identifying 22
- remote control buttons, identifying 6
- remote control eject button, identifying 5
- remote control, identifying 22
- RF coaxial cable adapter, identifying 22
- RF coaxial cable jack, identifying 16
- RJ-45 (network) jack, identifying 19
- rotator, HP Webcam, identifying 3

S

- S-Video-in jack, identifying 16
- scrolling regions, TouchPad 13
- security cable slot, identifying 18
- serial number, computer 23
- service tag 23
- slots
 - Digital Media 19
 - ExpressCard 19
 - memory module 20
 - security cable 18
- speakers, identifying 3
- stop button, identifying 5
- subwoofer, identifying 20

T

- theater mode button, identifying 5
- TouchPad buttons, identifying 13
- TouchPad light, identifying 13
- TouchPad on/off button 13
- TouchPad scrolling regions, identifying 13
- TouchPad, identifying 13
- traveling with the computer
 - wireless certification labels 23
- treble button, identifying 6

- treble light, identifying 6
- treble volume down light,
identifying 6
- treble volume up light,
identifying 6
- TV audio line-in jack,
identifying 16
- TV play button, identifying 5
- TV tuner antenna, identifying 22

U

- USB ports, identifying 18, 19

V

- vents, identifying 16, 17, 20
- volume down light, identifying 6
- volume mute button, identifying 6
- volume mute light, identifying 6
- volume scroll zone,
identifying 6
- volume up light, identifying 6

W

- webcam light, identifying 3
- webcam rotator, identifying 3
- webcam, identifying 3
- Windows applications key,
identifying 14
- Windows logo key, identifying 14
- wireless antennae 21
- wireless button, identifying 6
- wireless certification label 23
- wireless light, identifying 6
- WLAN device 23
- WLAN label 23

