




Clear paper jams

How do I?	Steps to perform
<p>Clear a jam in the print-cartridge area</p> <p>CAUTION: Media jams might result in loose toner on the page. If you get any toner on your clothes, wash them in cold water. Hot water will permanently set the toner into the fabric.</p>	<ol style="list-style-type: none"><li data-bbox="730 347 1312 403">1 Open the print-cartridge door, and then remove the print cartridge from the device.<li data-bbox="730 651 1312 738">2 With both hands, grasp the side of the media that is most visible (this includes the middle), and carefully pull it free from the device.<li data-bbox="730 962 1266 1018">3 Replace the print cartridge, and close the print-cartridge door.  <p>The diagram illustrates the three steps of clearing a jam in the print-cartridge area. Step 1 shows the print-cartridge door being opened and the print cartridge being removed. Step 2 shows the paper tray being pulled out to clear a jam. Step 3 shows the print cartridge being replaced and the door being closed.</p>

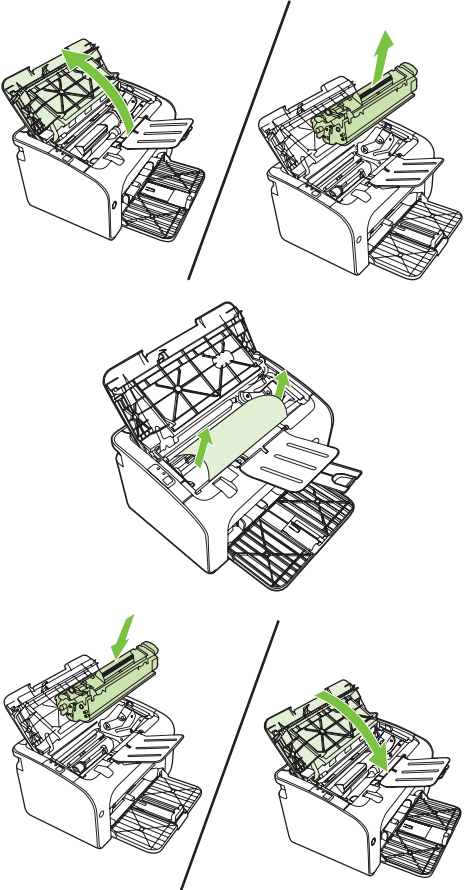