


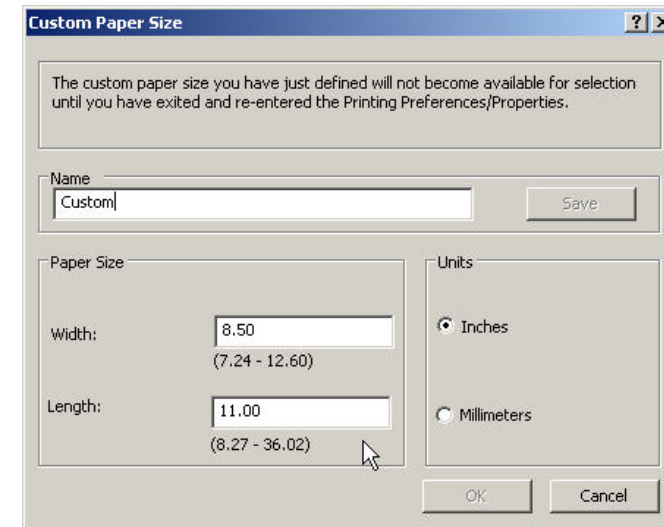

How do I	Steps to perform
<p><b>Print banners from Tray 1</b></p>	<p>The product allows printing of banner-sized paper from Tray 1. You can print banners from 457 mm (18 inches) to 915 mm (36 inches) in length and from 99 mm (4 inches) to 320 mm (12.6 inches) in width. When printing a banner from your graphics software program, you must set up a custom page size.</p> <ol style="list-style-type: none"> <li>1. Select <b>Print</b> from the <b>File</b> menu of your software program.</li> <li>2. Select the HP Color LaserJet CP6015 Series printer, and then click <b>Properties</b> or <b>Printing Preferences</b>.</li> <li>3. Click the <b>Paper/Quality</b> tab.</li> <li>4. Under <b>Paper Options</b>, click <b>Custom</b>, and then type a name, the width, and the length of the custom paper size, and then click <b>OK</b> and then <b>OK</b> again to save the new custom paper size.</li> <li>5. Click <b>Properties</b> or <b>Printing Preferences</b> again and then select the new custom paper size in the <b>Paper Sizes</b> list.</li> <li>6. Click <b>OK</b> and then <b>OK</b> again to print the banner.</li> </ol>



How do I	Steps to perform
<p><b>Load banner paper in Tray 1</b></p>	<ol style="list-style-type: none"> <li>1. Go to the product to load the banner paper. The control panel displays the paper size and prompts you to load the banner into Tray 1.</li> <li>2. Gently place the leading edge of the banner into Tray 1. Hold it there until product starts to pull the paper in. <b>NOTE:</b> Hold the paper steady against the paper sensor of Tray 1 until it feeds into the product. Moving the paper in an out may cause the product to jam.</li> <li>3. After the product begins pulling the banner in, let go of the paper and let the banner feed through on its own.</li> </ol>

