



Replace image drums

How do I	Steps to perform
<p>Replace image drums.</p>	<p>Replace an image drum when the control panel displays the Replace <color> Drum message.</p> <p>The control panel display will also indicate the color that should be replaced (if a genuine HP cartridge is currently installed).</p> <p>Grasp the grips on the sides of the front door and pull down to open (1).</p> <p>With one hand, slowly pull the used image drum out of the product, while supporting the image drum with your other hand. (2).</p> <p>Store the used image drum in a protective bag. Information about recycling used image drums is on the image drum box.</p> <p>Remove the new image drum from its packaging (3).</p> <p>Align the image drum with its slot and insert the image drum until it clicks into place. The gray roller cover on the bottom of the image drum automatically slides off as it is inserted. You can discard or recycle this cover. (4) For more information about recycling, visit www.hp.com/recycle.</p> <p>Close the front door (5).</p>

