



Replace print cartridges

How do I	Steps to perform
<p>Replace print cartridges.</p>	<p>Replace a print cartridge when the control panel displays the Replace <Color> Cartridge message. The control panel display will also indicate the color that should be replaced (if a genuine HP cartridge is currently installed). Grasp the grips on the sides of the front door and pull down to open (1) Grasp the handle of the used print cartridge and pull out to remove (2). Remove the new print cartridge from its packaging (3). Hold both ends of the cartridge and shake up and down 5-6 times (4). Align the print cartridge with its slot and insert the print cartridge until it clicks into place. (5). Close the front door (6).</p>

