Notebook Tour User Guide

© Copyright 2007 Hewlett-Packard Development Company, L.P.

Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation. Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. SD Logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: December 2007

Document Part Number: 460104-001

Safety warning notice

▲ WARNING! To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

Table of contents

1 Identifying hardware

2 Components	
Product notice	2
Top components	2
TouchPad	
Lights	
Buttons and speakers	
Keys	5
Front components	
Right-side components	
Left-side components	
Bottom components	
Display components	10
Wireless antennae	
Additional hardware components	12
3 Labels	
Index	14

1 Identifying hardware

To see a list of hardware installed in the computer, follow these steps:

- Select Start > Computer > System properties.
- 2. In the left pane, click Device Manager.

You can also add hardware or modify device configurations using Device Manager.

NOTE: Windows® includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing applications, running utilities, or changing Windows settings. Refer to Windows Help for more information.


2 Components

Product notice

This user guide describes features that are common to most models. Some features may not be available on your computer.

Top components

TouchPad

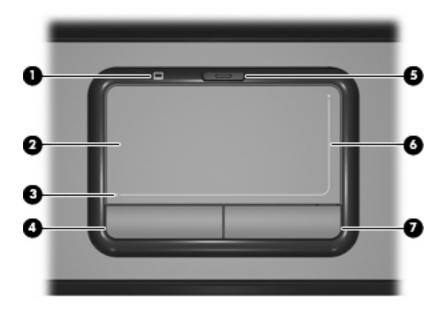

Com	oonent	Description
(1)	TouchPad light	Blue: TouchPad is enabled.
		Amber: TouchPad is disabled.
(2)	TouchPad*	Moves the pointer and selects or activates items on the screen.
(3)	TouchPad horizontal scroll zone	Scrolls left or right.
(4)	Left TouchPad button*	Functions like the left button on an external mouse.
(5)	TouchPad on/off button	Enables/disables the TouchPad.
(6)	TouchPad vertical scroll zone	Scrolls up or down.

Com	ponent	Description
(7)	Right TouchPad button*	Functions like the right button on an external mouse.
*This table describes factory settings. To view and change pointing device preferences, select Start > Control Panel >		

*This table describes factory settings. To view and change pointing device preferences, select **Start > Control Panel > Hardware and Sound > Mouse**.

Lights



Comp	ponent	De	scription
(1)	Wireless lights (2)	•	Blue: An integrated wireless device, such as a wireless local area network (WLAN) device and/or a Bluetooth® device, is turned on.
		•	Amber: An integrated wireless device is turned off.
(2)	Power lights (2)*	•	On: The computer is on.
		•	Blinking: The computer is in the Sleep state.
		•	Off: The computer is off or in Hibernation.
(3)	Num lock light	On	Num lock is on or the embedded numeric keypad is enabled.
(4)	Drive light	Blir	iking: The hard drive or optical drive is being accessed.

Com	ponent	Description
(5)	Battery light	 On: A battery is charging. Blinking: A battery that is the only available power source has reached a low battery level or a critical battery level. Off: If the computer is plugged into an external power source, the light is turned off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level.
(6)	Caps lock light	On: Caps lock is on.

^{*}The 2 power lights display the same information. The light on the power button is visible only when the computer is open. The power light on the front of the computer is visible whether the computer is open or closed.

Buttons and speakers




Comp	ponent	Description
(1)	Speakers (2)	Produce sound.
(2)	Wireless button	Turns the wireless feature on or off, but does not create a wireless connection. NOTE: To establish a wireless connection, a wireless network
		must already be set up.
(3)	Power button*	When the computer is off, press the button to turn on the computer.
		When the computer is on, press the button to initiate Sleep.

Component	Description
	 When the computer is in the Sleep state, press the button briefly to exit Sleep.
	 When the computer is in Hibernation, press the button briefly to exit Hibernation.
	If the computer has stopped responding and Windows® shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.
	To learn more about your power settings, select Start > Control Panel > System and Maintenance > Power Options .


^{*}This table describes factory settings. For information about changing factory settings, refer to the user guides located in Help and Support.

Keys

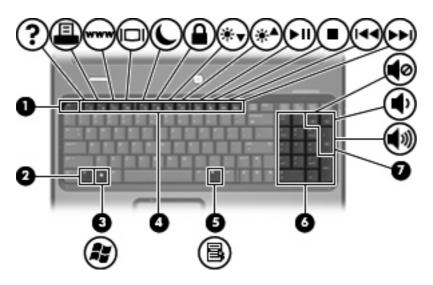


Com	ponent	Description
(1)	esc key	Displays system information when pressed in combination with the fn key.
(2)	fn key	Executes frequently used system functions when pressed in combination with a function key or the esc key.
(3)	Windows logo key	Displays the Windows Start menu.
(4)	Function keys	Execute frequently used system functions when pressed in combination with the fn key.
(5)	Windows applications key	Displays a shortcut menu for items beneath the pointer.
(6)	Integrated numeric keypad keys	Can be used like the keys on an external numeric keypad.
(7)	Selected math operation hotkeys	Regulate speaker sound when pressed in combination with the fn key.

Front components

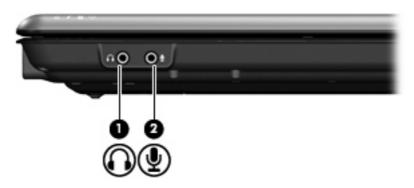


Com	ponent	Description
(1)	Audio-out (headphone) jack	Produces sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.
(2)	Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.

Right-side components

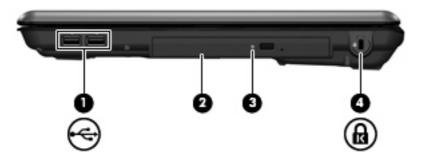


Comp	oonent	Description
(1)	USB ports (2)	Connect optional USB devices.
(2)	Optical drive	Reads optical discs and, on select models, also writes to optical discs.
(3)	Optical drive light	Blinking: The optical drive is being accessed.
(4)	Security cable slot	Attaches an optional security cable to the computer.
		NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.

Left-side components

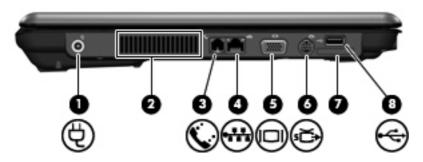

Com	oonent	Description
(1)	Power connector	Connects an AC adapter.
(2)	Vent	Enables airflow to cool internal components.
		NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(3)	RJ-11 (modem) jack	Connects a modem cable.
(4)	RJ-45 (network) jack	Connects a network cable.
(5)	External monitor port	Connects an external VGA monitor or projector.
(6)	S-Video-out jack	Connects an optional S-Video device such as a television, VCR, camcorder, overhead projector, or video capture card.
(7)	Digital Media Slot	Supports the following optional digital card formats: Secure Digital (SD) Memory Card, MultiMediaCard (MMC), Memory Stick (MS), Memory Stick Pro (MSP), xD-Picture Card (XD).
(8)	USB port	Connects an optional USB device.

Bottom components

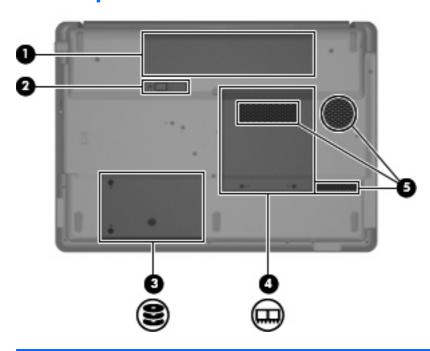

Comp	onent	Description
(1)	Battery bay	Holds the battery.
(2)	Battery release latch	Releases the battery from the battery bay.
(3)	Hard drive bay	Holds the hard drive.
(4)	Memory module and WLAN module compartment	Contains the memory module slots and the WLAN (wireless local area network) module slot.
		CAUTION: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support.
(5)	Vents (3)	Enable airflow to cool internal components.
		NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Display components



Component		Description		
(1)	Internal display switch	Turns off the display if the display is closed while the computer turned on.		
(2)	Webcam light	On: The integrated camera is in use.		
(3)	Webcam	Records video and captures still photographs.		
(4)	Internal microphone	Records sound.		

Wireless antennae

At least 2 antennae send and receive signals from one or more wireless devices. These antennae are not visible from the outside of the computer.



NOTE: For optimal transmission, keep the areas immediately around the antennae free from obstructions.

To see wireless regulatory notices, refer to the section of the *Regulatory, Safety and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.

Additional hardware components



Component		Description
(1)	Power cord*	Connects an AC adapter to an AC outlet.
(2)	AC adapter	Converts AC power to DC power.
(3)	Battery*	Powers the computer when the computer is not plugged into external power.

3 Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

- Service tag—Provides the product brand and series name, serial number (s/n), and product number (p/n) of your computer. Have this information available when you contact technical support. The service tag label is affixed to the bottom of the computer.
- Microsoft® Certificate of Authenticity—Contains the Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed inside the battery bay.
- Modem approval label—Provides regulatory information about the modem and lists the agency
 approval markings required by some of the countries in which the modem has been approved for
 use. You may need this information when traveling internationally. The modem approval label is
 affixed inside the memory module compartment.
- Wireless certification label(s)—Provide information about optional wireless devices and the approval markings of some of the countries in which the devices have been approved for use. An optional device may be a wireless local area network (WLAN) device or an optional Bluetooth® device. If your computer model includes one or more wireless devices, one or more certification labels are included with your computer. You may need this information when traveling internationally. Wireless certification labels are affixed inside the memory module compartment.

Index

AC adapter, identifying 12	right-side 7 top 2	keys esc 5
antennae 11	connector, power 8	fn 5
applications key, Windows 5	cord, power 12	function 5
audio-in (microphone) jack,		keypad 5
identifying 6	D	Windows applications 5
audio-out (headphone) jack, identifying 6	Digital Media Slot, identifying 8 display switch, identifying 10	Windows logo 5
	drive light, identifying 3	L
B	E	labels
battery bay 13		Bluetooth 13
battery bay, identifying 9	esc key, identifying 5	Microsoft Certificate of
battery light, identifying 4	external monitor port,	Authenticity 13
battery release latch,	identifying 8	modem approval 13
identifying 9	F	regulatory 13
battery, identifying 12		service tag 13
bays	fn key, identifying 5	wireless certification 13
battery 9, 13	function keys, identifying 5	WLAN 13
hard drive 9	н	latch, battery release 9
Bluetooth label 13	hard drive bay, identifying 9	lights
buttons	headphone (audio-out) jack 6	battery 4
power 4	hotkeys, math operation 5	caps lock 4
TouchPad 2	notkeys, main operation 5	drive 3
TouchPad on/off 2	1	num lock 3
wireless 4	internal display switch,	optical drive 7
	identifying 10	power 3
C	internal microphone,	TouchPad 2
camera light, identifying 10	identifying 10	webcam 10
camera, identifying 10	identifying to	wireless 3
caps lock light, identifying 4	J	
Certificate of Authenticity label 13	jacks	M
compartments	audio-in (microphone) 6	math operation hotkeys,
memory module 9	audio-in (microphone) 6	identifying 5
Mini Card 9	RJ-11 (modem) 8	memory module compartment,
components	RJ-45 (network 8	identifying 9
additional hardware 12	S-Video-out 8	microphone (audio-in) jack 6
bottom 9	3- video-out o	Microsoft Certificate of Authenticity
display 10	K	label 13
front 6	keypad keys, identifying 5	Mini Card compartment,
left-side 8	Rospad Roso, Identifying	identifying 9

modem approval label 13 identifying 2 monitor port, external 8 scrolling regions 2 TouchPad light, identifying 2 TouchPad on/off button 2 num lock light, identifying 3 traveling with the computer modem approval label 13 wireless certification labels 13 operating system Microsoft Certificate of Authenticity label 13 USB ports, identifying 7, 8 Product Key 13 optical drive light, identifying optical drive, identifying 7 vents, identifying 8, 9 P W ports webcam light, identifying 10 webcam, identifying 10 external monitor 8 USB 7, 8 Windows applications key, power button, identifying 4 identifying 5 power connector, identifying 8 Windows logo key, identifying 5 power cord, identifying 12 wireless antennae 11 power lights, identifying 3 wireless button, identifying 4 Product Key 13 wireless certification label 13 product name and number, wireless light, identifying 3 computer 13 WLAN device 13 WLAN label 13 regulatory information modem approval label 13 regulatory label 13 wireless certification labels 13 RJ-11 (modem) jack, identifying 8 RJ-45 (network) jack, identifying 8 S S-Video-out jack, identifying 8 scrolling regions, TouchPad 2 security cable slot, identifying 7 serial number, computer 13 service tag 13 slots Digital Media 8 memory module 9 security cable 7 speakers, identifying 4 т TouchPad buttons 2