

Notebook Tour

User Guide

© Copyright 2008 Hewlett-Packard
Development Company, L.P.

Microsoft and Windows are U.S. registered
trademarks of Microsoft Corporation.
Bluetooth is a trademark owned by its
proprietor and used by Hewlett-Packard
Company under license. SD Logo is a
trademark of its proprietor.

The information contained herein is subject
to change without notice. The only
warranties for HP products and services are
set forth in the express warranty statements
accompanying such products and services.
Nothing herein should be construed as
constituting an additional warranty. HP shall
not be liable for technical or editorial errors
or omissions contained herein.

First Edition: January 2008

Document Part Number: 461703-001

Safety warning notice

-
- ⚠ **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).
-

Table of contents

1 Identifying hardware

2 Components

Product notice	3
Top components	3
TouchPad	3
Keys	4
Front components	5
Rear components	7
Right-side components	8
Left-side components	9
Bottom components	10
Display components	11
Display lights	12
Quick Launch buttons	13
Media buttons	14
Wireless antennae (select models only)	15
Additional hardware components	16

3 Labels

Index	18
-------------	----

1 Identifying hardware

To see a list of hardware installed in the computer, follow these steps:

1. Select **Start > Computer > System properties**.
2. In the left pane, click **Device Manager**.

You can also add hardware or modify device configurations using Device Manager.

 **NOTE:** Windows® includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing applications, running utilities, or changing Windows settings. Refer to Windows Help for more information.

2 Components

Product notice

This user guide describes features that are common to most models. Some features may not be available on your computer.

Top components


TouchPad



Component	Description
(1) TouchPad on/off button	Enables/disables the TouchPad.
(2) TouchPad*	Moves the pointer and selects or activates items on the screen.
(3) Left TouchPad button*	Functions like the left button on an external mouse.
(4) TouchPad light	<ul style="list-style-type: none">• Blue: TouchPad is enabled.• Amber: TouchPad is disabled.
(5) TouchPad vertical scroll zone	Scrolls up or down.
(6) Right TouchPad button*	Functions like the right button on an external mouse.


*This table describes factory settings. To view and change TouchPad preferences, select **Start > Control Panel > Hardware and Sound > Mouse**.

Keys

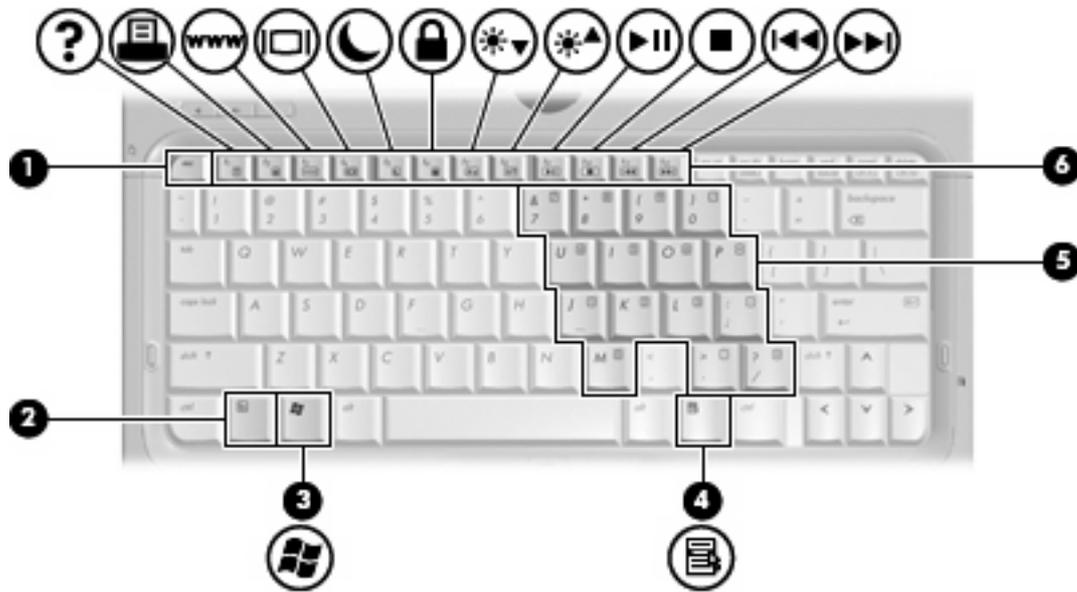

Component	Description
(1) <code>esc</code> key	Displays system information about your computer when pressed in combination with the <code>fn</code> key.
(2) <code>fn</code> key	Executes frequently used system functions when pressed in combination with a function key or the <code>esc</code> key.
(3) Windows logo key	Displays the Windows Start menu.
(4) Windows applications key	Displays a shortcut menu for items beneath the pointer.
(5) Embedded numeric keypad keys	Can be used like the keys on an external numeric keypad.
(6) Function keys	Execute frequently used system functions when pressed in combination with the <code>fn</code> key.

Front components

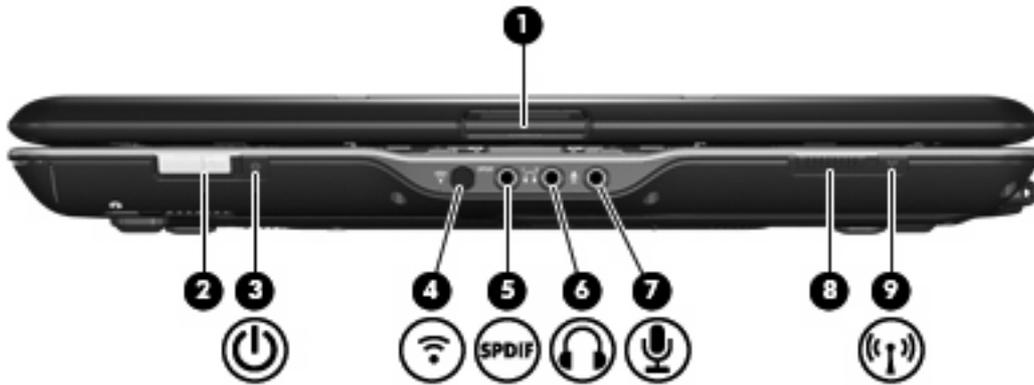

Component	Description
(1) Display release latch	Opens the computer.
(2) Power switch*	<ul style="list-style-type: none"> When the computer is off, slide the power switch to the right to turn on the computer. When the computer is on, slide the power switch to the right to initiate Sleep. When the computer is in the Sleep state, slide the power switch to the right briefly to exit Sleep. When the computer is in Hibernation, slide the power switch to the right briefly to exit Hibernation. <p>If the computer has stopped responding and Windows shutdown procedures are ineffective, slide the power switch to the right and hold for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, select Start > Control Panel > System and Maintenance > Power Options.</p> <p>To learn more about Sleep or Hibernation, refer to the Power Management guide.</p>
(3) Power light	<ul style="list-style-type: none"> On: The computer is on. Blinking: The computer is in the Sleep state. Off: The computer is off or in Hibernation.
(4) Consumer infrared lens	Receives a signal from the HP Remote Control.
(5) Audio-out (headphone) S/PDIF jack	Provides enhanced audio performance, including surround sound and other high-end audio output.
(6) Audio-out (headphone) jack	Produce sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.
(7) Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
(8) Wireless switch	Turns the wireless feature on or off, but does not create a wireless connection.


Component	Description
	<p>NOTE: A wireless network must be set up in order to establish a wireless connection.</p>
<p>(9) Wireless light</p>	<ul style="list-style-type: none"> • Blue: An integrated wireless device, such as a wireless local area network (WLAN) device and/or a Bluetooth® device, is turned on. • Amber: All wireless devices are turned off.
<p>*This table describes factory settings. For information about changing factory settings, refer to the user guides located in Help and Support.</p>	

Rear components




Component	Description
(1) Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(2) RJ-11 (modem) jack	Connects a modem cable.
(3) USB ports (2)	Connect optional USB devices.
(4) Security cable slot	Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.

Right-side components

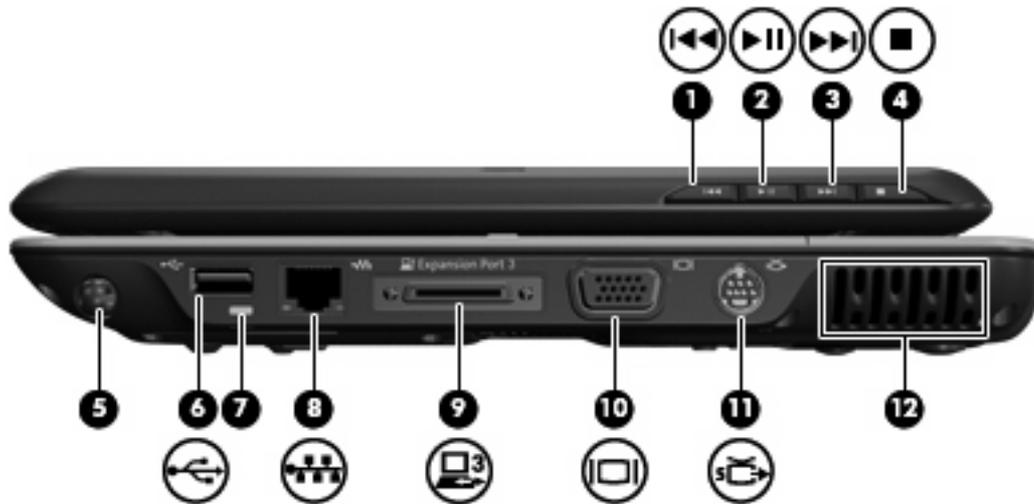


Component	Description
(1) Previous/rewind button	<ul style="list-style-type: none"> Plays the previous track or chapter when the button is pressed once. Rewinds media when the button is pressed simultaneously with the fn key.
(2) Play/pause button	Plays or pauses media.
(3) Next/fast forward button	<ul style="list-style-type: none"> Plays the next track or chapter when the button is pressed once. Fast forwards media when pressed simultaneously with the fn key.
(4) Stop button	Stops playback.
(5) Pen holder	Stores the pen.
(6) USB port	Connects an optional USB device.
(7) Pen tether hole	Connects the pen tether.
(8) RJ-45 (network) jack	Connects a network cable.
(9) Expansion port 3	Connects the computer to an optional docking device or an optional expansion product. NOTE: The computer has only one expansion port. The term <i>expansion port 3</i> describes the type of expansion port.
(10) External monitor port	Connects an external VGA monitor or projector.
(11) S-Video-out jack	Connects an optional S-Video device such as a television, VCR, camcorder, overhead projector, or video capture card.
(12) Vent	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Left-side components

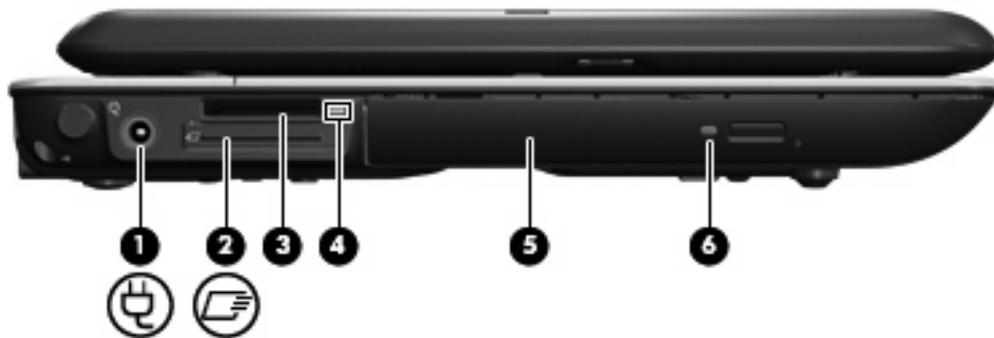

Component	Description
(1) Power connector	Connects an AC adapter.
(2) ExpressCard slot	Supports optional ExpressCard/34 cards.
(3) Digital Media Slot	Supports the following optional digital card formats: Secure Digital (SD) Memory Card, MultiMediaCard (MMC), Memory Stick (MS), Memory Stick Pro (MSP), xD-Picture Card (XD), xD-Picture Card (XD) Type M.
(4) Digital Media Slot light	On: A digital card is being accessed.
(5) Optical drive	Reads optical discs and, on select models, also writes to optical discs.
(6) Optical drive light	Blinking: The optical drive is being accessed.

Bottom components

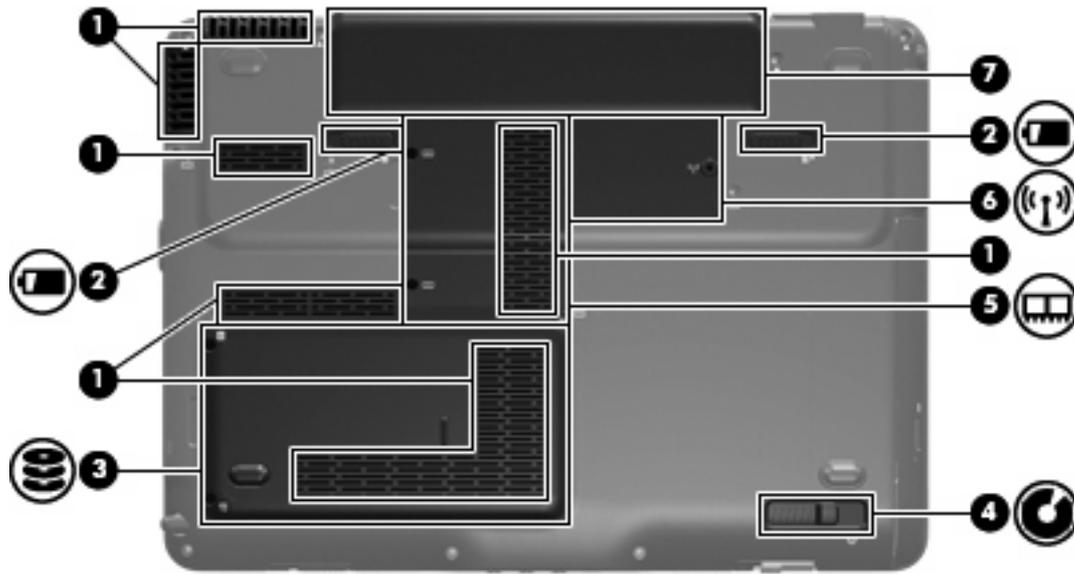

Component	Description
(1) Vents (6)	Enable airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(2) Battery release latches (2)	Releases the battery from the battery bay.
(3) Hard drive bay	Holds the hard drive.
(4) Optical drive release latch	Releases the optical drive from the drive bay.
(5) Memory module compartment	Contains the memory module slots.
(6) WLAN module compartment	Holds a WLAN module (select models only). NOTE: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support.
(7) Battery bay	Holds the battery.

Display components




Component	Description
(1) Convertible hinge	Swivels the display and converts the computer from traditional notebook mode into slate mode or vice versa. In slate mode, the display is rotated and folded flat, so that you can view content while carrying the computer.
(2) Consumer infrared lens	Receives a signal from the HP Remote Control.
(3) Internal display switch	Turns off the display and initiates Sleep if the display is closed while the power is on.
(4) Fingerprint reader (select models only)	Allows a fingerprint logon to Windows instead of a password logon.
(5) Internal microphones (2)	Record sound.
(6) Integrated camera (select models only)	Records video and captures still photographs.
(7) Display release latch	Opens the computer.

Display lights



Component	Description
(1) Power light	<ul style="list-style-type: none">• On: The computer is on.• Blinking: The computer is in the Sleep state.• Off: The computer is off or in Hibernation.
(2) Battery light	<ul style="list-style-type: none">• On: A battery is charging.• Blinking: A battery that is the only available power source has reached a low battery level. When the battery reaches a critical battery level, the battery light begins blinking rapidly.• Off: If the computer is plugged into an external power source, the light is turned off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level.
(3) Drive light	Blinking: The hard drive or optical drive is being accessed.

Quick Launch buttons

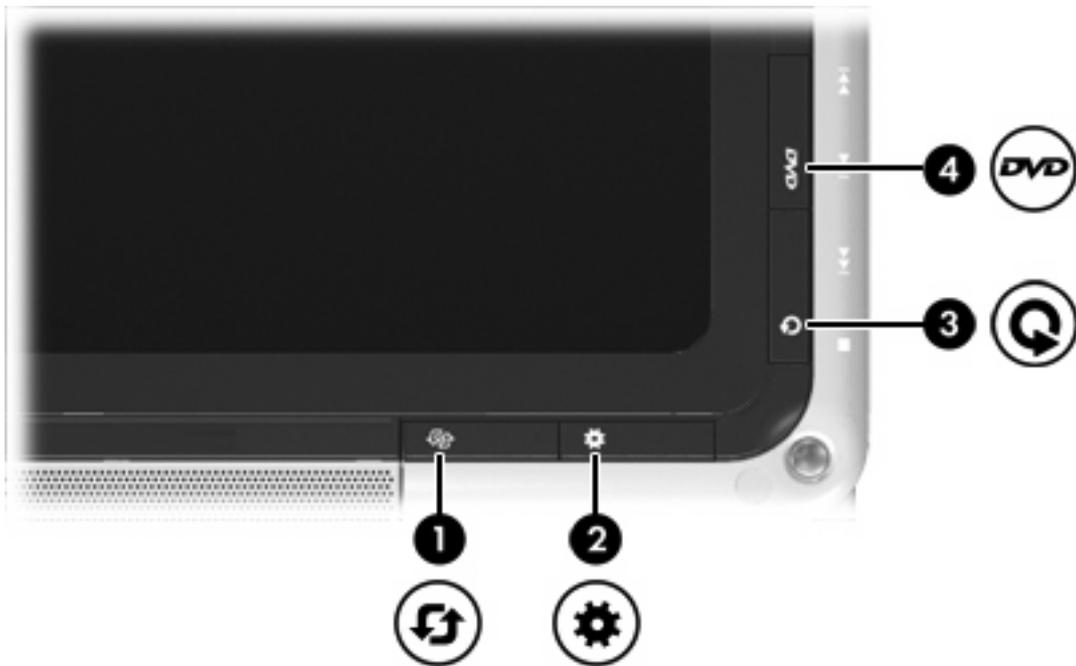

Component	Description
(1) Rotate button	Rotates the screen image clockwise into 4 orientations: landscape primary, landscape secondary, portrait primary, and portrait secondary.
(2) Mobility Center button	Opens Mobility Center.
(3) Media button	Launches the QuickPlay program.
(4) DVD button	Launches the DVD playback feature of the QuickPlay program.

NOTE: If the computer has been set up to require a logon password, you may be asked to log on to Windows. QuickPlay launches after you log on. Refer to the QuickPlay software Help for more information.

Media buttons



Component	Description
(1) Previous/rewind button	<ul style="list-style-type: none">Plays the previous track or chapter when the button is pressed once.Rewinds media when the button is pressed simultaneously with the fn key.
(2) Play/pause button	Plays or pauses media.
(3) Next/fast forward button	<ul style="list-style-type: none">Plays the next track or chapter when the button is pressed once.Fast forwards media when pressed simultaneously with the fn key.
(4) Stop button	Stops playback.

Wireless antennae (select models only)

On select computer models, at least 2 antennae send and receive signals from one or more wireless devices. These antennae are not visible from the outside of the computer.



 **NOTE:** For optimal transmission, keep the areas immediately around the antennae free from obstructions.

To see wireless regulatory notices, refer to the section of the *Regulatory, Safety and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.

Additional hardware components



Component	Description
(1) Power cord*	Connects an AC adapter to an AC outlet.
(2) AC adapter	Converts AC power to DC power.
(3) Battery*	Powers the computer when the computer is not plugged into external power.
(4) Country-specific modem cable adapter (select models only)	Adapts the modem cable to a non-RJ-11 telephone jack.
(5) Modem cable* (select models only)	Connects the internal modem to an RJ-11 telephone jack or to a country-specific modem adapter.

*Modem cables, batteries, and power cords vary in appearance by region and country.

3 Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

- Service tag—Provides the product brand and series name, serial number (s/n), and product number (p/n) of your computer. Have this information available when you contact technical support. The service tag label is affixed to the bottom of the computer.
- Microsoft® Certificate of Authenticity—Contains the Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label—Provides regulatory information about the computer. The regulatory label is affixed inside the battery bay.
- Modem approval label—Provides regulatory information about the modem and lists the agency approval markings required by some of the countries in which the modem has been approved for use. You may need this information when traveling internationally. The modem approval label is affixed inside the hard drive bay.
- Wireless certification label(s) (select models only)—Provide information about optional wireless devices and the approval markings of some of the countries in which the devices have been approved for use. An optional device may be a wireless local area network (WLAN) device or an optional Bluetooth® device. If your computer model includes one or more wireless devices, one or more certification labels are included with your computer. You may need this information when traveling internationally. Wireless certification labels are affixed inside the WLAN module compartment.

Index

A

AC adapter, identifying 16
antennae 15
applications key, Windows 4
audio-in (microphone) jack,
identifying 5
audio-out (headphone) jack,
identifying 5
audio-out (headphone) S/PDIF
jack, identifying 5

B

battery bay, identifying 10
battery light, identifying 12
battery release latch,
identifying 10
battery, identifying 16
bays
battery 10, 17
hard drive 10
Bluetooth label 17
buttons
DVD 13
Media 13
Mobility Center 13
next/fast forward 8, 14
play/pause 8, 14
previous/rewind 8, 14
rotate 13
stop 8, 14
TouchPad 3
TouchPad on/off 3

C

camera, identifying 11
Certificate of Authenticity label 17
compartments
memory module 10
WLAN module 10

components

additional hardware 16
bottom 10
display 11
front 5
left-side 9
rear 7
right-side 8
top 3
connectors, power 9
convertible hinge, identifying 11
cord, power 16

D

Digital Media Slot light,
identifying 9
Digital Media Slot, identifying 9
display release latch,
identifying 5, 11
display switch, identifying 11
drive light, identifying 12
drives, hard 10
DVD button, identifying 13

E

esc key, identifying 4
expansion port, identifying 8
ExpressCard slot, identifying 9
external monitor port,
identifying 8

F

fingerprint reader, identifying 11
fn key, identifying 4
function keys, identifying 4

H

hard drive bay, identifying 10
headphone (audio-out) jack 5

headphone (audio-out) S/PDIF
jack 5
hinge, convertible 11

I

infrared lens, identifying 5, 11
internal display switch,
identifying 11
internal microphone,
identifying 11

J

jacks
audio-in (microphone) 5
audio-out (headphone) 5
audio-out (headphone) S/
PDIF 5
RJ-11 (modem) 7
RJ-45 (network) 8
S-Video-out 8

K

keypad keys, identifying 4
keys
esc 4
fn 4
function 4
keypad 4
Windows applications 4
Windows logo 4

L

labels
Bluetooth 17
Microsoft Certificate of
Authenticity 17
modem approval 17
regulatory 17
service tag 17

- wireless certification 17
- WLAN 17
- latches
 - battery release 10
 - display release 5, 11
 - optical drive release 10
- lights
 - battery 12
 - Digital Media Slot 9
 - drive 12
 - power 5, 12
 - TouchPad 3
 - wireless 6

M

- media activity buttons,
 - identifying 8, 14
- Media button, identifying 13
- memory module compartment,
 - identifying 10
- microphone (audio-in) jack 5
- microphone, internal 11
- Microsoft Certificate of Authenticity label 17
- Mobility Center button,
 - identifying 13
- modem approval label 17
- modem cable adapter, country specific 16
- modem cable, identifying 16
- monitor port, external 8

N

- next/fast forward button,
 - identifying 8, 14

O

- operating system
 - Microsoft Certificate of Authenticity label 17
 - Product Key 17
- optical drive release latch,
 - identifying 10
- optical drive, identifying 9

P

- pen holder, identifying 8
- pen tether hole, identifying 8
- play/pause button, identifying 8, 14

- ports
 - expansion 8
 - external monitor 8
 - USB 7, 8
- power connector, identifying 9
- power cord, identifying 16
- power light, identifying 5, 12
- power switch, identifying 5
- previous/rewind button,
 - identifying 8, 14
- Product Key 17
- product name and number,
 - computer 17

R

- reader, fingerprint 11
- regulatory information
 - modem approval label 17
 - regulatory label 17
 - wireless certification labels 17
- RJ-11 (modem) jack,
 - identifying 7
- RJ-45 (network) jack,
 - identifying 8
- rotate button, identifying 13

S

- S-Video-out jack, identifying 8
- scrolling zones, TouchPad 3
- security cable slot, identifying 7
- serial number, computer 17
- service tag 17
- slots

- Digital Media 9
- ExpressCard 9
- memory module 10
- security cable 7
- stop button, identifying 8, 14
- switch, power 5

T

- TouchPad buttons, identifying 3
- TouchPad light, identifying 3
- TouchPad on/off button 3
- TouchPad scrolling zones,
 - identifying 3
- TouchPad, identifying 3
- traveling with the computer
 - modem approval label 17
 - wireless certification labels 17

U

- USB ports, identifying 7, 8

V

- vents, identifying 7, 8, 10

W

- Windows applications key,
 - identifying 4
- Windows logo key, identifying 4
- wireless antennae 15
- wireless certification label 17
- wireless light, identifying 6
- WLAN device 17
- WLAN label 17
- WLAN module compartment,
 - identifying 10

