

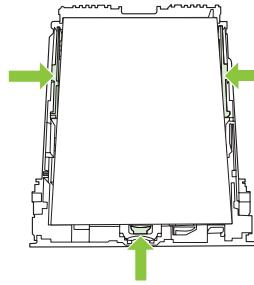
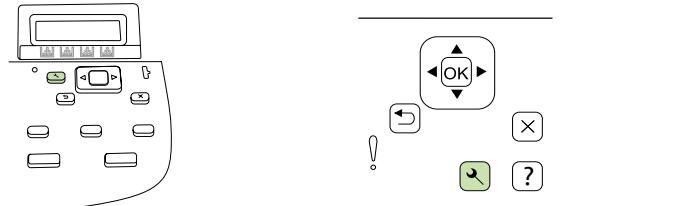


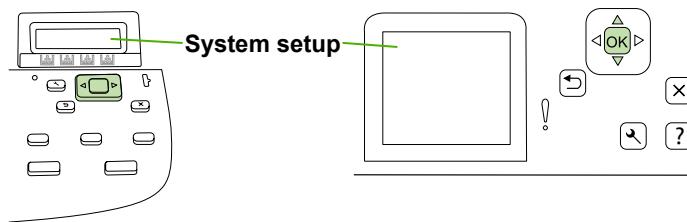







Fill paper trays

How do I?	Steps to perform
<p>Load paper and print media</p> <p>Tray 1</p> <p>NOTE: When you add new media, make sure that you remove all of the media from the input tray and straighten the stack of new media. Do not fan the media. This reduces jams by preventing multiple sheets of media from feeding through the product at one time.</p>	<ol style="list-style-type: none"> 1 Load media with the top forward and the side to be printed on facing down. 2 Media guides ensure that the media is correctly fed into the product and that the print is not skewed (crooked on the media). When loading media, adjust the media guides to match the width of the media that you are using. 
<p>Configure tray</p>	<ol style="list-style-type: none"> 1 On the product control panel, press Setup (▲). 2 Use the arrow buttons to select System setup, and then press OK. 3 Use the arrow keys to select Paper setup, and then press OK.   

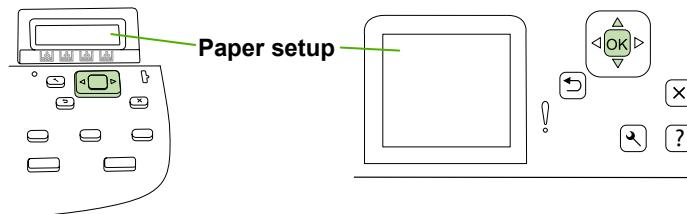

HP LaserJet CM1312 MFP Series – Manage and Maintain

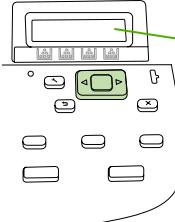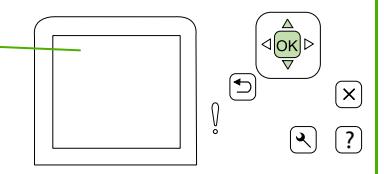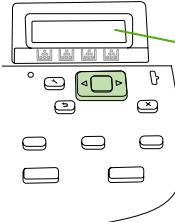
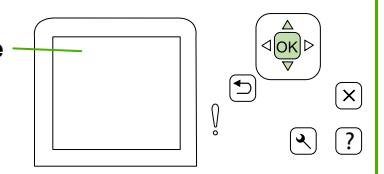
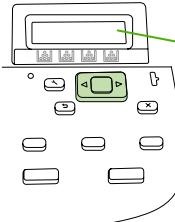
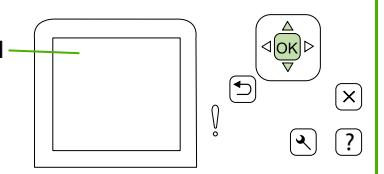


How do I?	Steps to perform
Load paper and print media (continued)	<p>4 Use the arrow keys to select the tray to be configured, and then press OK.</p>   <p>5 Use the arrow keys to select either Paper type or Paper size, and then press OK.</p>   <p>6 Use the arrow keys to select a default type or size for the tray, and then press OK.</p>  





Replace print cartridges

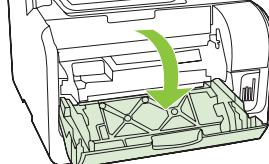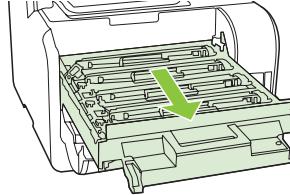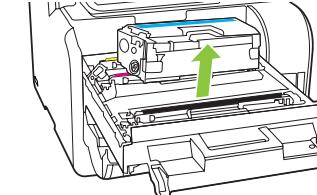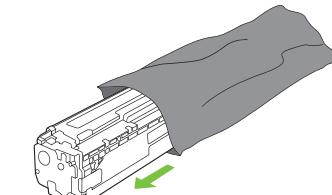How do I?	Steps to perform
Replace print cartridges CAUTION: If toner gets on any clothing, wipe it off with a dry cloth and wash the clothing in cold water. <i>Hot water sets toner into the fabric.</i>	<ol style="list-style-type: none">1 Open the front door. 2 Pull out the print-cartridge drawer. 3 Grasp the handle on the old print cartridge and then pull the cartridge straight up to remove it. 4 Remove the new print cartridge from the packaging. 






How do I?	Steps to perform
<p>Replace print cartridges (continued)</p> <p>CAUTION: Do not touch the imaging drum on the bottom of the print cartridge. Fingerprints on the imaging drum can cause print-quality problems.</p>	<ol style="list-style-type: none"><li data-bbox="741 271 1332 326">5 Remove the orange, plastic shield from the bottom of the new print cartridge.<li data-bbox="1374 271 1628 461"><li data-bbox="741 477 1248 517">6 Insert the new print cartridge into the product.<li data-bbox="1374 477 1670 668"><li data-bbox="741 683 1290 771">7 Pull the tab on the left side of the print cartridge straight up to completely remove the sealing tape. Discard the sealing tape.<li data-bbox="1374 683 1670 922"><li data-bbox="741 937 1100 977">8 Close the print-cartridge drawer.<li data-bbox="1374 937 1628 1128"><li data-bbox="741 1144 994 1183">9 Close the front door.<li data-bbox="1374 1144 1670 1334">








Clear paper jams

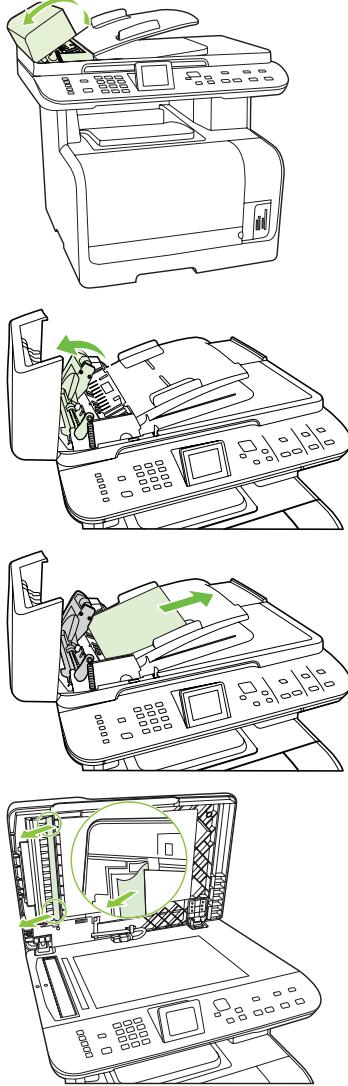How do I?	Steps to perform
<p>Clear paper jams</p> <p>Clear jams from the ADF (photo card models only)</p> <p>CAUTION: Do not use sharp objects, such as tweezers or needle-nose pliers, to remove jams. Damage caused by sharp objects will not be covered by the warranty.</p>	<p>When removing jammed media, pull the jammed media straight away from the product. Pulling jammed media out of the product at an angle can damage the product.</p> <ol style="list-style-type: none"><li data-bbox="741 457 1368 484">1 Open the ADF cover.<li data-bbox="741 652 1368 710">2 Lifting the green lever, rotate the pick mechanism until it stays open.<li data-bbox="741 895 1368 949">3 Gently try to remove the page without tearing it. If you feel resistance, go to the next step.<li data-bbox="741 1133 1368 1187">4 Open the ADF lid and gently loosen the media by using both hands. 



HP LaserJet CM1312 MFP Series – Clear Jams

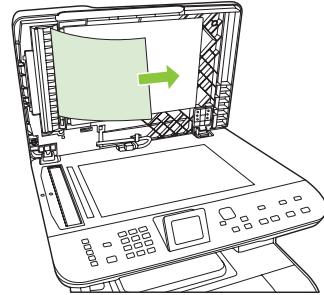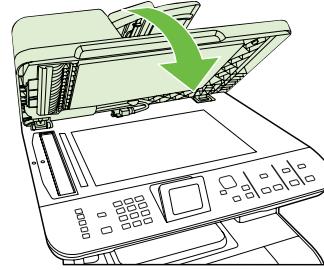
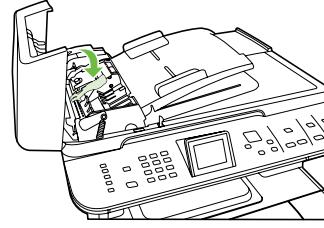


How do I?	Steps to perform
Clear paper jams (continued)	<ol style="list-style-type: none"><li data-bbox="741 266 1275 323">5 When the media is free, gently pull it out in the direction shown.<li data-bbox="1374 266 1698 561"><li data-bbox="741 577 1170 603">6 Close the lid to the flatbed scanner.<li data-bbox="1374 577 1698 847"><li data-bbox="741 863 1022 888">7 Lower the green lever.<li data-bbox="1374 863 1698 1091"><li data-bbox="741 1107 979 1133">8 Close the ADF lid.<li data-bbox="1374 1107 1698 1415">



HP LaserJet CM1312 MFP Series – Clear Jams

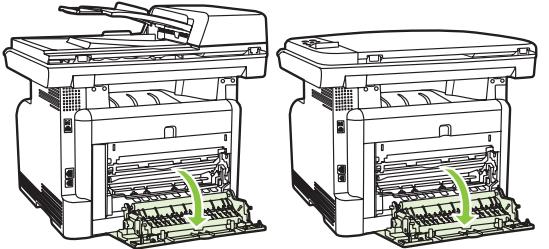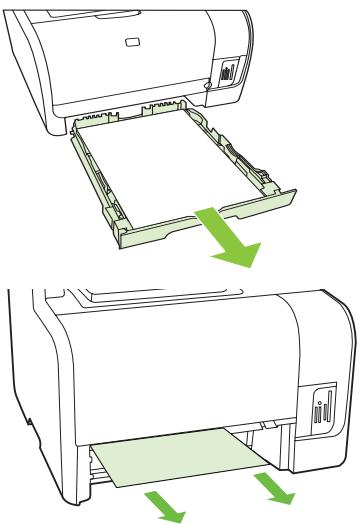


How do I?	Steps to perform
<p>Clear paper jams (continued)</p> <p>Clear jams from the input-tray areas</p>	<ol style="list-style-type: none">1 Open the rear output door.2 With both hands, grasp the side of the media that is most visible (this includes the middle), and carefully pull it free from the product.3 Remove tray 1, and lift the jam access door.4 With both hands, grasp the side of the media that is most visible (this includes the middle), and carefully pull it free from the product.  



HP LaserJet CM1312 MFP Series – Clear Jams

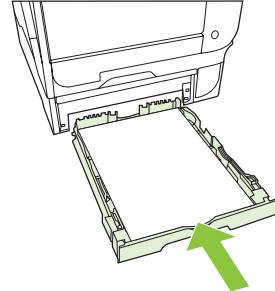

How do I?	Steps to perform
Clear paper jams (continued)	<p>5 Reinsert tray 1.</p> <p>6 Close the rear output door.</p> 
Clear jams from the output-bin	<p>With both hands, grasp the side of the media that is most visible (this includes the middle), and carefully pull it free from the product.</p> 





Clean the paper path

How do I?	Steps to perform
Clean the paper path from the product control panel	<p>If you do not have access to HP ToolboxFX, you can print and use a cleaning page from the product control panel.</p> <ol style="list-style-type: none">1 Press Setup (◀).2 Use the arrow buttons to find the Service menu, and then press OK.3 Use the arrow buttons to find Cleaning mode, and then press OK.4 Load plain letter or A4 paper when you are prompted.5 Press OK again to confirm and begin the cleaning process. <p>A page feeds through the product slowly. Discard the page when the process is completed.</p> 