



## HP MediaSmart Connect x280n Quick Setup Guide

### BEFORE YOU BEGIN, HAVE ON HAND

- Your HP MediaSmart Connect and items from the box.
- Your High Definition TV (HDTV) and remote control (sold separately).
- Access to your working home network, wired or wireless.

**NOTE:** If you plan to use a wireless connection, you may need security information for your network.

- Access to online media services requires high-speed Internet access (sold separately).
- Optional cables, depending on your setup (sold separately).


1

### CONNECT YOUR HDTV TO YOUR HP MEDIASmart CONNECT


After you have selected a location to place the device:

- Connect the device to your HDTV and to optional equipment.
- Connect the device to your home network.
- Connect the device to power.
- Install the remote control batteries.

#### CONNECT USING HDMI CABLE

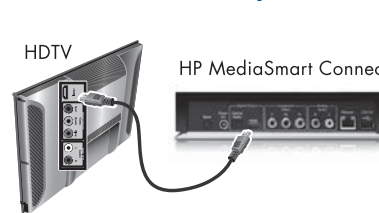

#### CONNECT USING COMPONENT CABLES

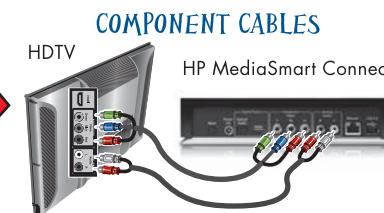

Cables not included.

#### CONNECT LAN CABLE

Recommended. Skip this step if you use a wireless home network. (Cable not included.)



#### CONNECT POWER



For advanced connections, refer to the *Installation and User Guide*.

2

### FOLLOW THE SETUP INSTRUCTIONS ON YOUR HDTV

- Select the input for the HP MediaSmart Connect on the TV.
- Select the TV resolution. (Component video only.)
- Follow the onscreen instructions.

#### TO SET UP AT YOUR HDTV

- 1 Ensure your HDTV is on and, using its remote control, select the input source to view the HP MediaSmart Connect.
- 2 Press the device button on the HP MediaSmart Connect remote control as needed to light the HP MediaSmart Connect indicator.



- 3 Point the HP MediaSmart Connect remote control at the device, and follow the onscreen instructions. During the setup:

- Press an arrow button to select an item on the screen, and then press OK. Wait for the device to respond.



**NOTE:** If you're using **Component Video**, the TV Resolution screen will display.



Complete steps **1** and **2** of *To set up at your HDTV*. At step **3**, you must select the screen resolution:

- a Press OK, or press the down arrow button to select a resolution, and then press OK. Wait for the device to respond.

A confirmation window opens.



- b Press the right arrow button to select **Yes**, and then press OK.

3

### ON YOUR COMPUTER, INSERT THE INSTALLATION CD

Insert the Installation CD into a drive and follow the instructions to:

- Install the MediaSmart software (automatic).
- Authorize Microsoft® Windows Media® Player 11 to share media with the HP MediaSmart Connect.
- Register your device with HP (optional).
- Create your free HP Online Media Services account (optional).

#### BEGINNING AT YOUR COMPUTER

If your firewall prompts you to allow the installed MediaSmart software programs to communicate, choose **Unblock**. The program names are:  
■ **HP MediaSmart Services Gateway**  
■ **CinemaNow Media Manager**



#### USING THE CD

- 1 Insert the PC Installation Software CD from the box into a CD drive on your computer.
- 2 Follow the onscreen instructions to complete the HP MediaSmart Connect installation:

- The HP MediaSmart Sharing Wizard opens to guide you through sharing media.
- Click to authorize Windows Media Player 11 to share media with your HP MediaSmart Connect. For media sharing on a Microsoft Windows Vista® computer, your network must be private.
- Enter information to register your HP MediaSmart Connect with HP.
- Click to set up online media services. (If you choose to do this at a later date, you can then right-click the **Gateway** icon on the taskbar to set up services.)
- Click **Finish** when the installation is complete at your computer.

4

### RETURN TO YOUR HDTV TO COMPLETE THE SETUP

- Complete the setup of your network.
- Set up the Extender for Windows Media Center (optional).

#### FINALIZE SETUP AT YOUR HDTV

- 1 Point the HP MediaSmart Connect remote control at the HP MediaSmart Connect, press the right arrow button to select **Next**, and then press OK.

**If you are using a wireless connection to the network\***, select the wireless option. The system searches for available wireless networks and presents a list of what it finds. Select the wireless network you want, and be ready to enter your SSID (service set identifier) and security key, if necessary.

**IMPORTANT:** If your wireless network is not listed, select the **Advanced mode** and enter it manually.

- 2 Follow the onscreen instructions to complete the setup of your network.



NOW ENJOY!

\* Wireless access point and Internet service are required and not included.

#### USING DIGITAL MEDIA



Extender for Media Center	Computer with Microsoft Windows Vista Home Premium or Ultimate operating system.				
MediaSmart	Computer with Microsoft Windows® XP SP2 or later; Media Center Edition 2005; or Windows Vista® or any device with UPnP-compliant media server.				
Compatibility	Stream photos, music, and digital videos to your TV	Automatically view content from multiple devices	Access online media. Internet access required and sold separately.	Control live TV	

For help or more information, go to <http://www.hp.com/support/mediasmart>



Copyright © 2008 Hewlett-Packard Development Company, L.P.  
The information contained herein is subject to change without notice.  
Microsoft, Windows, and Windows Vista are U.S. registered trademarks of Microsoft Corporation. Printed in China