

Notebook Tour

User Guide

© Copyright 2008 Hewlett-Packard
Development Company, L.P.

Microsoft and Windows are U.S. registered
trademarks of Microsoft Corporation.
Bluetooth is a trademark owned by its
proprietor and used by Hewlett-Packard
Company under license. SD Logo is a
trademark of its proprietor.

The information contained herein is subject
to change without notice. The only
warranties for HP products and services are
set forth in the express warranty statements
accompanying such products and services.
Nothing herein should be construed as
constituting an additional warranty. HP shall
not be liable for technical or editorial errors
or omissions contained herein.

First Edition: June 2008

Document Part Number: 469010-001

Safety warning notice

-
- ⚠ **WARNING!** To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).
-

Table of contents

1 Identifying hardware

2 Components

Product notice	3
Top components	3
TouchPad	3
Keys	4
Buttons, speakers and fingerprint reader	5
Front components	7
Rear components	8
Right-side components	9
Left-side components	10
Bottom components	11
Display components	12
Lights	13
Media button	14
Media activity buttons	15
Cleaning the display	15
Wireless antennae (select models only)	16
Additional hardware components	17

3 Labels


Index	19
-------------	----

1 Identifying hardware

To see a list of hardware installed in the computer, follow these steps:

1. Select **Start > Computer > System properties**.
2. In the left pane, click **Device Manager**.

You can also add hardware or modify device configurations using Device Manager.

 **NOTE:** Windows® includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing applications, running utilities, or changing Windows settings. Refer to Windows Help for more information.

2 Components

Product notice

This user guide describes features that are common to most models. Some features may not be available on your computer.

Top components


TouchPad



Component	Description
(1) TouchPad on/off button	Enables/disables the TouchPad.
(2) TouchPad*	Moves the pointer and selects or activates items on the screen.
(3) Left TouchPad button*	Functions like the left button on an external mouse.
(4) TouchPad light	<ul style="list-style-type: none">• White: TouchPad is enabled.• Amber: TouchPad is disabled.
(5) TouchPad vertical scroll zone	Scrolls up or down.
(6) Right TouchPad button*	Functions like the right button on an external mouse.

*This table describes factory settings. To view and change TouchPad preferences, select **Start > Control Panel > Hardware and Sound > Mouse**.

Keys

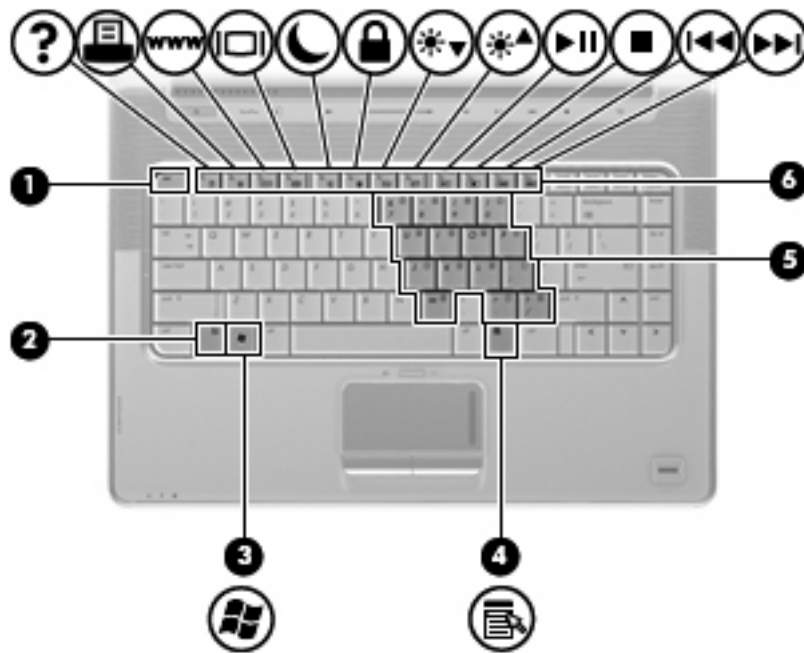

Component	Description
(1) <code>esc</code> key	Displays system information about your computer when pressed in combination with the <code>fn</code> key.
(2) <code>fn</code> key	Executes frequently used system functions when pressed in combination with a function key or the <code>esc</code> key.
(3) Windows logo key	Displays the Windows Start menu.
(4) Windows applications key	Displays a shortcut menu for items beneath the pointer.
(5) Embedded numeric keypad keys	Can be used like the keys on an external numeric keypad.
(6) Function keys	Execute frequently used system functions when pressed in combination with the <code>fn</code> key.

Buttons, speakers and fingerprint reader



Component	Description
(1) Speakers (2)	Produce sound.
(2) Power button*	<ul style="list-style-type: none"> When the computer is off, press the button to turn on the computer. When the computer is on, press the button briefly to initiate Sleep. When the computer is in the Sleep state, press the button briefly to exit Sleep. When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>If the computer has stopped responding and Windows® shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, select Start > Control Panel > System and Maintenance > Power Options.</p>
(3) Media button	<ul style="list-style-type: none"> Launches the QuickPlay program (for models with QuickPlay preinstalled). <p>NOTE: If the computer has been set up to require a logon password, you may be asked to log on to Windows. QuickPlay launches after you log on. Refer to the QuickPlay software Help for more information.</p>
(4) Volume mute button	Mutes and restores speaker sound.

Component	Description
(5) Volume scroll zone	Adjusts speaker volume. Slide your finger to the left to decrease volume and to the right to increase volume. You can also tap the minus sign on the scroll zone to decrease volume, or tap the plus sign on the scroll zone to increase volume.
(6) Previous/rewind button	<ul style="list-style-type: none"> • Plays the previous track or chapter when the button is pressed once. • Rewinds media when the button is pressed simultaneously with the fn key.
(7) Play/pause button	Plays or pauses the disc.
(8) Next/fast forward button	<ul style="list-style-type: none"> • Plays the next track or chapter when the button is pressed once. • Fast forwards media when pressed simultaneously with the fn key.
(9) Stop button	Stops playback.
(10) Wireless button	<p>Turns the wireless feature on or off, but does not create a wireless connection.</p> <p>NOTE: A wireless network must be set up in order to establish a wireless connection.</p>
(11) Fingerprint reader (select models only)	Allows a fingerprint logon to Windows, instead of a password logon.

*This table describes factory settings. For information about changing factory settings, refer to the user guides located in Help and Support.

Front components



Component	Description
(1) Power light	<ul style="list-style-type: none"> On: The computer is on. Blinking: The computer is in the Sleep state. Off: The computer is off or in Hibernation.
(2) Battery light	<ul style="list-style-type: none"> On: A battery is charging. Blinking: A battery that is the only available power source has reached a low battery level. When the battery reaches a critical battery level, the battery light begins blinking rapidly. Off: If the computer is plugged into an external power source, the light is turned off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level.
(3) Drive light	Blinking: The hard drive or optical drive is being accessed.
(4) Consumer infrared lens	Receives a signal from the HP Remote Control.
(5) Audio-in (microphone) jack	Connects an optional computer headset microphone, stereo array microphone, or monaural microphone.
(6) Audio-out (headphone) jacks (2)	Produce sound when connected to optional powered stereo speakers, headphones, ear buds, a headset, or television audio.


NOTE: This table describes factory settings. For information about changing factory settings, refer to the user guides located in Help and Support.

Rear components




Component	Description
Vents (2)	Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Right-side components

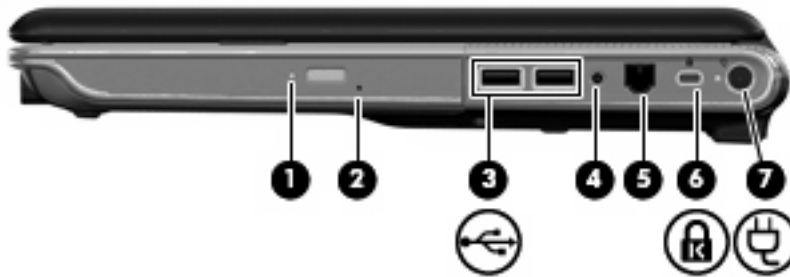


Component	Description
(1) Optical drive light	Blinking: The optical drive is being accessed.
(2) Optical drive	Reads optical discs and, on select models, also writes to optical discs.
(3) USB ports (2)	Connect optional USB devices.
(4) TV antenna/cable jack (select models only)	Connects a TV antenna, a digital cable device, or a satellite device that receives standard or high-definition TV broadcasts.
(5) RJ-11 (modem) jack (select models only)	Connects a modem cable.
(6) Security cable slot	Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.
(7) Power connector	Connects an AC adapter.

Left-side components

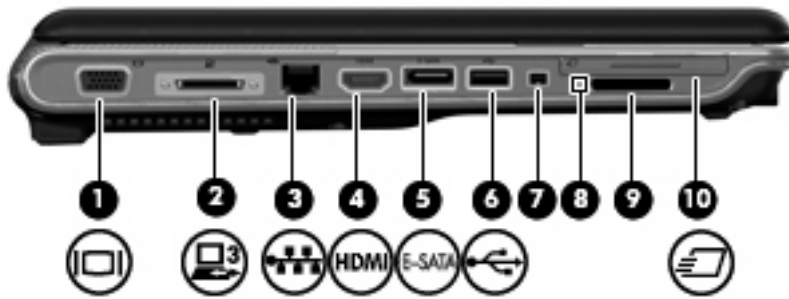

Component	Description
(1) External monitor port	Connects an external VGA monitor or projector.
(2) Expansion port 3	Connects the computer to an optional docking device or an optional expansion product. NOTE: The computer has only one expansion port. The term <i>expansion port 3</i> describes the type of expansion port.
(3) RJ-45 (network) jack	Connects a network cable.
(4) HDMI port	Connects an optional video or audio device, such as a high-definition television, or any compatible digital or audio component.
(5) eSATA/USB port (or USB port only on select models)	Connects an optional USB device or an optional high-performance eSATA component (select models only), such as an eSATA external hard drive.
(6) USB port	Connects an optional USB device.
(7) 1394 port (select models only)	Connects an optional IEEE 1394 or 1394a device, such as a camcorder.
(8) Digital Media Slot light	On: A digital card is being accessed.
(9) Digital Media Slot	Supports the following optional digital card formats: Secure Digital (SD) Memory Card, MultiMediaCard (MMC), Memory Stick (MS), Memory Stick Pro (MSP), xD-Picture Card (XD), xD-Picture Card (XD) Type H, xD-Picture Card (XD) Type M.
(10) ExpressCard slot	Supports optional ExpressCard/54 cards.

Bottom components

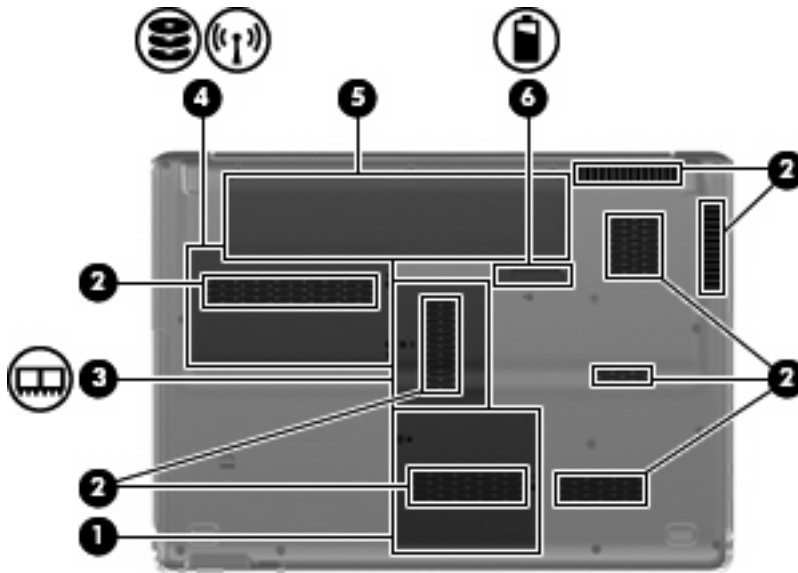


Component	Description
(1) Mini Card compartment	Holds the TV tuner card and, for select models only, the Intel Turbo Memory card.
(2) Vents (8)	Enable airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(3) Memory module compartment	Contains the memory module slots.
(4) Hard drive bay and WLAN module	Holds the hard drive and the WLAN module. CAUTION: To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact technical support through Help and Support.
(5) Battery bay	Holds the battery.
(6) Battery release latch	Releases the battery from the battery bay.

Display components



Component	Description
(1) Internal display switch	Turns off the display and initiates Sleep if the display is closed while the power is on.
(2) Internal microphones (2)	Record sound.
(3) Integrated webcam light	On: The integrated webcam is in use.
(4) Integrated webcam	Records video and captures still photographs.

Lights

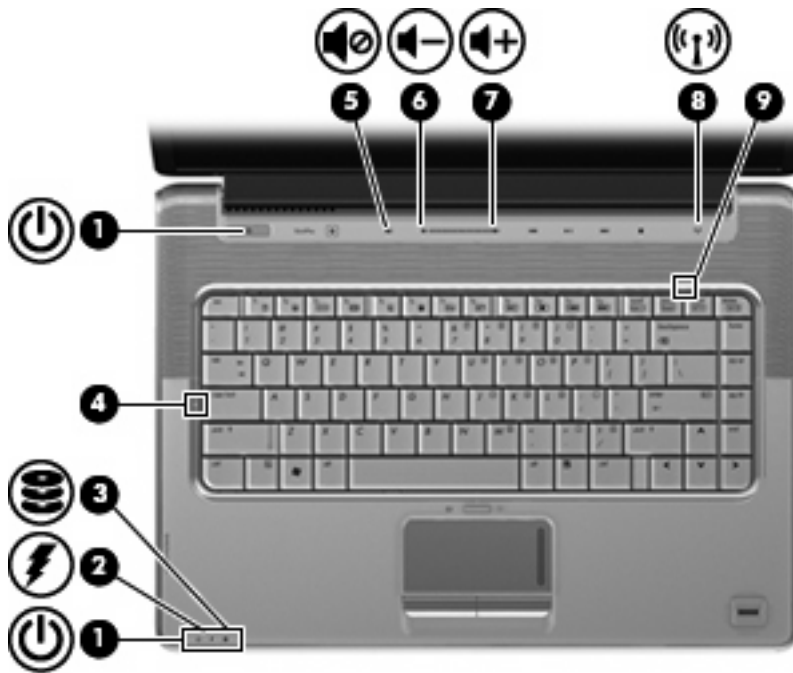

Component	Description
(1) Power lights* (2)	<ul style="list-style-type: none"> On: The computer is on. Blinking: The computer is in the Sleep state. Off: The computer is off or in Hibernation.
(2) Battery light	<ul style="list-style-type: none"> On: A battery is charging. Blinking: A battery that is the only available power source has reached a low battery level. When the battery reaches a critical battery level, the battery light begins blinking rapidly. Off: If the computer is plugged into an external power source, the light is turned off when all batteries in the computer are fully charged. If the computer is not plugged into an external power source, the light stays off until the battery reaches a low battery level.
(3) Drive light	Blinking: The hard drive or optical drive is being accessed.
(4) Caps lock light	On: Caps lock is on.
(5) Volume mute light	<ul style="list-style-type: none"> White: Computer sound is turned on. Amber: Computer sound is turned off.
(6) Volume down light	On: The volume scroll zone is being used to decrease speaker volume.
(7) Volume up light	On: The volume scroll zone is being used to increase speaker volume.

Component	Description
(8) Wireless light	<ul style="list-style-type: none"> Blue: An integrated wireless device, such as a wireless local area network (WLAN) device and/or a Bluetooth® device, is turned on. Amber: All wireless devices are turned off.
(9) Num lock light	On: Num lock is on or the integrated numeric keypad is enabled.

*The 2 power lights display the same information. The light on the power button is visible only when the computer is open. The power light on the front of the computer is visible whether the computer is open or closed.


Media button



Component	Description
Media button	Launches the QuickPlay program.

NOTE: If the computer has been set up to require a logon password, you may be asked to log on to Windows. QuickPlay launches after you log on. Refer to the QuickPlay software Help for more information.

Media activity buttons

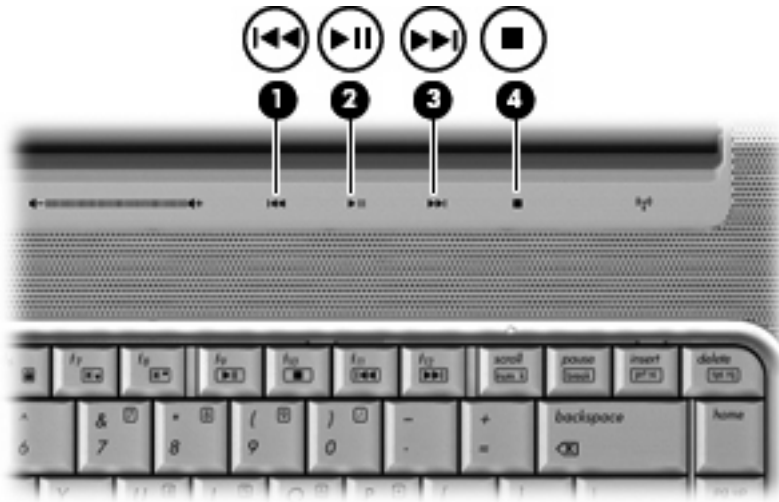

Component	Description
(1) Previous/rewind button	<ul style="list-style-type: none">Plays the previous track or chapter when the button is pressed once.Rewinds media when the button is pressed simultaneously with the fn key.
(2) Play/pause button	Plays or pauses media.
(3) Next/fast forward button	<ul style="list-style-type: none">Plays the next track or chapter when the button is pressed once.Fast forwards media when pressed simultaneously with the fn key.
(4) Stop button	Stops playback.


Cleaning the display


To remove smudges and lint, frequently clean the display with a soft, damp, lint-free cloth. If the screen requires additional cleaning, use premoistened antistatic wipes or an antistatic screen cleaner.

- △ **CAUTION:** To prevent permanent damage to the computer, never spray water, cleaning fluids, or chemicals on the display.

Wireless antennae (select models only)

On select computer models, at least 2 antennae send and receive signals from one or more wireless devices. These antennae are not visible from the outside of the computer.

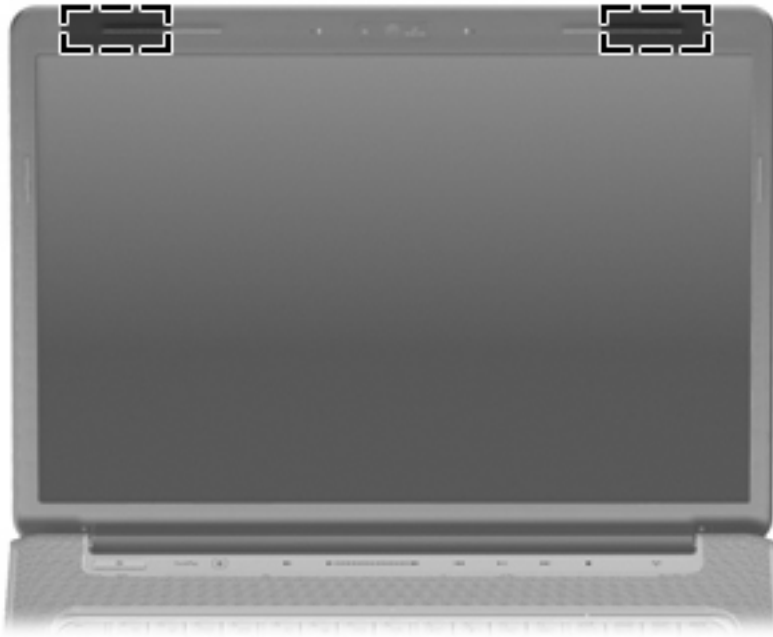

 **NOTE:** For optimal transmission, keep the areas immediately around the antennae free from obstructions.

To see wireless regulatory notices, refer to the section of the *Regulatory, Safety and Environmental Notices* that applies to your country or region. These notices are located in Help and Support.

Additional hardware components



Component	Description
(1) Power cord*	Connects an AC adapter to an AC outlet.
(2) Battery*	Powers the computer when the computer is not plugged into external power.
(3) AC adapter	Converts AC power to DC power.
(4) Modem cable* (select models only)	Connects the internal modem to an RJ-11 telephone jack or to a country- or region-specific modem adapter.
(5) Country- or region-specific modem cable adapter (select models only)	Adapts the modem cable to a non-RJ-11 telephone jack.

*Modem cables, batteries, and power cords vary in appearance by region and country.

3 Labels

The labels affixed to the computer provide information you may need when you troubleshoot system problems or travel internationally with the computer.

- Service tag: Provides the product brand and series name, serial number (s/n), and product number (p/n) of your computer. Have this information available when you contact technical support. The service tag label is affixed to the bottom of the computer.
- Microsoft® Certificate of Authenticity: Contains the Windows® Product Key. You may need the Product Key to update or troubleshoot the operating system. This certificate is affixed to the bottom of the computer.
- Regulatory label: Provides regulatory information about the computer. The regulatory label is affixed inside the battery bay.
- Modem approval label: Provides regulatory information about the modem and lists the agency approval markings required by some of the countries or regions in which the modem has been approved for use. You may need this information when traveling internationally. The modem approval label is affixed inside the hard drive and WLAN module door.
- Wireless certification label(s) (select models only): Provide information about optional wireless devices and the approval markings of some of the countries or regions in which the devices have been approved for use. An optional device may be a wireless local area network (WLAN) device or an optional Bluetooth® device. If your computer model includes one or more wireless devices, one or more certification labels are included with your computer. You may need this information when traveling internationally. Wireless certification labels are affixed inside the hard drive and WLAN module door.
- SIM (subscriber identity module) label (select models only): Provides the ICCID (Integrated Circuit Card Identifier) of your SIM. This label is located inside the battery bay.
- HP Broadband Wireless Module serial number label (select models only): Provides the serial number of your HP Broadband Wireless Module. This label is located inside the battery bay.

Index

Symbols/Numerics

1394 port, identifying 10

A

AC adapter, identifying 17
antennae 16
applications key, Windows 4
audio-in (microphone) jack,
identifying 7
audio-out (headphone) jack,
identifying 7

B

battery bay 18
battery bay, identifying 11
battery light, identifying 7, 13
battery release latch,
identifying 11
battery, identifying 17
bays
 battery 11, 18
 hard drive 11
Bluetooth label 18
buttons
 media 5, 14
 next/fast forward 6, 15
 play/pause 6, 15
 power 5
 previous/rewind 6, 15
 stop 6, 15
 TouchPad 3
 TouchPad on/off 3
 volume mute 5

C

caps lock, lights 13
Certificate of Authenticity label 18
cleaning the display 15

compartments
 memory module 11
 WLAN module 11

components

additional hardware 17
bottom 11
display 12
front 7
left-side 10
rear 8
right-side 9
top 3

connectors, power 9
cord, power 17

D

Digital Media Slot light,
identifying 10
Digital Media Slot, identifying 10
display switch, identifying 12
drive light, identifying 7, 13
drives, hard 11

E

eSATA/USB port, identifying 10
esc key, identifying 4
expansion port, identifying 10
ExpressCard slot, identifying 10
external monitor port,
identifying 10

F

fingerprint reader, identifying 6
fn key, identifying 4
function keys, identifying 4

H

hard drive bay, identifying 11
HDMI port, identifying 10
headphone (audio-out) jack 7

HP Broadband Wireless Module
 serial number label 18

I

IEEE 1394 port, identifying 10
infrared lens, identifying 7
integrated webcam ,
 identifying 12
internal display switch,
 identifying 12
internal microphone,
 identifying 12

J

jacks
 audio-in (microphone) 7
 audio-out (headphone) 7
 RJ-11 (modem) 9
 RJ-45 (network 10
 TV antenna/cable 9

K

keypad keys, identifying 4
keys
 esc 4
 fn 4
 function 4
 keypad 4
 Windows applications 4
 Windows logo 4

L

labels
 Bluetooth 18
 HP Broadband 18
 Microsoft Certificate of
 Authenticity 18
 modem approval 18
 regulatory 18
 service tag 18

- SIM 18
 - wireless certification 18
- WLAN 18

- latches
 - battery release 11

- lights
 - battery 7, 13
 - caps lock 13
 - Digital Media Slot 10
 - drive 7, 13
 - num lock 14
 - power 7, 13
 - TouchPad 3
 - volume down 13
 - volume mute 13
 - volume up 13
 - wireless 14

- M**
 - media activity buttons, identifying 6, 15
 - media button, identifying 5, 14
 - memory module compartment, identifying 11
 - microphone (audio-in) jack 7
 - microphone, internal 12
 - Microsoft Certificate of Authenticity label 18
 - modem approval label 18
 - modem cable adapter, country- or region-specific 17
 - modem cable, identifying 17
 - monitor port, external 10
 - mute button, identifying 5

- N**
 - next/fast forward button, identifying 6, 15
 - num lock light, identifying 14

- O**
 - operating system
 - Microsoft Certificate of Authenticity label 18
 - Product Key 18
 - optical drive, identifying 9

- P**
 - play/pause button, identifying 6, 15

- ports
 - 1394 10
 - eSATA/USB 10
 - expansion 10
 - external monitor 10
 - HDMI 10
 - USB 9, 10
- power button, identifying 5
- power connector, identifying 9
- power cord, identifying 17
- power light, identifying 7, 13
- previous/rewind button, identifying 6, 15
- Product Key 18
- product name and number, computer 18

- R**
 - regulatory information
 - modem approval label 18
 - regulatory label 18
 - wireless certification labels 18
 - RJ-11 (modem) jack, identifying 9
 - RJ-45 (network) jack, identifying 10

- S**
 - scrolling zones, TouchPad 3
 - security cable slot, identifying 9
 - serial number, computer 18
 - service tag 18
 - SIM label 18
 - slots
 - Digital Media 10
 - ExpressCard 10
 - memory module 11
 - security cable 9
 - speakers, identifying 5
 - stop button, identifying 6, 15

- T**
 - TouchPad buttons, identifying 3
 - TouchPad light, identifying 3
 - TouchPad on/off button 3
 - TouchPad scrolling zones, identifying 3
 - TouchPad, identifying 3
 - traveling with the computer
 - modem approval label 18
 - wireless certification labels 18

- TV antenna/cable jack, identifying 9

- U**
 - USB ports, identifying 9, 10

- V**
 - vents, identifying 8, 11
 - volume down light, identifying 13
 - volume mute button, identifying 5
 - volume mute light, identifying 13
 - volume scroll zone, identifying 6
 - volume up light, identifying 13

- W**
 - webcam light, identifying 12
 - webcam, identifying 12
 - Windows applications key, identifying 4
 - Windows logo key, identifying 4
 - wireless antennae 16
 - wireless certification label 18
 - wireless light, identifying 14
 - WLAN device 18
 - WLAN label 18
 - WLAN module compartment, identifying 11

