

**Welcome to the next generation of computers.**

## Copyright Information

The only warranties for Hewlett-Packard products and services are set forth in the express statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

HP assumes no responsibility for the use or reliability of its software on equipment that is not furnished by HP.

This document contains proprietary information that is protected by copyright. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of HP.

Hewlett-Packard Company  
P.O. Box 4010  
Cupertino, CA 95015-4010  
USA

Copyright © 2008 Hewlett-Packard Development Company, L.P.

May be licensed in the United States by one or both of U.S. Patents Nos. 4,930,158 and 4,930,160 until August 28, 2008.

Microsoft and Windows Vista are U.S. registered trademarks of Microsoft Corporation. The Windows logo and Windows Vista are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries/regions.

HP supports lawful use of technology and does not endorse or encourage the use of our products for purposes other than those permitted by copyright law. The information in this document is subject to change without notice.
















# Table of Contents

Finding HP TouchSmart PC Information .....	vi
<b>Getting to Know the HP TouchSmart PC .....</b>	<b>1</b>
HP TouchSmart PC Features.....	1
Front and right side of the HP TouchSmart PC .....	2
Left side of the HP TouchSmart PC .....	5
Removing the connector cover .....	6
Back of the HP TouchSmart PC.....	6
Activity LED indicator lights.....	8
Connecting the Power Source .....	9
Cable Management.....	9
Adjusting the Angle of the Computer Stand .....	11
Using the Wireless Keyboard or Mouse .....	11
Synchronizing the wireless keyboard or mouse .....	12
Turning the HP TouchSmart PC On and Off .....	13
Turning on the HP TouchSmart PC .....	13
Turning off the HP TouchSmart PC .....	13
Changing Power Settings .....	14
Connecting to the Internet.....	14
Setting up a wireless home network.....	15
Setting up a wired home network .....	15
Using Bluetooth Devices .....	17
Adjusting Screen Brightness.....	17
Adjusting the Ambient Light .....	18
Adding Hardware and Software .....	18
Upgrading your HP TouchSmart PC hardware .....	18
Updating your HP TouchSmart software .....	18
Using the Optical Disc Drive.....	19
Using the HP Pocket Media Drive .....	19
Using the TV Tuner to Watch and Record TV Programs on the HP TouchSmart PC .....	20
Connecting the TV signal source to the computer .....	20
Setting up the HP TouchSmart PC with a set-top box .....	21
Completing the Windows Media Center setup wizard .....	22
Using the remote control with Windows Media Center.....	23

Sound Options.....	24
Connecting analog speakers .....	24
Connecting and enabling digital speakers or an audio receiver .....	24
Speaker volume .....	26
Configuring sound for Windows Media Center .....	27
Headphones .....	27
Microphone array .....	27
Using a headset .....	27
Connecting MP3 players .....	27
Connecting a Printer .....	27
Installing a Security Lock .....	28
Cleaning the HP TouchSmart PC Screen .....	29
Using the Computer with Safety and Comfort.....	29
Recycling Your Old Computer Hardware .....	30
<b>Using the HP TouchSmart Software.....</b>	<b>31</b>
Opening HP TouchSmart software .....	31
Navigating in HP TouchSmart .....	32
Selecting Items on the Windows Desktop and in Other Software .....	34
Touch Input Panel .....	35
Personalizing Your HP TouchSmart Software.....	36
Moving tiles around.....	36
Adding a software program shortcut to HP TouchSmart.....	36
Adding a favorite Web site link to HP TouchSmart .....	37
Selecting tiles to view or hide.....	37
Editing or deleting an added tile .....	38
Opening HP TouchSmart Automatically.....	38
HP TouchSmart Photo.....	38
Adding photos to your photo library .....	39
Viewing your photo collection.....	39
Viewing a photo slideshow.....	39
Uploading your photos to Snapfish.....	40
Printing your photos.....	40
Editing your photos.....	41
Creating an optical disc of your photos.....	42
HP TouchSmart Music .....	42
Selecting a music library .....	42
Playing your CDs .....	43
Music controls.....	43
Creating a playlist of your favorite songs .....	45
Playing from your playlist .....	45
Deleting a playlist.....	45
Deleting songs from your music library.....	46
Creating music CDs.....	46

HP TouchSmart Video .....	47
Adding videos to the computer.....	47
Watching videos.....	47
Creating videos with the webcam.....	48
Uploading your videos to YouTube.....	48
Capturing, editing, and recording videos .....	49
Playing your videos .....	50
Webcam and Microphone .....	50
Capturing webcam video and snapshots.....	51
Having a video chat or making conference calls .....	51
HP TouchSmart Calendar .....	52
Scheduling a calendar event and setting a reminder .....	52
Viewing calendar events .....	53
Deleting a calendar event.....	53
Synchronizing your HP TouchSmart Calendar with your Microsoft Windows Vista Calendar.....	53
HP TouchSmart Notes .....	53
Creating a handwritten or typed note .....	54
Creating a voice note .....	54
Deleting text and voice notes .....	55
HP TouchSmart Weather .....	56
Displaying the temperature and forecast for a city .....	56
HP TouchSmart Clock .....	56
Displaying the time for up to three locations.....	57
HP TouchSmart RSS Reader .....	57
Setting up RSS feeds.....	57
Importing a list of RSS feeds .....	58
HP TouchSmart Browser .....	59
Software Quick Reference Table .....	61
<b>Index .....</b>	<b>63</b>

# Finding HP TouchSmart PC Information

Type of information		Where to find
<ul style="list-style-type: none"><li>■ Set up your HP TouchSmart PC.</li></ul>	 	Setup poster
<ul style="list-style-type: none"><li>■ Find features of the computer hardware.</li><li>■ Connect to the Internet.</li><li>■ Learn about HP TouchSmart and other software.</li><li>■ Connect a television signal.</li></ul>	 	<i>HP TouchSmart PC Getting Started</i> guide (this guide)
<ul style="list-style-type: none"><li>■ Upgrade or replace components of your computer.</li></ul>	 	<i>Upgrading and Servicing Guide</i> <b>NOTE:</b> If this guide is not included with your printed documentation, tap the <b>Windows Vista start button</b>  , tap <b>Help and Support</b> , and then tap the <b>User Guides</b> icon.
<ul style="list-style-type: none"><li>■ Watch and record TV programs on the computer.</li><li>■ Use the Windows Media Center remote control (select models only).</li></ul>	 	<i>Watching and Recording TV</i> guide Tap the <b>Windows Vista start button</b> , tap <b>Help and Support</b> , and then tap the <b>User Guides</b> icon.
<ul style="list-style-type: none"><li>■ Recover factory settings.</li><li>■ Find computer warranty information.</li><li>■ Get technical support.</li></ul>	 	<i>Limited Warranty, Support, and System Recovery Guide</i>
<ul style="list-style-type: none"><li>■ Learn how to use the Microsoft® Windows Vista® operating system.</li><li>■ Troubleshoot the most common computer hardware and software issues.</li></ul>	 	Help and Support Tap the <b>Windows Vista start button</b> , and then tap <b>Help and Support</b> .
<ul style="list-style-type: none"><li>■ Find electronic user guides and specifications for your computer model.</li><li>■ Order parts and find additional troubleshooting help.</li></ul>	 	HP Support Web site: <b><a href="http://www.hp.com/support">http://www.hp.com/support</a></b> Tap the <b>Windows Vista start button</b> , tap <b>Help and Support</b> , and then tap the <b>Online Help</b> icon.

# Getting to Know the HP TouchSmart PC

## HP TouchSmart PC Features

The HP TouchSmart PC is a fun and engaging touch-enabled high-performance computer built into a high-definition\* 25.5-inch diagonal widescreen display. The slim computer comes with features like webcam, CD/DVD player and burner, HP Pocket Media Drive bay, software-controlled ambient lighting, USB ports, FireWire® (IEEE 1394), media card reader, Brightview display, Wireless 802.11n networking, and high-quality speakers.

Using your fingertips, you can listen to your favorite music, edit your digital photos, or watch your favorite home video.

Features and configurations vary by model. Your computer may not exactly match the illustrations and descriptions in this guide.

 



---

\*High-definition (HD) content is required to view HD images. Most current DVDs do not provide HD images.




## Front and right side of the HP TouchSmart PC

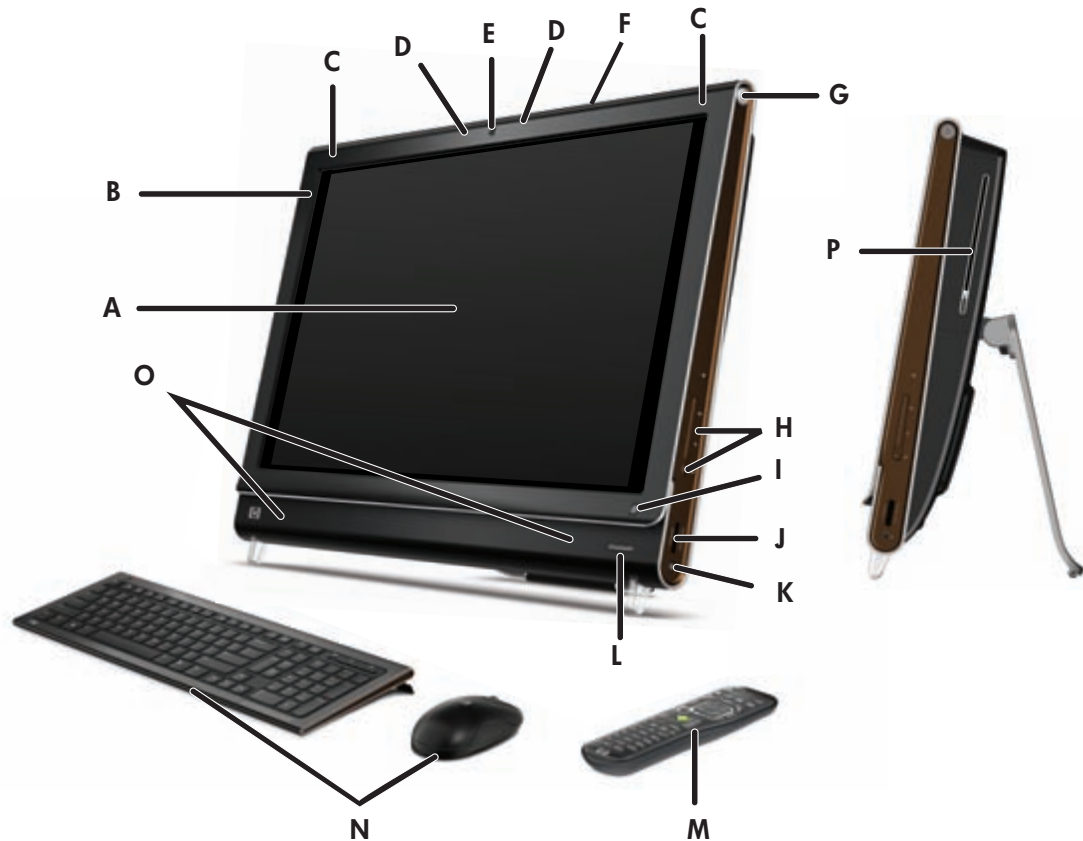Features and configurations vary by model



Item	Description
<p><b>A</b> LCD display optimized for touch</p>	<p>The HP TouchSmart PC integrates a state-of-the-art 25.5-in (64.8-cm) diagonal widescreen high-definition display with HP BrightView technology.* The HP BrightView technology improves the contrast and clarity of your display; colors are brighter and images are lifelike. In addition, it boasts a high resolution of 1920 x 1200 and a fast response time of 5 ms.**</p> <p>The display is optimized for an elegant touch experience. Your fingertip is all you need to interact with the HP TouchSmart. The durable glass panel is sturdy and responsive. </p> <p><b>NOTE:</b> The display trim around the viewable image is intended. This trim does not take away from the viewable image.</p> <p>*High-definition (HD) content is required to view HD images. Most current DVDs do not provide HD images.</p> <p>**All specifications represent the typical specifications provided by Hewlett-Packard's component manufacturers; actual performance may vary either higher or lower.</p>
<p><b>B</b> Bluetooth (select models only)</p>	<p>Use Bluetooth to connect to Bluetooth-enabled devices. The diagram shows the internal location of Bluetooth (not visible externally).</p>




Item	Description (continued)
<b>C</b> Built-in wireless LAN	<p>Use the built-in wireless LAN to connect to the Internet through your existing wireless network. The diagram shows the internal location of the wireless LAN (top left and right, not visible externally).</p> <p>The wireless LAN supports IEEE 802.11 b/g/n (pre-n). (The specifications for the 802.11n WLAN are draft specifications and are not final. If the final specifications differ from the draft specifications, it may affect the ability of the notebook to communicate with other 802.11n WLAN devices.)</p>
<b>D</b> Microphone array	<p>Use the built-in digital microphone array to record sound for your webcam videos, and to use instant messenger or chat software to have video chats online. The microphone filters out ambient noise for a cleaner sound. It records from a distance of up to 2 feet (one-half meter) away from the computer.</p>
<b>E</b> Webcam	<p>Create videos and snapshots that you can view, send by e-mail, and upload to video sharing sites. Use the built-in webcam and microphone array to have video chats with friends and family.*</p> <p>*Internet access required.</p>
<b>F</b> HP Pocket Media Drive bay	<p>This bay, located at the top of the computer toward the back, accommodates any HP Pocket Media Drive (sold separately), for storing and transferring data, photo, music, and video files.</p>
<b>G</b> Power/Sleep button 	<p>Press the Power/Sleep button to turn on your HP TouchSmart PC, or to put it in Sleep mode. To turn off your computer, tap the <b>Windows Vista start button</b>, tap the <b>Arrow</b> button next to the Lock icon, and then select <b>Shut Down</b>.</p> 
<b>H</b> Volume and mute controls	<p>Adjust the sound level up or down, or mute.</p>
<b>I</b> HP TouchSmart button 	<p>Turn on your HP TouchSmart PC and open your HP TouchSmart software. Or, if the computer is already turned on, press the button to open the HP TouchSmart software for quick access to your music, photos, videos, or the Web. The HP TouchSmart button cannot turn off the computer.</p>
<b>J</b> Memory card reader	<p>Use the built-in memory card reader to easily access photos and other files directly from a memory card.</p> <p>Supported formats include xD media (xD), Secure Digital (SD), Secure Digital High Capacity (SDHC), MultiMediaCard (MMC), Memory Stick (MS), and Memory Stick Pro (MS-Pro) memory cards.</p> <p>Your memory card reader also supports adapters for the following memory cards: Mini SD, RS MMC, Micro SD, MS-Duo, and MS Duo Pro.</p>
<b>K</b> FireWire (IEEE 1394)	<p>Transfer videos from your digital video camcorder (4-pin connector).</p>
<b>L</b> IR receiver window	<p>Infrared (IR) receiver window, located on the lower-right side of the computer. Works with a remote control and TV tuner (select models only).</p>
<b>M</b> Remote control (select models only)	<p>Point the remote control at the lower right side of the computer, where the IR receiver is located, and then navigate to all Windows Media Center options, such as watching and recording your favorite TV shows. A remote control is included with select models only.</p> <p>Refer to the <i>Watching and Recording TV</i> guide, located by tapping <b>Windows Vista start button</b>, tap <b>Help and Support</b>, and then tap <b>User Guides</b>.</p>

Item	Description (continued)
<b>N</b> Wireless keyboard and mouse	Sleek wireless keyboard and mouse fit under the HP TouchSmart PC.
<b>O</b> Internal speakers	Use the built-in, high-quality stereo speakers for a powerful media experience when listening to music, or when watching your home videos and DVDs.
<b>P</b> Slot-loading optical drive (located on back side panel)	<p>Watch your favorite DVD, or listen to your CD collection. Burn CDs and DVDs.*</p> <p>Read and write DVD-RAM, CD-R/RW, and DVD+/-R/RW.</p> <p>Read and play CD-ROM, DVD-ROM, CD Audio, DVD+/-R dual layer (DL), DVD-Video, and Video CD.</p> <p>*HP supports the lawful use of technology and does not endorse or encourage the use of our products for purposes other than those permitted by copyright law.</p>

## Left side of the HP TouchSmart PC

 
Features and configurations vary by model

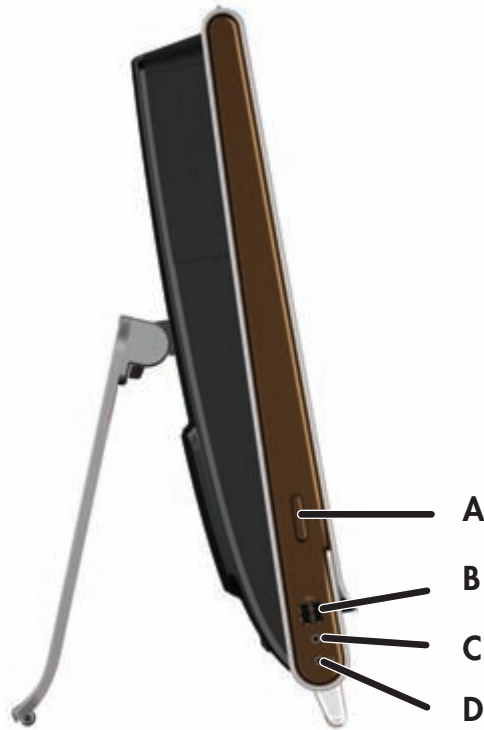

Connector	Function
<b>A</b> Ambient light button	The HP TouchSmart ambient light casts a colorful glow from the computer base. Ambient Light is turned off by default. Turn on ambient light by pressing the Ambient Light button.  Change the color of the light by tapping the <b>Windows Vista start button, All Programs, HP,</b> and then tap <b>HP Light</b> . Tap the color you want. Change the intensity of light either by tapping at the top or bottom of the color spectrum, or by pressing the ambient light button ( <b>A</b> ). Tapping more than once changes intensity: low, medium, high, off, low, medium, and so on.
<b>B</b> USB 2.0	Connect USB devices (USB 2.0) such as printers, external hard disk drives, digital cameras, and MP3 players.
<b>C</b> Audio Line In	Connect MP3 players or other audio players.
<b>D</b> Headphones	Listen to music without disturbing anyone, by connecting your headphones to the port.


## Removing the connector cover

 To remove the connector cover on the back of the computer, insert your finger under the gap on the bottom-left side of the cover, and pull gently. Replace the connector cover by aligning the hooks on the right edge of the cover with the slots on the computer, and then pressing it until it snaps into place.

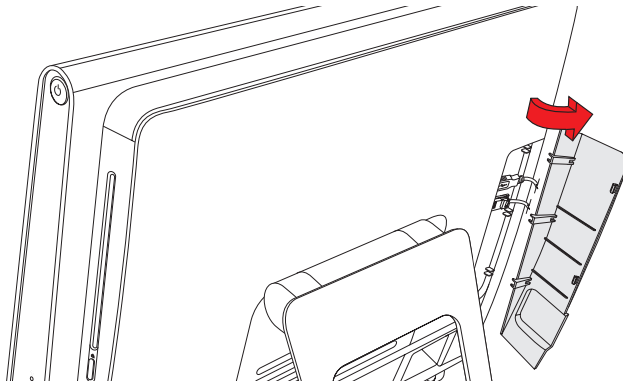

## Back of the HP TouchSmart PC

 
Features and configurations vary by model

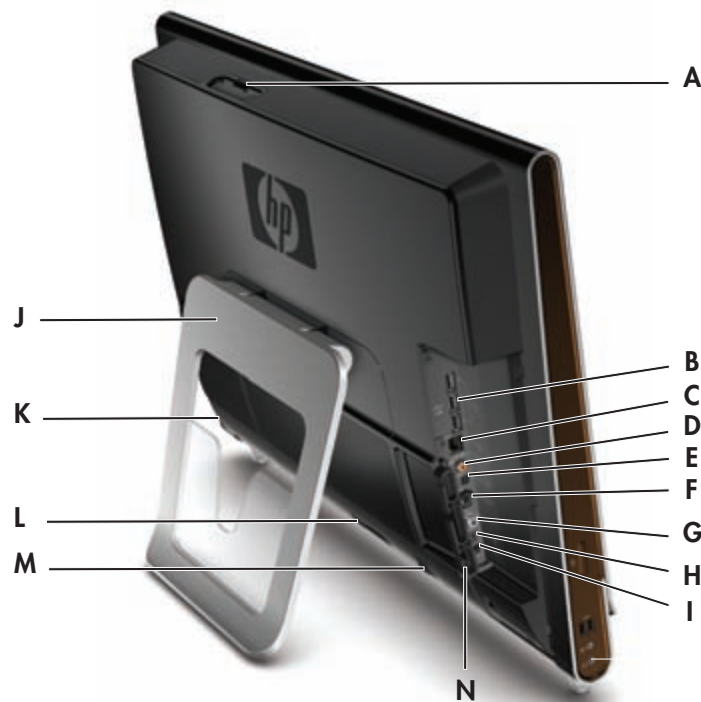

Item	Function
<b>A</b> Pocket Media Drive bay	Insert an HP Pocket Media Drive (sold separately) into the bay. The bay door automatically opens inward.
<b>B</b> USB 2.0 (3 ports)	Connect USB devices (USB 2.0) such as printers, external hard disk drives, digital cameras, and MP3 players.
<b>C</b> Gigabit Ethernet LAN (10/100/1G)	Connect to the Internet through your wired network.

<b>Item</b>		<b>Function (continued)</b>
<b>D</b>	Digital audio port (SPDIF Out)	Connect to your home theater system or your surround sound digital speakers. Supports 4.1 and 5.1 speakers.
<b>E</b>	Audio Line Out	Connect external 2.0 and 2.1 powered speakers.
<b>F</b>	S-Video In (select models only)	Capture analog video from a video camera, or connect to a set-top box for TV input.
<b>G</b>	TV In (select models only)	Connect your TV signal source to watch, record, and pause live TV. This is an F-type coaxial (ATSC/NTSC) TV input signal connector.
<b>H</b>	Stereo Audio In (select models only)	Connect audio for A/V input from a set-top box, digital video camera, or other video device.
<b>I</b>	IR Emitter (Blaster) (select models only)	Adhere to your TV set-top box IR receiver area to receive the remote control signal for watching and recording TV programs. This is not required if you do not use a set-top box. A remote control is included with select models only.
<b>J</b>	Computer stand	Slide stand for stability and best viewing angle. The stand supports an adjustable tilt angle between 10 and 40 degrees from the vertical.  To ensure the computer is in a stable position on your desktop, pull the computer stand open until you hear it snap into place.
<b>K</b>	Security lock slot	Insert a security lock (sold separately), which enables you to secure your computer from theft and unwanted changes.
<b>L</b>	Power connector	Plug the power adapter into the computer.
<b>M</b>	Wireless keyboard and mouse receiver	Preinstalled receiver for using a wireless keyboard and mouse.
<b>N</b>	Cable clip	Route your cables through the clip, close the connector cover, and then route the cables through the notch in the computer stand.

## Activity LED indicator lights

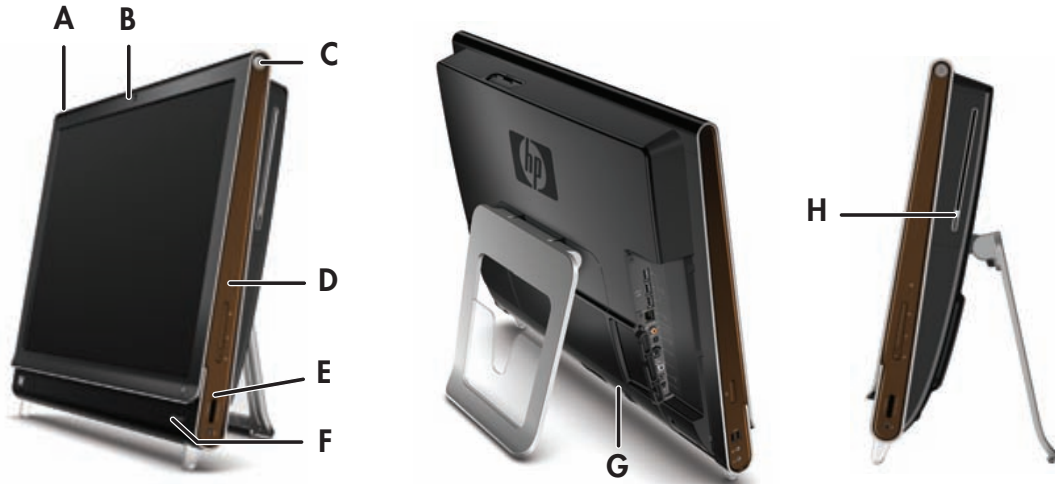 

The following are the activity indicator light-emitting diodes (LEDs) on your HP TouchSmart PC:

LED	What it does
<b>A</b> Event	Indicates an event reminder notification has been set from a software application. Setting of the event reminder is available in select software applications only.
<b>B</b> Webcam	Indicates webcam activity.
<b>C</b> Power	Indicates the power state; blue indicates power on, and amber indicates Sleep mode.
<b>D</b> Hard disk drive	Indicates hard disk drive activity.
<b>E</b> Memory card reader	Indicates memory card reader activity. When the LED is flashing, do not remove your memory card.  When the LED is off, no card is inserted. A solid LED indicates that a card is inserted with no read or write capacity. A flashing LED indicates that there is memory card activity, and that a card has read/write capacity.
<b>F</b> Remote control IR receiver	Indicates that your computer is working with your remote control to navigate windows, record TV shows, and perform other activities in Windows Media Center. A remote control is included with select models only.
<b>G</b> Wireless keyboard and mouse receiver	Indicates wireless signals received from the wireless keyboard and mouse. The LED is visible as a glow through the grill on the back of the computer.
<b>H</b> Optical disc drive activity	Indicates optical disc drive is in use.

## Connecting the Power Source

 
Plug the power cord into the AC adapter (brick), and the power adapter cord into the back of the computer. Route the power cord through the notch in the computer stand, and then plug the power cord into an AC power source through a surge protector/uninterruptible power supply (UPS).



## Cable Management

The HP TouchSmart PC includes a cable-management feature behind the back connector cover.

- 1 Remove the connector cover on the back of the computer by inserting your finger under the gap on the bottom-left side of the cover, and pulling gently.

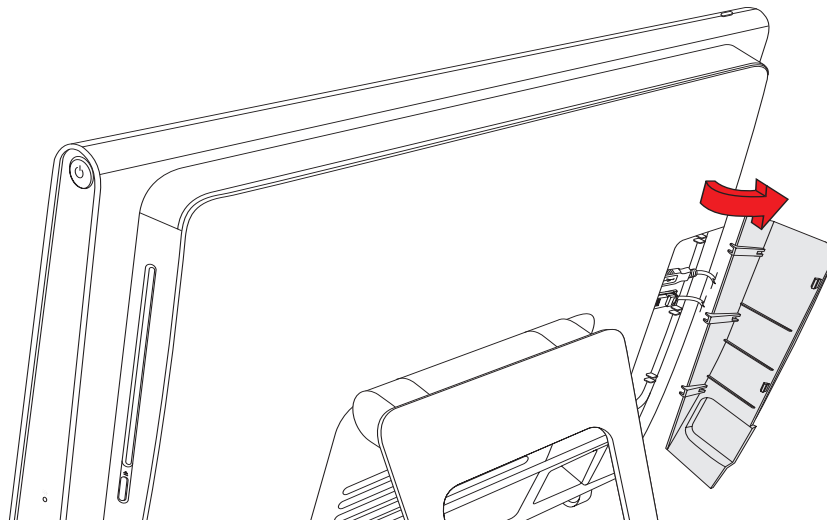

- 2 Route your cables through the cable routing clip (**A**), and out of the back of the computer.




- 3 Replace the connector cover by aligning the hooks on the right edge of the cover with the slots on the computer, and then pressing it until it snaps into place. Then, route the cables through the notch (**B**) in the computer stand.





## Adjusting the Angle of the Computer Stand

 The computer is shipped with the stand in collapsed position. To ensure the computer is in a stable position on your desktop, pull the computer stand open until it snaps into place. Then, if you want to change the angle of the HP TouchSmart PC, hold each side of the computer, and tilt it back to an angle of between 10 and 40 degrees from vertical.

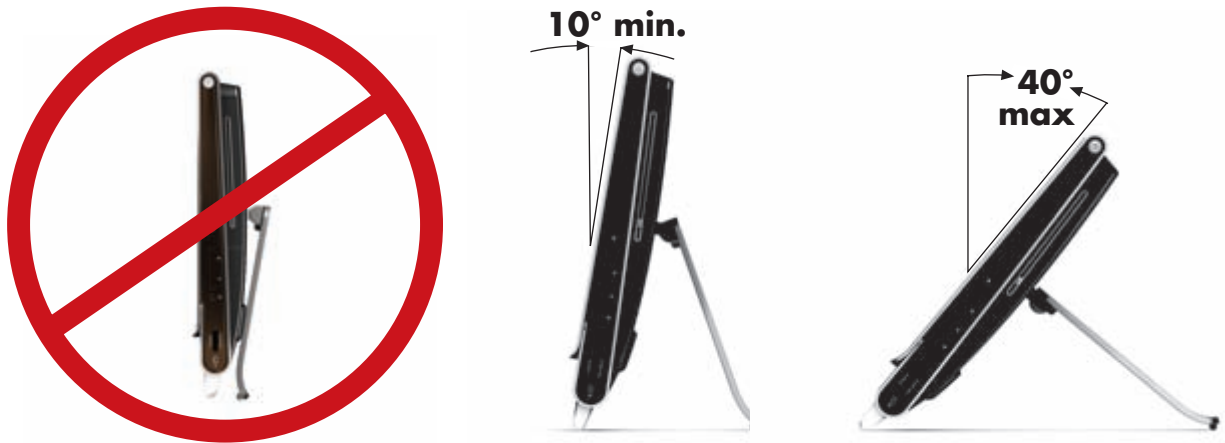

**CAUTION:** Make sure the angle of the computer is at least 10 degrees from vertical; otherwise the computer will be unstable and could fall over.

## Using the Wireless Keyboard or Mouse

Your wireless keyboard and mouse are easy to set up. Remove the battery tabs on both the keyboard and the mouse. Also, make sure the Power switch, on the bottom of the mouse, is in the On position (the keyboard does not have a power switch). Then, turn on the computer. If you have trouble using the keyboard and mouse, manually synchronize them as explained in the next procedure.



## Synchronizing the wireless keyboard or mouse

The wireless keyboard and mouse are presynchronized to work with your HP TouchSmart PC. They should work immediately after pulling out the battery tabs, which activate the preinstalled batteries. If needed, turn the mouse switch to the On position (B).

 
You may need to manually synchronize the wireless keyboard or mouse if they are not responding.

To synchronize them:

- Make sure the keyboard and mouse are next to the HP TouchSmart PC, within 1 foot (30 cm) and away from interference from other devices.
- **Keyboard:** Press the connect button on the bottom of the keyboard (A) for five seconds. The blue activity LED illuminates from the lower back grill of the computer when the synchronization command has been received. It turns off when synchronization is complete.
- **Mouse:** Press the connect button on the bottom of the mouse (C) for five seconds. The blue activity LED illuminates from the lower back grill of the computer when the synchronization command has been received. It turns off when synchronization is complete.



If this does not work, remove and then re-insert the wireless keyboard and mouse receiver from the back of the computer and then synchronize the keyboard and mouse again.

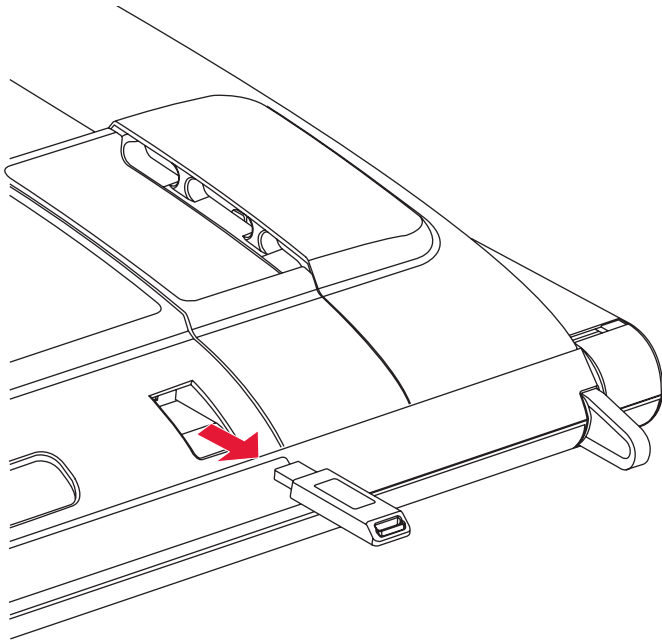

# Turning the HP TouchSmart PC On and Off

## Turning on the HP TouchSmart PC

After you finish setting up your HP TouchSmart PC, press the Power/Sleep button **(A)** on the top-right side of the computer to turn it on. Complete the initial setup by following the onscreen instructions. The setup process may take several minutes.



You can also wake up the computer or put it into Sleep mode by pressing the Power/Sleep button on the keyboard or the remote control. A remote control is included with select models only.

After you turn on the computer for the first time, and have gone through all the setup wizards, you can use the HP TouchSmart button **(B)** to turn on the computer and launch HP TouchSmart software. If the computer is already on, you can press this button to launch the TouchSmart window.



## Turning off the HP TouchSmart PC

Tap the **Windows Vista start button**, tap the **Arrow** button next to the Lock icon, and then select **Shut Down**.



## Changing Power Settings

Basic power settings help conserve energy or enhance computer performance. You can also customize power settings for your computer hardware. For example, you can set your computer to go to sleep after a specified period of inactivity.

What used to be called Standby is now called Sleep in Microsoft Windows Vista. In Sleep mode, your work is saved to memory, and then the computer enters a power-saving state.

To put the computer in Sleep mode, tap the **Windows Vista start button**, tap the **Arrow** button next to the Lock icon, and then select **Sleep**.



To change power settings:

- 1 Tap the **Windows Vista start button**.
- 2 Tap **Control Panel**, and make sure **Classic View** is selected.
- 3 Tap **Power Options**.
- 4 Select a power plan.
- 5 Select **Change plan settings**.
- 6 Use the drop-down arrows to select your power settings, and then tap **Save Changes**.
- 7 You can also select **Change advanced power settings**, select your options, and then tap **OK**.

## Connecting to the Internet

Your HP TouchSmart PC is designed to support a wireless or wired LAN that connects your computer to other devices, such as printers and other PCs. The network connection to the Internet is usually through a broadband modem (digital subscriber line [DSL] or cable), which requires a separate subscription.

- For a wireless LAN, the HP TouchSmart PC includes two built-in wireless LAN antennas, which you can use to access your wireless home network.
- For a wired LAN, connect an Ethernet cable (sold separately) to the Ethernet connector on the back of the computer, and then connect the other end to the network router or broadband modem.

## Setting up a wireless home network

First-time wireless network installation requires that you:

- 1 Purchase high-speed Internet service from an Internet service provider (ISP).
- 2 Purchase a broadband modem (DSL or cable). This may be provided by the ISP.
- 3 Purchase and install a wireless router (sold separately), if one is required.

---

**NOTE:** Broadband modem and router installation procedures vary, depending on the manufacturer. Follow the manufacturer's instructions.

 
---

- 4 Connect your computer to the network.



---

**NOTE:** A DSL wall connection is shown here. If you have a cable modem, the connection from the wall to the modem will be with a coaxial cable.

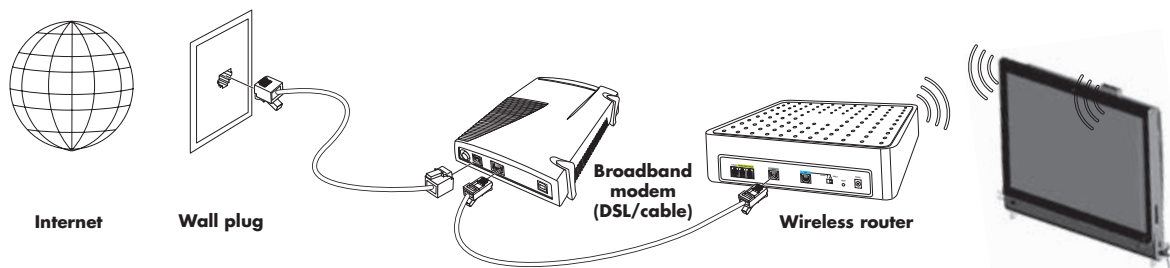---



- 5 Configure the HP TouchSmart PC to connect to the wireless network.

- a Turn on your HP TouchSmart PC.
  - b Connect your HP TouchSmart PC to the wireless network:
    - Right-click the **Network** icon on the taskbar, and then select **Connect to a network**. When the window opens, select the network, and then click **Connect**. 
    - Or
    - Right-click the **Network** icon on the taskbar, and then select **Network and Sharing Center**. When the window opens, select **Setup a wireless router or access point**, and then follow the onscreen instructions. 
  - c Test the wireless network by opening your Web browser and accessing any Web site.
- 6 Add wireless devices to the network (optional).

## Setting up a wired home network

First-time wired network installation requires that you:

- 1 Purchase high-speed Internet service from an Internet service provider (ISP).
- 2 Purchase a broadband modem (DSL or cable). This may be provided by the ISP.
- 3 Purchase and install a wired router (sold separately), if one is required.

---

**NOTE:** Broadband modem and router installation procedures vary, depending on the manufacturer. Follow the manufacturer's instructions.

 
---

- 4 Connect the DSL cable (shown) or coaxial cable (not shown) from the wall to the modem.

- 5 Connect the modem to the computer Ethernet port with an Ethernet cable. If you want to connect multiple devices to the network, connect a router or hub (not shown) to the modem with an Ethernet cable, and then connect the computer to the router with an Ethernet cable.

If you have an actual wired network in your home with Ethernet connectors in the wall, connect directly from your computer Ethernet port to the Ethernet wall connector with an Ethernet cable.

The Ethernet port on the HP TouchSmart PC is located on the back of the computer, behind the connector cover. For clean cable management, route the cable through the cable router clip on the back of the PC (shown), then route the cable through the notch in the back stand (not shown), then close the back connector cover.

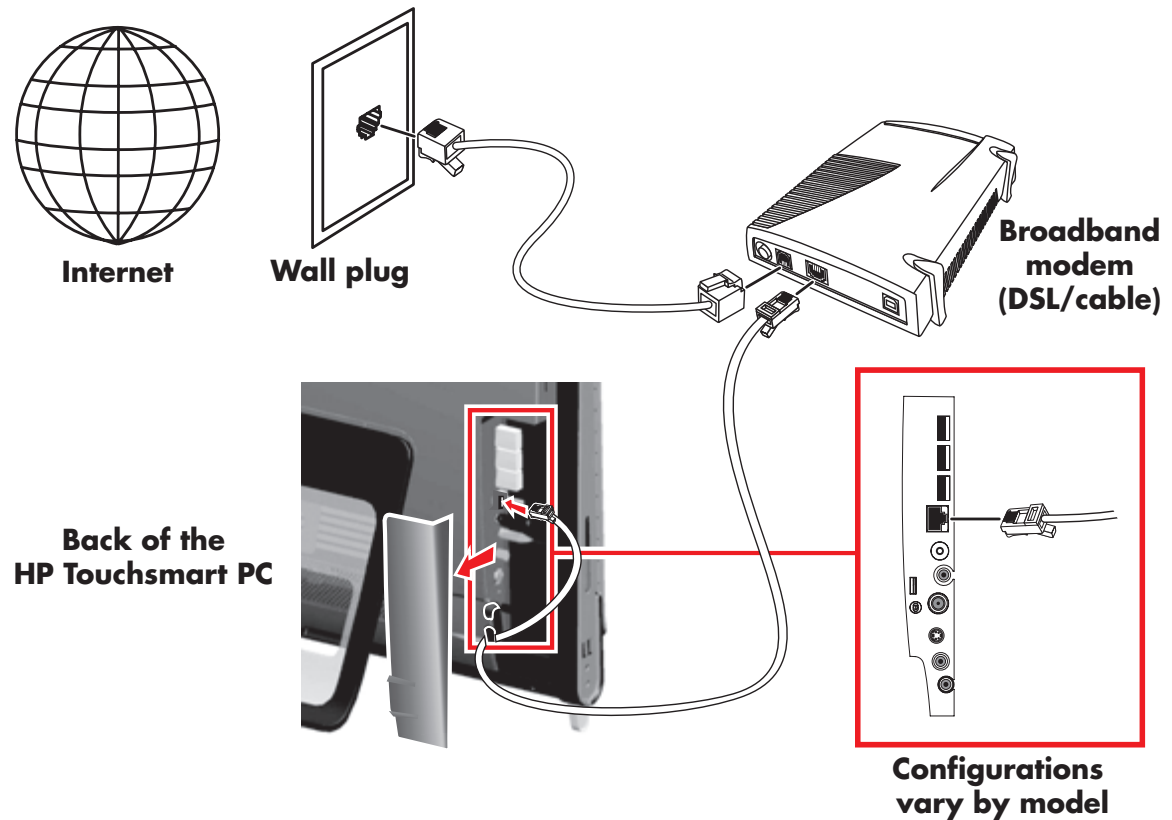

- 6 Add other computers or devices to your wired network:
- a Disconnect power from the broadband modem and the router, and then shut down your HP TouchSmart PC and the computers you want to add to your network.
  - b For each wired computer, connect one end of an Ethernet cable to the LAN connector on the computer, and then connect the other end of the cable to any available Ethernet connector on the router.
  - c Reconnect power to the modem, and wait until the modem has completed its startup cycle. Reconnect power to the router. Then, turn on the wired computers and your HP TouchSmart PC.
  - d Test the network connection for each wired computer by opening your Web browser and accessing any Web site.

# Using Bluetooth Devices

## Select models only

Some models of the HP TouchSmart PC are Bluetooth-enabled, so you can connect all kinds of Bluetooth-enabled wireless devices. Bluetooth devices create a personal area network (PAN), which connects other Bluetooth devices, such as computers, phones, printers, headsets, speakers, and cameras. In a PAN, each device communicates directly with the other devices (the devices must be relatively close together).

To enable a Bluetooth device:

- 1 Refer to your Bluetooth device's instructions to make it "discoverable" (sends out a radio signal).
- 2 Click the **Windows Vista start button**, **Control Panel**, and then click **Hardware and Sound**. Click **Bluetooth Devices**. Click **Add**. Follow onscreen instructions.
- 3 If your Bluetooth device is a printer, click the **Windows Vista start button**, **Control Panel**, and then click **Hardware and Sound**. Click **Printers**. Click **Add a printer**.

# Adjusting Screen Brightness

Adjust screen brightness either with the keyboard that came with your computer, or through the Control Panel.

With your keyboard:

- 1 Press the Function (Fn) key on the keyboard, and simultaneously press the F10 key to reduce screen brightness.
- 2 Press the Fn key, and simultaneously press the F11 key to increase brightness.

Through the Control Panel:

- 1 Tap the **Windows Vista start button**, **Control Panel**, and then tap **Hardware and Sound**.
- 2 Tap **Power Options**.
- 3 In the left panel of the Power Options window, tap **Adjust the display brightness**.
- 4 Move the slider to the left to reduce brightness, and to the right to increase brightness.

# Adjusting the Ambient Light

The HP TouchSmart Ambient Light casts a glow from the base of the computer. By default, Ambient Light is turned off. Once you turn it on, it will remain on until you manually turn it off.

You can change the ambient light color through the HP Light program.

To control ambient light intensity when the computer is off or in Sleep mode:

- 1 Press the Ambient Light button on the left side of the computer to turn the Ambient Light on.
- 2 Continue pressing the button to cycle through low intensity, medium intensity, high intensity, off, and on.

---

**NOTE:** The Ambient Light dims when the computer goes into sleep mode.

---

To change the color or intensity of ambient light when the computer is on:

- 1 Tap the **Windows Vista start button, All Programs, HP**, and then tap **HP Light**.
- 2 Tap the color you want.
- 3 Change the intensity of light either by tapping toward the top or toward the bottom of the color spectrum, or by pressing the ambient light button on the computer.

# Adding Hardware and Software

Some HP TouchSmart PCs feature a 64-bit Windows Vista operating system, and may not be compatible with all software you install or all hardware you add. Check with your hardware and software manufacturer to ensure compatibility with the operating system.\*

## Upgrading your HP TouchSmart PC hardware

To find detailed instructions on removing and replacing the memory and the hard disk drive for your HP TouchSmart PC, refer to the *Upgrading and Servicing Guide* that came with your computer.

## Updating your HP TouchSmart software

Check [www.hp.com/go/touchsmart](http://www.hp.com/go/touchsmart) for updated software and new software features.

 
---

\*Certain Windows Vista product features require advanced or additional hardware. See [www.microsoft.com/windowsvista/getready/hardwarereqs.mspx](http://www.microsoft.com/windowsvista/getready/hardwarereqs.mspx) and [www.microsoft.com/windowsvista/getready/capable.mspx](http://www.microsoft.com/windowsvista/getready/capable.mspx) for details. Windows Vista Upgrade Advisor can help you determine which features of Windows Vista will run on your computer. To download the tool, visit [www.windowsvista.com/upgradeadvisor](http://www.windowsvista.com/upgradeadvisor)



## Using the Optical Disc Drive

You can use your optical disc drive to play and record CDs and DVDs. The slim-slot optical drive does not have a disc tray. To insert a disc, turn the data side toward the back of the computer (label side forward) and slide the disc into the drive slot.

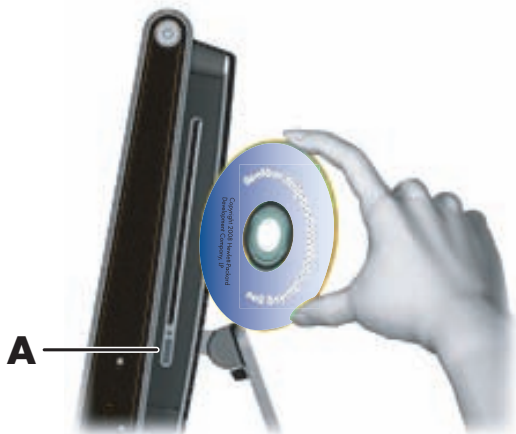

To eject a disc, make sure the power is on, and then press the eject button (**A**) on the side of the disc drive. You can also tap the **Windows Vista start button**, tap **Computer**, press and hold (or with the mouse, right-click) the optical drive, and then tap **Eject**.


If the disc gets stuck, refer to the *Limited Warranty, Support, and System Recovery Guide* for the telephone number to contact HP Support.

## Using the HP Pocket Media Drive

 The HP Pocket Media Drive bay accommodates any HP Pocket Media Drive. The drive bay door swings inward automatically when you insert a Pocket Media Drive (sold separately).

Use the HP Pocket Media Drive to store and transfer media files such as digital photos, music, video, and other files.

Insert the media drive with the power LED facing up. When the computer is on, and the drive is inserted correctly, the power LED on the drive is lit.

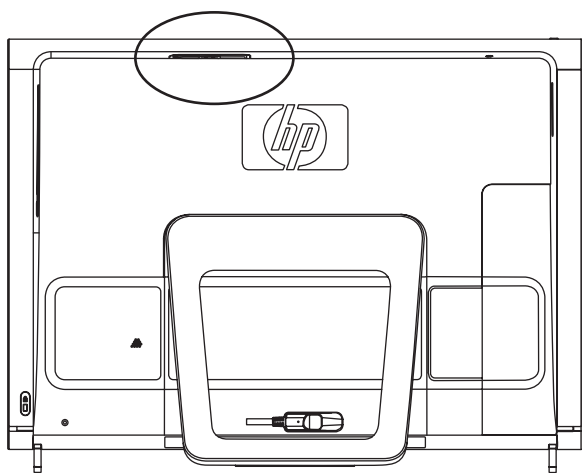

To avoid data loss or hardware damage, do not disconnect your HP Pocket Media Drive when it is saving or transferring data. To disconnect the drive from the bay, use the **Safely Remove Hardware** function (refer to the user's guide that came with your media drive).

# Using the TV Tuner to Watch and Record TV Programs on the HP TouchSmart PC

## Select models only

You can watch and record your favorite TV programs by using Windows Media Center. All menus in Windows Media Center are accessible through touch, and with your remote control, keyboard, and mouse. TV tuners and remote controls are included in select models only.

To watch and record TV programs:

- 1 Connect the TV signal source to the TV tuner on the computer. See “Connecting the TV signal source to the computer” on page 20.
- 2 Set up your computer for use with a set-top box (optional). See “Setting up the HP TouchSmart PC with a set-top box” on page 21.
- 3 Complete the Windows Media Center setup wizard to configure your TV tuner and your program guide. See “Completing the Windows Media Center setup wizard” on page 22.
- 4 Point the remote control at the IR receiver on the lower-right side of the HP TouchSmart PC to start Windows Media Center, and navigate through this program to watch and record TV shows. See “Using the remote control with Windows Media Center” on page 23.

For more information about how to watch and record TV programs, refer to the *Watching and Recording TV* guide, located by tapping the **Windows Vista start button**, tap **Help and Support**, and then tap **User Guides**.

## Connecting the TV signal source to the computer

### Select models only



 
**WARNING:** Please read “Additional Safety Information” in the *Limited Warranty, Support, and System Recovery Guide* before installing and connecting your HP TouchSmart PC to the electrical power system.

To connect a TV signal to the computer, your computer needs a TV tuner (included with select models only). You also may need to purchase some cables separately.

- 1 Connect the coaxial cable from your TV antenna or TV cable provider to the TV In (NTSC/ATSC) **(B)** connector located on the back of the computer behind the connector cover.

Or

Connect an S-Video cable to the S-Video In connector **(A)**, located on the back of the computer behind the connector cover. Connect the other end of the cable to your set-top box.

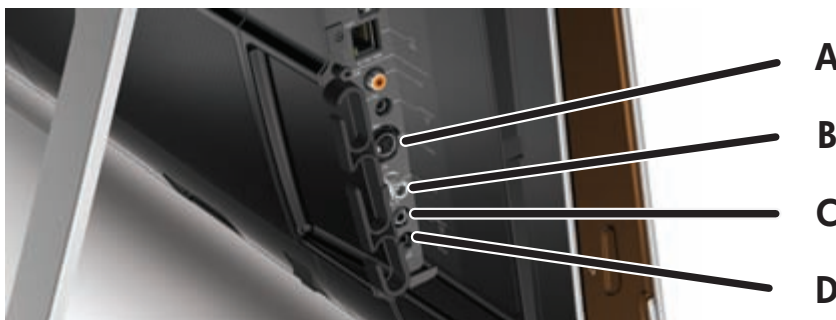


You may need a composite video to S-Video adaptor (sold separately) from the set-top box Video Out to the S-Video In connector **(A)**.



- 2 For S-Video, connect audio cable from your set-top box to the Audio Line In **(C)** connector on the back of the computer. Use with a Y cable to combine RCA left and right channels (white and red).



 - 3 If you are using a set-top box, connect the IR emitter cable to the IR emitter connector **(D)** on the back of the computer to use the remote control. The IR emitter cable is shown in the following illustration. Adhere the IR emitter (blaster) onto the set-top box IR receiver window. Point the remote control at the computer (not the set-top box).

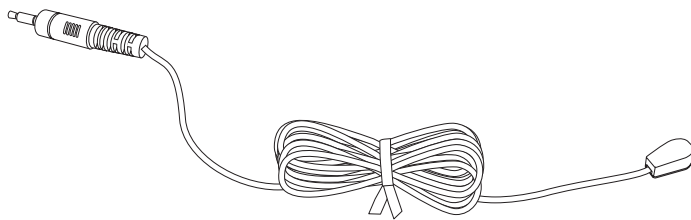

## Setting up the HP TouchSmart PC with a set-top box

### Select models only

 
If your TV signal requires a cable TV set-top box, a satellite set-top box, or another set-top box, you must connect the IR emitter cable to the computer and your set-top box to use the remote control properly. TV tuners and remote controls are included in select models only.

The IR emitter cable is a remote control sensing device that connects to the computer and covers the remote sensor on a set-top box. It enables the remote control that came with your HP TouchSmart PC to operate your set-top box when you use the Windows Media Center program to select TV channels.

To use a set-top box with Windows Media Center:


- 1 Connect the IR emitter cable **(A)** to the IR Out connector **(D)** on the back of the computer.
- 2 Remove the paper from the backing tape on the end of the cable **(B)**, and then press the end of the cable over the remote IR sensor (receiver) window on the set-top box **(C)**. To locate the remote infrared sensor window, shine a flashlight through the plastic on the front of the set-top box.

- 3 Point the remote control at the front of the HP TouchSmart PC (**E**), not at the set-top box.

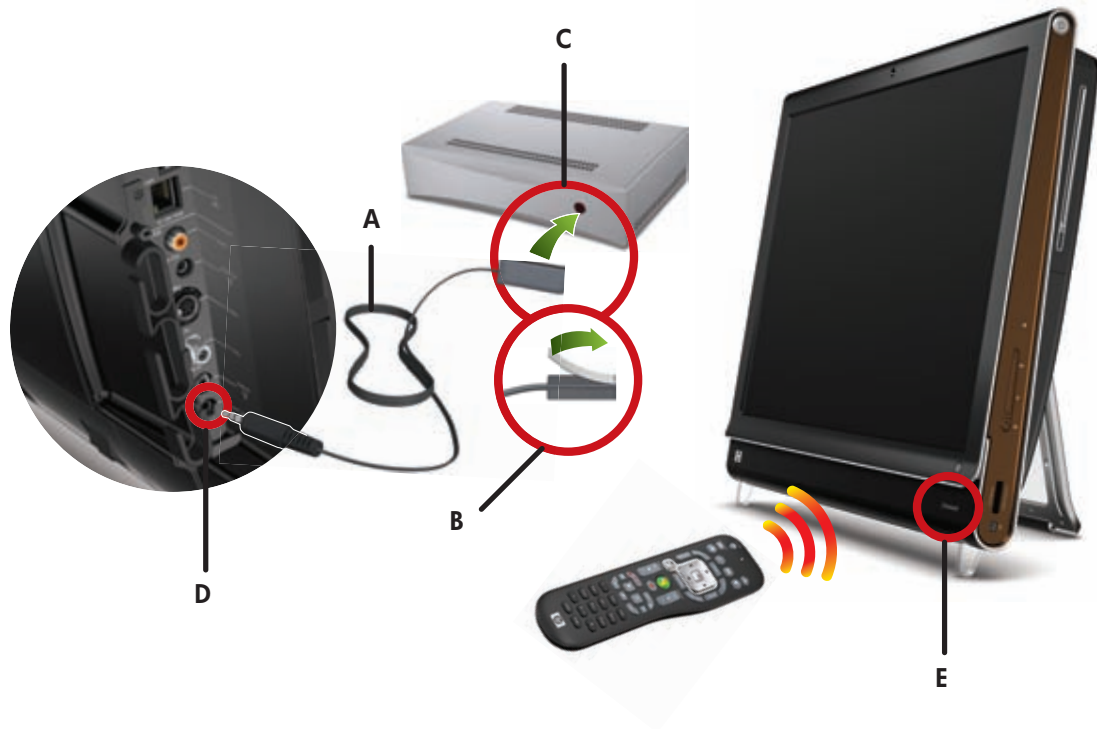

## Completing the Windows Media Center setup wizard

### Select models only

- 1 Open Windows Media Center. Tap the **Windows Vista start button**, tap **All Programs**, and then tap **Windows Media Center**.  
Or  
Press the green button on the remote control.
- 2 Scroll to the Tasks menu, and select **settings, General**, and then select **Windows Media Center Setup**. 
- 3 Follow the onscreen instructions to set up your TV tuner and Windows Media Center TV program guide.

For more information about setting up and using Windows Media Center, go to [www.microsoft.com](http://www.microsoft.com)

## Using the remote control with Windows Media Center

### Select models only

You can use the remote control within Windows Media Center to watch and record TV programs, and to perform many other activities. TV tuners and remote controls are included in select models only. Press the arrow buttons to select a shortcut, and then press the OK button to activate the selected shortcut.

To navigate within the Windows Media Center program, point the remote control at the remote control IR receiver on the lower-right side of the HP TouchSmart PC, and then press a button on the remote control.

Pressing the Power/Sleep button on the remote control turns on the HP TouchSmart PC or puts it into Sleep mode.



For more information about how to watch and record TV programs, refer to the *Watching and Recording TV* guide, located by tapping the **Windows Vista start button**, tap **Help and Support**, and then tap **User Guides**.

# Sound Options

Your HP TouchSmart PC supports the following speaker options:

- Built-in analog stereo speakers
- Analog 2.0 or 2.1 powered speakers
- Digital 3.1, 4.1, or 5.1 powered speakers
- Audio receiver

---

## NOTES:

- The HP TouchSmart PC supports powered speaker systems only. Powered speakers require a separate power supply.
  - When the Audio Line In connector is being used, the output is affected to the internal speakers, the Audio Line Out connector, and the headphones connector. For example, if you are playing sound through your internal speakers and then you connect an MP3 device through your Audio Line In connector, you will hear both sounds.
  - By default, the internal speakers are on, and the digital speakers are off.
- 

## Connecting analog speakers

For 2.0 powered speakers, connect the speaker cable to the Audio Line Out connector on the back of the computer behind the connector cover.

For 2.1 powered speakers, connect the Audio Line Out connector on the back of the computer behind the connector cover to the subwoofer, and then connect the left and right speakers to the subwoofer. Turn on the computer and then the speaker system. If necessary, refer to the documentation that came with your speakers.

---

**NOTE:** When an Audio Line Out connector, such as headphones or external speakers are connected, the internal speakers are muted.

---

## Connecting and enabling digital speakers or an audio receiver

Connect 3.1, 4.1, or 5.1 digital speakers or an audio receiver to the SPDIF Line Out (orange) connector on the back of the computer behind the connector cover, and then use the following procedure to enable the speakers or audio receiver. If necessary, refer to the instructions that came with your speakers or audio receiver.

---

**NOTE:** When SPDIF is connected, you can switch to the internal speakers without unplugging the SPDIF Line Out.

---

To enable digital speakers or an audio receiver, use the SoundMax software that came with the computer.

- 1 Tap the **SoundMAX** icon on the taskbar.
- 2 Tap the **Volume** button.



- 3 In the *SPDIF Interface* area, select the **Default** button.



---

**NOTE:** To switch back to the internal speakers after the digital speakers are enabled, select the **Default** button in the *Internal Speakers* area. Simply turning off the external speakers does not enable the internal speakers; the internal speaker setting must be selected.

---

- 4 Configure sound by using the SoundMAX **Listening Experience**, **Recording Experience**, and **Advanced** buttons.





## Configuring sound for Windows Media Center

After you install, connect, and configure the speakers, use the following procedure to configure audio output for Windows Media Center:

- 1 Tap the **Windows Vista start button**.
- 2 Tap **Windows Media Center**.
- 3 Scroll to the Tasks menu, tap **settings, General**, and then tap **Windows Media Center Setup**.
- 4 Tap **Set Up Your Speakers**, and then tap **Next**.
- 5 Select the type of cable that connects your speakers or audio receiver to your computer, and then tap **Next**.
- 6 Select the number of speakers, and then tap **Next**.
- 7 Tap **Test** to test the speakers.
- 8 Tap **Next** when the test is complete.
- 9 Tap **Finish**.

## Headphones

You can use your headphones (not included) by connecting them to the headphones connector on the left side of the computer. When the headphones connector is being used, the internal speakers and Line Out are muted.

## Microphone array

Your HP TouchSmart PC comes with a built-in microphone array near the webcam on the front of the computer. The array is designed to filter out ambient noise in your environment to provide a cleaner sound. You can use the microphone from a distance of up to 2 feet (one-half meter) from the HP TouchSmart PC.

To adjust the volume:

- 1 Tap the **SoundMAX** icon on the taskbar.
- 2 Adjust the slider.



## Using a headset

A headset with two connectors cannot be used (one for headphones and one for microphone). The HP TouchSmart PC does include a built-in microphone array and a headphones connector.

## Connecting MP3 players

You can connect a media player, such as an MP3 player, to the Line In connector on the left side of the computer and play it through the internal speakers or added external speakers.

## Connecting a Printer

Connect a printer by using the USB connectors on the sides or back of the HP TouchSmart PC, or you can use a wireless printer.

---

**NOTE:** The HP TouchSmart PC does not support printers that require a parallel printer connector.

---

# Installing a Security Lock

A security lock (not included) allows you to secure your computer from theft and unwanted changes. A security lock is a key lock device that has a wire cable attached. You attach one end of the cable to your desk (or other stationary object) and the other to a slot on the computer. Secure the security lock with the key.

When moving the computer or opening the memory cover, you must first remove the security lock from the computer.

 


**WARNING: Take care when lifting or moving your computer. The computer is heavy.**

---

To install a security lock:

- 1 Locate the security lock slot on the computer lower-right rear panel.

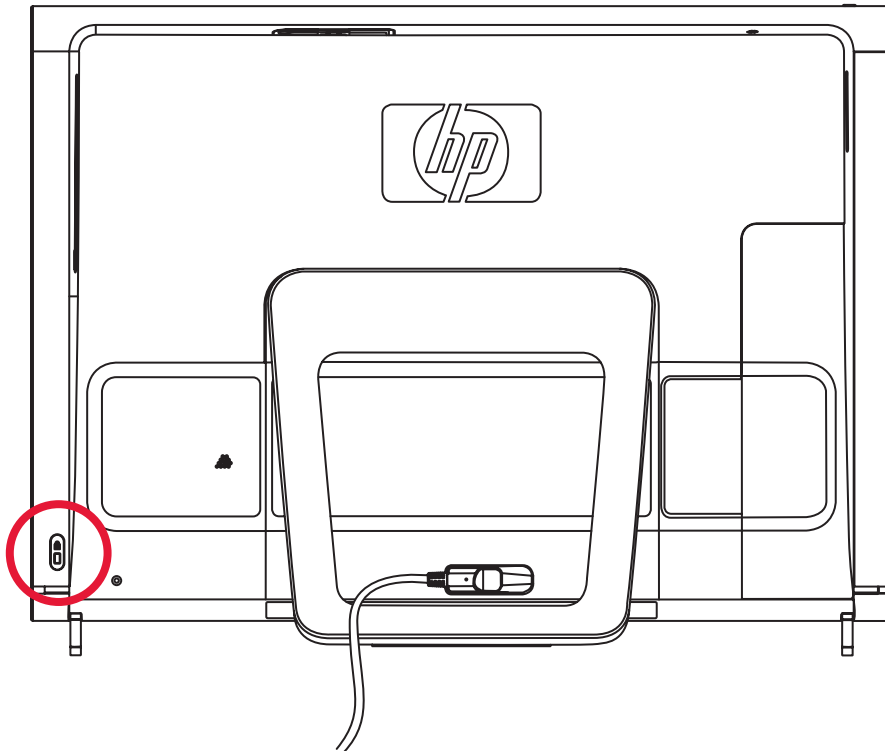


- 2 Insert the security lock in the slot by following the security lock manufacturer instructions.
- 3 Secure the other end of the security lock cable to your desktop.

# Cleaning the HP TouchSmart PC Screen

To achieve the best touch sensitivity, keep the screen clean from foreign objects. Avoid excessive dust accumulation on all sides and edges of the screen.

Before cleaning the touch screen, you must disable it by turning off the computer. If the computer is not turned off, the touch screen is enabled, and you could lose data while cleaning it.

- 1 Turn off the computer. Tap the **Windows Vista start button**, tap the **Arrow** button next to the Lock icon, and then tap **Shut Down**. 
- 2 Disconnect the power cord from the wall.
- 3 Spray a small amount of a mild glass cleaner onto the cleaning cloth that came with your HP TouchSmart PC. You can also use a soft cloth or paper towel dampened with a typical household glass cleaner to clean the touch screen.
- 4 Wipe the surface and each side of the touch screen to remove dirt, fingerprints, or other debris.



**CAUTION: Do not spray or place the cleaner directly on the screen; spray the cleaner into the cloth, and then wipe the sides and surface of the touch screen.**

**Do not use an abrasive cleaner or cloth when cleaning the sides or the surface of the screen, because this could cause damage to the touch screen.**



## Using the Computer with Safety and Comfort



**WARNING: To reduce the risk of serious injury, read the *Safety & Comfort Guide*. It describes proper workstation setup, posture, and health and work habits for computer users. It also provides important electrical and mechanical safety information.**

Before you begin using the computer, arrange the computer and your work area to maintain your comfort and productivity. Refer to the *Safety & Comfort Guide* for important ergonomic information:

- Tap the **Windows Vista start button**, tap **Help and Support, User Guides**, and then tap **Safety & Comfort Guide**.

Or

- Type [www.hp.com/ergo](http://www.hp.com/ergo) into the Web browser address box, and then press the Enter key on the keyboard.

# Recycling Your Old Computer Hardware

HP offers computer equipment recycling programs in many countries/regions. To learn about the options, go to **[www.hp.com/recycle](http://www.hp.com/recycle)**, and select your country/region in the drop-down list.

There are also computer trade-ins and other programs for some countries/regions. Go to the following Web sites:

North America and Asia Pacific English:

**[www.hp.com/hpinfo/globalcitizenship/environment/return/index.html](http://www.hp.com/hpinfo/globalcitizenship/environment/return/index.html)**

Europe/Middle East/Africa (select your country/region in the drop-down list):

**[h41201.www4.hp.com/tradein/welcome.asp](http://h41201.www4.hp.com/tradein/welcome.asp)**

# Using the HP TouchSmart Software

You can personalize HP TouchSmart for quick access to your favorite programs, the Web, and RSS feeds. From the HP TouchSmart homepage, you can quickly view your photos, watch videos, play music, or search the Internet with just a few taps.



## Opening HP TouchSmart software




 

 





To open HP TouchSmart software, press the HP TouchSmart button **(A)** on the lower-right side of the HP TouchSmart PC.

Alternatively, double-tap the **HP TouchSmart shortcut** icon on the desktop.



## Navigating in HP TouchSmart

You can use touch or the wireless keyboard and mouse to select and deselect items in HP TouchSmart. Within HP TouchSmart, there are additional ways to access and navigate programs.

Action		Description
Go to HP TouchSmart homepage		Tap the <b>House</b> icon to go back to the HP TouchSmart homepage.
Close HP TouchSmart		Tap the <b>Close</b> button on the HP TouchSmart homepage.
Go back to a previous window		Tap the <b>Back Arrow</b> button.
Personalize your HP TouchSmart homepage		Tap the <b>Personalize</b> button on the HP TouchSmart homepage.
Control music (Play, Pause, Skip or Back)		Tap the music controls at the top right of the window.
Go to the Windows desktop		Tap the <b>Windows Vista</b> icon in the upper-left corner to minimize HP TouchSmart and go to the Microsoft Windows desktop.
Scroll browsing		To quickly scroll left and right, or up and down, you can touch and drag your finger across the screen in the direction you want to scroll.  There must be enough items for scrolling to work. In the homepage, you need at least 5 items in the top row of tiles, and 13 items in the bottom row.
Tile View browsing		Drag your finger across the tiles to browse through them, and then tap a tile to open it.  There must be enough items for scrolling to work.
Fan View browsing		You can browse your photo, music, and video collections by using the Fan View. From the HP Touchsmart media views, tap the <b>Fan</b> icon in the bottom-right corner, drag the fan left or right, and then tap an item to open it.

## Action

## Description (continued)

Move an HP TouchSmart tile to a new location



 
Press and drag a tile up or down, and then left or right, to move it to a new location on the HP TouchSmart window.

Drag and drop songs to create a playlist.



Press and then drag an item slightly up or down at a right angle to move it to the playlist area. When the item is selected, a disc icon appears.

Use the onscreen keyboard or Windows Touch Input Panel

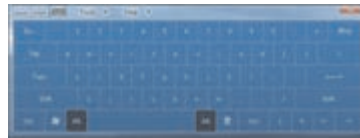

Tap inside a text window and the onscreen keyboard appears. Use it to enter text by using touch.

Because this touch technology is sensitive, HP recommends that you handle the touch screen with care. Please review the following cautions:



**CAUTION:** Because the HP TouchSmart touch screen uses a sensitive touch technology, to avoid damaging the touch screen, do not apply pressure on the front of the display bezel or around the screen borders.



**CAUTION:** To achieve the best touch sensitivity, keep the screen clean from foreign objects. Avoid excessive dust accumulation on all sides of the screen.



**CAUTION:** Like any other home electronic product, keep the HP TouchSmart PC away from liquids or a harsh environment that contains excessive dust, heat, or humidity.

# Selecting Items on the Windows Desktop and in Other Software

With the HP TouchSmart PC, you have the flexibility to use various ways to navigate the desktop, search the Web, and work with different programs on your computer. You can use the touch screen, keyboard, mouse, or remote control (included with select models only).

Some tasks, such as using the HP TouchSmart programs, browsing the Internet, or accessing your favorite programs, are better suited to the touch screen. Other tasks, such as typing search text, are better suited to the keyboard. Other tasks, such as using the Windows Media Center program to watch and record TV programs, are designed to work with the remote control.

---

**NOTE:** Software that you purchase and install separately is accessible with the touch screen, but some programs may be easier to use with a keyboard or mouse.

---

Your HP TouchSmart PC is designed to use the touch screen in several ways. When you are in the HP TouchSmart program, you can select and open items with a single tap. On the Windows desktop and in some software programs, you must use double-tap to open shortcuts, programs and other selectable items.

 
The following table provides desktop and software navigation tips.

Action	Description
Select item	Tap once to select an item. This works like a single-click with a mouse.
Open item	Tap twice quickly to open an item. This works like a double-click with a mouse. A taskbar icon is opened with a single tap.
Open secondary menu	Press and hold a menu until the secondary menu appears. This works like a right-click with a mouse. After the secondary menu appears, move your finger to select a menu item. When you release your finger, the item is selected.
Move item	Press and drag an item to move it.
Scroll menu	Press the scrollbar and drag it left and right or up and down to the desired item or setting.



## Touch Input Panel

Use the onscreen keyboard or Windows Touch Input Panel to enter text by using touch. It can also recognize your handwriting and convert it to plain typewritten text.

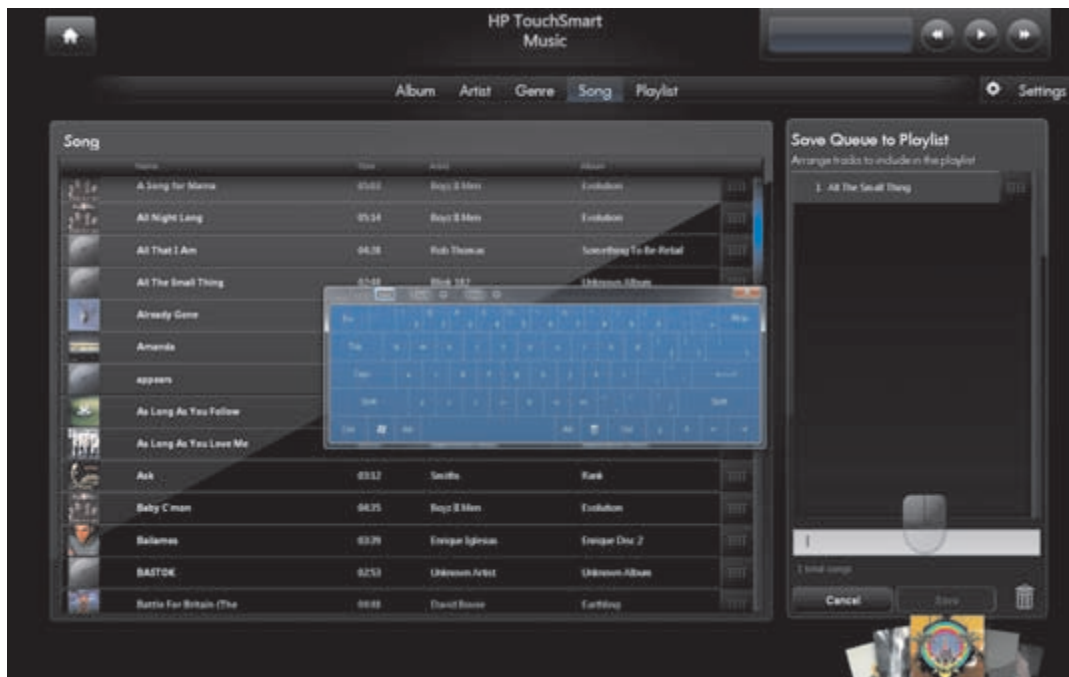

Access a Touch Input Panel by tapping inside an input dialog, and then tapping the keypad icon to open the handwriting, touch, and text input tool.

If the Touch Input Panel is not available or if you want to adjust your touch settings, tap the **Windows Vista start button**, tap **Control Panel**, **Mobile PC**, and then tap **Pen and Input Devices**. Select the setting to enable the Touch Input Panel.

You can also tap the **Windows Vista start button**, **All Programs**, **Accessories**, **Tablet PC**, and then tap **Tablet PC Input Panel**.

---

**NOTE:** Handwriting recognition is not available in all languages. If your language is not available, you can use the onscreen keyboard to enter text.

---

# Personalizing Your HP TouchSmart Software

## Moving tiles around

When you open HP TouchSmart software, you will see large and small tiles, which are shortcuts to various programs or features in HP TouchSmart or links to Web sites. Use the upper, large tile area for programs you use often, and use the lower, small tile area to store the rest of your program shortcuts.

Move these tiles around by dragging a tile out of a row and dropping it to a new location. The tile appears as a transparent image as it moves. You can move the large tiles down to the small tile area or the small tiles up to the large tile area.



## Adding a software program shortcut to HP TouchSmart

- 1 Open HP TouchSmart, and tap the **Personalize** button.
- 2 Select **Add a tile**.
- 3 Select **Program**, and then tap **Next**.
- 4 Enter the target address, or select **Choose from a list** to show a list of all the software programs in your Programs folder.
- 5 Select the program you want to add and then tap **OK**.
- 6 In the Tile Name box enter a name for the tile. Usually, the program name automatically appears.
- 7 Place a check mark in the **Icon** check box to display the program icon in the tile, and then tap **OK**. Your program shortcut appears as a small tile on the bottom of the HP TouchSmart homepage.
- 8 Tap **OK** to return to the HP TouchSmart homepage.

 
## Adding a favorite Web site link to HP TouchSmart

To further personalize and make your tile views more efficient, you can add some often-visited Web sites to either the large tile area, or the lower small-tile area.

- 1 Open HP TouchSmart, and tap the **Personalize** button.
- 2 Select **Add a tile**.
- 3 Select **Web site**, and then tap **Next**.
- 4 Type in the URL for the Web site of your choice, starting with **www** or the equivalent (for example, **www.hp.com/go/touchsmart**). Or select **Choose** from a list to select a Web site from the list of Internet Explorer favorites.
- 5 The option to check the box to display the Web icon may be grayed out if one is not available. You can choose an icon from those displayed below the check box instead. Otherwise, it will display a sample Web page. Your Web site link appears in the small tile area on the bottom of the HP TouchSmart homepage.
- 6 Tap **OK** to return to the HP TouchSmart homepage.
- 7 You can drag it to the top row, if you want. Some added Web sites display a globe icon.
- 8 Your Web site link will display in the HP TouchSmart Browser. See "HP TouchSmart Browser" on page 59 for more information.

## Selecting tiles to view or hide

- 1 Open HP TouchSmart, and tap the **Personalize** button.
- 2 Tap a tile to show or hide it. When it is hidden, the icon and tile name are disabled.
- 3 Tap **OK** to save your changes and return to the HP TouchSmart homepage.

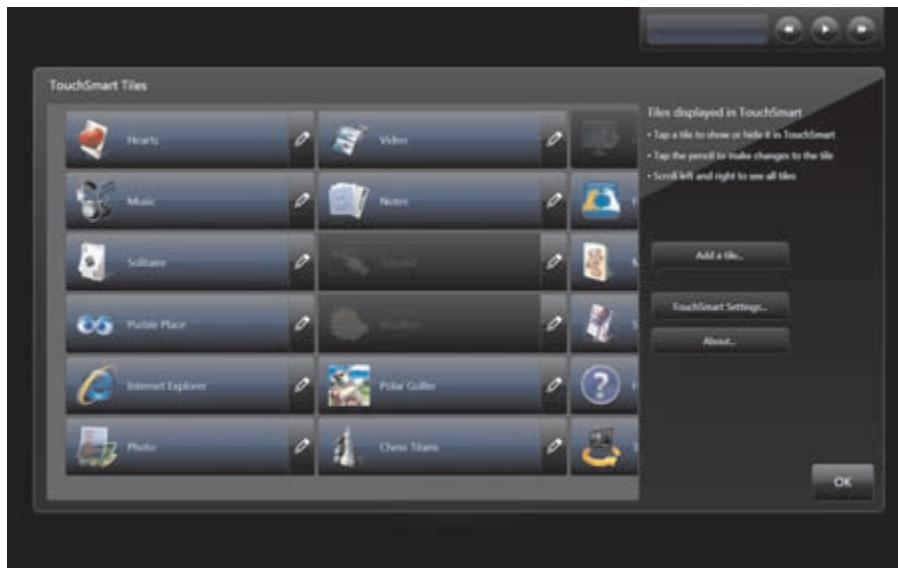

---

**NOTE:** There must be a minimum of five large tiles to be able to scroll through the top list and there must be a minimum of 13 small tiles to be able to scroll through the list on the bottom of the screen.

---

Some of the default large tiles may include Photo, Music, Video, and Clock.

Some of the small tiles may include Weather (select models only), Help and Support, Tutorial, Games, and Internet Explorer.

## Editing or deleting an added tile

- 1 Open HP TouchSmart, and tap the **Personalize** button.
- 2 Select the **Pencil** icon next to the shortcut you want to change.
- 3 Enter your changes:
  - In the Enter Target Location box, enter the URL or path, and then enter the tile name of the program or Web site by using the touch keyboard or your physical keyboard.
  - Select to use the program icon or browse to select another icon.

Or

  - Select **Delete the tile**, and then tap **Yes**.
- 4 Tap **OK**. Only the shortcut and not the program is deleted from the Tile View.



## Opening HP TouchSmart Automatically

If you use the HP TouchSmart program frequently, you may want to set the HP TouchSmart program to open automatically.

- 1 Open HP TouchSmart and tap the **Personalize** button.
- 2 Tap the **TouchSmart Settings** button.
- 3 Place a check mark next to **Auto-Start** and **Quick-Launch**.

Auto-Start will start the HP TouchSmart program when you start your computer, and Quick-Launch will keep them running when you close HP TouchSmart. To free up computer resources for other uses, deselect these options.

## HP TouchSmart Photo

View and edit your photos with HP TouchSmart Photo. You can also upload your photos to Snapfish, view slideshows, and print your photos.

Your photos can be displayed by date or by folder, or you can view all your photos at once. Just scroll left or right to find the photo you want.

---

**NOTE:** The Snapfish Web site is not available in some countries/regions.

---

HP TouchSmart Photo supports the .jpg file format.

View photos in Tile View, or select the **Fan** icon at the bottom of the window to view in Fan View.



## Adding photos to your photo library

When you connect an external device to the computer, such as a digital camera, Microsoft Windows Vista detects the device and displays a message asking if you want to view, copy, or transfer your images to the computer.

Add photos to your photo library on the computer in several ways.

- Use the memory card reader on the side of the computer to transfer photos from your digital camera to the computer. HP TouchSmart can also display photos directly from the memory card reader.
- Download photos from the Web to your hard disk drive.
- Insert a CD or removable storage drive, and then move photos to the Windows Explorer Picture folder, or any other folder on your hard disk drive.
- Connect a digital camera or digital video camera to the HP TouchSmart PC by using the transfer cable that came with the device. Follow instructions that came with the device.

## Viewing your photo collection

View all of your photos from the hard disk drive, a removable drive, or a memory card. HP TouchSmart Photo scans your hard disk drive and all available drives to find photos that you can view in the HP TouchSmart Photo window.

- 1 Open HP TouchSmart, and select the **Photo** tile.
- 2 Navigate to the group of pictures you want to view:
  - Tap **Dates**. Select the date of your picture. If necessary, use the scroll bar on the right to view all of the photos.
  - Or
  - Tap **Folders**. Select a folder, and then select the photos you want to view. When you select a folder, the other names of folders appear at the top of the screen.
  - Or
  - Tap **All Photos**. Scroll to a photo you want to view.
  - Or
  - Tap **Removable Disk**. Scroll to view photos from your memory card reader.
- 3 Use the scrollbar to find your pictures. They are listed by the date they were added to your hard disk drive.
- 4 Tap the **House** icon to return to the HP TouchSmart homepage.



## Viewing a photo slideshow

- 1 Open HP TouchSmart, and select the **Photo** tile.
- 2 Choose **Folders**, or **All Photos**, or **Removable Drive**.
- 3 Tap the **Play Slideshow** button.
- 4 Adjust slideshow settings by tapping the **Settings** button, selecting your settings, and then tapping **Save**.

 
HP TouchSmart Photo Settings include:

  - Slideshow Transition: Fade, Motion (default), None
  - Slideshow Timing: increase or decrease the timing. The default is 5 seconds per picture.

## Uploading your photos to Snapfish

**NOTE:** The Snapfish Web site is not available in some countries/regions.

- 1 Open HP TouchSmart, and select the **Photo** tile.
- 2 Tap the **Upload Photos** button at the bottom of the window.

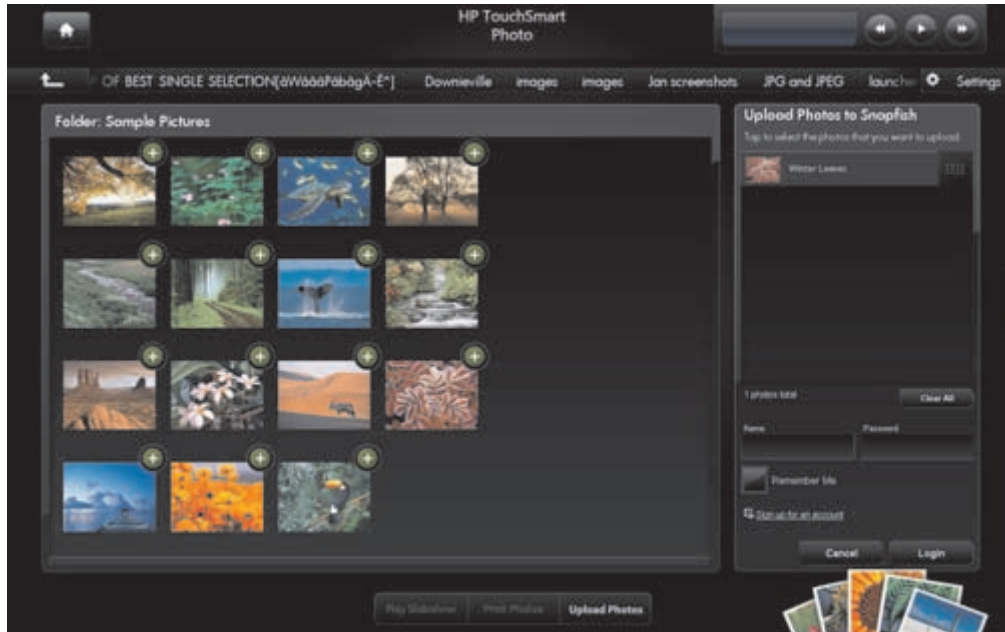

- 3 Tap the green circle with the **+** (plus sign) next to the photo you want to upload. The photo moves to the list on the right side of the window. Repeat this step until all the photos you want to upload are selected.
- 4 Enter your e-mail address (*Name*) and password of your Snapfish account, and then tap **Login**.  
Or  
If you do not have a Snapfish account, tap **Sign up for an account**.  
HP TouchSmart is minimized and the Snapfish Web site opens ([www.snapfish.com](http://www.snapfish.com)). Follow the onscreen instructions to create your account, and then open HP TouchSmart. Enter your e-mail address (*Name*) and password, and then tap **Login**.
- 5 Select an album for your photos or create a new album, and then tap the **Upload** button. HP TouchSmart displays a message when your photos have been uploaded.
- 6 Go to the Snapfish Web site and view your photos.

## Printing your photos

 
- 1 Connect your printer, and install any necessary printer software.
- 2 Open HP TouchSmart, and select the **Photo** tile.
- 3 Select the photo you want to print by tapping it.
- 4 Tap **Print Photos**. If the Print Photos button is disabled, you need to connect your printer and set it up to work with the computer.
- 5 Select your print options, and then tap **Print**.
- 6 Follow any onscreen printing instructions.

## Editing your photos

You can make changes to your photos in HP TouchSmart Photo. Editing features include removing red-eye, cropping, auto-correcting, and rotating images. After you edit a photo, you always have the option to revert to the original image.

To crop a photo:

- 1 Open HP TouchSmart, and select the **Photo** tile.
- 2 Tap anywhere on a photo to open it. When you open a photo, the photo editing window opens.

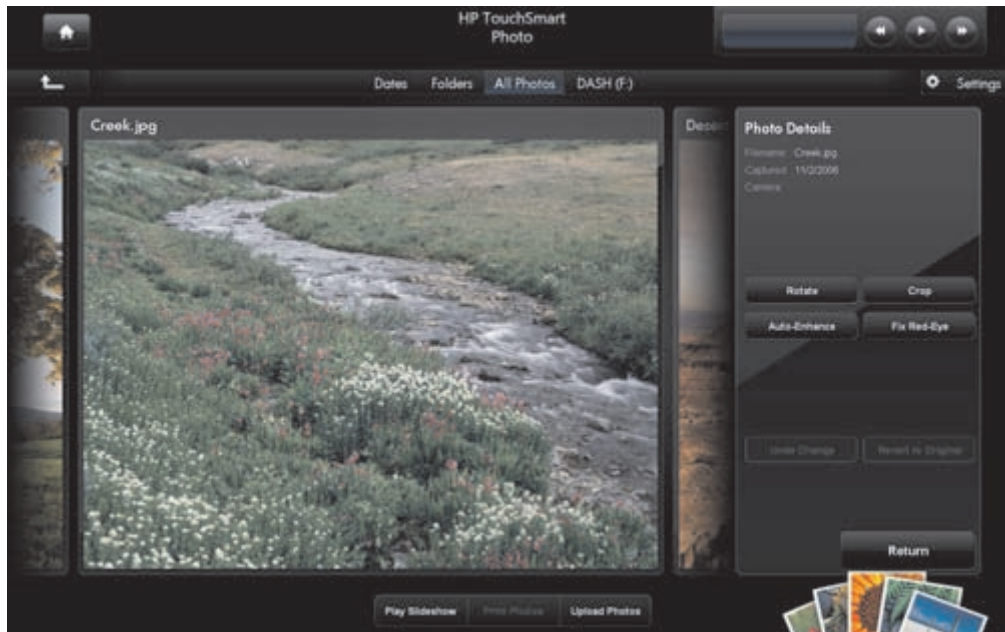

- 3 Select **Crop**.
- 4 Select a cropping option of **Landscape**, **Portrait**, or **Custom**. Press and drag the blue circles on the corners until you have the cropped image you want.
- 5 Tap the **Crop** button to apply your change.
- 6 Tap **Return** to exit the editing window.
- 7 Select the **Revert to Original** button if you want to return to your original photo.

To adjust a photo:

- 1 Open HP TouchSmart, and select the **Photo** tile.
- 2 Tap anywhere on a photo to select it. When you select a photo, the photo editing window opens.
- 3 Select an editing option:
  - **Auto-Enhance:** Auto-corrects for contrast and brightness.
  - **Fix Red-Eye:** Fixes certain types of red-eye.
  - **Rotate:** Rotates a photo 90 degrees to the right. Tap it again to rotate the photo another 90 degrees.

---

**NOTE:** When you select the **Auto-Enhance** or **Fix Red-Eye** setting, neither option is available for the same photo again, unless you revert to the original image.

---

- 4 Tap **Return** to exit the editing window.
- 5 Select the **Revert to Original** button if you want to return to your original photo.

## Creating an optical disc of your photos

For information about how to create CDs or DVDs of your photos, tap the **Windows Vista start button**, **All Programs**, **CyberLink DVD Suite**, and then select the icon to start the recording program. Select a task in the list. When the program opens, tap the **Help** menu, and then tap **Help** for more information about recording an optical disc of your photos.



## HP TouchSmart Music

With HP TouchSmart Music, you can quickly browse your music collection by album, artist, genre, song, or playlist. Play CDs, view song titles and album art, and create playlists that you can edit and save to play later. Browse your albums in Tile View or Fan View by pressing and sliding your finger across the album images, and then tapping an album to select it.

HP TouchSmart Music supports the following music file formats: .mp3, .wma, .wav, .aac, .m4p, and .m4a.

---

**NOTE:** You must install iTunes for HP TouchSmart to support .m4p and .m4a file formats.

---

## Selecting a music library

 
Use Windows Media Player or iTunes (downloaded separately) to add songs to your music library. HP TouchSmart can play music from only one music library at a time. The default setting is Windows Media Player. If you want to use your iTunes library, open the TouchSmart Music window, tap **Settings**, select **Use HP TouchSmart Media library** or **Use my iTunes library**, and then select **Save**.

For more information about adding music files to your music libraries, see the Help menus in the iTunes and Windows Media Player programs.




## Playing your CDs

- 1 Insert your music disc into the optical drive by pushing the disc directly into the slot drive, with the label facing the front of the computer.

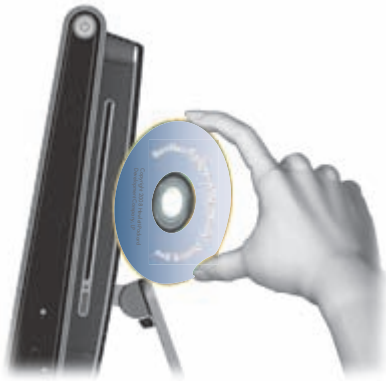

 - 2 Open HP TouchSmart, and select the **Music** tile. Your disc appears at the top of the Music window.

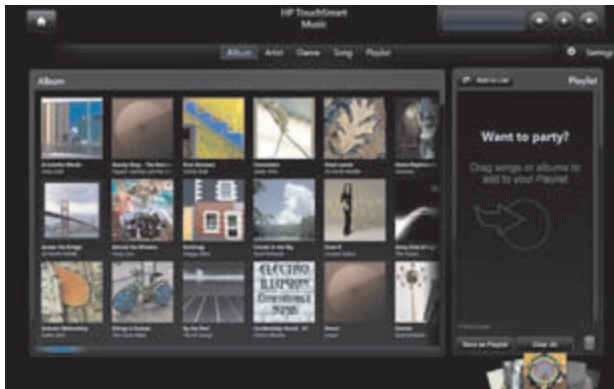






- 3 Select **Audio CD** at the top of the window.
- 4 Tap the song you want to play and the music starts to play. Use the media controls located at the upper right corner to control Play, Pause, Next, Previous, Rewind and Fast Forward operations. The name of the song playing appears in the media controls window.

## Music controls

     Media controls are located in the upper right of the HP TouchSmart software window. These are always there and control music only. When a song is playing, the track name is displayed in the media controls window.




To use the Media controls:

Button	What it does
	Tap the <b>Play/Pause</b> icon to start/stop playing the current song track.
	Tap the <b>Next</b> icon to go to the next music track.
	Tap the <b>Previous</b> icon to go back to the previous track.
	Press the <b>Next</b> icon and hold for a couple of seconds to fast forward.
	Press the <b>Previous</b> icon and hold for a couple of seconds to rewind.

To adjust volume for music in HP TouchSmart Music, use the volume controls on the right side of the HP TouchSmart PC or on the keyboard. You can also press and hold (or with the mouse, right-click) the **Speaker** icon in the Windows taskbar. Select **Open Volume Mixer**, and adjust the HP TouchSmart Music volume slider.

 To view the Speaker icon in the Windows taskbar, minimize HP TouchSmart and go to the Windows desktop by tapping the HP TouchSmart **House** icon on the upper left corner to get back to the HP TouchSmart homepage, then tapping the **Windows** icon on the upper left corner.

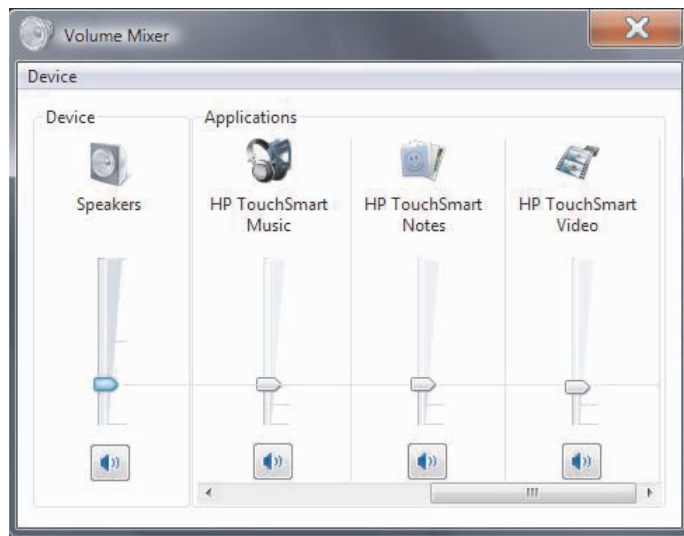

## Creating a playlist of your favorite songs

Create a playlist by simply dragging your songs to the Playlist window.

- 1 Open HP TouchSmart, and select the **Music** tile.
- 2 Select **Album**, and then select an album to add songs to your playlist.
- 3 You can drag an entire album into the playlist on the right. Or, tap on the album to open it, and then drag individual songs into the playlist.
- 4 To quickly add several selections, tap **Add to List**. Green circles with a + (plus sign) appear next to each song in song list view, and next to each album in album tile view.



- 5 Tap the + (plus sign) next to a song to add it to the playlist. Repeat until the playlist is complete.
- 6 To rearrange songs in the playlist, drag the song out of the list, and drop it into a different position in the playlist.
- 7 To delete a song from the playlist, touch and drag it to the **Trash** icon.
- 8 Type the name of the playlist, and then tap **Save**.
- 9 After you create a playlist and save it, you can clear the playlist window by tapping **Clear All**.



---

**NOTE:** You can add up to 500 songs per playlist. If you try to add more than 500, a message appears: *Maximum number of songs in Playlist. Delete one or more items in Playlist before adding new songs.* You can either delete songs, or start another playlist.

---

## Playing from your playlist

To play music from your playlist:

- 1 Open HP TouchSmart, and select the **Music** tile.
- 2 Select **Playlist** at the top of the window.
- 3 Select your new playlist.
- 4 Tap the **Play** button at the top right of the window.

## Deleting a playlist

- 1 Open HP TouchSmart, and select the **Music** tile.
- 2 Select **Playlist** at the top of the window.
- 3 Select a playlist.
- 4 Tap the **Delete** button, and then tap **Yes**.

## Deleting songs from your music library

To delete a song from your music library, open the program where you added your music, such as Windows Media Player or iTunes, and delete it there.

## Creating music CDs

To record, or *burn*<sup>\*</sup>, a CD of your songs, you must use a CD recording program, such as CyberLink Power2Go or Windows Media Player, which are found in the All Programs menu.

For information about how to create CDs and DVDs of your music using CyberLink, tap the **Windows Vista start button**, tap **All Programs**, tap **CyberLink DVD Suite**, select the **Music** icon to start the recording program, tap the **Help** menu, and then tap **Help**.



To learn how to use Windows Media Player, tap the **Windows Vista start button**, **All Programs**, **Windows Media Player**, and then tap the **Help** icon.



---

\*HP supports the lawful use of technology and does not endorse or encourage the use of our products for purposes other than those permitted by copyright law.

# HP TouchSmart Video

 
With HP TouchSmart Video, you can capture your videos with the built-in webcam, play them back, and then upload them to YouTube.

---

**NOTE:** The YouTube Web site is not available in some countries/regions.

---

Your videos can be displayed by date or by folder, or all at once. Scroll up or down to find the video you want. Browse your videos in Tile View or select the **Fan** icon at the bottom of the window to browse your videos in Fan View.

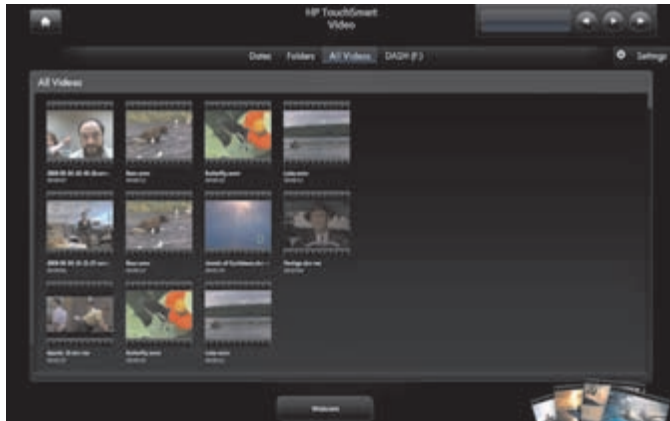

HP TouchSmart Video supports the following video file formats: .mpg, .mpeg, dvr-ms, .wmv, .asf, and .avi.

## Adding videos to the computer

 
- 1 Connect your video camera to the computer by using a USB or FireWire (IEEE 1394) connector, and follow the onscreen instructions to transfer videos to your Videos folder.  
Or  
Download videos from the Internet to your Videos folder.
- 2 After you add your videos to the computer, you can play them in HP TouchSmart.

## Watching videos

- 1 Open HP TouchSmart, and select the **Video** tile.
- 2 Select **Dates**, **Folders**, **All Videos**, or **Removable Disk** (if available) to find your video.
- 3 Tap the video to begin playing it in HP TouchSmart.
- 4 To display full-screen mode, tap **Play Fullscreen**. Tap the screen to display the video controls. Tap the **Close** button in the upper-right corner to close the video and return to the Videos window.

To adjust volume for videos in HP TouchSmart Video, use the volume controls in the Video window. Additionally, adjust the volume controls on the right side of the HP TouchSmart PC, or on the keyboard if the volume is still not right. To view both volume controls in one place, press and hold (or with the mouse, right-click) the **Speaker** icon in the Windows taskbar. Select **Open Volume Mixer**, and adjust both the Speaker volume slider and the HP TouchSmart Video volume slider (scroll to the right in the Applications area to view HP TouchSmart Video).

To view the Speaker icon in the Windows taskbar, minimize HP TouchSmart and go to the Windows desktop, and then tap the **Windows** icon on the upper left corner.

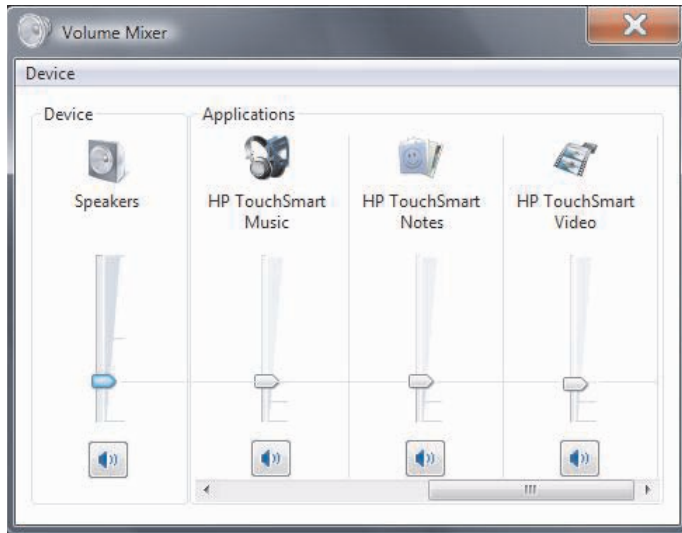

## Creating videos with the webcam

- 1 Open HP TouchSmart, and select the **Video** tile.
- 2 Tap **Webcam** at the bottom of the window.
- 3 Tap the **Record** button to start recording your webcam video.
- 4 Tap the **Stop** button to stop recording your video.
- 5 Tap the **Play** icon to review your video.
- 6 Select **Keep** or **Discard**.
- 7 To play the video, select it, and tap the **Play** button.

---

**NOTE:** Your video is stored in the Video folder in Windows Explorer, and it is named by the time and date it was recorded.

---

## Uploading your videos to YouTube

The YouTube Web site is not available in all countries/regions.

You must create an account with YouTube before you can upload your videos to YouTube. You can set up an account with YouTube from HP TouchSmart Video (not available in all countries/regions).

- 1 Open HP TouchSmart, and select the **Video** tile.
- 2 Select **Dates** or **Folders**.
- 3 Tap the video you want to upload to YouTube.
- 4 Tap **Upload to YouTube**.
- 5 Follow the onscreen instructions to create a YouTube account, or you can enter your name and password of an existing YouTube account.
- 6 Follow the onscreen instructions to finish uploading your video to YouTube.

## Capturing, editing, and recording videos

To create a DVD of your videos, use a DVD recording program, such as muvee autoProducer or CyberLink, in the All Programs menu.

For information about how to capture, edit, and record your videos to disc, tap the **Windows Vista start button, All Programs, muvee Home Movies made easy!**, tap the **Help** menu, and then tap **Using muvee autoProducer**.

 


You can also use the CyberLink DVD to record videos to disc. Tap the **Windows Vista start button, All Programs, CyberLink DVD Suite**, select the **Video** icon to start the recording program, tap the **Help** menu, and then tap **Help**.



## Playing your videos

- 1 Insert your disc into the optical drive by pushing the disc directly into the slot drive, with the label facing the front of the computer.

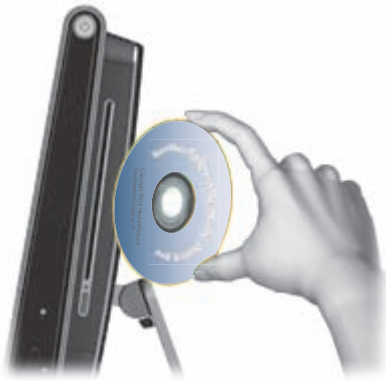


- 2 From the AutoPlay window, select a program to play your video, such as **DVD Play** or **Windows Media Player**.
- 3 Use the media controls to play your video.

## Webcam and Microphone

 A built-in webcam (**A**) and array microphone (**B**) are located at the top of your computer. Use them to capture videos and have video chats and conference calls by using instant messaging software. Download the instant messaging software of your choice; it is not included with HP TouchSmart.

The optimal distance for recording sound with the array microphone is about 2 feet (one-half meter) away from the HP TouchSmart PC.

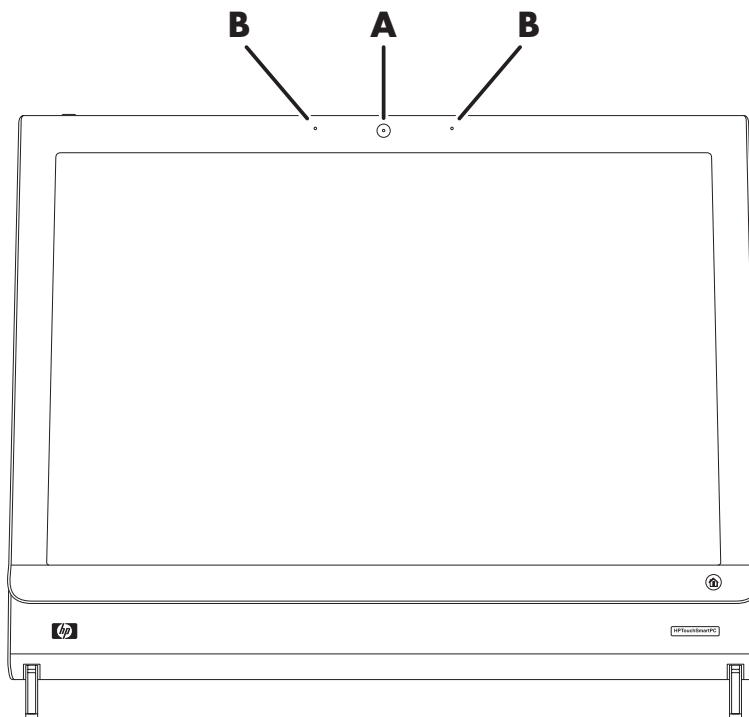



## Capturing webcam video and snapshots

Use HP TouchSmart to take snapshots and record video. See “Creating videos with the webcam” on page 48 and “Capturing, editing, and recording videos” on page 49.

You can also use CyberLink YouCam to capture webcam video and snapshots, add fun effects to your videos, e-mail videos to your friends, and upload your videos to YouTube. (The YouTube Web site is not available in all countries/regions.)

To use CyberLink YouCam:

Tap the **Windows Vista start button**, **All Programs**, **CyberLink YouCam**, **CyberLink YouCam**; then tap **Tutorials**, or tap the **Help** icon (?) to access the Help menu.



## Having a video chat or making conference calls

To set up a video chat, you must have a connection to the Internet, an ISP, and software that enables you to make video calls over the Internet. As with chat or instant messenger software, you can use this kind of software to chat with one or more people at a time. This software may require a separate subscription, and is not included with HP TouchSmart.

Before you can set up a video chat:

- 1 Download an Internet messenger or video phone call program. Make sure the person you are calling has compatible video-calling software.
- 2 Enable your webcam as the default video input. This is usually done through the video setup in the software program Tools menu.
- 3 Send your video call by following the instructions for the video calling software program.

To start a video chat in CyberLink YouCam:

- 1 Tap the **Windows Vista start button**.
- 2 Tap **All Programs**.
- 3 Tap **CyberLink YouCam**, tap **CyberLink YouCam** again, and then tap **Start a Video Call**.

# HP TouchSmart Calendar

HP TouchSmart Calendar is a shared calendar where you can manage your and your family's schedule. You can also view scheduled events for today and tomorrow.



## Scheduling a calendar event and setting a reminder

Events are displayed on the HP TouchSmart homepage if the calendar icon is located in the upper row. The HP TouchSmart homepage displays up to four appointments. It updates periodically by removing past events and listing upcoming appointments for that day. HP TouchSmart Calendar shows the appointment start time of the event when it displays on the homepage.

- 1 Open HP TouchSmart, and select the **Calendar** tile.
- 2 Tap **Add Event**.
- 3 Tap **Event** to select an event type from a list of event types. Select an event type such as **Birthday**, and then tap **Done**.  
Or  
Tap **Add New Event** to add a new event.
- 4 Tap **Event Title**, and then type in an event title.
- 5 Tap **Description**, and then type in a description of your event.
- 6 If the event occurs during the entire day, place a check mark in the **All day Event** check box.
- 7 Tap the drop-down arrows next to the start and end dates and times to enter this information for your event.
- 8 If this is a recurring event, tap the drop-down arrow in the *Recurrence* area, and then select **Daily**, **Weekly**, **Monthly**, or **Yearly**.
- 9 If you want to set a reminder to alert you before the event, tap the drop-down arrow next to **Reminder**, and then select a reminder time.
- 10 After you have entered all of your event information, tap **Save**.
- 11 To view the details you entered, open Calendar, tap the date, and then tap the event.

## Viewing calendar events

You can preview events for today and tomorrow (first two events per day). You can view your schedule by day, week, or month.

- 1 Open HP TouchSmart, and tap the **Calendar** tile.
- 2 Select **Year, Month, Week,** or **Day**.
- 3 Lightly press and drag your finger horizontally across the screen to scroll through the dates you want to view.
- 4 Tap the **House** icon to return to the HP TouchSmart homepage.



## Deleting a calendar event

To delete an event from the calendar, tap the date, tap the event, tap the **Delete** button, and then tap **Yes** to delete the event.

## Synchronizing your HP TouchSmart Calendar with your Microsoft Windows Vista Calendar

Open HP TouchSmart, and tap the **Calendar** tile. The HP TouchSmart Calendar automatically synchronizes with the Windows Vista calendar.

## HP TouchSmart Notes

 
With HP TouchSmart Notes, you can create text and voice notes by using touch, the keyboard, or by recording your own voice.



## Creating a handwritten or typed note

Written notes can be typed or handwritten by touch.

- 1 Open HP TouchSmart, and select the **Notes** tile.
- 2 Select the **Notepad** icon at the bottom of the window.
- 3 Select a paper color by selecting the **Paper** icon on the left, and then select a font color by selecting one of the pen colors on the right.

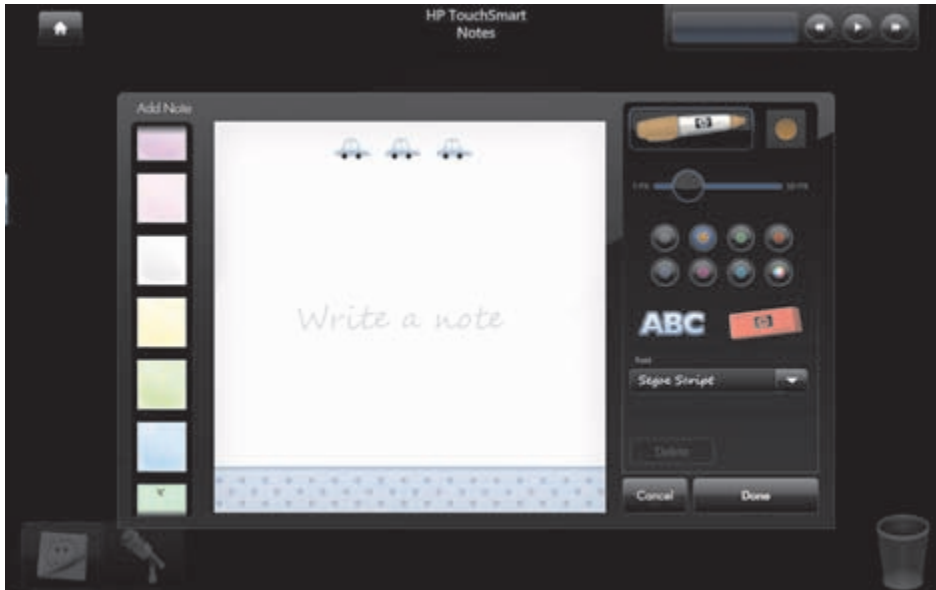

- 4 Select a tool to enter your text and graphics:
  - Select the **Pen** icon to use your finger.
  - Select the **ABC** icon to use your keyboard, and then press the drop-down arrow to select a font.
  - Select the **Eraser** tool to erase a handwritten message and start over.
- 5 Enter your text by using the tool you selected. You can use more than one tool to create each note. For example, you can type a message and then draw something on the same note.
- 6 When you are finished, tap **Done**. Your note appears on the Notes bulletin board.




## Creating a voice note

 - 1 Open HP TouchSmart, and select the **Notes** tile.
- 2 Select the **Microphone** icon at the bottom of the screen.
- 3 Tap the **Record** button to record a short message.
- 4 Tap the **Stop** button to stop recording your message.
- 5 Tap the **Play** button to review your message.
- 6 Tap **Keep** or **Cancel**. Tap **Done** to save the voice note.
- 7 Use the Note tools to add a message to the bottom of your voice note, and then click **Done** to save it to your Note bulletin board. The Speaker icon indicates that a voice message is attached to the note.



- 8 To play the voice note, tap it, and then tap the **Play** button.
- 9 Select **Done** to return to the Note bulletin board, or select **Edit** to edit the text in the note.

To adjust volume for voice notes in HP TouchSmart Notes, adjust the volume controls on the right side of the HP TouchSmart PC, or on the keyboard. You can also press and hold (or with the mouse, right-click) the **Speaker** icon in the Windows taskbar. Select **Open Volume Mixer**, and adjust the HP TouchSmart Notes volume slider. (To view the Speaker icon in the Windows taskbar, minimize HP TouchSmart and go to the Windows desktop by tapping the HP TouchSmart **House** icon on the upper left corner to get back to the HP TouchSmart homepage, then tap the **Windows** icon on the upper left corner.)

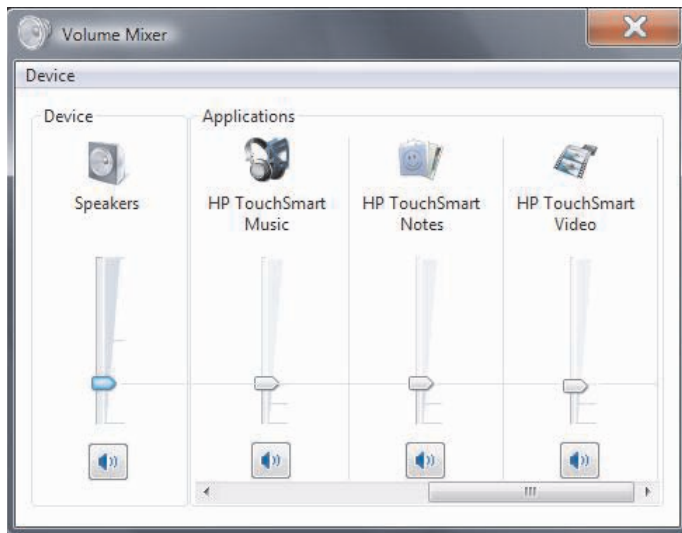

## Deleting text and voice notes

- 1 Open HP TouchSmart, and select the **Notes** tile.
- 2 Press and drag the note you want to delete into the Trash can in the bottom right corner of the window.
- 3 Tap the **Trash** icon to open the trash, tap to select the items you want to delete, and then tap the **Delete Selected** button.
- 4 Tap **Done**.

# HP TouchSmart Weather

## Select models only

HP TouchSmart has a link to a two-day weather forecast.

---

**NOTE:** The Weather feature is not available in all countries/regions.

---

## Displaying the temperature and forecast for a city

- 1 Open HP TouchSmart, and select the **Weather** tile.



- 2 Tap the **Settings** button.
- 3 Tap in the **Set Location** box, and then use your keyboard or the onscreen keyboard to enter a city, state, ZIP or postal code.
- 4 Tap the **Search** button. Your city appears in the **Select Your City** box.
- 5 Select **Fahrenheit** or **Celsius**.
- 6 Tap **OK** to confirm the settings.
- 7 Tap the **House** icon to return to the HP TouchSmart homepage.



## HP TouchSmart Clock

You can personalize your TouchSmart clock to show the time for three different time zones. From the HP TouchSmart homepage, view the three clocks in the large Clock tile or view the main clock in the smaller Clock tile.



## Displaying the time for up to three locations

- 1 Open HP TouchSmart, and select the **Clock** tile.
- 2 Tap the **Clock** field in the center of the window to edit the time.
- 3 Tap in the **Name** field, and type in a city name.
- 4 Press the drop-down arrow to select your time zone in the list. Select **12 hour** or **24 hour**. When you are finished, tap **Save**.
- 5 Select **Tap to add another clock** for the clock you want to add.
- 6 Place a check mark in the **Show left clock** or **Show right clock** check box.
- 7 Enter the name of the clock, and then press the drop-down arrow to select your time zone in the list. When finished, tap **Save**.
- 8 Tap the **House** icon to return to the HP TouchSmart homepage.



## HP TouchSmart RSS Reader

HP TouchSmart includes an RSS (Really Simple Syndication) Feeds Reader that enables you to subscribe to RSS feeds from Web sites you choose.

RSS feeds contain frequently updated content published by a news or blog Web site. Some RSS feeds distribute other types of digital content, including pictures, audio files, videos, or updates to view when you choose.

### Setting up RSS feeds

To subscribe to an RSS feed in Internet Explorer:

- 1 Tap the **Windows Vista start button**, and then tap **Internet Explorer**.
- 2 Tap the **Feeds** button to discover feeds on the Web page.
- 3 Tap a feed.
- 4 Tap the **Subscribe to this Feed** button, and then tap **Subscribe to this Feed**.
- 5 Type a name for the feed, and then select the folder where you want to create the feed.
- 6 Tap **Subscribe**.
- 7 Open HP TouchSmart, and tap the **RSS feeds** tile to view your RSS feeds.
- 8 Tap the feed title to display it in the RSS reader window. If you tap the arrow button on the feed window, it opens in Internet Explorer outside of HP TouchSmart. When you close the feed, the HP TouchSmart RSS feed window opens.



## Importing a list of RSS feeds

To import a list of RSS feeds from another program into Internet Explorer:










- 1 Tap the **Windows Vista start button**, and then tap **Internet Explorer**.
- 2 Tap the **Add to Favorites** button, and then tap **Import and Export**.
- 3 In the Import/Export Wizard, tap **Next**.
- 4 Tap **Import Feeds**, and then tap **Next**.
- 5 By default, Internet Explorer imports from a file called Feeds.opml in your Documents folder, but you can tell it to import feeds that are saved under another name. Tap **Browse**, and select a file, or type a location and file name to import, or tap **Next** to accept the default.
- 6 Select the folder where you want to place the imported feeds, and then tap **Next**.
- 7 Tap **Finish**.






# HP TouchSmart Browser

The current version of HP TouchSmart Browser is a simple viewer intended to display live content in your HP TouchSmart homepage. Use it in a large tile to monitor your favorite Web sites as they change content throughout the day. See "Adding a favorite Web site link to HP TouchSmart" on page 37 for instructions on adding a tile.


Navigation controls in the HP TouchSmart Browser:

Button	What it does
	The Back arrow displays the previous page or window.
	The Forward arrow displays a Web page or window you had opened earlier.
	The Home icon takes you to the HP TouchSmart PC Web page. If you created a new Web site tile, this button takes you to the original Web address you entered for this tile.
	The Favorites icon displays a list of all the favorite Web sites you added in Internet Explorer and in HP TouchSmart Browser.
	The Add to Favorites button allows you to add a Web site to your favorites list.
	The pop-up button allows you to view a pop-up window.
	The Refresh button reloads a selected Web page.
	The Stop Loading button stops the browser from loading a selected Web page.
	The panning bars on the bottom and side of the HP TouchSmart Browser window allow you to view the entire Web page. You need to press and drag your finger from this bar to the page for it to pan correctly. You can use either panning bar to pan through this window.

Tips for using the HP TouchSmart Browser:


- **Selecting:** Drag one finger over an area to select it.
- **Scrolling:** Placing two fingers on the screen at the same time (usually two fingers on one hand) will allow you to scroll up and down on a page. To scroll up, press two fingers on the bottom of the Web site window and drag them up (this is opposite from Windows scroll bar behavior).
- **Following links or opening items:** Just tap a link that you want to follow, or tap an item you want to open or download. However, watch for the pop-up icon (see Pop-ups below).
- **Going to new sites:** To enter URLs into the address bar, highlight the current one with your finger. Tap the TIPS panel icon, and type into the onscreen keyboard the entire URL, starting with *http://* or the equivalent. Use the physical keyboard if you prefer. 
- **Favorites:** To view your Web site link Favorites, just tap the **Favorites** icon. To add a new favorite Web site link, enter a new Internet address at the top of the window, go to that Web site, and then tap the **Add to Favorites** icon. This Web site address is automatically added to your Favorites list. To check if the Web site link has been added, tap the **Favorites** icon.   



---

**NOTE:** To organize your Favorites into folders or delete your Favorites, you must go to the Internet Explorer Favorites window. Open Internet Explorer and then tap the **Windows Favorites** icon to view your Favorites. To add a new folder, right-click a folder in this window and then select **Add New Folder**. To delete a favorite, right-click a favorite and then select **Delete**. 

---


Here is the Internet Explorer tile in TouchSmart.

There is not a History drop-down menu in HP TouchSmart Browser. 

- **Searching:** The HP TouchSmart browser does not have embedded search functionality. For searching, you may want to keep your favorite Internet search site as a link in one of your tiles. See “Adding a favorite Web site link to HP TouchSmart” on page 37 for instructions.
- **Pop-ups:** HP TouchSmart Browser does not allow any secondary windows or pop-ups to display in front of the primary page. If a link from a Web page is launched as a secondary window, it won’t appear on top. If the pop-up icon is highlighted, there is a secondary page that is not displaying. Click the pop-up icon to view it. To view multiple pages in HP TouchSmart, add each one as a new tile. 

Some content, such as dialog boxes for downloads, will not cause the pop-up icon to highlight. If you want to see the content in these pop-ups, minimize HP TouchSmart to see it. The pop-up will be on the Windows desktop. To minimize HP TouchSmart, go to the HP TouchSmart homepage (tap the **Home** icon on the upper left), then tap the **Windows** icon on the upper left of the homepage.






The HP TouchSmart Browser only supports standard HTML pages. It does not support other display formats, such as RSS Feeds. To view RSS Feeds, use the HP TouchSmart RSS Reader.

If you are doing heavy Web surfing, and using sites with a lot of pop-ups, or downloading files with secondary dialog boxes, use Internet Explorer or another standard browser. Internet Explorer is a default tile in HP TouchSmart. 

# Software Quick Reference Table

Some of the software listed in the following table is included with select models only. This is not a complete list of all the software included with your computer.

To open any of these programs, tap the **Windows Vista start button**, **All Programs**, select the program folder (for example, **DVD Play**), and then tap the program name to open the software.

With this program:	You can:
HP TouchSmart 	<ul style="list-style-type: none"><li>■ View, organize, edit, and print your photos; share your photos with friends and family; and upload your photos to Snapfish.</li><li>■ Create music playlists and play your CDs.</li><li>■ Watch your videos and upload them to YouTube (not available in all countries/regions).</li><li>■ View RSS feeds from your favorite news, entertainment, and sports Web sites.</li><li>■ Check the weather in a city you select (select models only).</li><li>■ Set reminders for events in HP TouchSmart Calendar.</li><li>■ Create checklists and audio, handwritten, and typed notes in HP TouchSmart Notes.</li></ul>
DVD Play 	<ul style="list-style-type: none"><li>■ Play DVD movies and video CDs (VCDs).</li><li>■ Use the Zoom and Pan features.</li><li>■ Create viewing bookmarks.</li></ul>
muvee autoProducer 	<ul style="list-style-type: none"><li>■ Add your own style to your movies, with music, pictures, titles, scene transitions, and captions.</li><li>■ Edit your home movies.</li><li>■ Save and record multiple movie files to DVD.</li><li>■ Use the magicSpot feature to control the motion effects applied to your pictures.</li></ul>
CyberLink DVD Suite 	<ul style="list-style-type: none"><li>■ Includes various programs, such as: Power2Go, YouCam, LabelPrint, and PowerDirector. See the programs listed in this table for more details about the program features.</li></ul>
CyberLink Power2Go 	<ul style="list-style-type: none"><li>■ Record data and music files.</li><li>■ Record a copy of an existing music or data CD for use on your computer.</li><li>■ Create customized music CDs from CDs in your collection, or from .wav, .mp3, or .wma files. You can play these CDs on your home or car stereo.</li><li>■ Copy and share data files.</li><li>■ Create archive CDs or DVDs from files on your computer.</li><li>■ Copy video files.</li><li>■ Verify that the disc has been created without errors.</li></ul>

**With this program: You can: (continued)**

CyberLink YouCam



- Capture and edit webcam video and snapshots.
- Upload your videos to YouTube. (The YouTube Web site is not available in all countries/regions).
- Start a video chat.
- Send your videos to friends and family.

CyberLink LabelPrint



- Print labels to attach directly to a disc.
- Create song title inserts for your CD cases.

CyberLink PowerDirector



- Record movie files to create VCDs and DVDs that you can play on some DVD players.
- Copy and share video files.
- Capture video files.
- Edit video files.

HP Total Care Advisor



- Quickly organize the Web links you want to keep available to you on your desktop.
- Comparison-shop by using the convenient shopping search engine.
- Get HP software and driver updates.
- Get important messages from HP.
- Access PC Health and Security and PC Help tools.

Microsoft Windows  
Movie Maker

- Import audio, video, and other media files from videotape, audiotape, webcams, or television broadcasts.
- Record audio and video files to create a video project that becomes a Microsoft Windows Media source file with a .wmv extension.
- Edit and preview files.
- Send a movie in an e-mail or upload it to a Web server.
- Add music files (.mp3 format).
- Import audio files such as .mp3, .asf, or .wma; video files such as .wmv, .asf, .avi, or .mpg; or image files such as .jpg or .gif.
- Create .avi and .wmv (Windows Media Video) files.

## A

- adaptor, composite video-to-S-Video 21
- Ambient Light
  - adjusting 18
  - button 5
- Audio line in connector 5
- Audio line out connector 7
- Auto-Start 38

## B

- Bluetooth
  - antenna features 2
  - using Bluetooth devices 17
- button
  - Ambient Light 5
  - computer power/sleep 3
  - DVD control 4
  - HP TouchSmart 3

## C

- cable management 9
- cable router clip 7
- calendar
  - using HP TouchSmart Calendar 52
- camera
  - using the webcam 50
- carpal tunnel syndrome 29
- CD
  - creating music CD 46
  - playing 43
  - using the CD/DVD drive 19
- composite video adaptor 21
- computer
  - connecting the IR emitter 21
  - recycling old hardware 30
  - turning on 13
- computer stand 7
  - adjusting the angle 11
- connecting
  - TV signal 20
- CyberLink
  - LabelPrint, features 62
  - Power2Go, features 61
  - PowerDirector, features 62
  - YouCam, features 62

## D

- digital audio connector 7
- digital camera, using HP TouchSmart Photo 39
- digital video camera, using HP TouchSmart Photo 39
- DVD drive, using 19
- DVD Play, features 61
- DVDs, playing 50

## E

- event
  - deleting from HP TouchSmart Calendar 53
  - scheduling in HP TouchSmart Calendar 52

## F

- Favorites 60
- FireWire (IEEE 1394) 3

## H

- hard disk drive
  - LED 8
- Headphones 5
- HP Pocket Media Drive bay 3
- HP TouchSmart
  - adding a shortcut 36
  - adding a Web site link 37
  - deleting a tile 38
  - finding information vi
  - navigating 32
  - opening 31
  - personalizing 36
  - scheduling an event 52
  - start button 3
  - turning off the computer 13
  - turning on the computer 13
  - updating the computer software 18
  - upgrading the computer hardware 18
  - using the software 31
  - what is HP TouchSmart software 31
- HP TouchSmart Browser
  - favorites 60
  - using 59

- HP TouchSmart Calendar
  - deleting an event 53
  - scheduling an event 52
  - synchronizing with Microsoft Windows Vista calendar 53
  - using 52
  - viewing events 53
- HP TouchSmart Clock, setting 56
- HP TouchSmart Music
  - creating a playlist 45
  - using 42
- HP TouchSmart Notes
  - using 53
- HP TouchSmart Photo
  - using 38
- HP TouchSmart RSS Reader
  - setting up RSS feeds 57
  - using 57
- HP TouchSmart Video
  - supported file formats 47
  - using 47
- HP TouchSmart Weather, viewing 56

## I

- instant messenger, making a video call 51
- Internet Explorer, using with HP TouchSmart Browser 60
- IR emitter
  - cable connecting to a set-top box 21
  - cable, connecting 21
  - connector 7
- IR receiver, remote control 3
- iTunes, using with HP TouchSmart 42

## K

- keyboard
  - features 4
  - receiver 7
- keyboard and mouse receiver
  - LED function 8

## L

- LAN (local area network) 14
  - antenna features 3
  - connecting to the Internet 6
- local area network (LAN) 14
- lock
  - security 7

## M

- Media controls 43
- memory card reader
  - card types 3
  - features 3
  - LED 8
  - transfer photos to photo library 39

- microphone array 27
  - adjusting volume 27
  - features 3
  - range 27
  - using with webcam 50

- mouse
  - features 4
  - receiver 7

- Music controls, see *Media controls*
- muvee autoProducer
  - features 61

## N

- network
  - wired 6
  - wireless 3
- note
  - creating a handwritten or typed note 54
  - creating a voice note 54
  - deleting a note 55

## O

- onscreen keyboard, using 35

## P

- photos
  - creating CDs 42
  - editing 41
  - editing in HP Photosmart Touch 41
  - printing 40
  - upload to Snapfish 40
- playlist
  - creating 45
  - deleting 45
  - playing 45
- pocket media drive 3
- power adapter connector 7
- Power, LED 8
- Power/Sleep button 3

## Q

- Quick-Launch 38

## R

- receiver, wireless keyboard and mouse 8
- recycling old computer hardware 30
- remote control
  - features 3
  - IR receiver LED 8
  - Power/Sleep button 23
  - sensor 23
  - using with HP TouchSmart 23
- repetitive strain injury (RSI), see *Safety & Comfort Guide*
- router installation 15

- RSS feeds
  - importing a list 58
  - setting up 57

## S

- Safety & Comfort Guide* 29
- safety warnings 29
- screen brightness, adjusting 17
- security lock slot 7
- set-top box
  - connecting to computer 21
  - remote emitter cable for 21
  - using with HP TouchSmart PC 21
- slideshow, viewing 39
- software
  - updating 18
- software programs
  - CyberLink DVD Suite 61
  - CyberLink LabelPrint 62
  - CyberLink Power2Go 61
  - CyberLink PowerDirector 62
  - CyberLink YouCam 62
  - DVD Play 61
  - HP Total Care Advisor 62
  - HP TouchSmart 31
  - muvee autoProducer 61
  - Windows Movie Maker 62
- speakers 4
  - adjusting volume 26
  - features 4
- Stereo Audio In connector 7
- S-Video adaptor 21
- S-Video In connector 7
- synchronize
  - keyboard and mouse 12

## T

- television, watch and record TV programs 20
- touch screen
  - accessing software, performing tasks, navigating the computer 34
  - features 2
- turning on the computer 13
- TV In connector 7

## U

- USB connector 6

## V

- videos
  - creating with the webcam 48
  - editing 49
  - setting up a video chat 51
  - uploading to YouTube 48
  - watching 47
- voice message, creating 54
- volume
  - adjusting speaker volume 26
  - controls 3
  - Volume Mixer 26

## W

- weather updates, getting 56
- webcam
  - capturing video and snapshots 51
  - features 3
  - LED 8
  - setting up a video call 51
  - using with the microphone 50
- Windows Media Center
  - setup wizard 22
  - using the remote control 23
  - using to watch and record TV programs 20
- Windows Media Player, using with HP TouchSmart 42
- Windows Movie Maker, features 62
- wired home network
  - LAN connection 6
  - setting up 15
- wireless home network
  - LAN connection 3
  - setting up 15
- working in comfort 29

Part number: 492788-001